

*V*ICTORIAN

Scrollsaw Music Boxes



SCROLLSAW PATTERNS:

Following are the full-size scrollsaw patterns for creating beautiful projects from our CD Scrollsaw Pattern Book.

Each pattern is shaded to make it easier to see where to cut and where not to cut.

To navigate from page to page, simply use the vertical scrollbar on the right hand side of the screen, or the “Go To” buttons |◀◀ ▶▶| located at the top and bottom of the screen.

To print, simply click on the “Printer Icon”  at the top of the screen, or choose “Print” from the “File” pull-down menu. Be sure to specify which page numbers you want to print, and the number of copies. You can determine the page number from the “Page #” box | 4 of 107 | at the bottom of the screen.

When finished, click the “First Page” button |◀ to go back to the beginning to choose another section to view.



Simply click on the button of your choice.

INTRO

PHOTOS

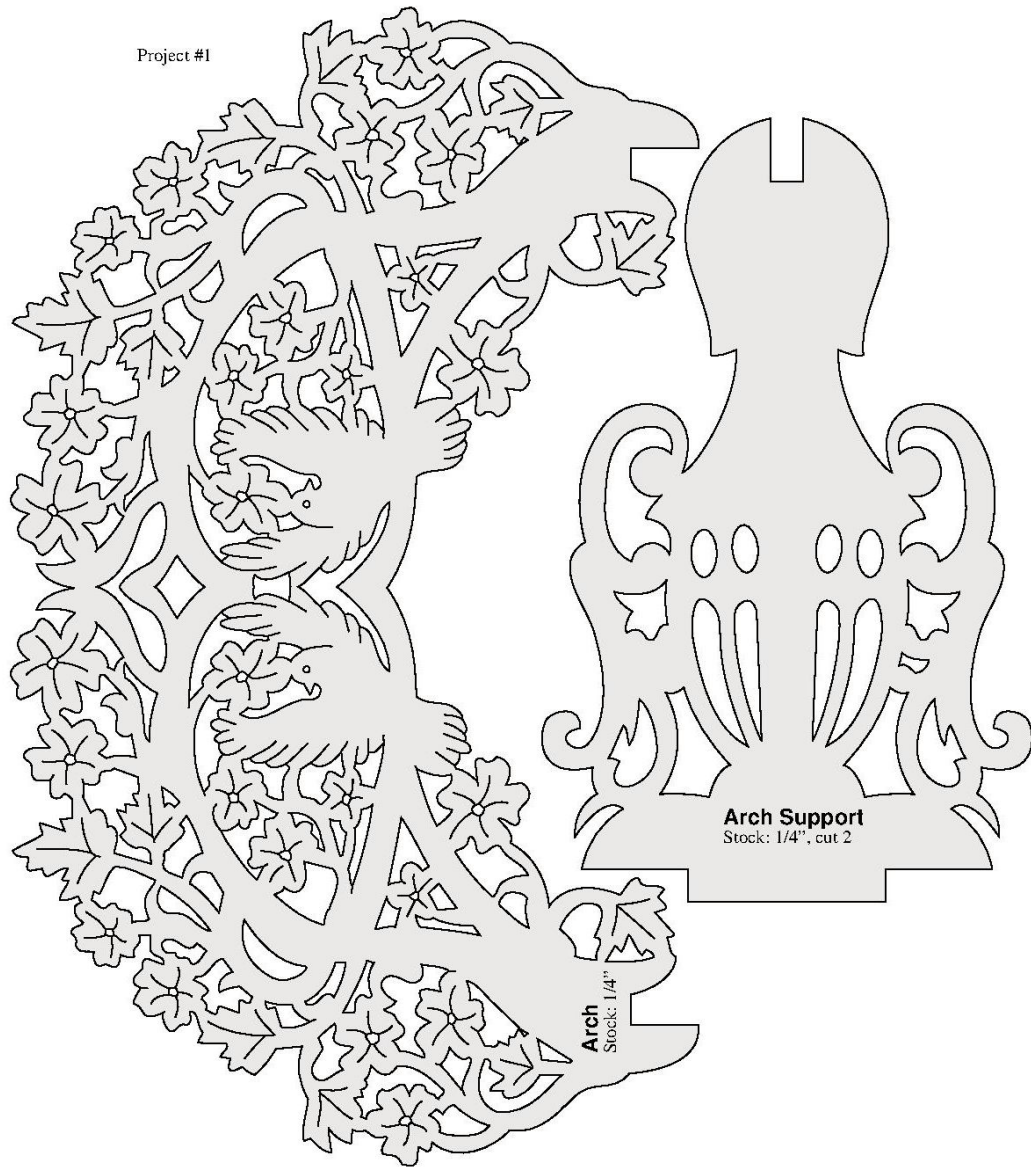 
HOW-TO

 
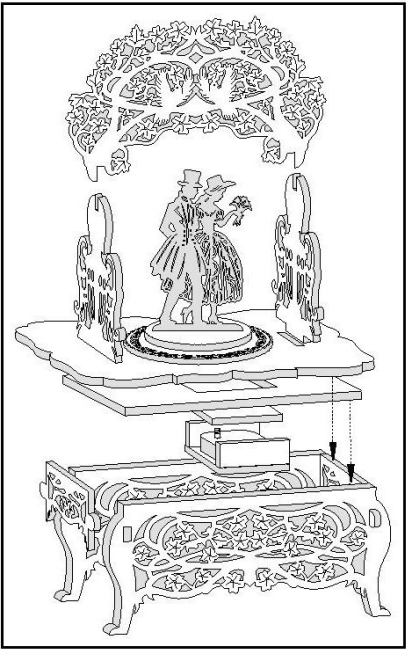 
PATTERNS

MORE CD'S AVAILABLE



BACK TO START


Project #1








Base Support
Stock: 1/4"


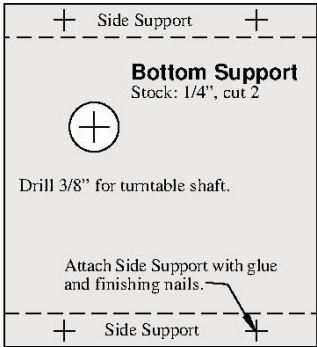 
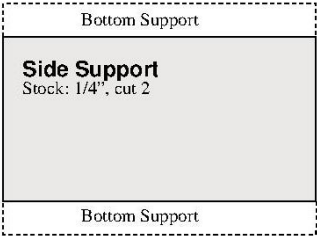 


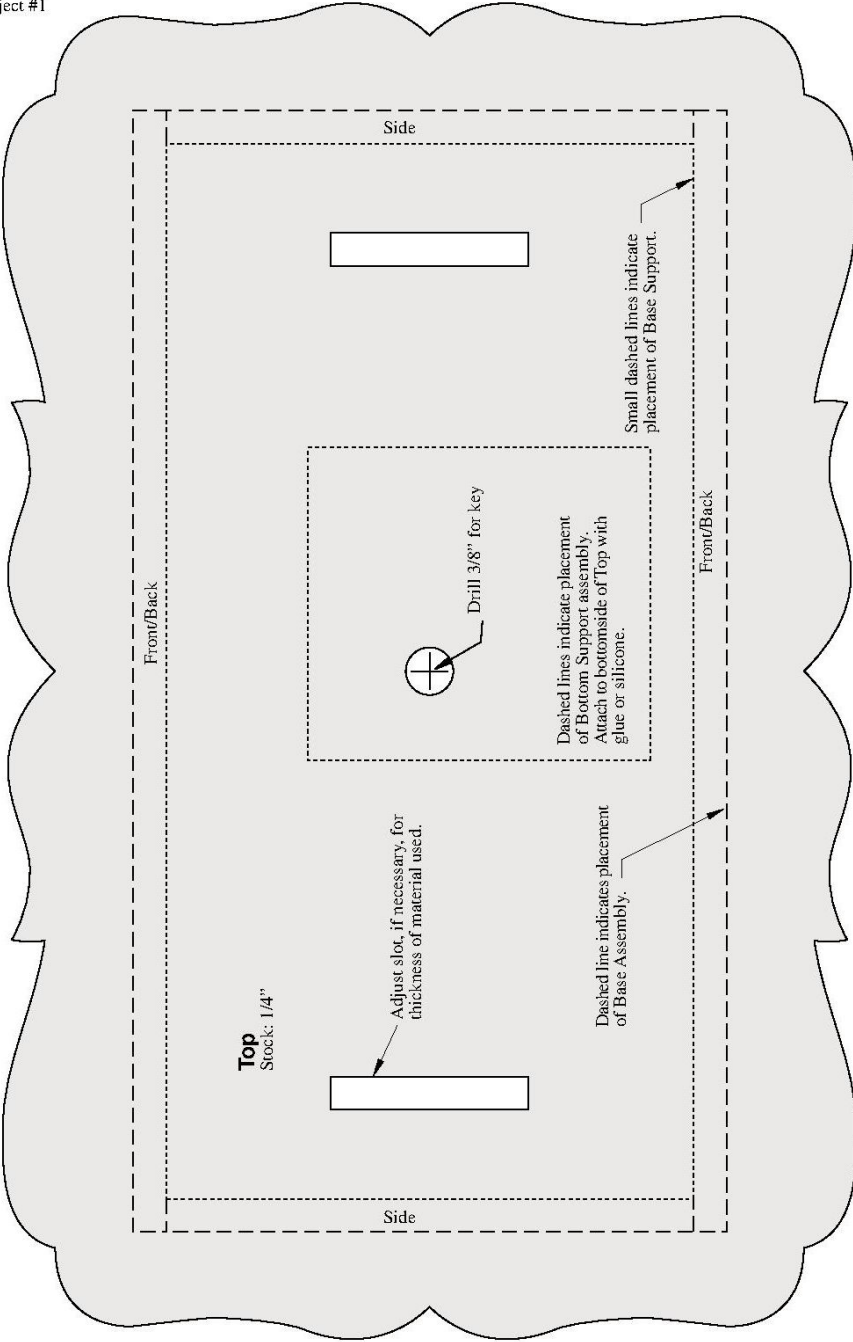 

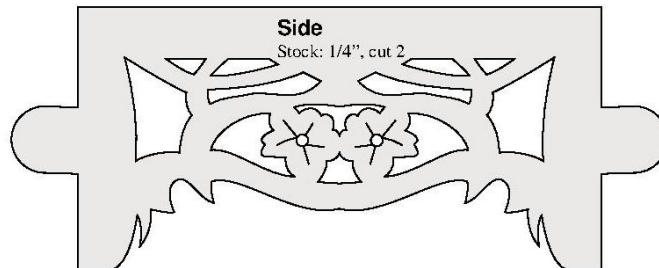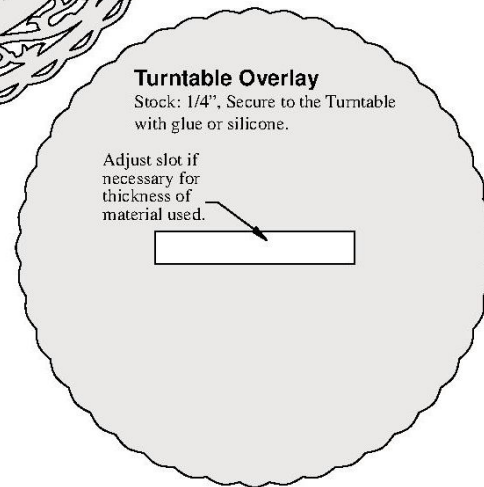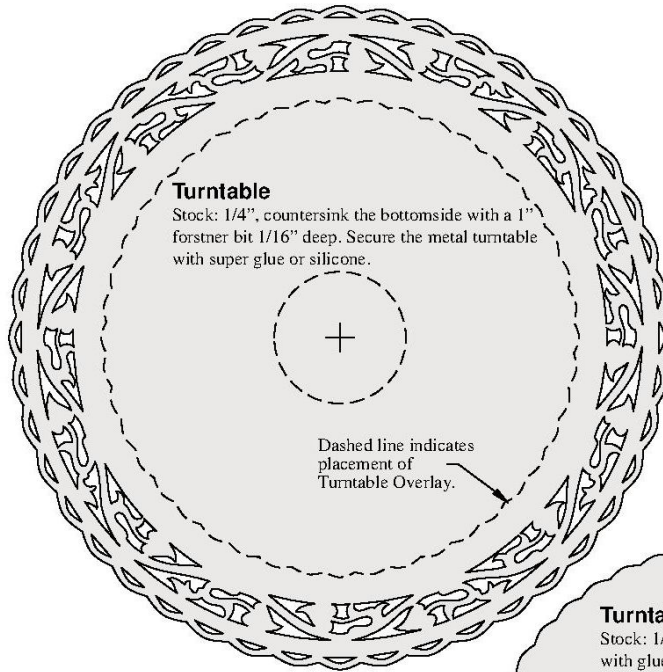   

Project #1



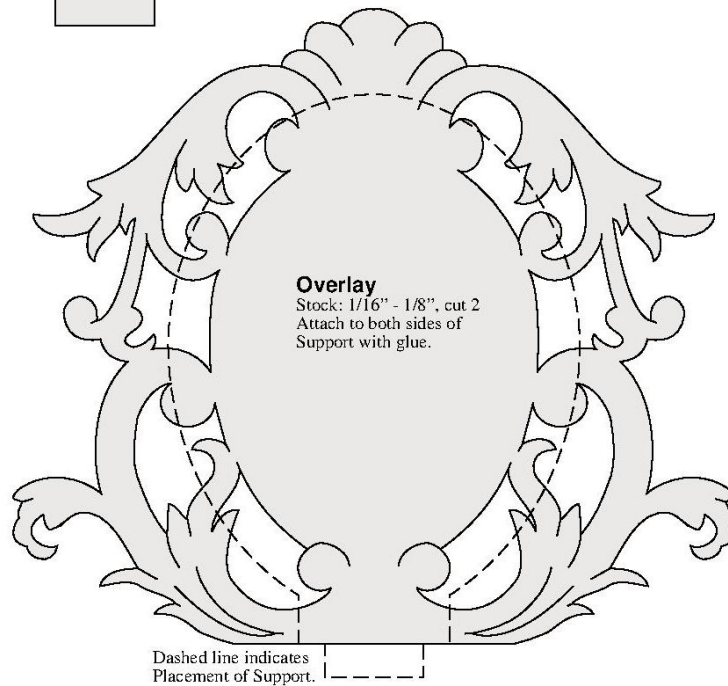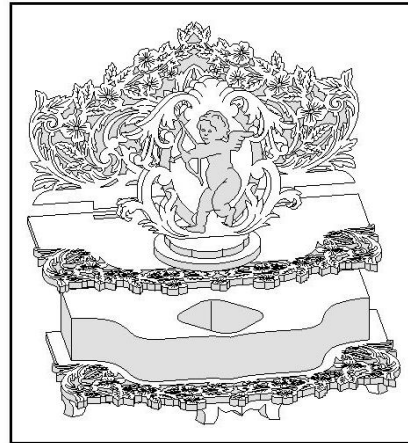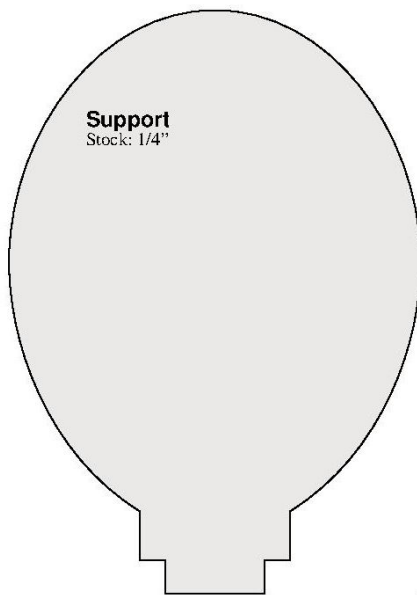   


Project #2






Figure

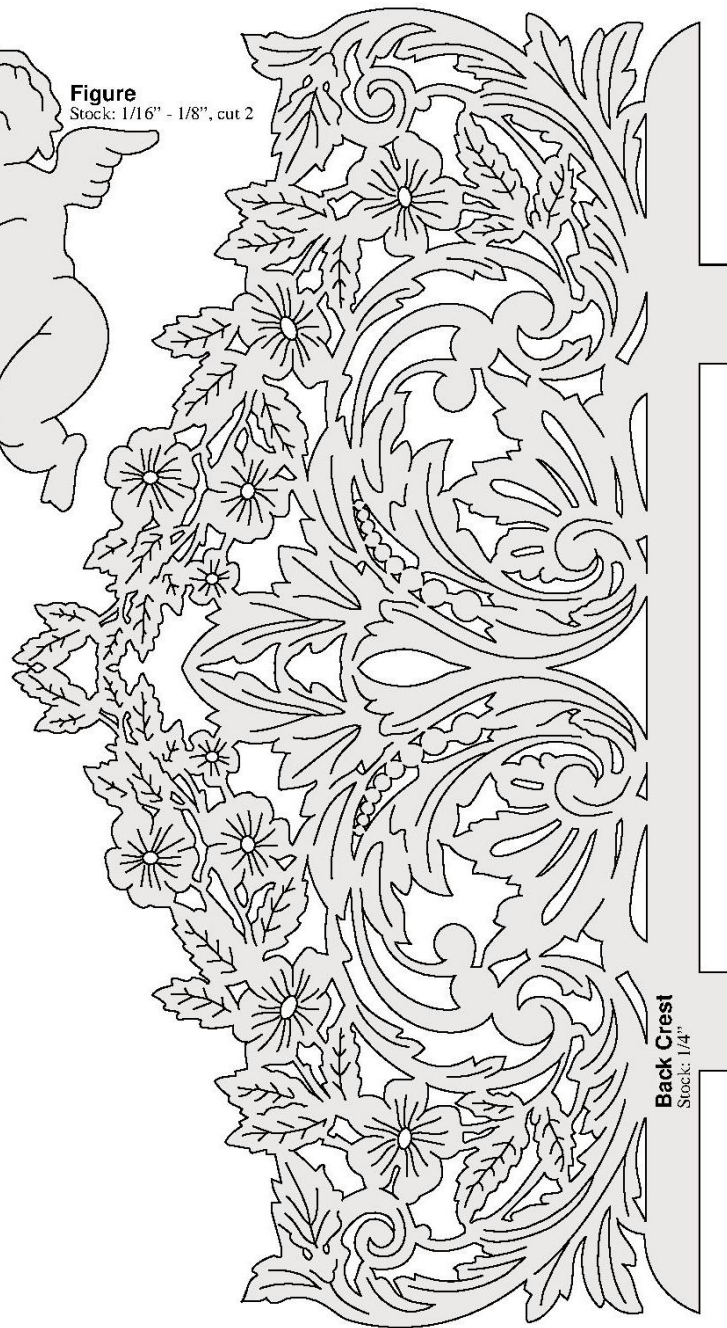 Stock: 1/16" - 1/8", cut 2




Back Crest

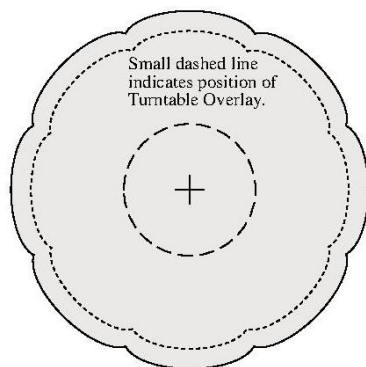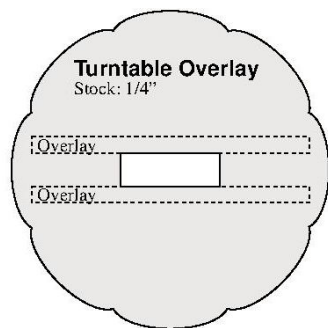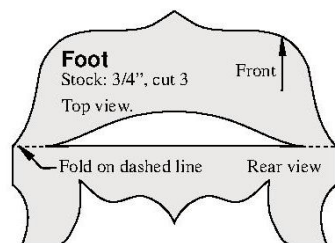   
Stock: 1/4"





Turntable

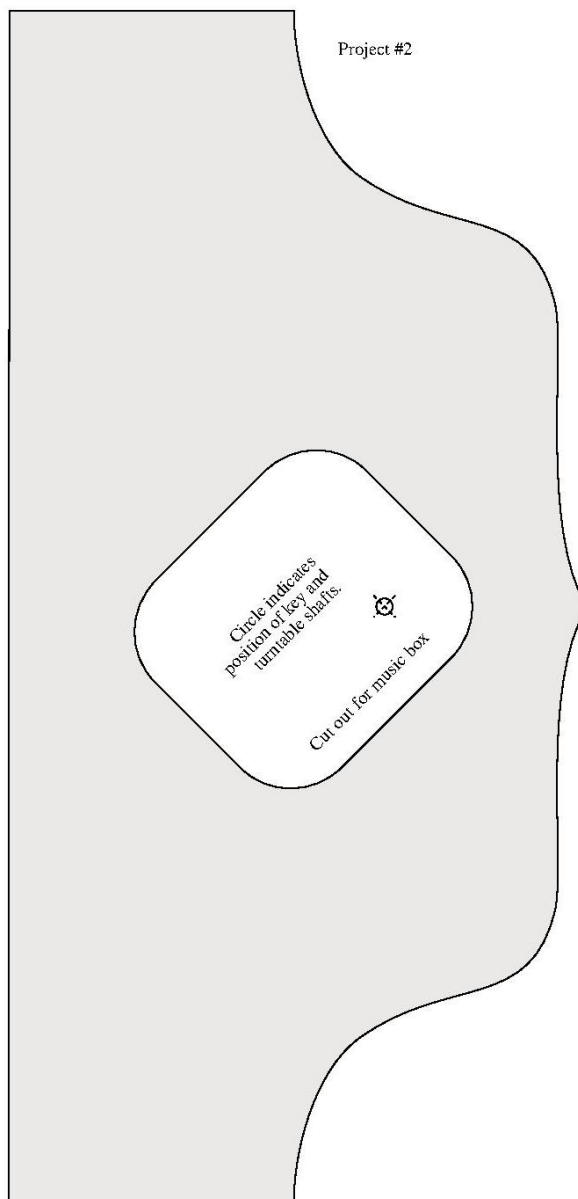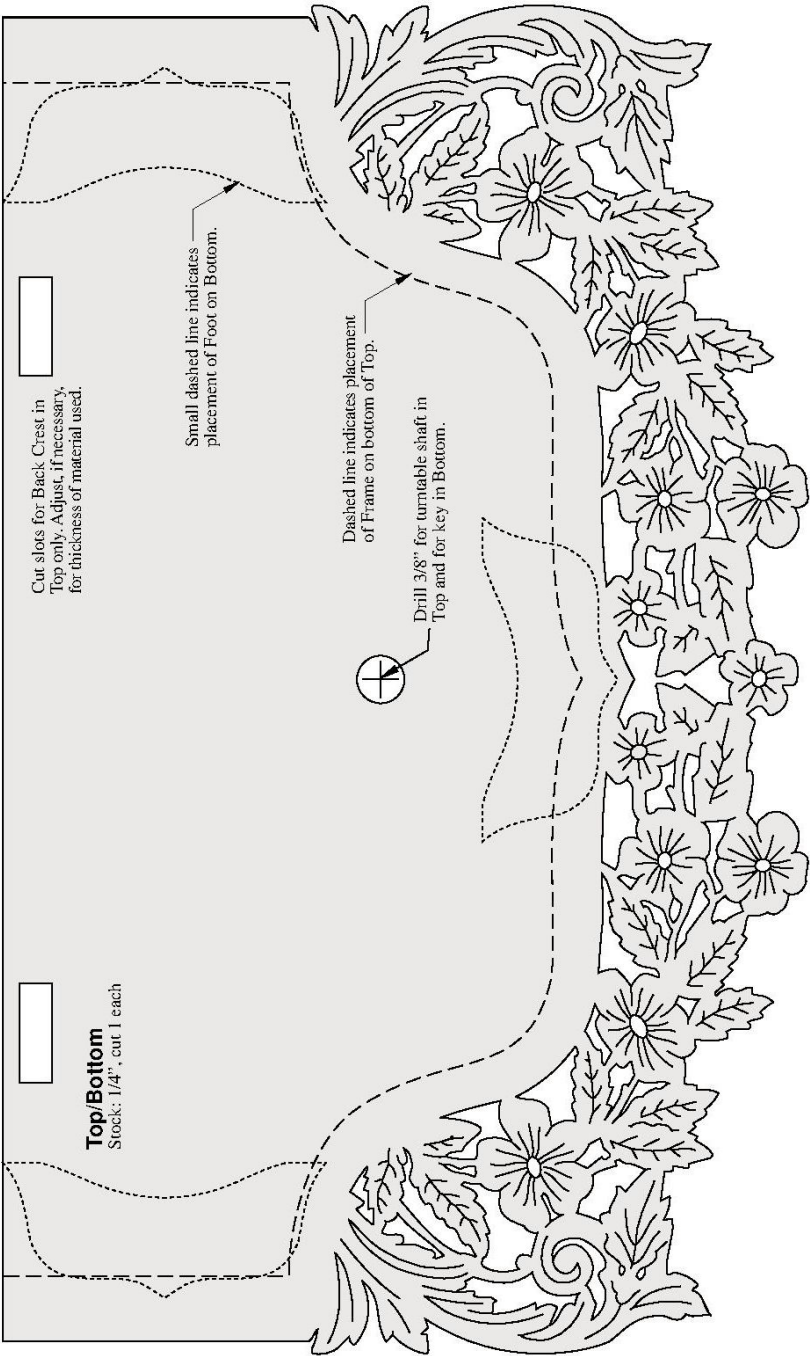  Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.





Project #3

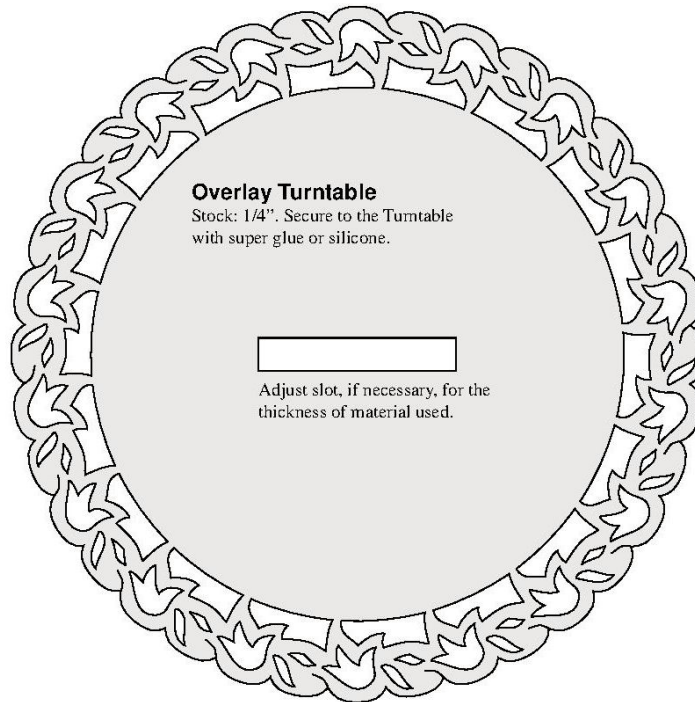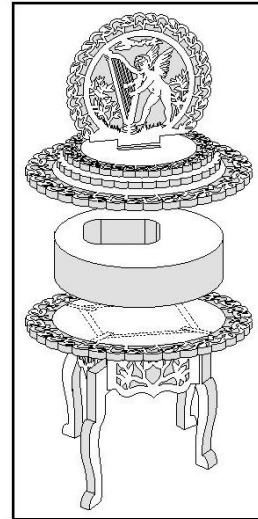  


Frame

Stock: 1 1/2"

Circle indicates
position of key and
turntable shafts.





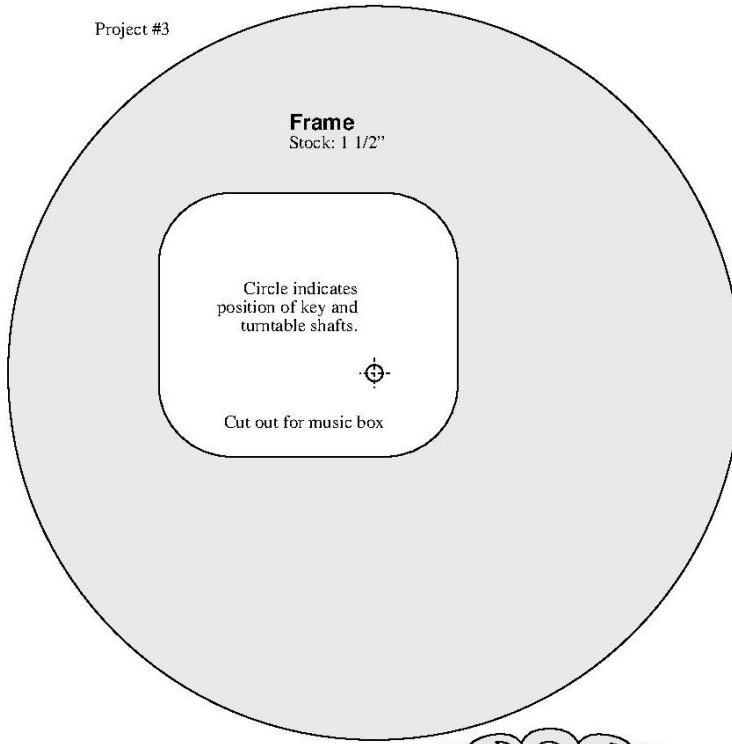 
Cut out for music box



Figure

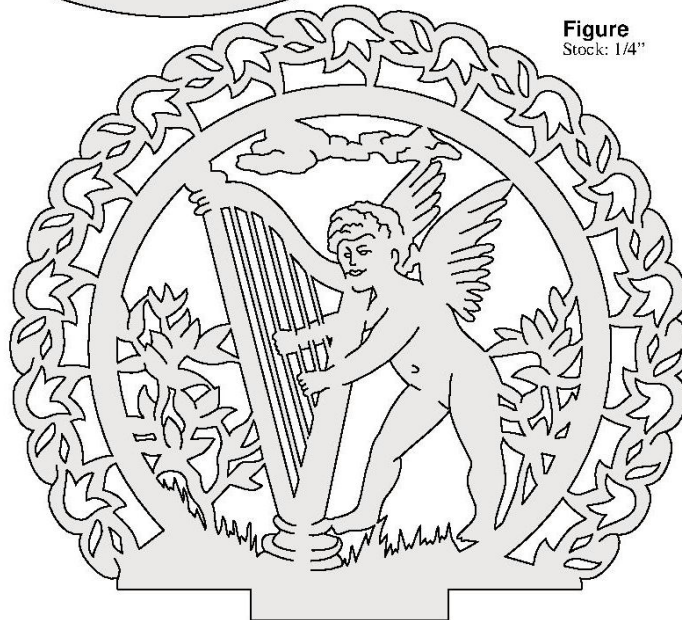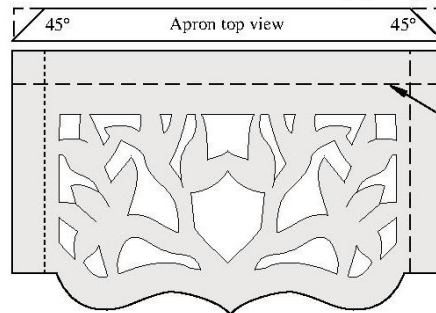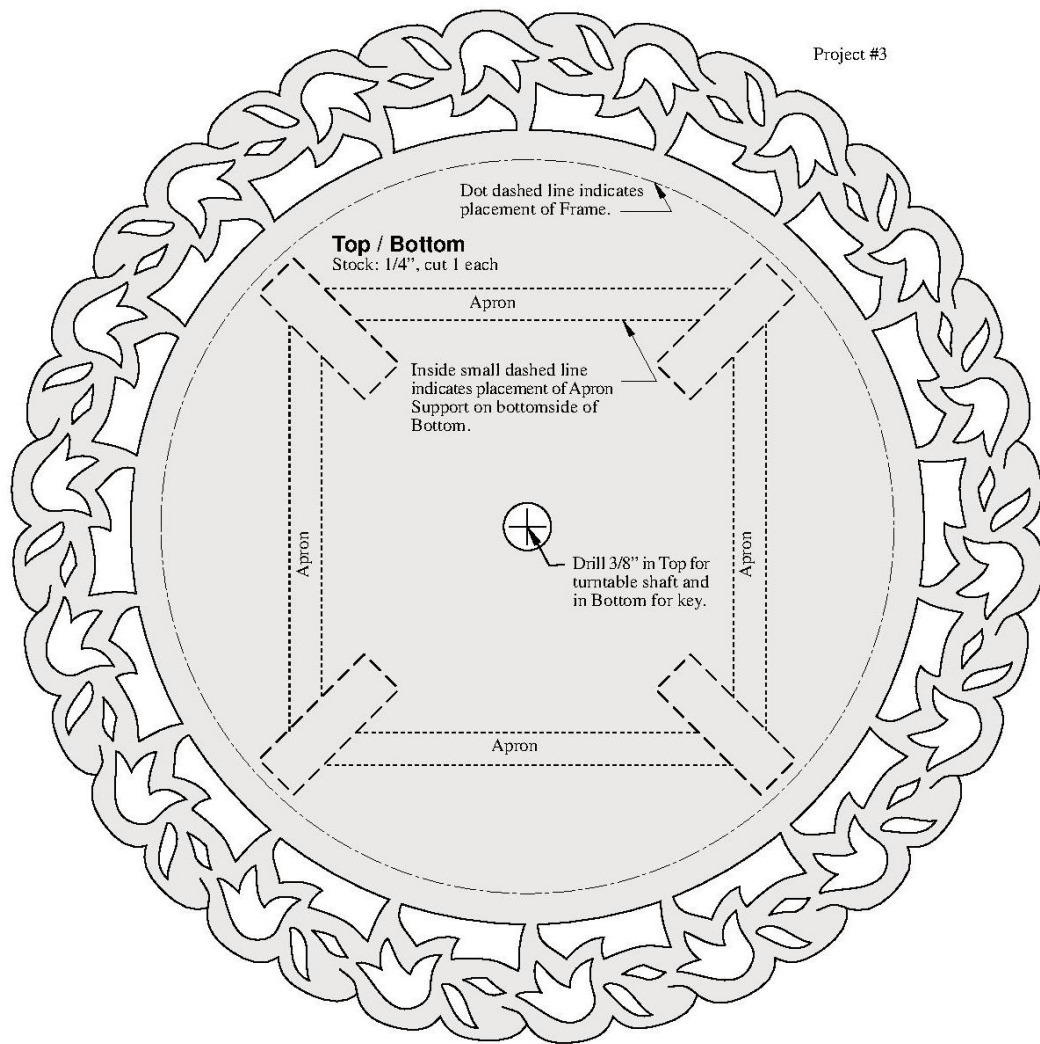   Stock: 1/4"








Apron



Stock: 1/4", cut 4

Dashed line indicates placement of Apron. Attach Apron to Apron Support with glue. Note: bevel cut sides at 45° before cutting pattern.

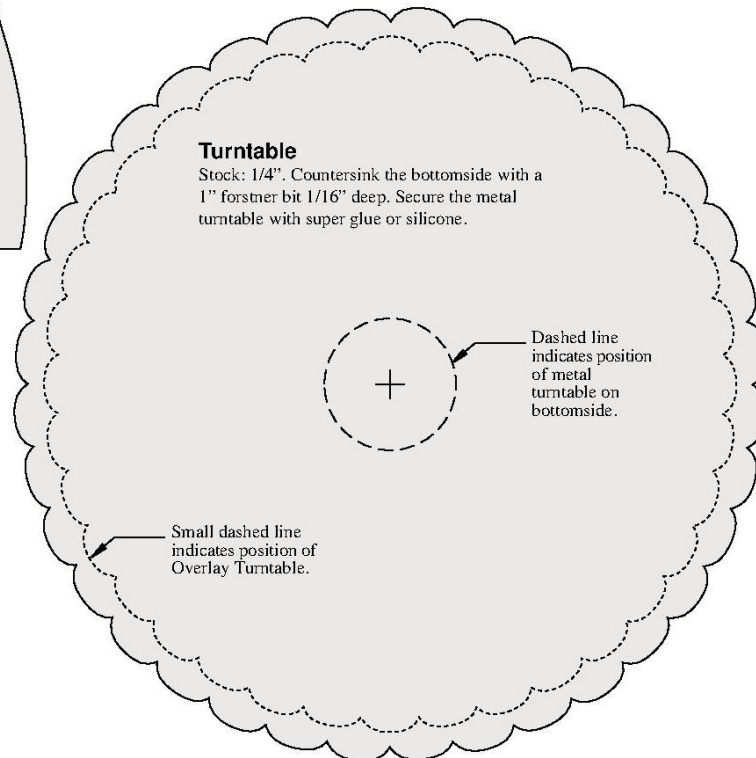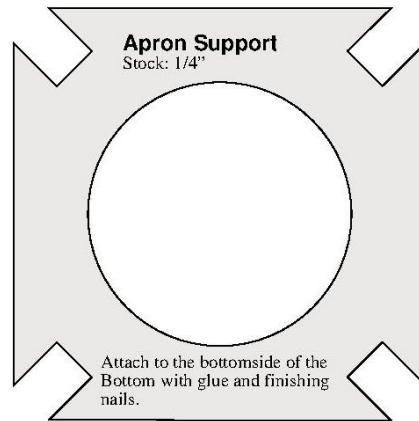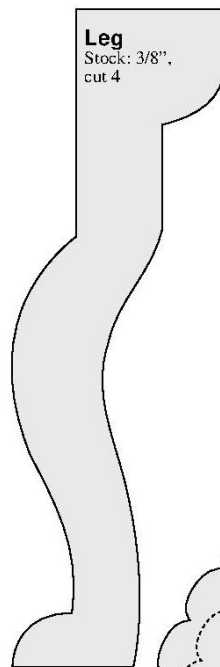   
Project #3



Project #4

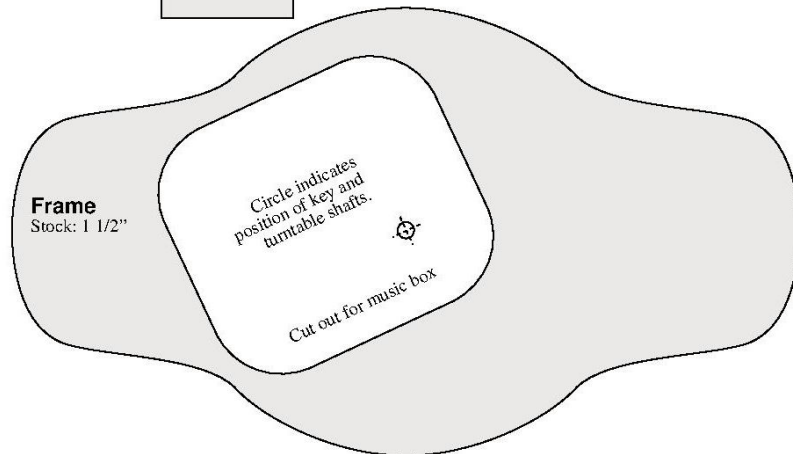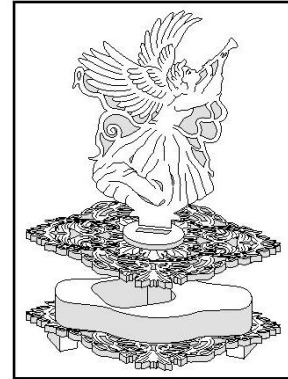  


Project #4

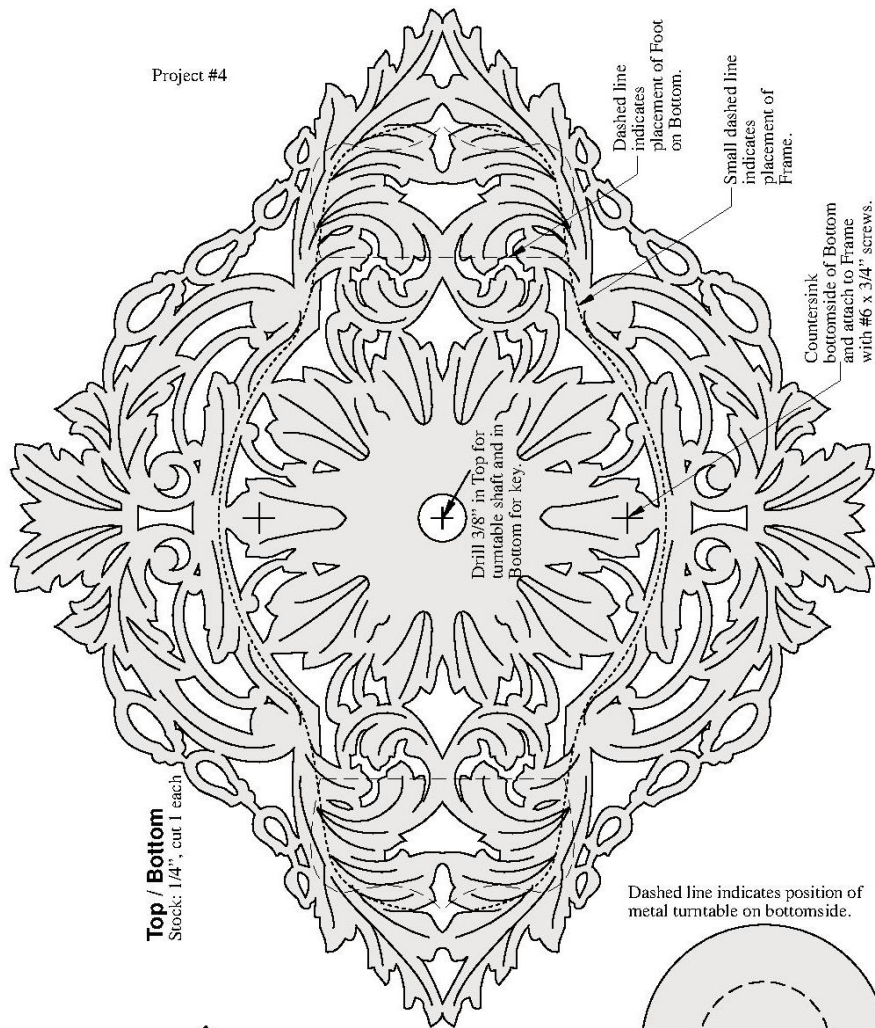 


Top / Bottom

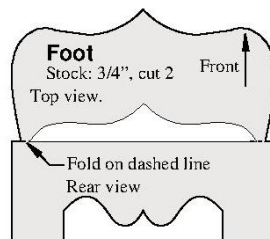 Stock: 1/4", cut 1 each



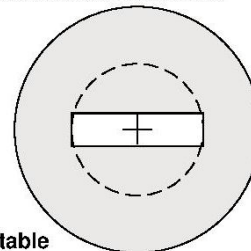 Dashed line indicates position of metal turntable on bottomsides.







Turntable

Stock: 3/8", countersink the bottomsides with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone. Note: countersink bottomsides before cutting slot.

Turntable


Stock: 1/4", countersink the
bottomside with a 1" forstner bit
1/16" deep. Secure the metal
turntable with super glue or silicone.

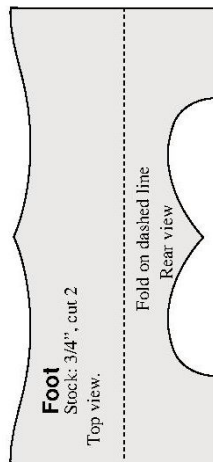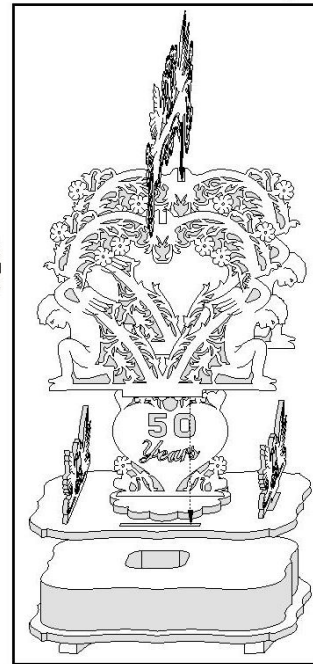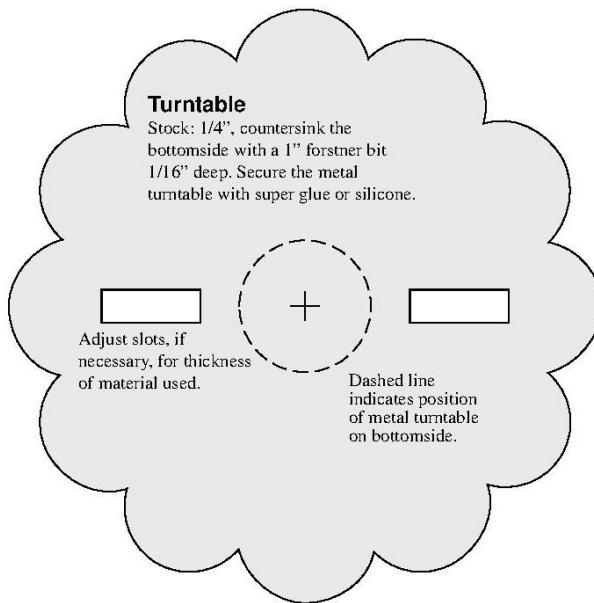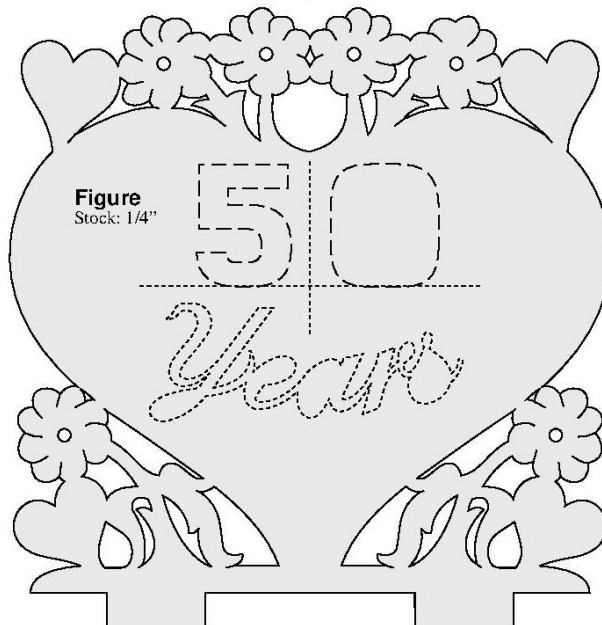    **Figure**
Stock: 1/4"

Text Overlay
Stock: 1/16" - 1/8"

Years

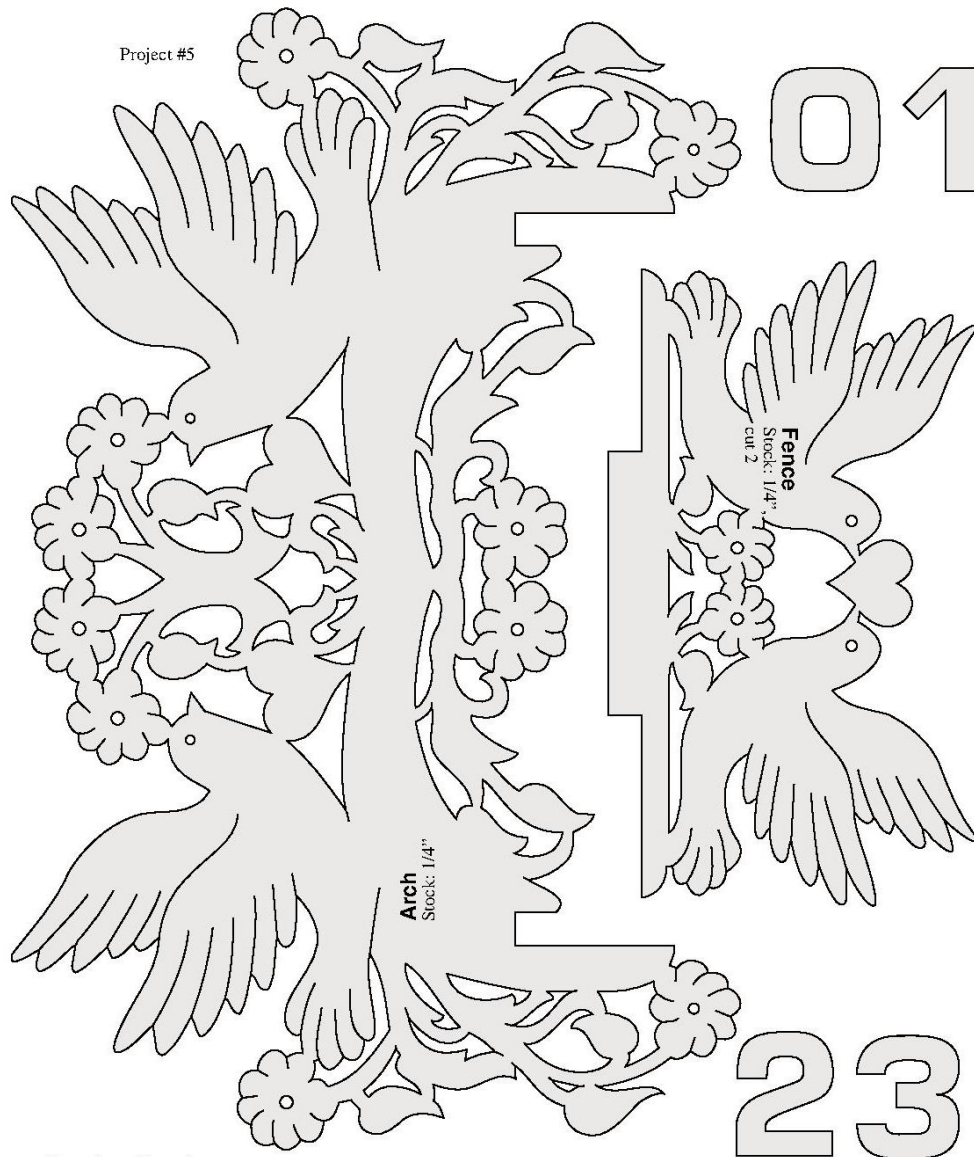 Project #5




Number Overlays
Stock: 1/16" - 1/8"

4 5 6 7 8 9



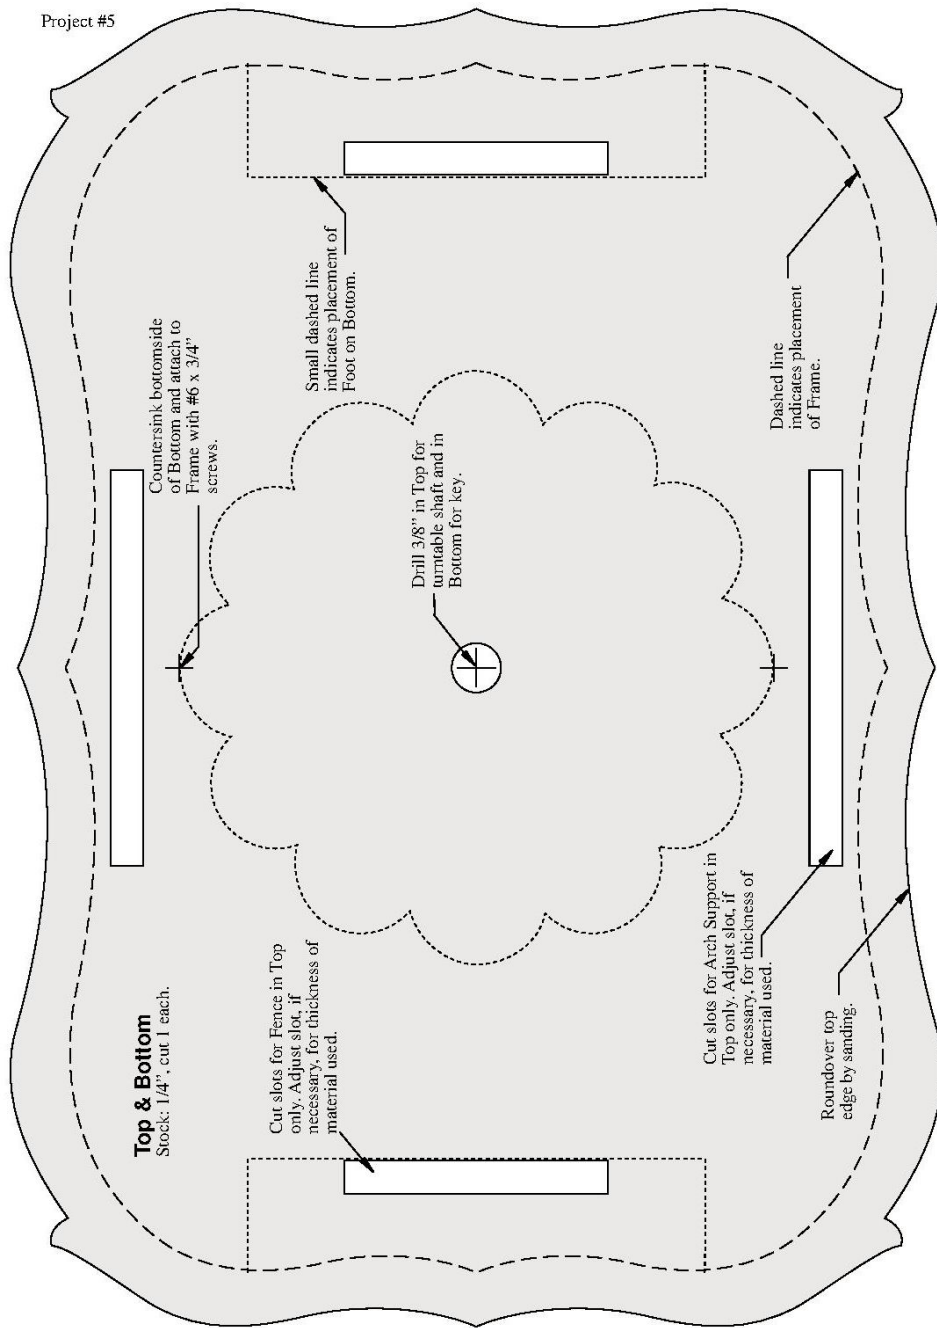 Arch Support
Stock: 1/4", cut 2





Frame
Stock: 1 1/2"


Circle indicates
position of key and
turntable shafts.



Cut out for music box

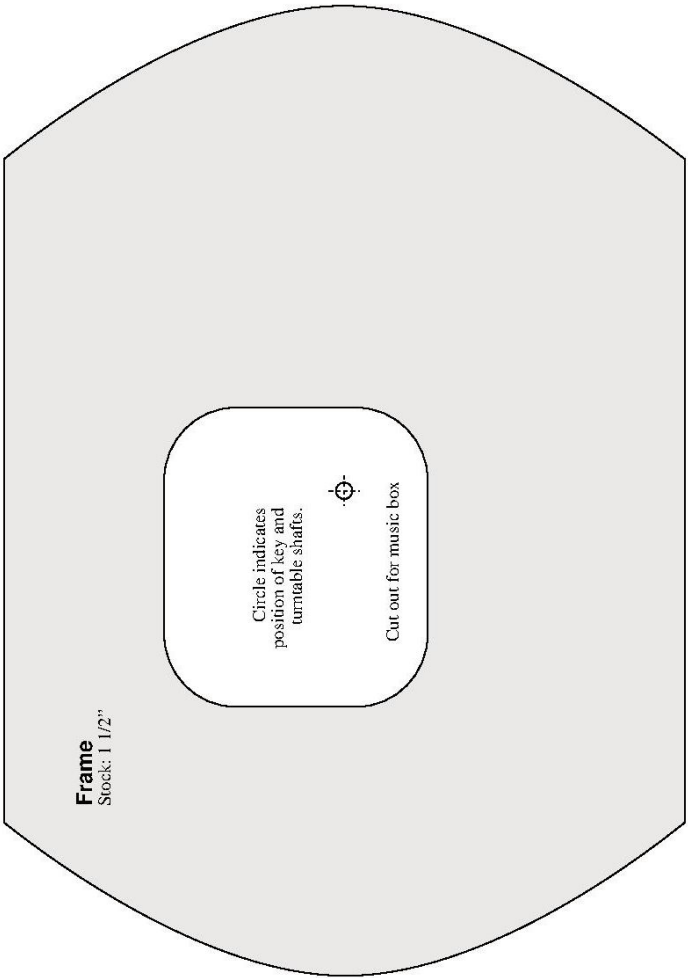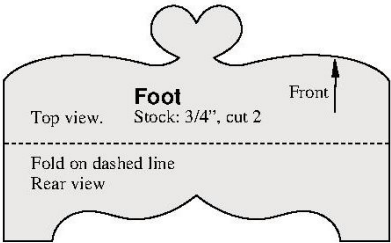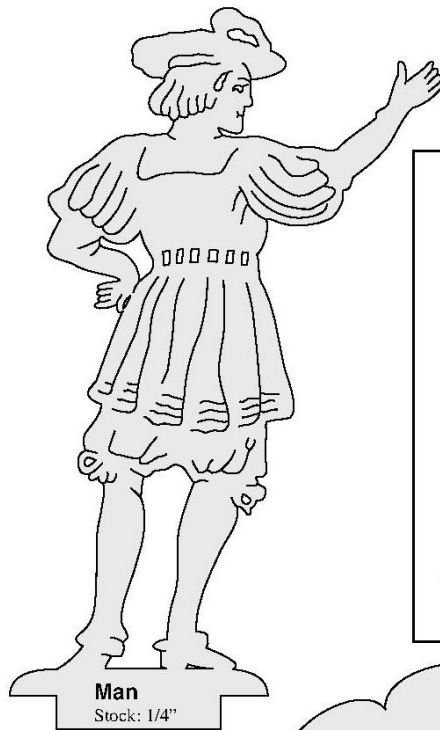   Project #6






Turntable


Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

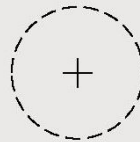 
Adjust slots, if necessary, for the thickness of material used.





Dashed line indicates position of metal turntable on bottomside.

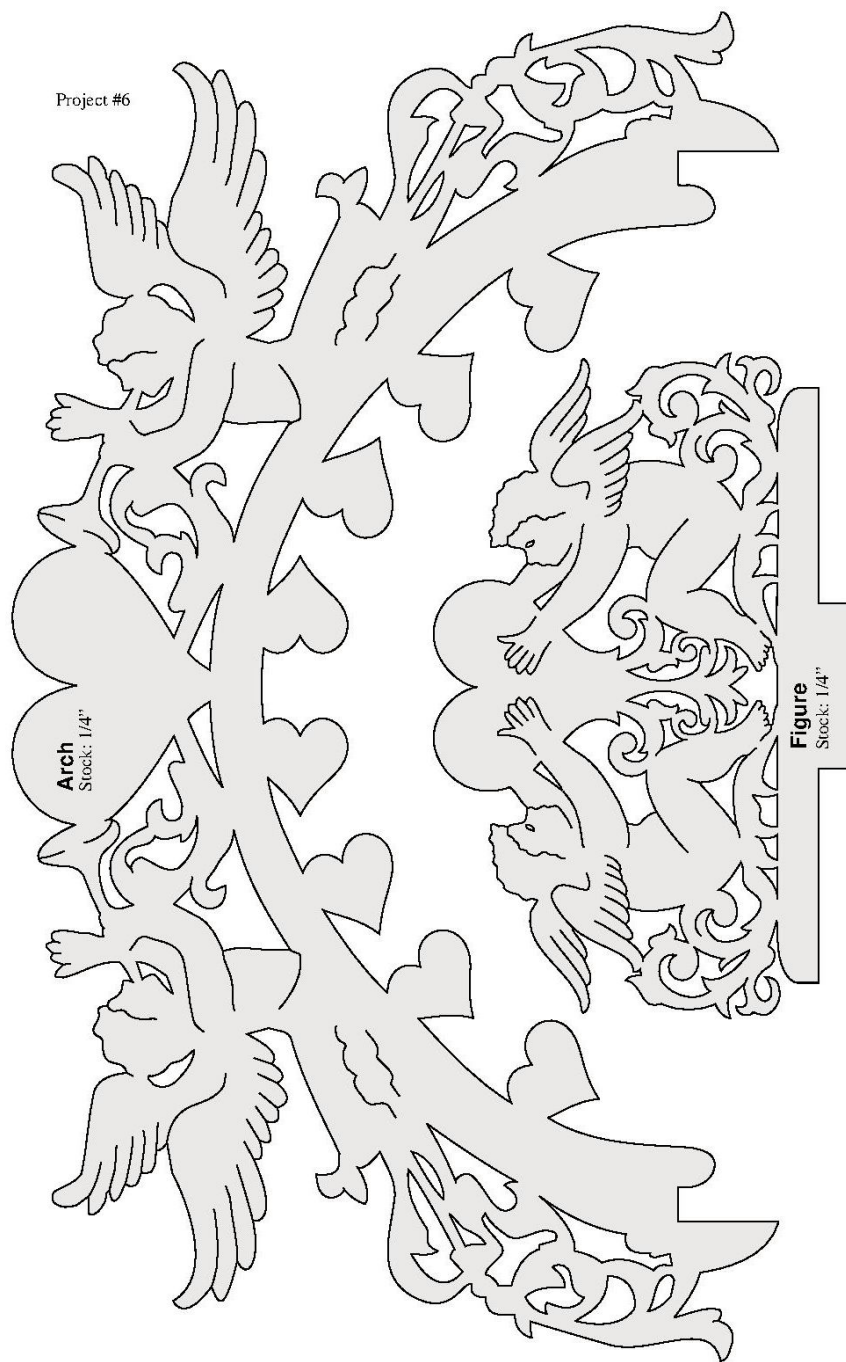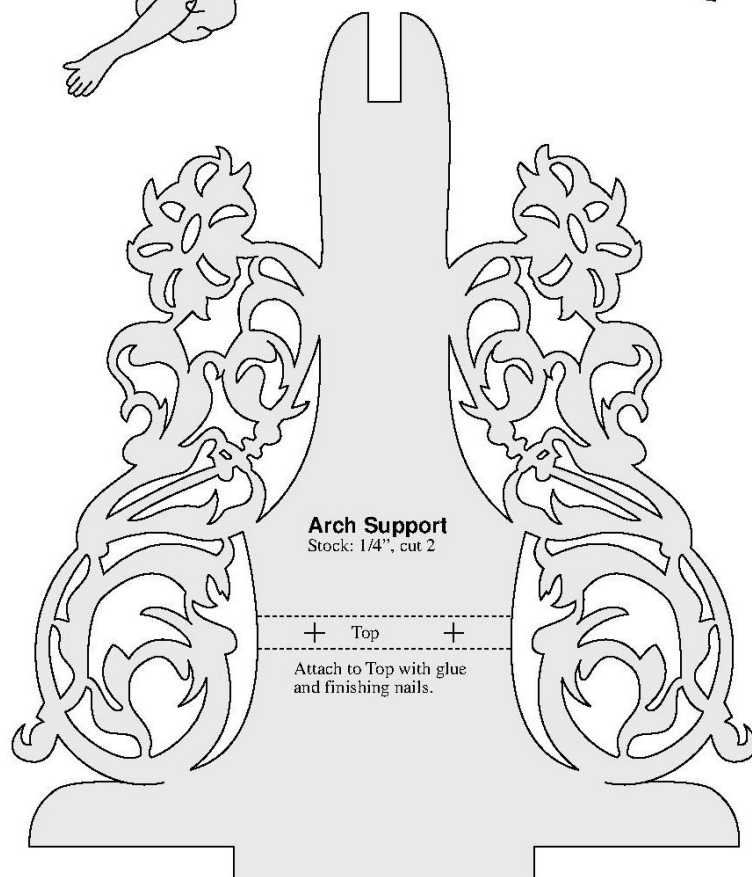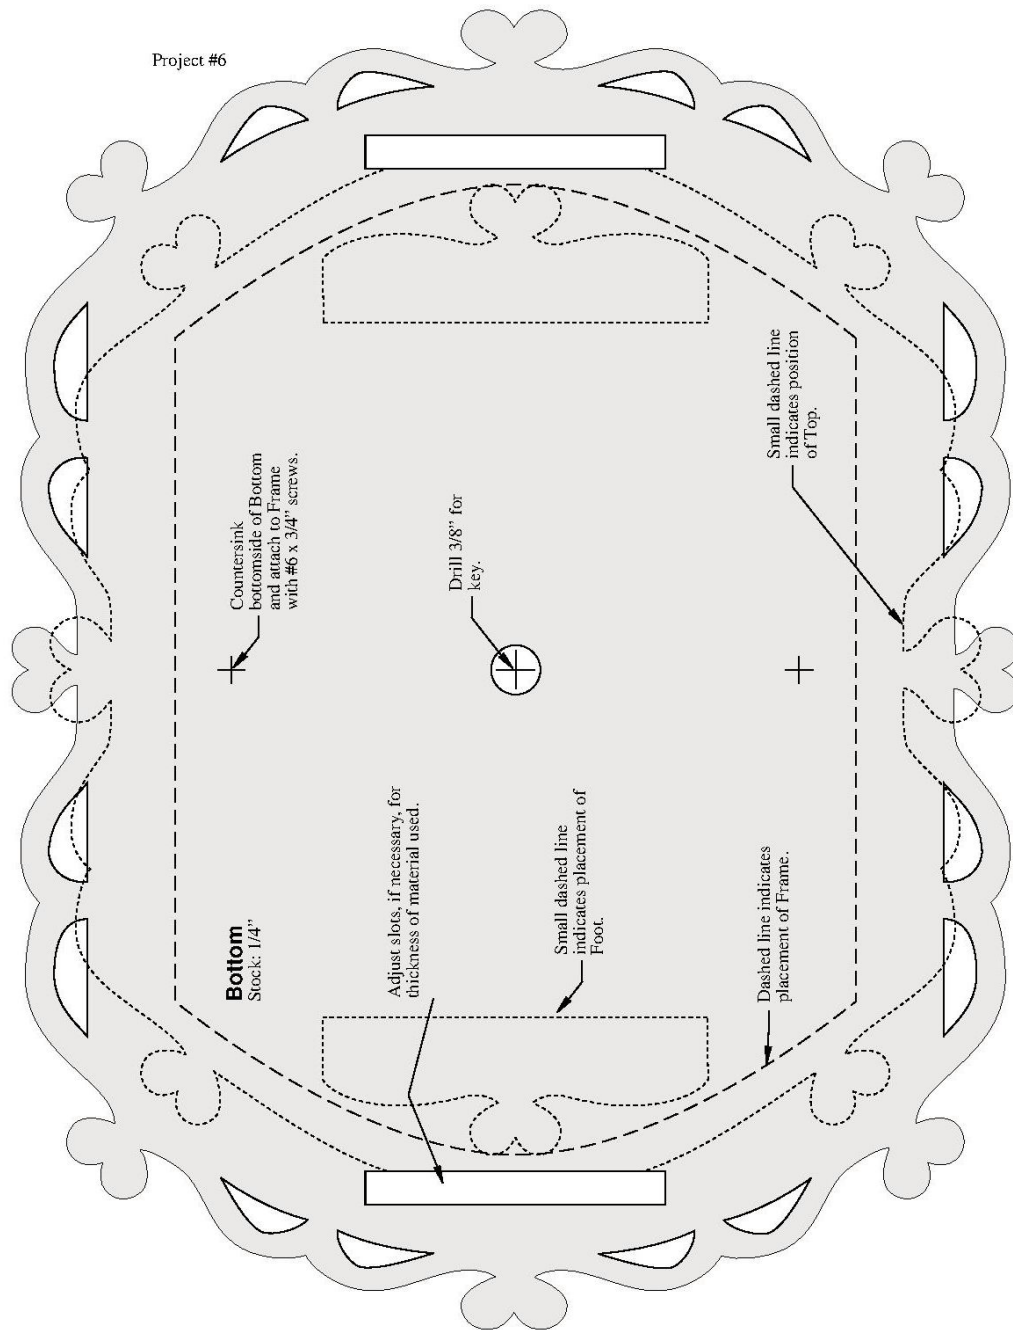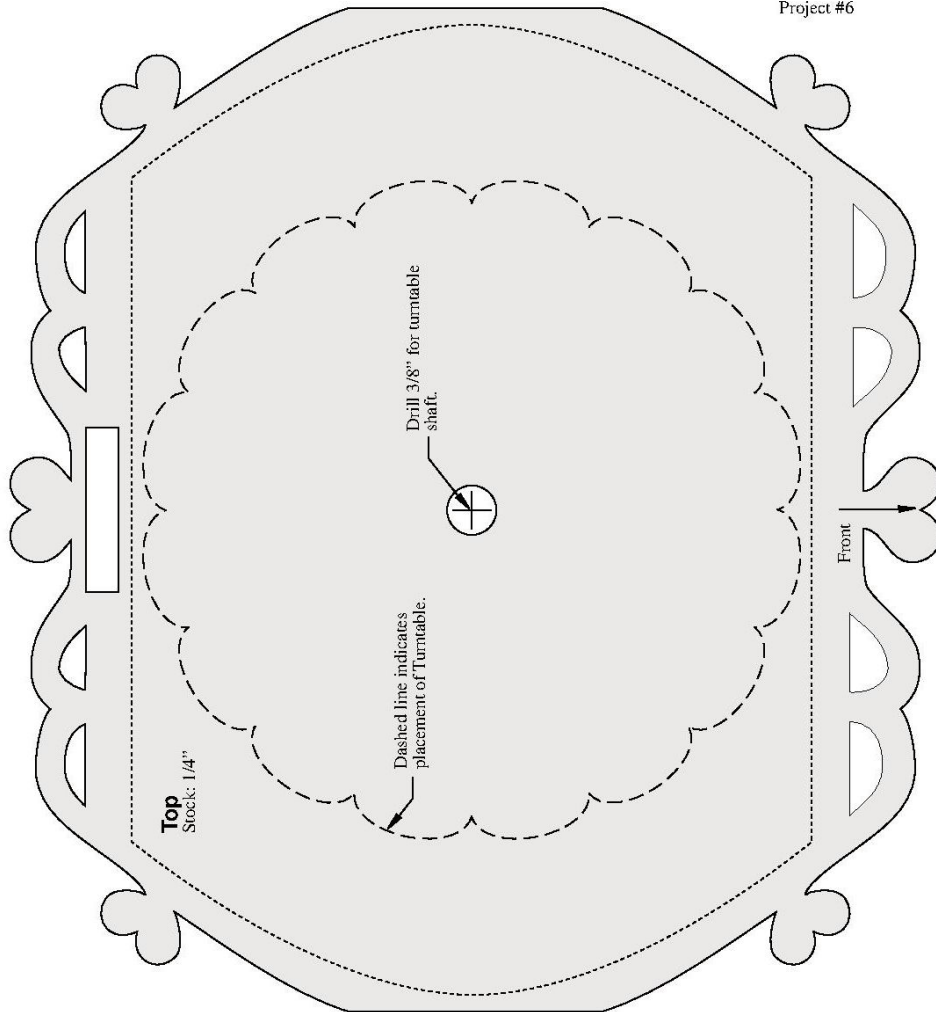    Project #6










Project #7

Ceiling

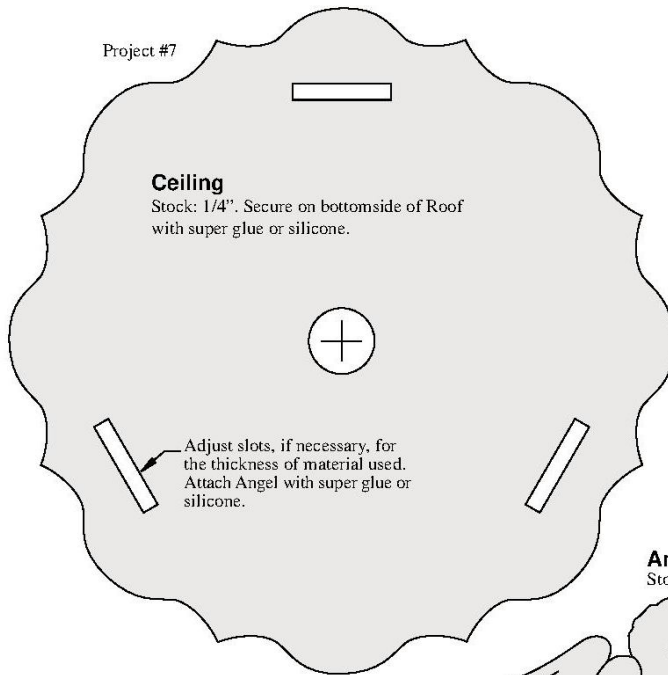 Stock: 1/4". Secure on bottomside of Roof with super glue or silicone.




Angel

Stock: 1/8", cut 3




Turntable

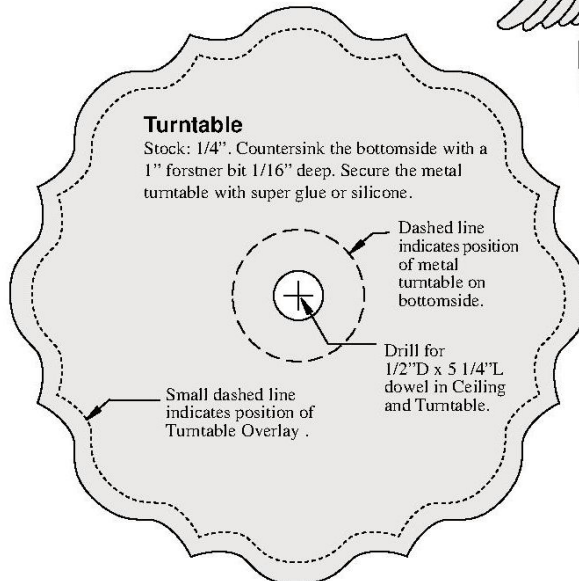 Stock: 1/4". Countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.




Top section

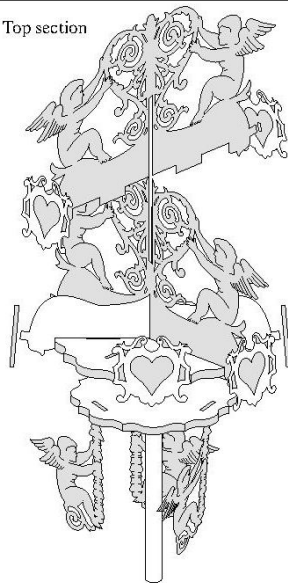 

Project #7

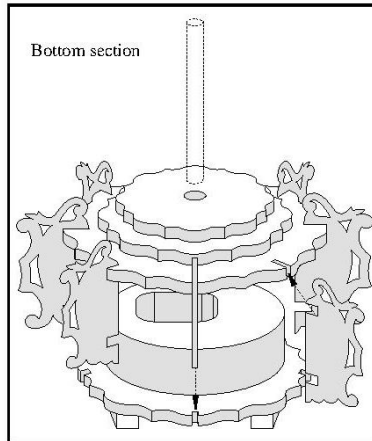 Bottom section



Frame

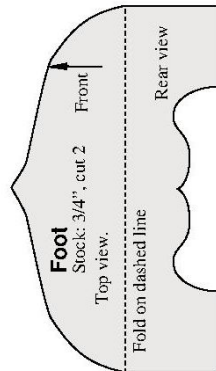 
Stock: 1 1/2"

Circle indicates
position of key and
turntable shafts.



Cut out for music box

Project #7







Turntable Overlay

Stock: 1/4". Secure the Turntable Overlay with super glue or silicone.




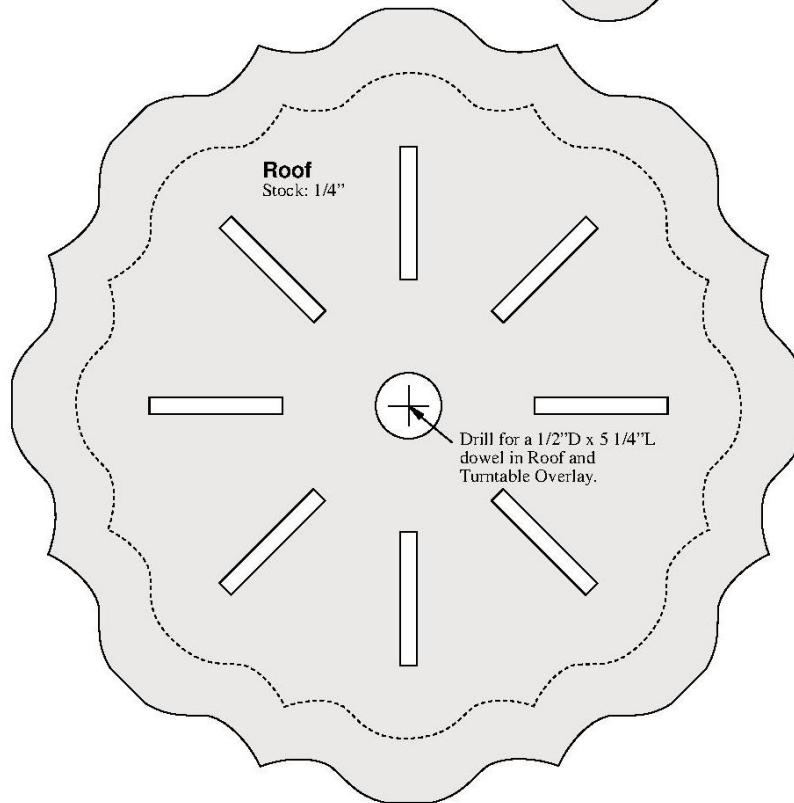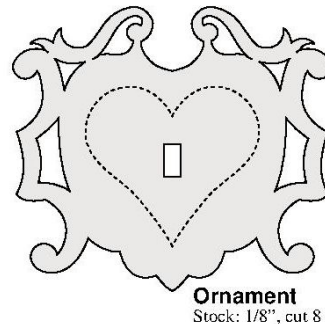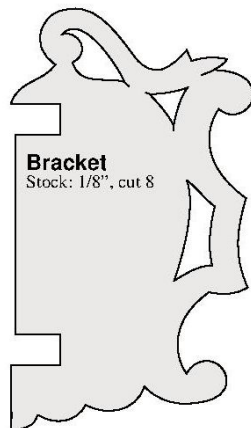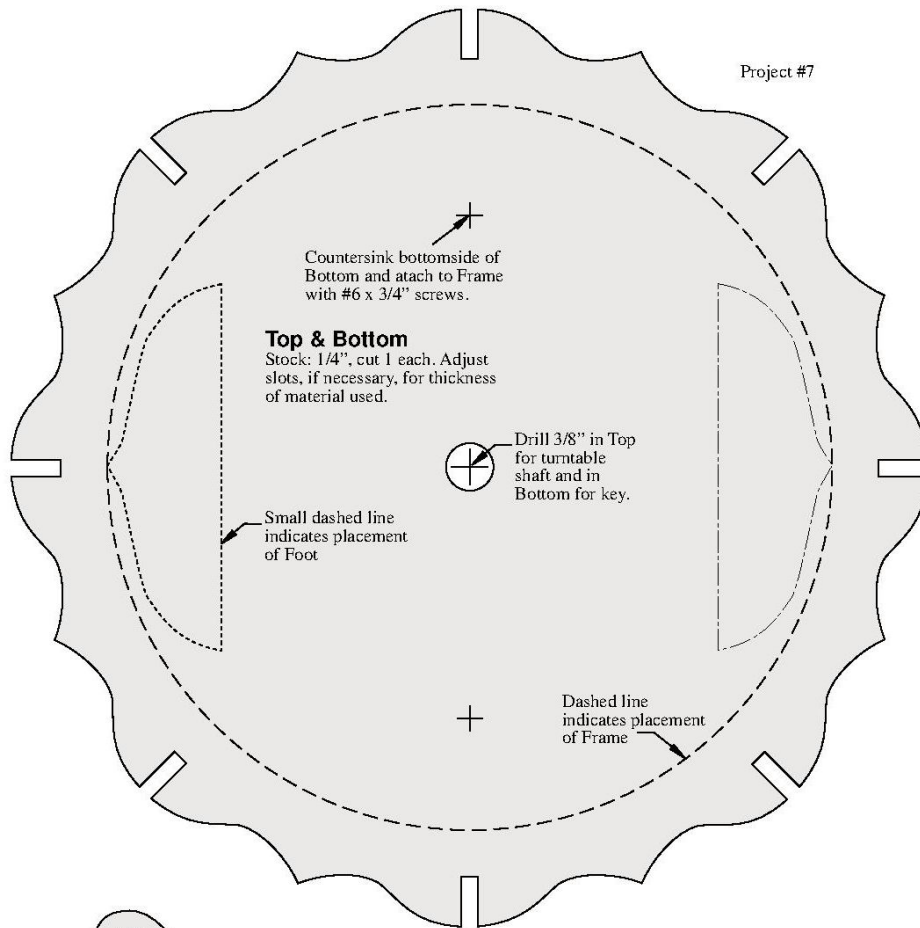    Drill for a 1/2"D x 5 1/4"L
dowel in Roof and
Turntable Overlay.







Ornament Overlay
Stock: 1/8", cut 8

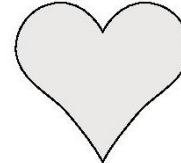 



Project #7

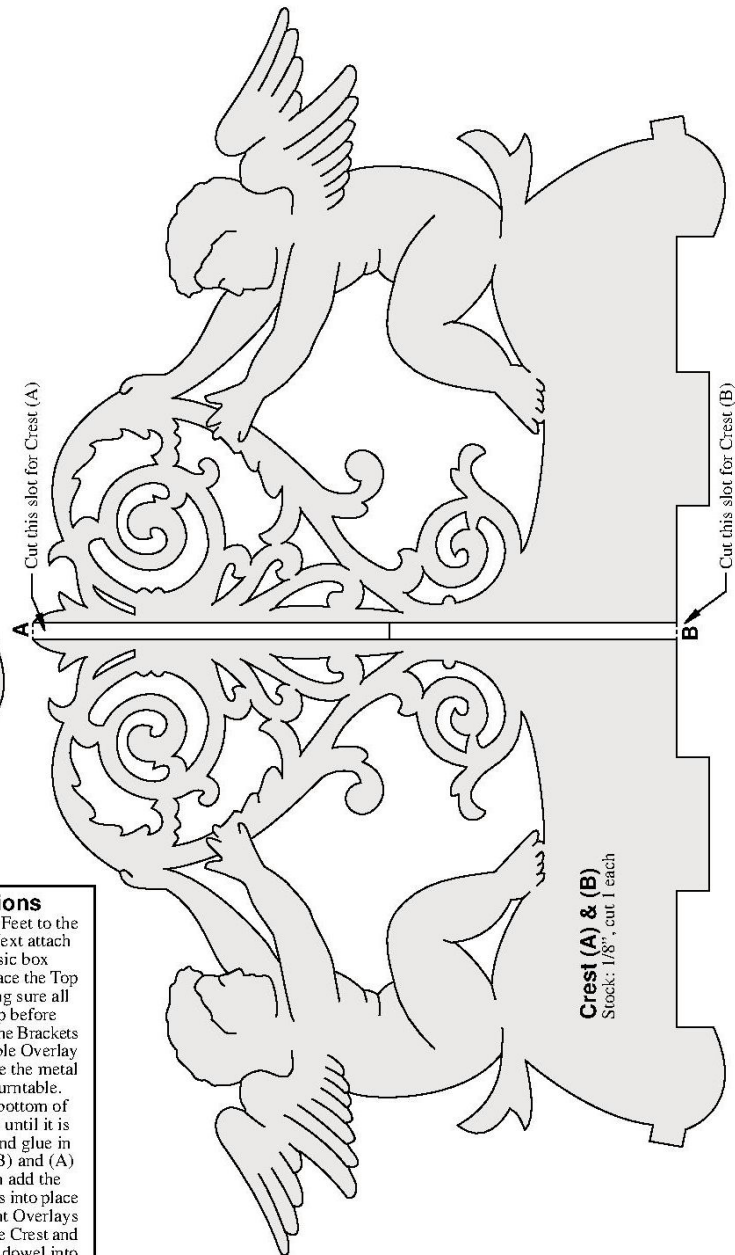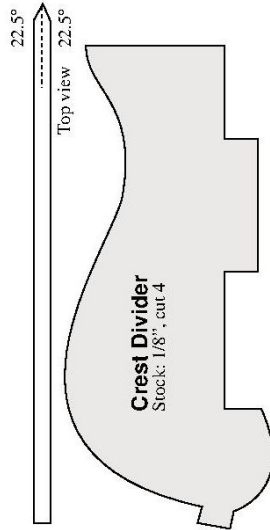  Sand inside
edges 22.5° to fit
in corner of
Crest (A) & (B)
on Roof.



Assembly Instructions

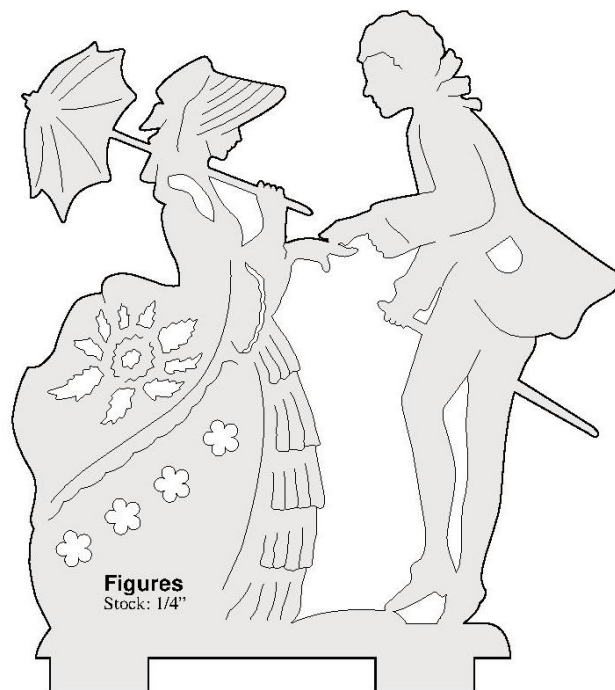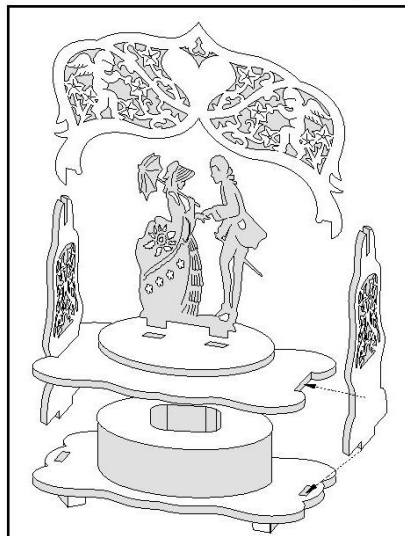  Assemble by first attaching the Feet to the Bottom with glue or silicone. Next attach the Frame, making sure the music box movement is secure in place. Place the Top into position on the Frame, being sure all the slots for the Brackets line up before securing it in place. Then secure the Brackets in place. Now attach the Turntable Overlay to the Turntable, and then secure the metal turntable to the bottom of the Turntable. Next, secure the Ceiling to the bottom of the Roof. Then insert the dowel until it is flush with the top of the Roof and glue in place. Now secure both Crest (B) and (A) into place on the Roof, and then add the Crest Dividers. Secure the Angels into place in the Ceiling, and the Ornament Overlays and Ornaments on the tabs of the Crest and Crest Dividers. Now, secure the dowel into the Turntable assembly, and attach the metal turntable to the movement.




Project #8

Turntable

Stock: 1/4", countersink the
bottomside with a 1" forstner
bit 1/16" deep. Secure the
metal turntable with super glue
or silicone.

Dashed line
indicates position
of metal turntable
on bottomside.


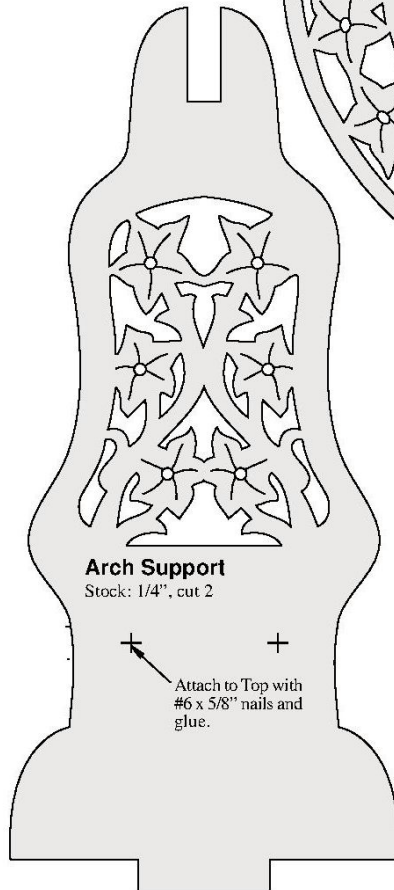 
Adjust slots if
necessary for
thickness of the
material used.




Arch Support


Stock: 1/4", cut 2

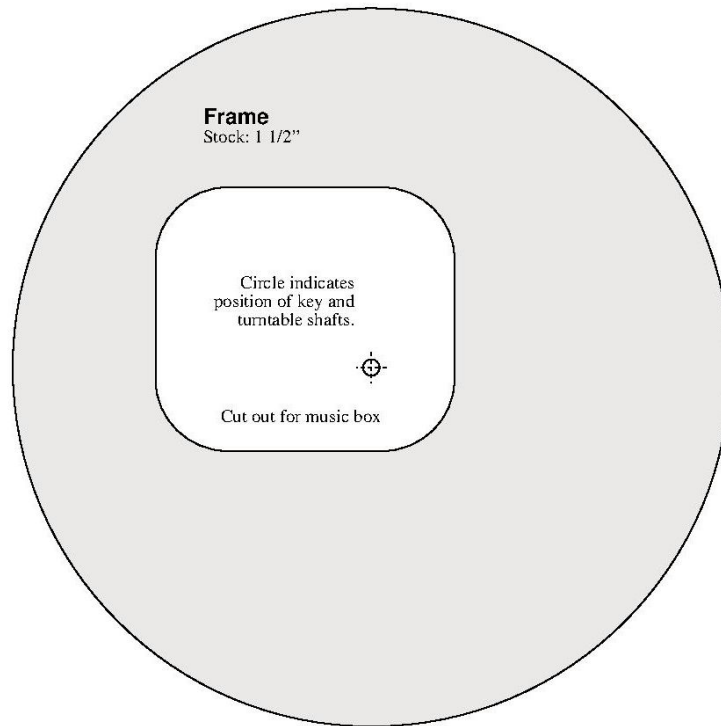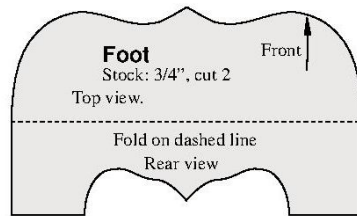  
Attach to Top with
#6 x 5/8" nails and
glue.



Project #8

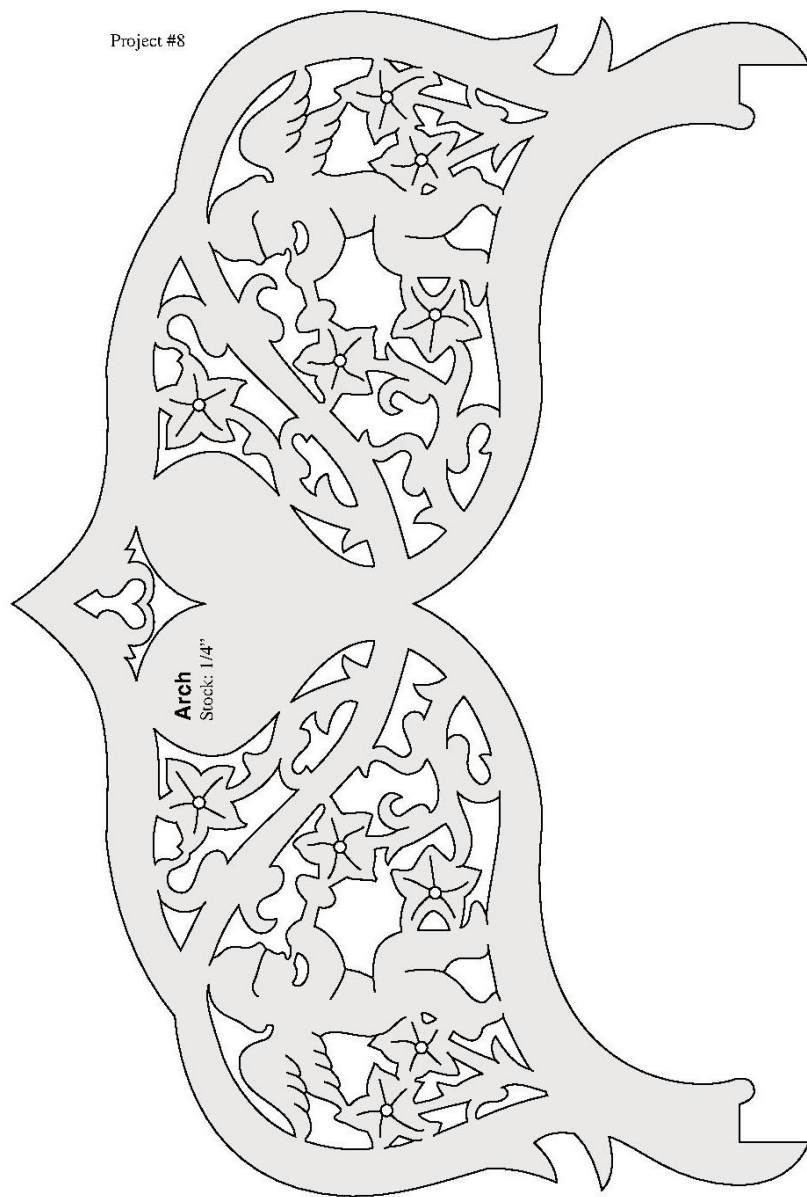 


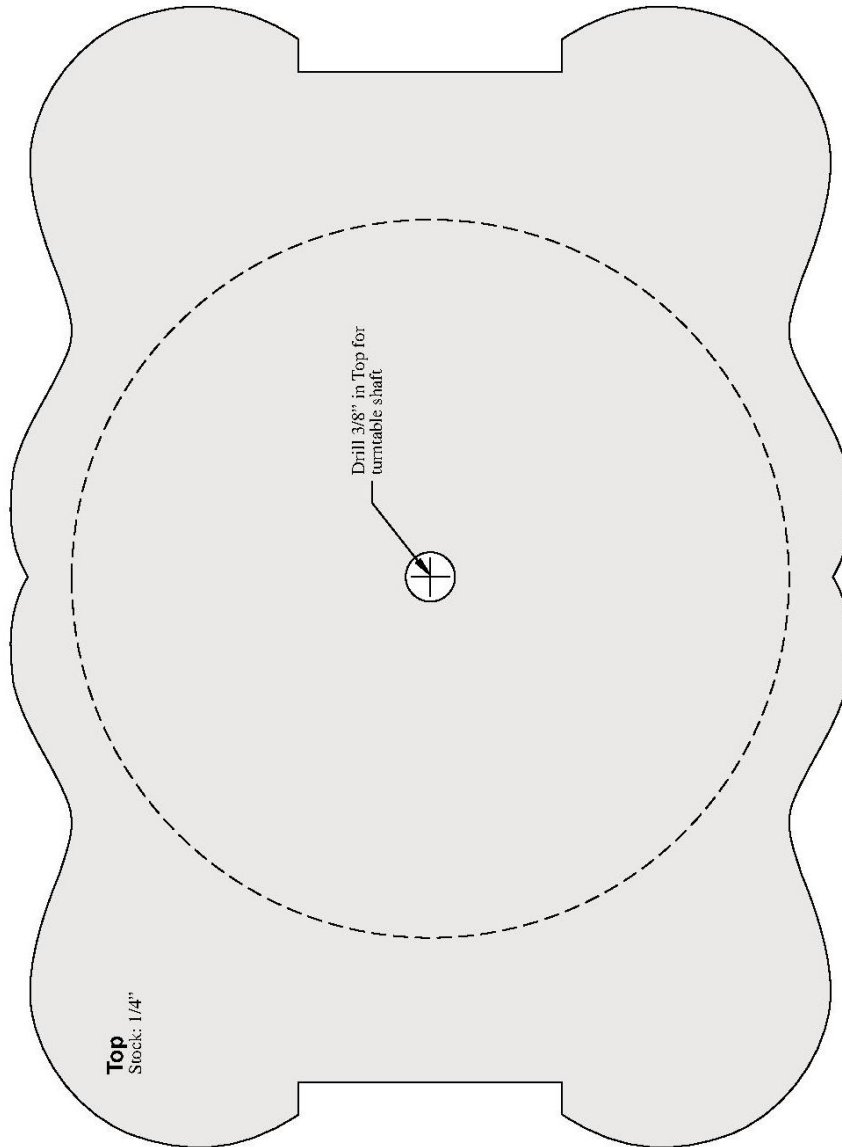 

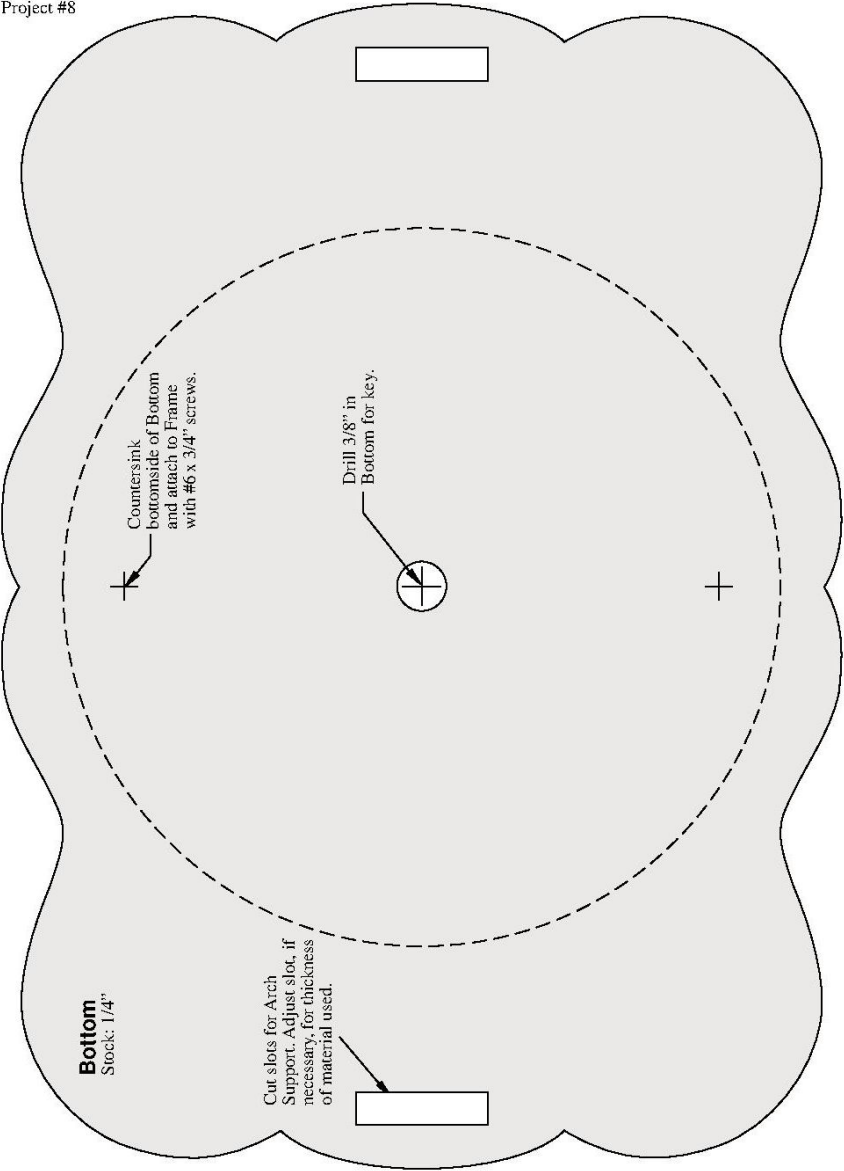 



Assembly Instructions

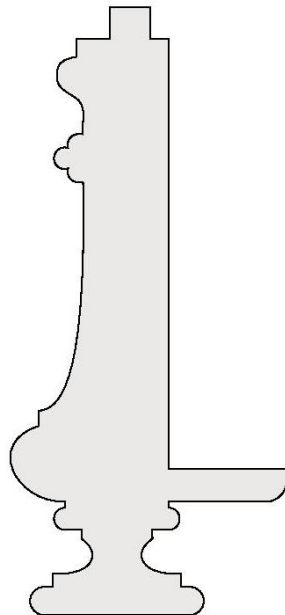 Assemble by first attaching one Side Support and one Side to the Bottom. Continue in a clockwise direction with the remaining Side Supports and Sides. Next, secure the Top into position. Now attach the Lid Underlay to the bottom of the Lid. Then secure the Handles, Handle Support, Overlay, and Top Overlay into position.



Side Support

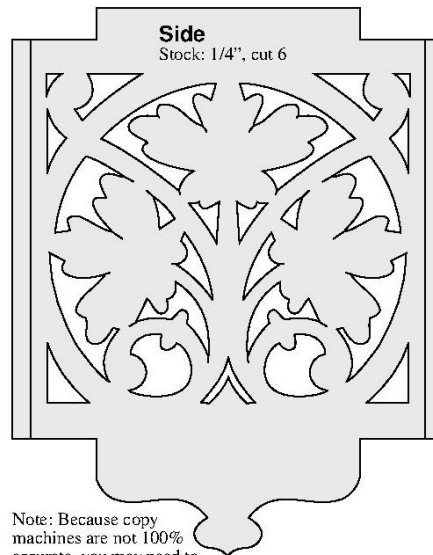  Stock: 1/4", cut 6




Side


Stock: 1/4", cut 6

Note: Because copy machines are not 100% accurate, you may need to adjust the width.

Project #9

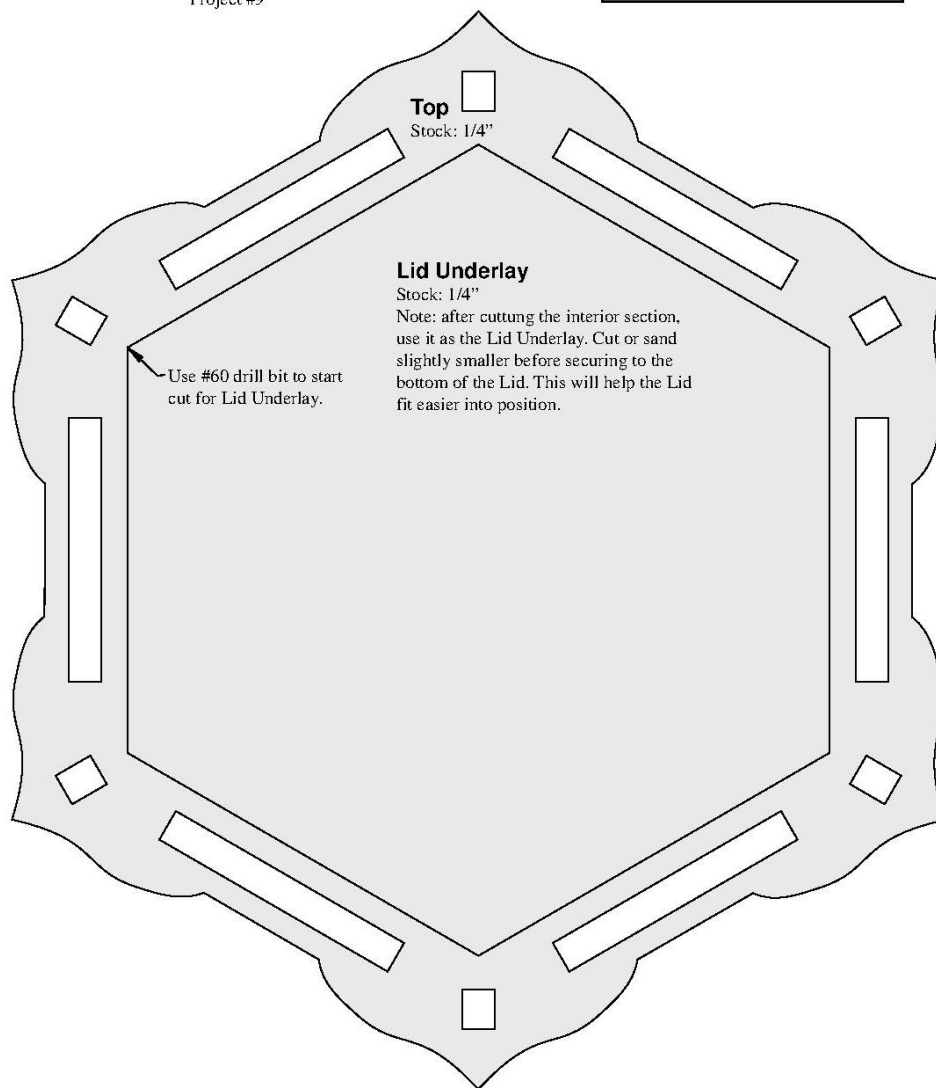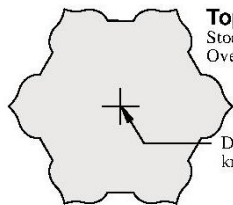  Note: Most copy machines are not 100% accurate, which can result in distortion of your pattern pieces. Since this project has several slots and tab connections, it may be necessary to adjust them for an accurate fit.






Top Overlay





Stock: 1/8". Attach to Overlay with glue.


Drill for finial or brass knob of your choice.

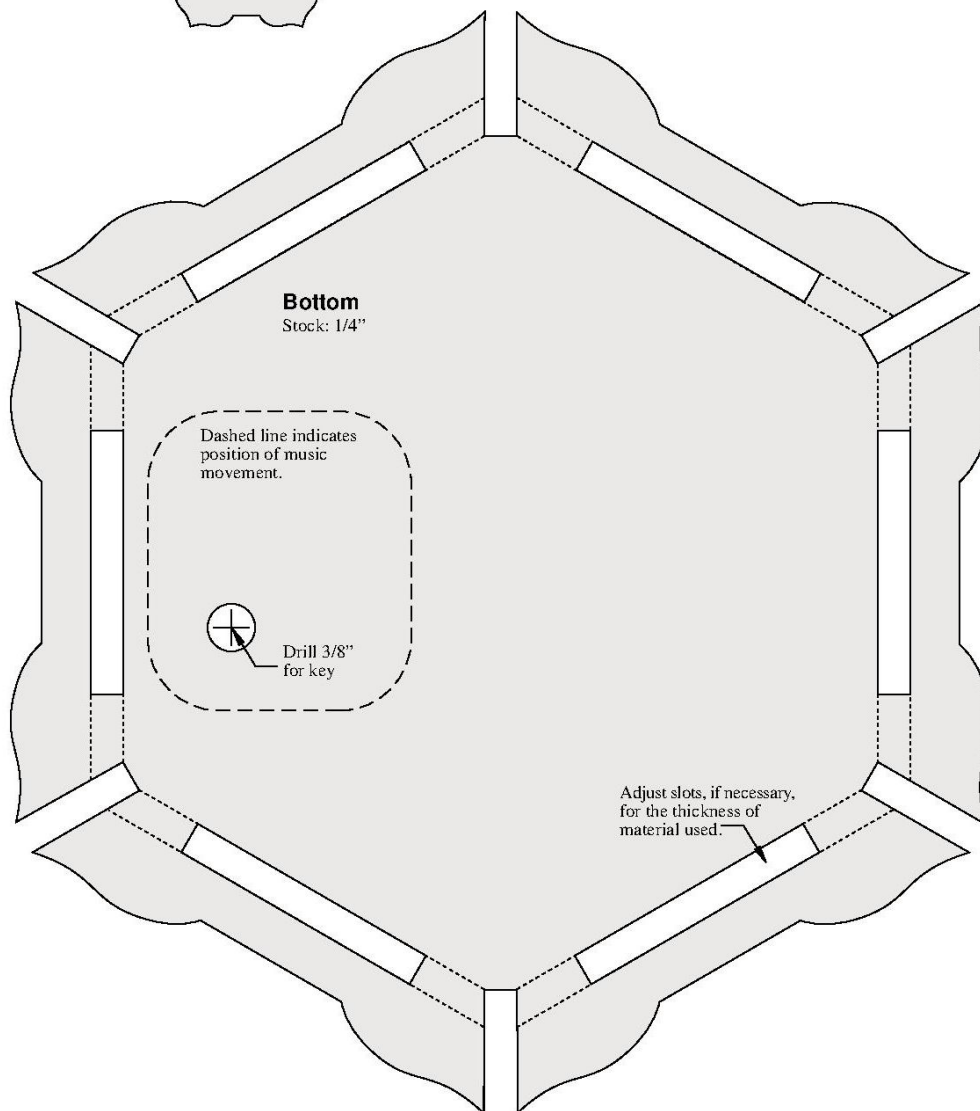 Project #9





Project #9

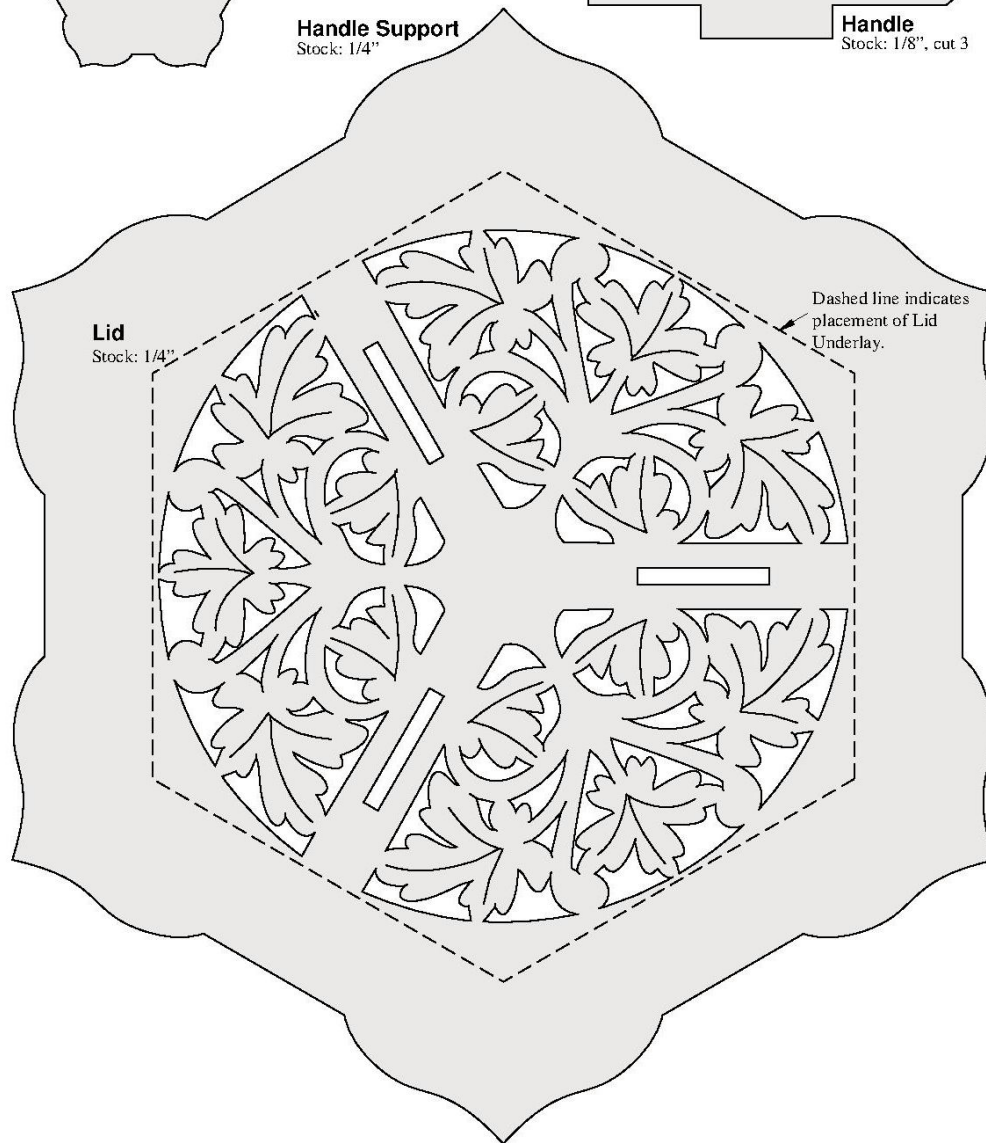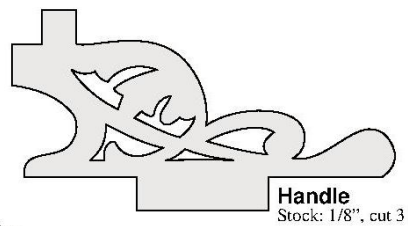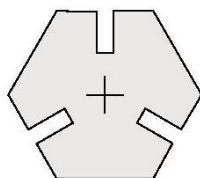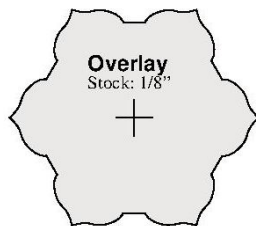    


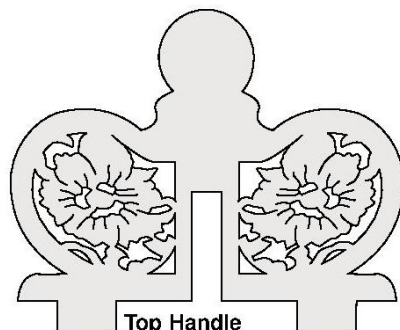 

Top Handle
Stock: 1/4"

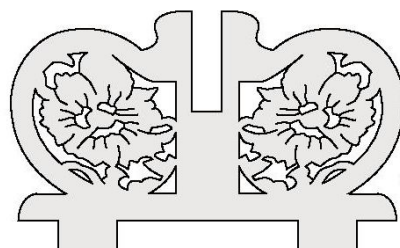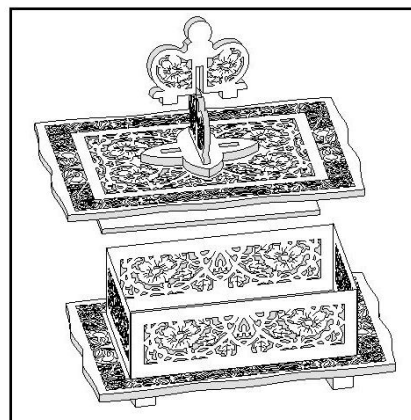  


Bottom Handle
Stock: 1/4"

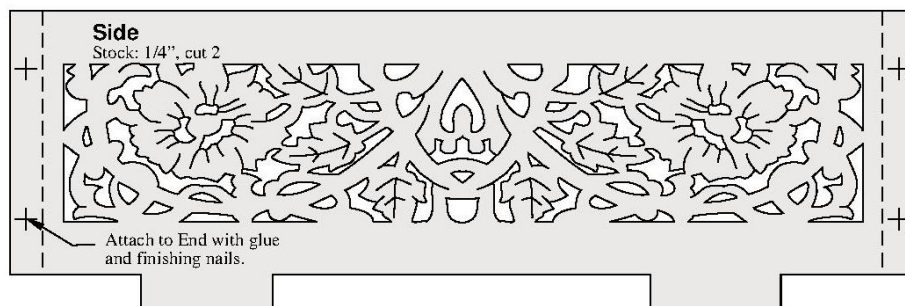 

Side
Stock: 1/4", cut 2

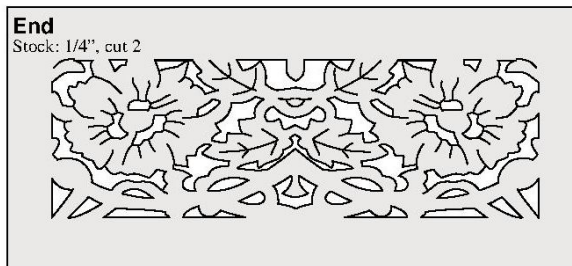 Attach to End with glue
and finishing nails.




End
Stock: 1/4", cut 2

Project #10


Lid Support

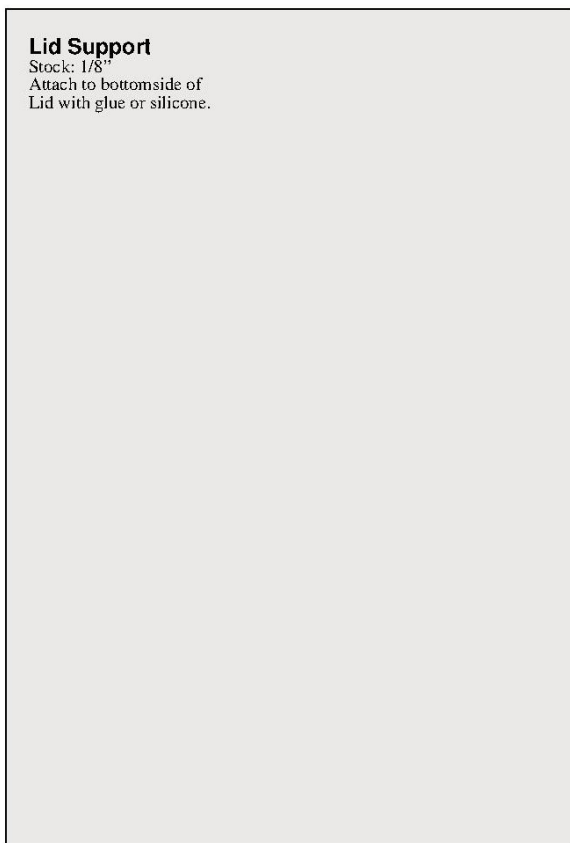 Stock: 1/8"
Attach to bottomside of
Lid with glue or silicone.




Foot

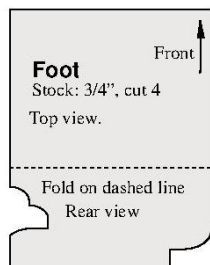 Stock: 3/4", cut 4
Top view.





Handle Support

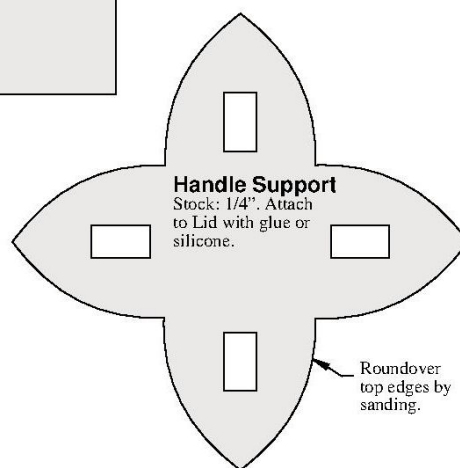 Stock: 1/4". Attach
to Lid with glue or
silicone.








Bottom
Stock: 1/4"

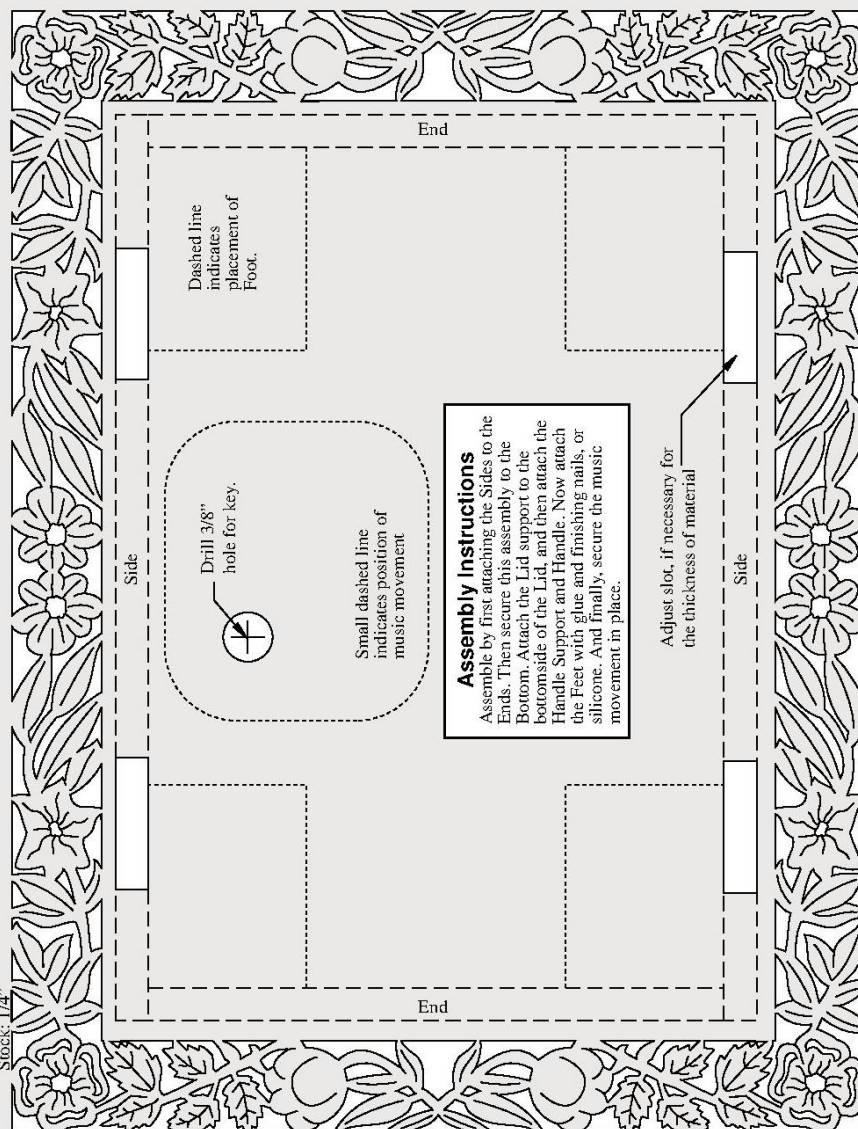 


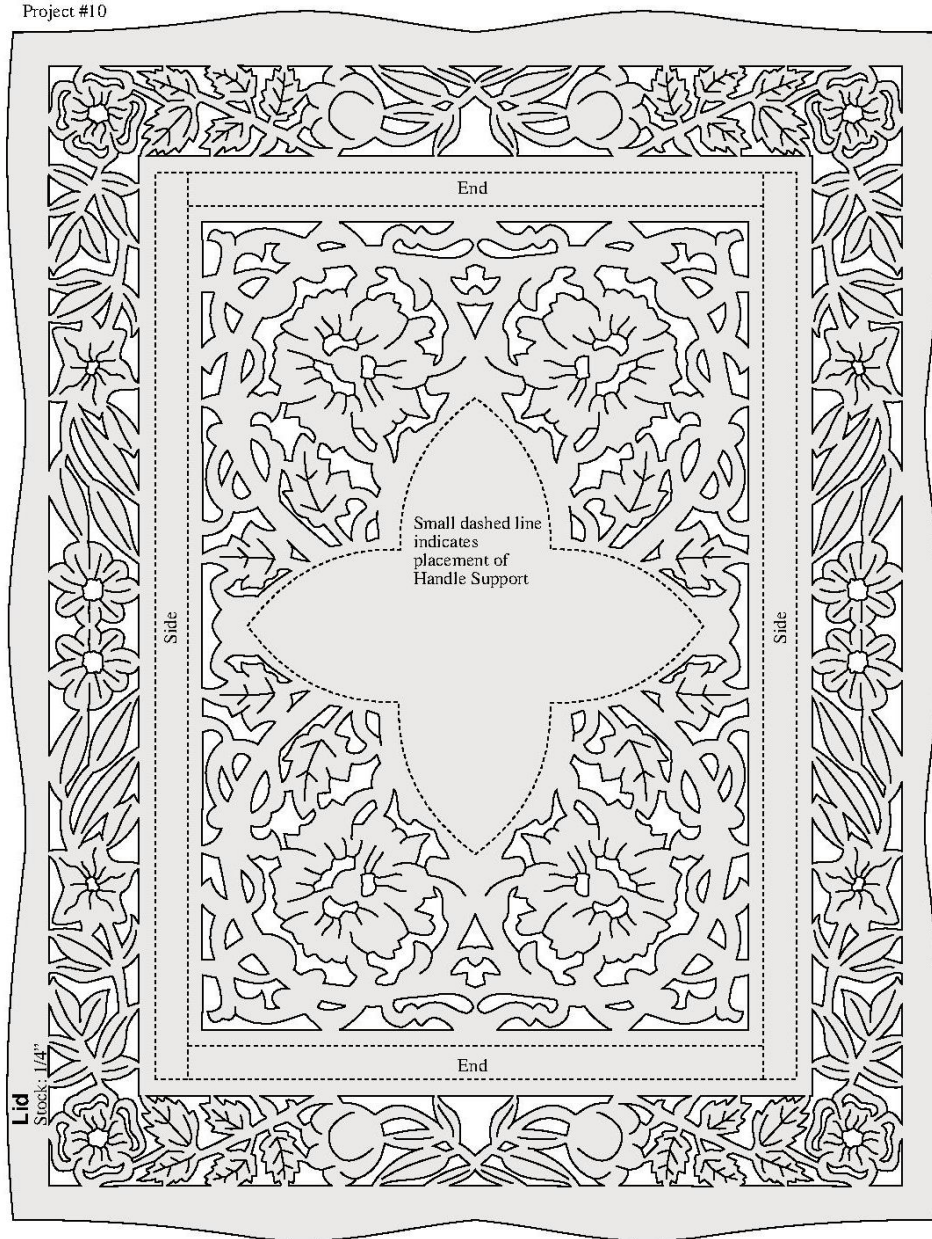 






Project #11

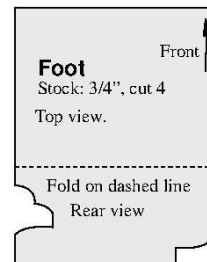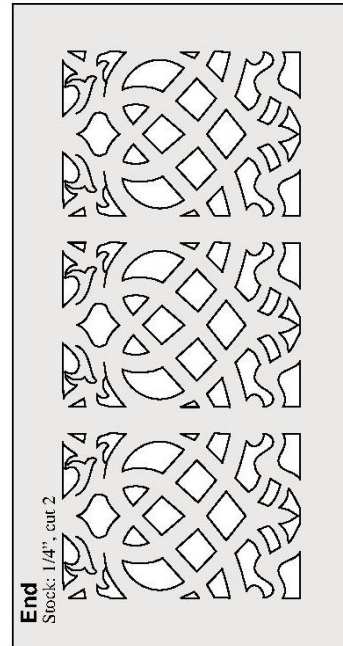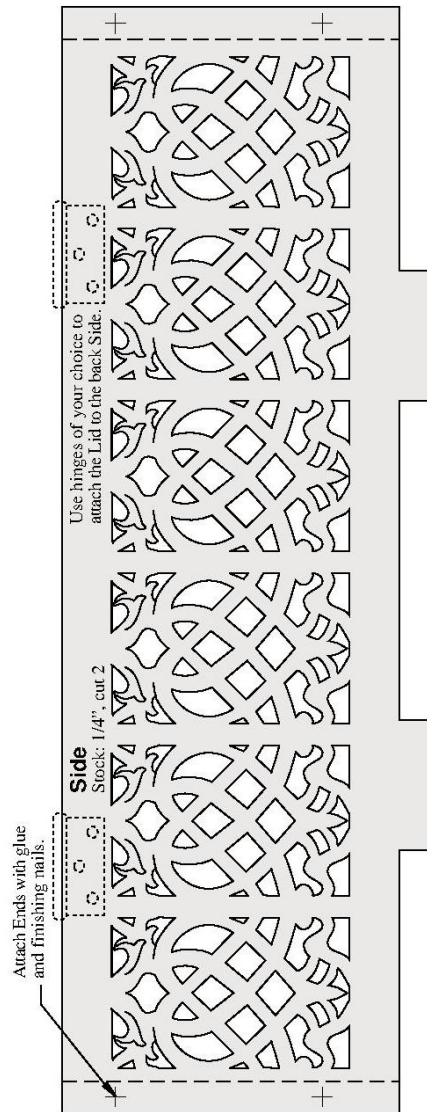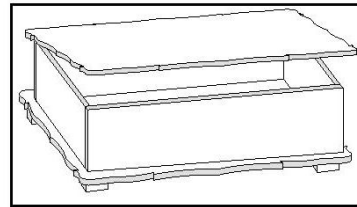    





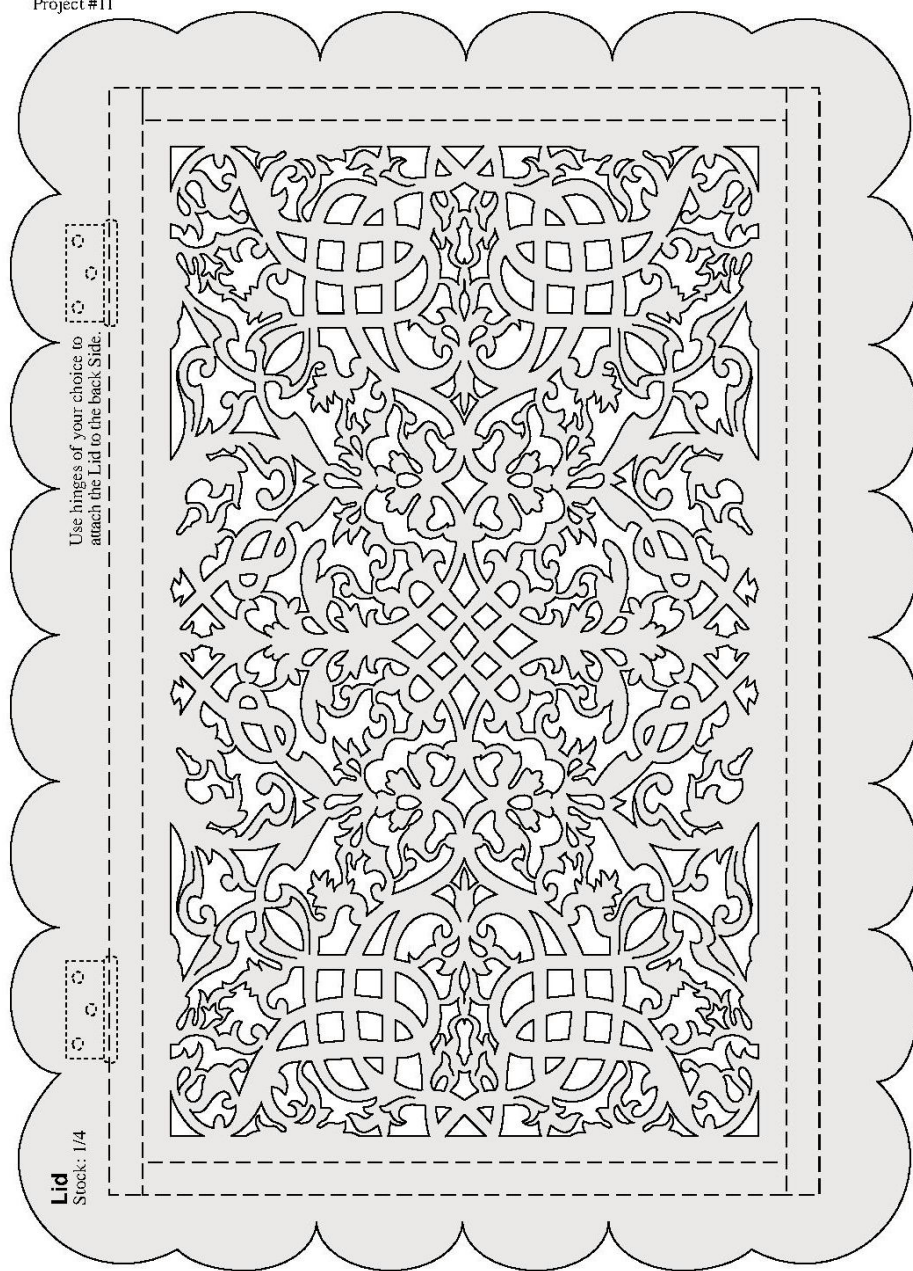 


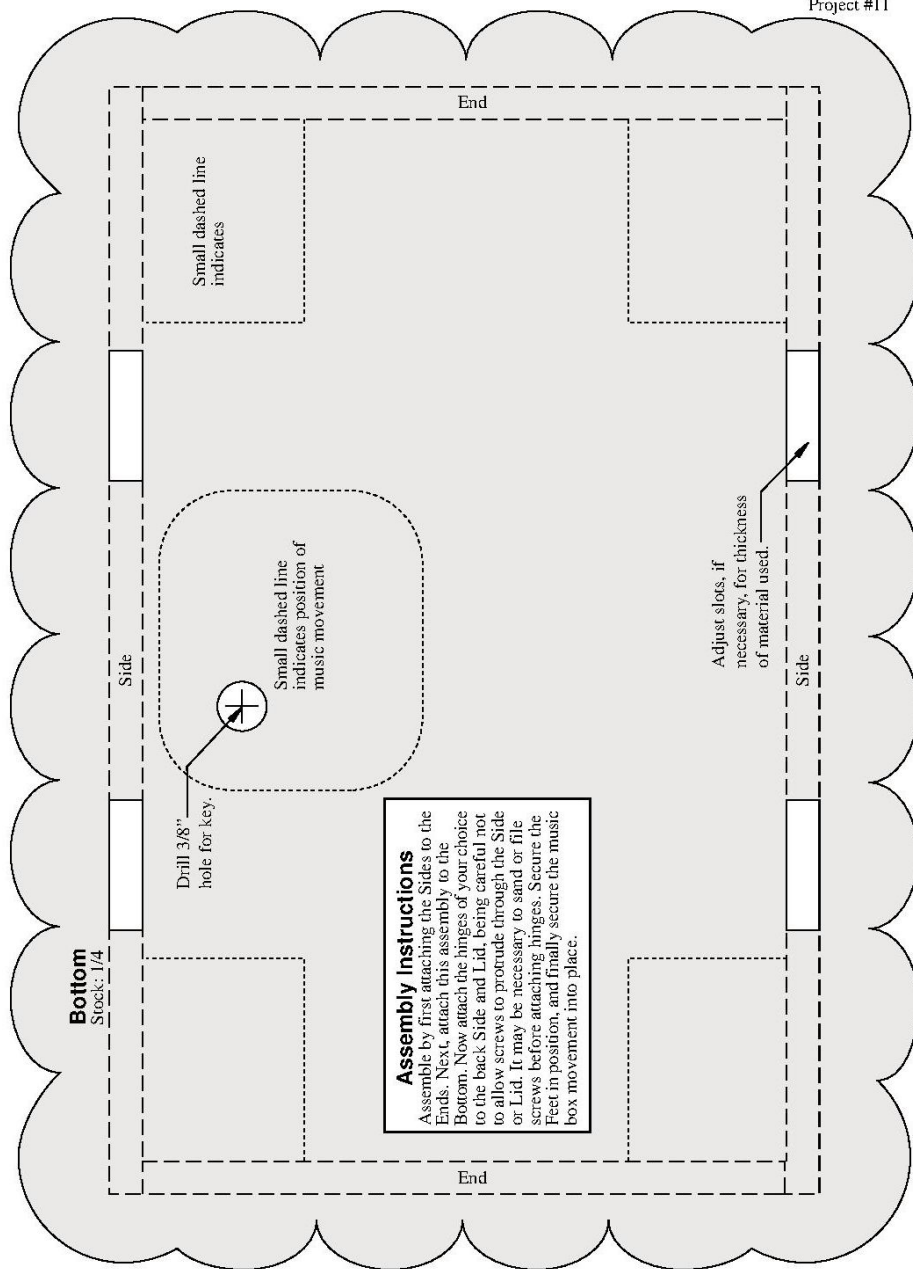 


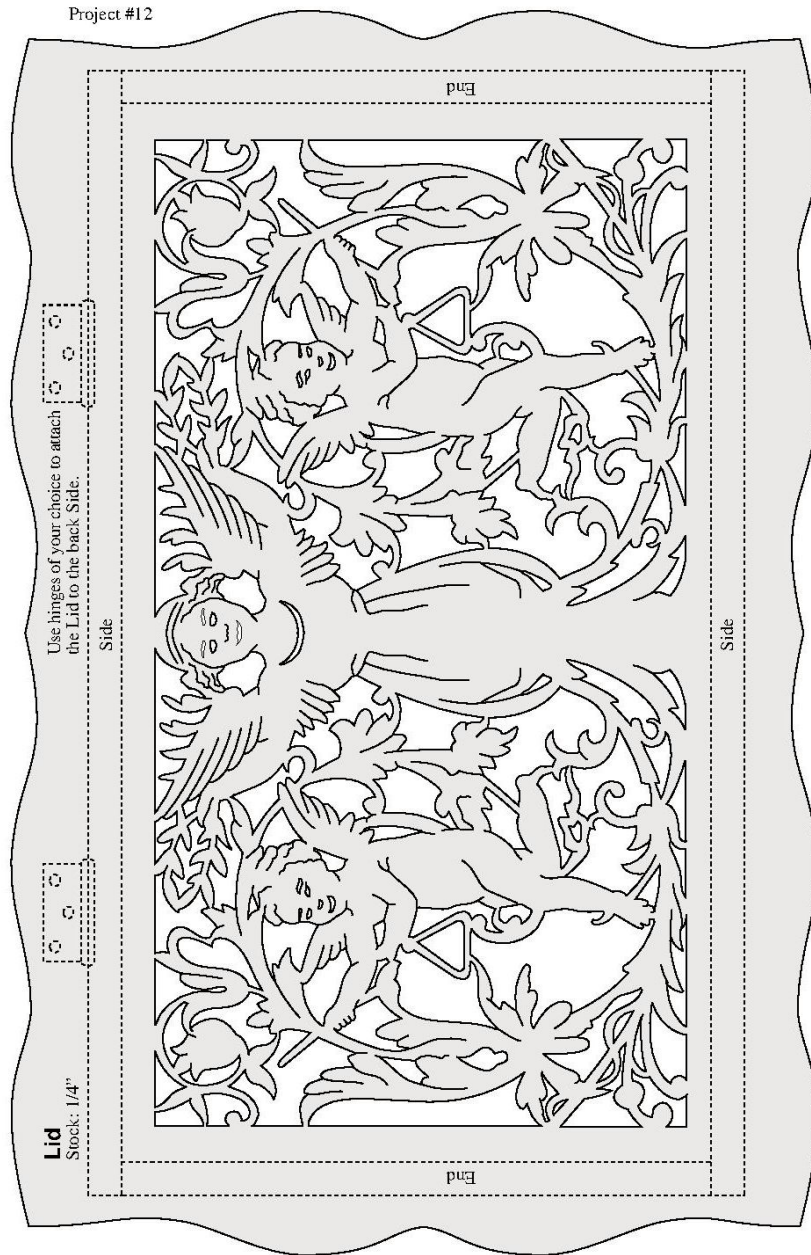 


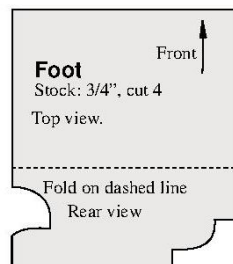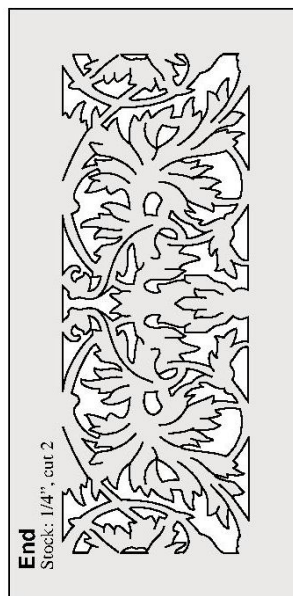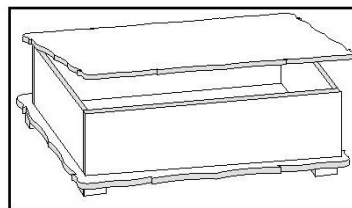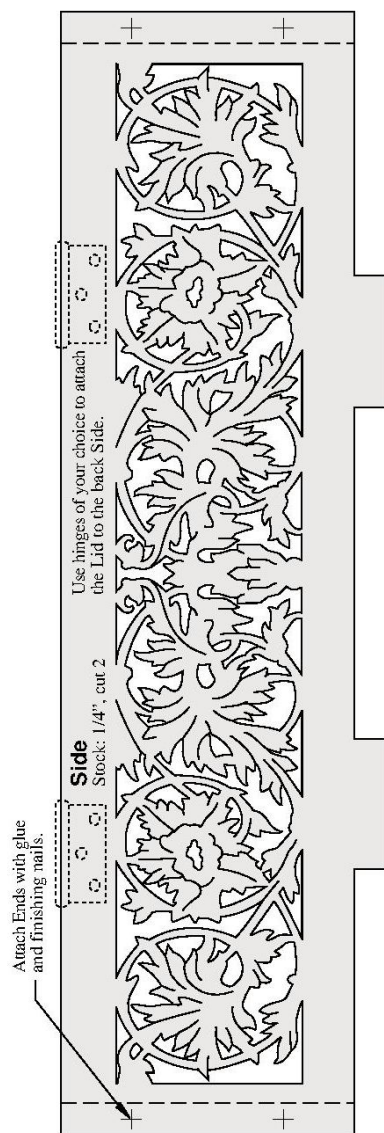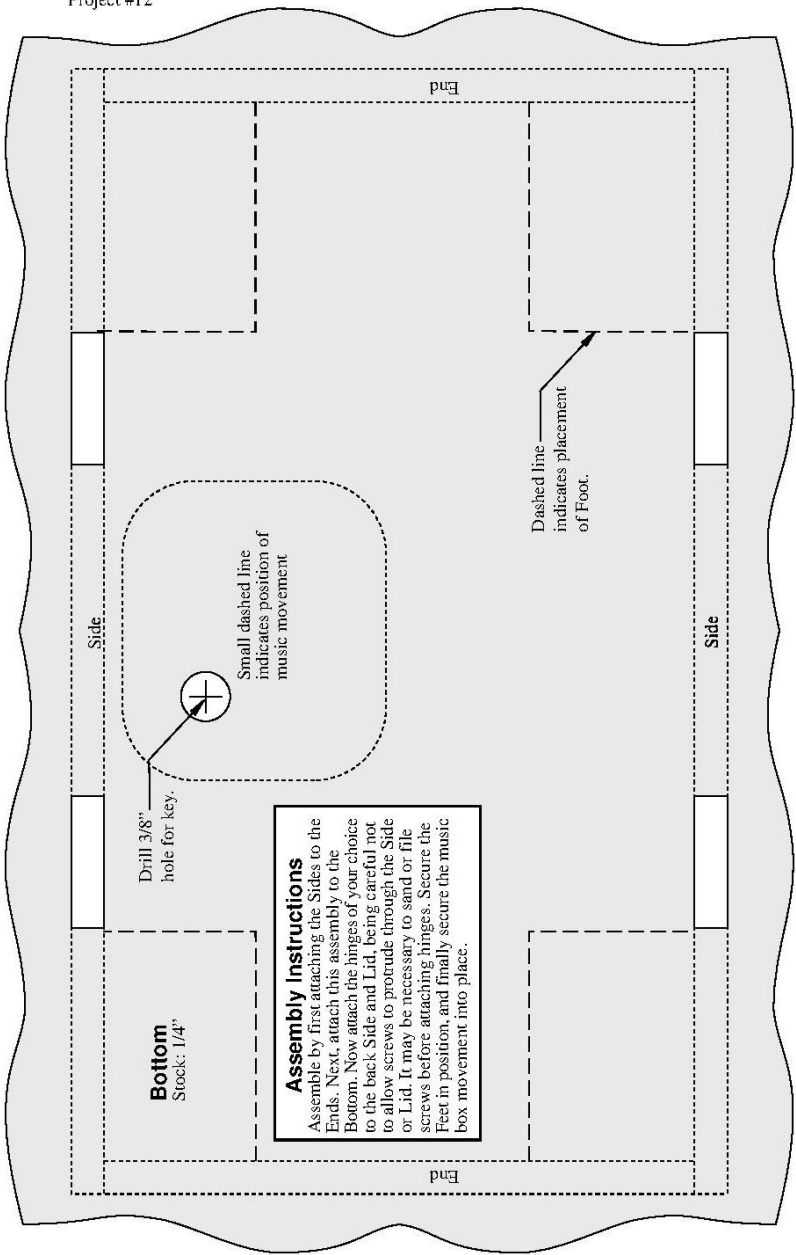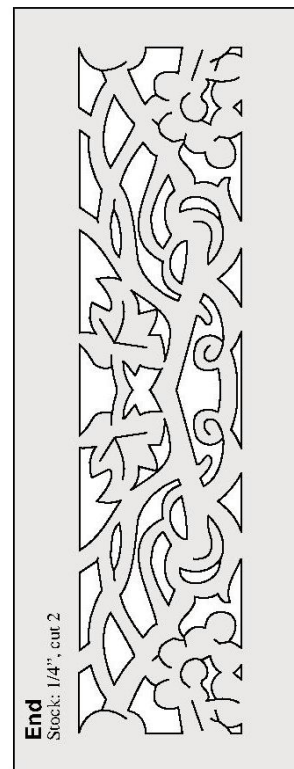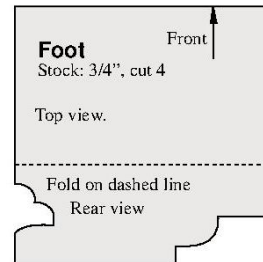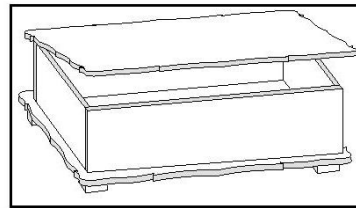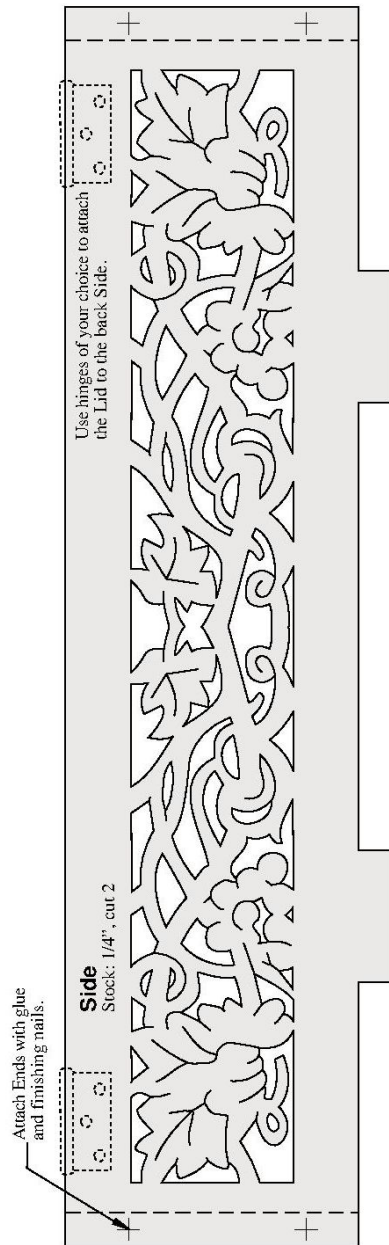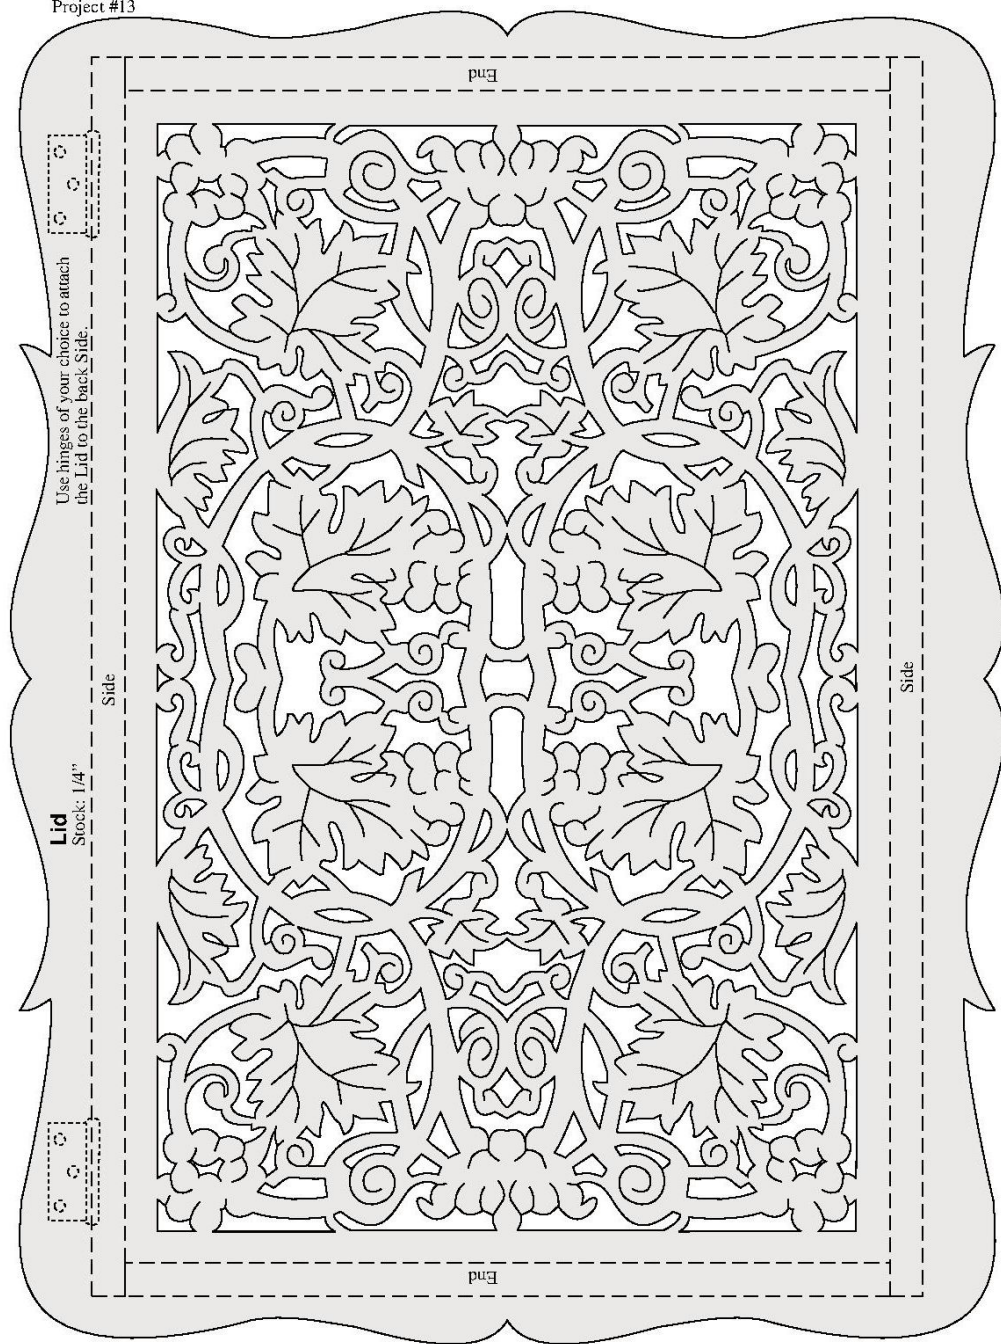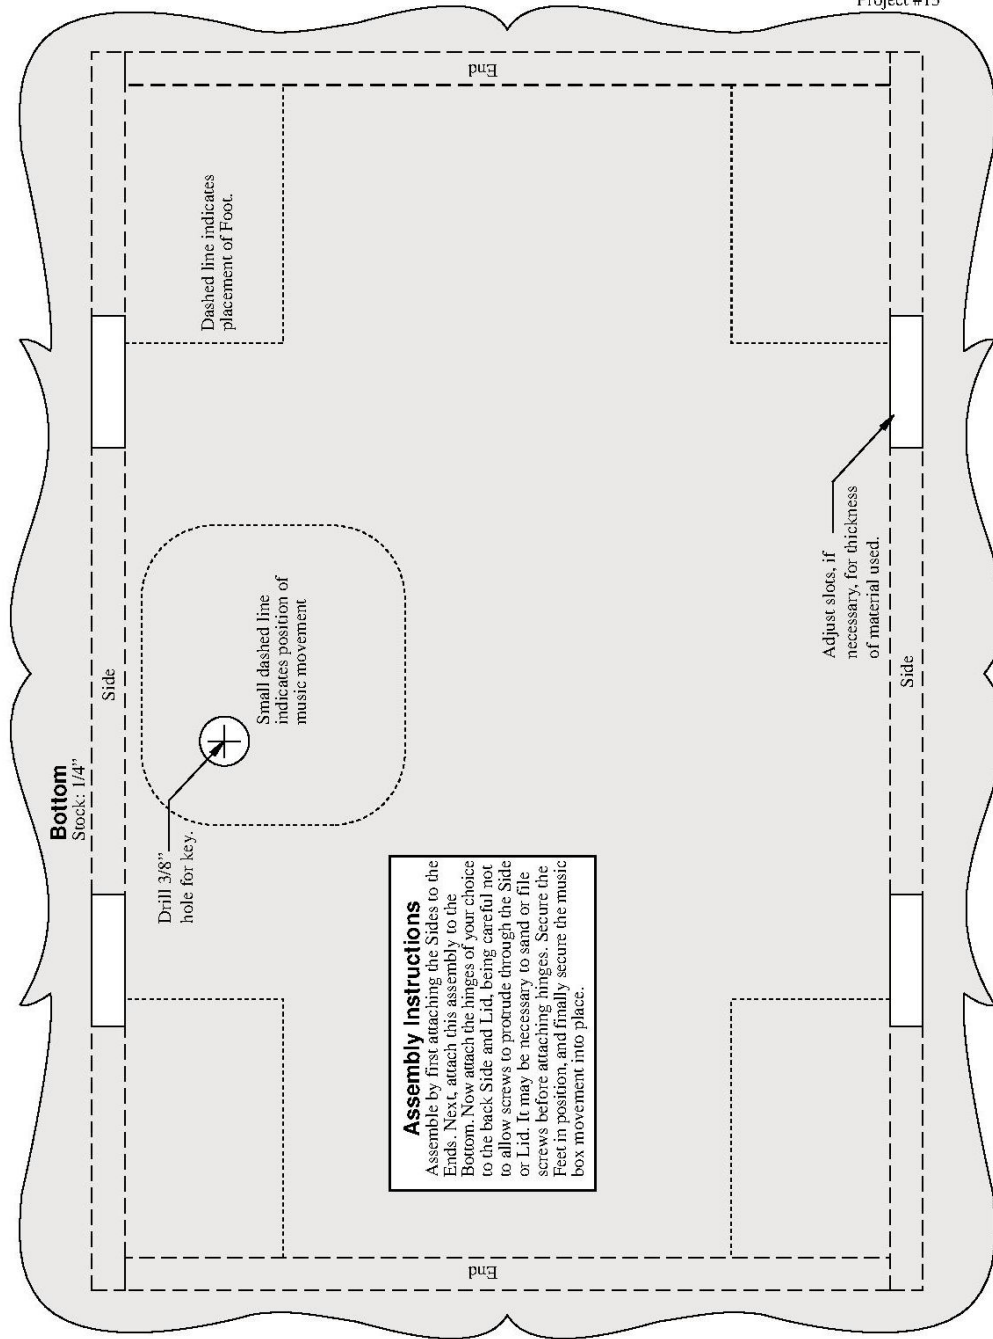           













Project #14

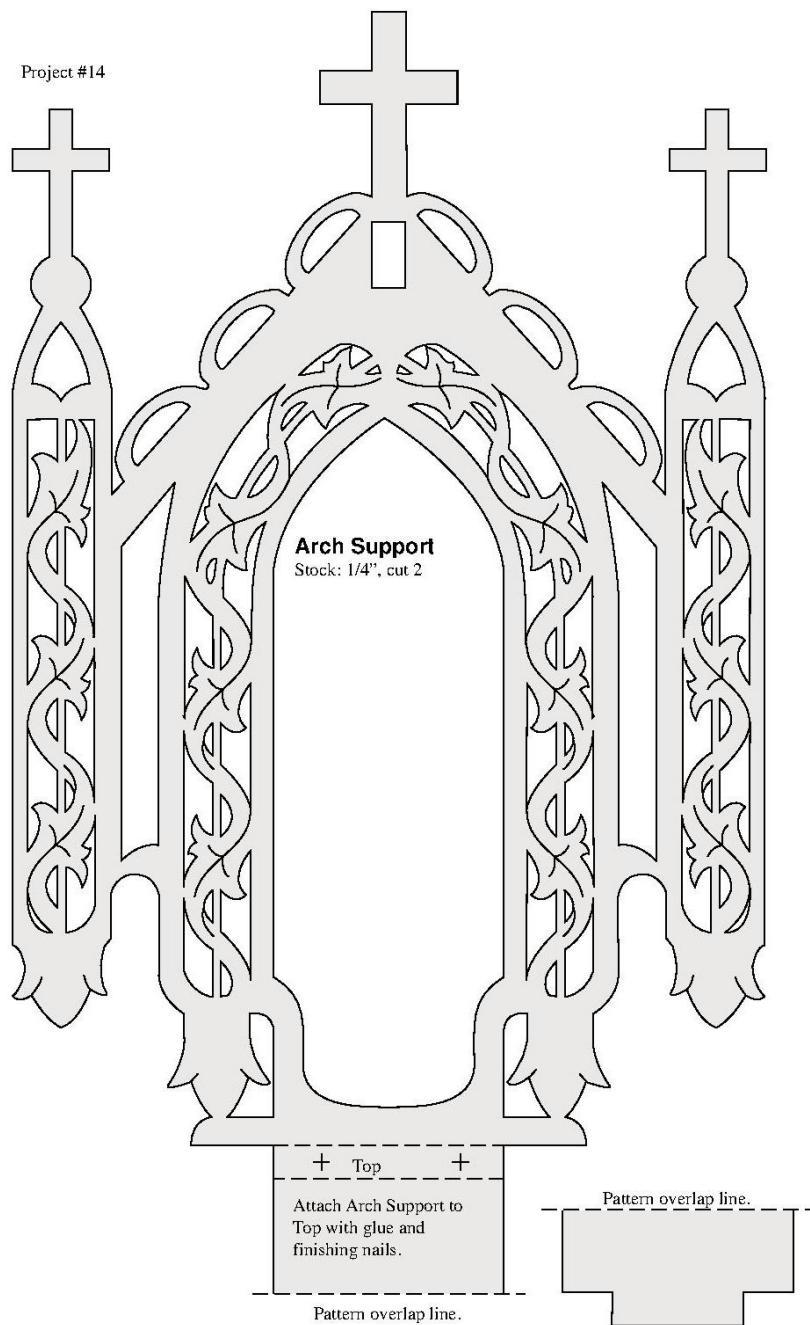 

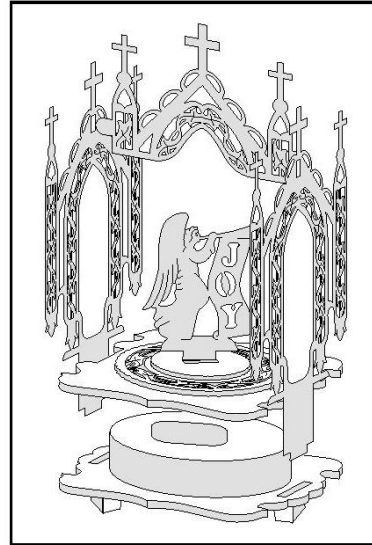 
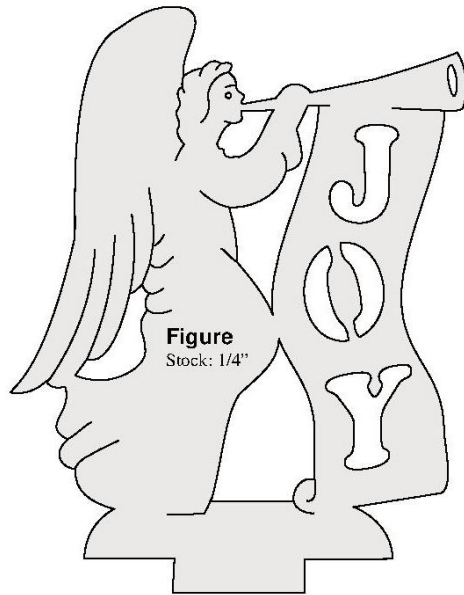 



Turntable

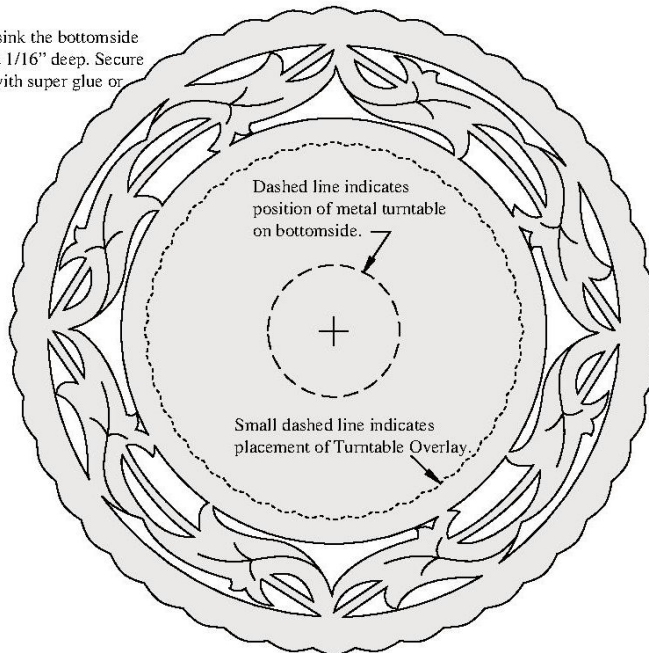 Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.




Project #14

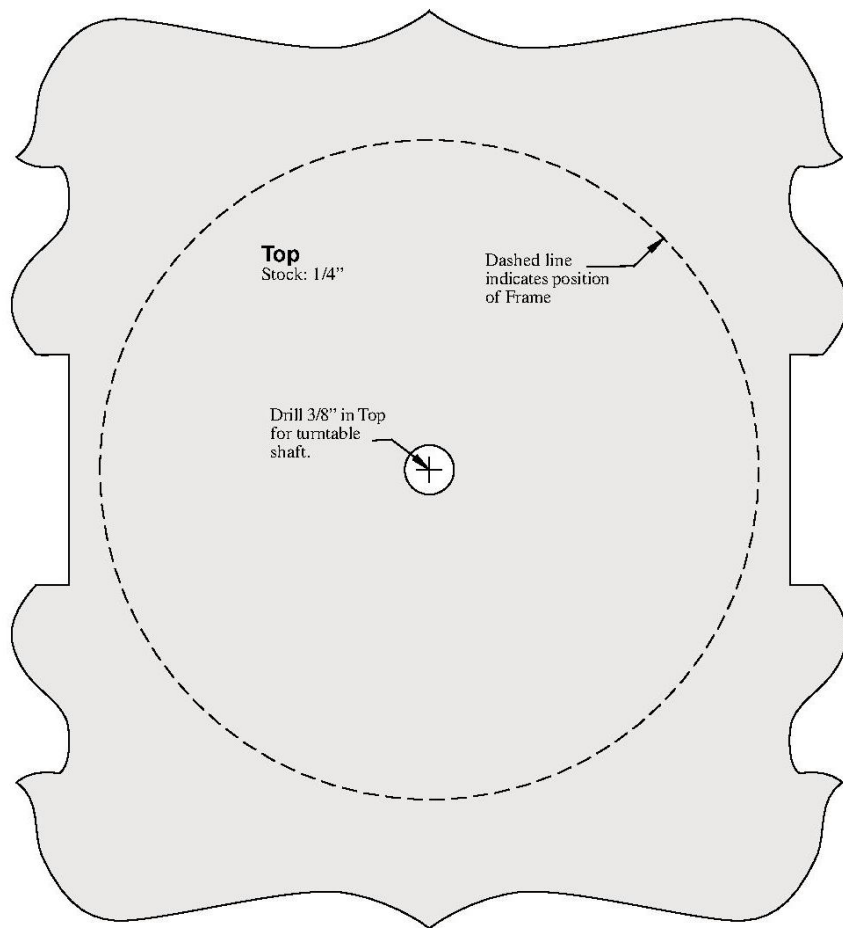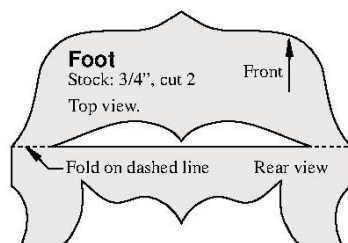  


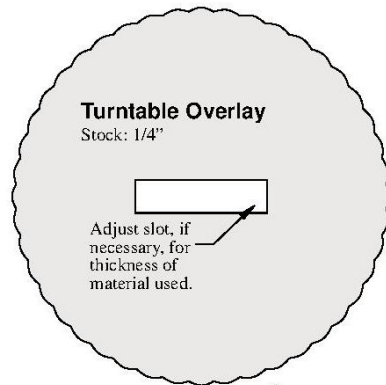 

Project #14

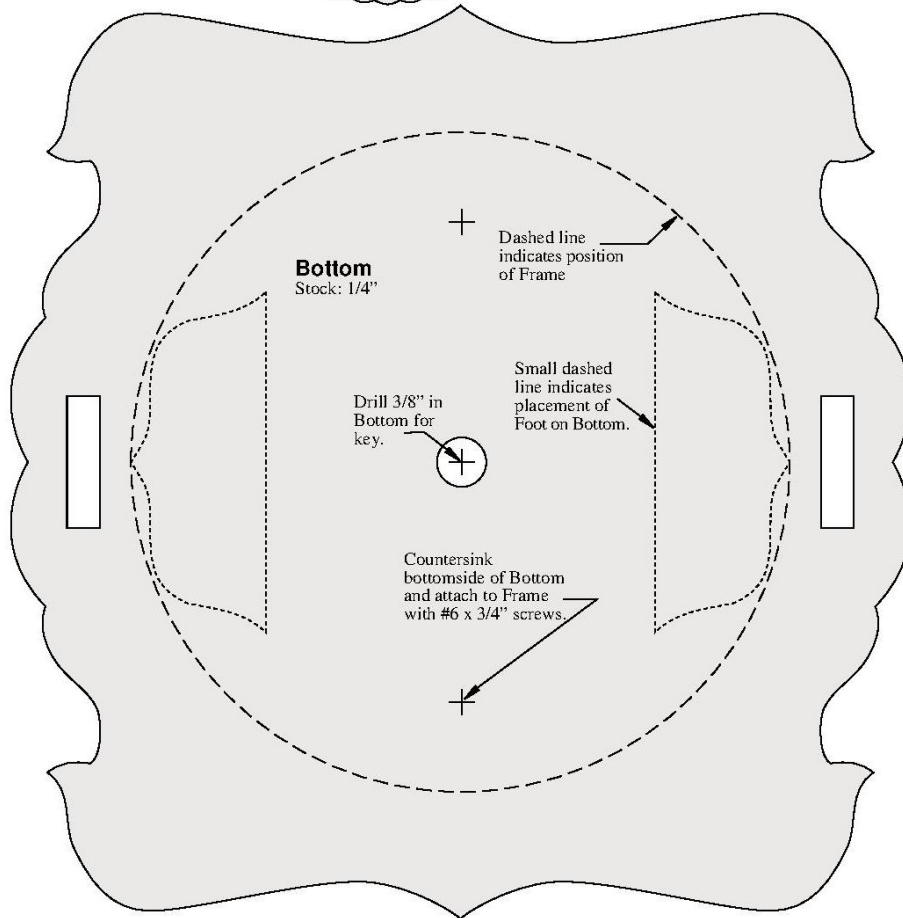 

Project #14

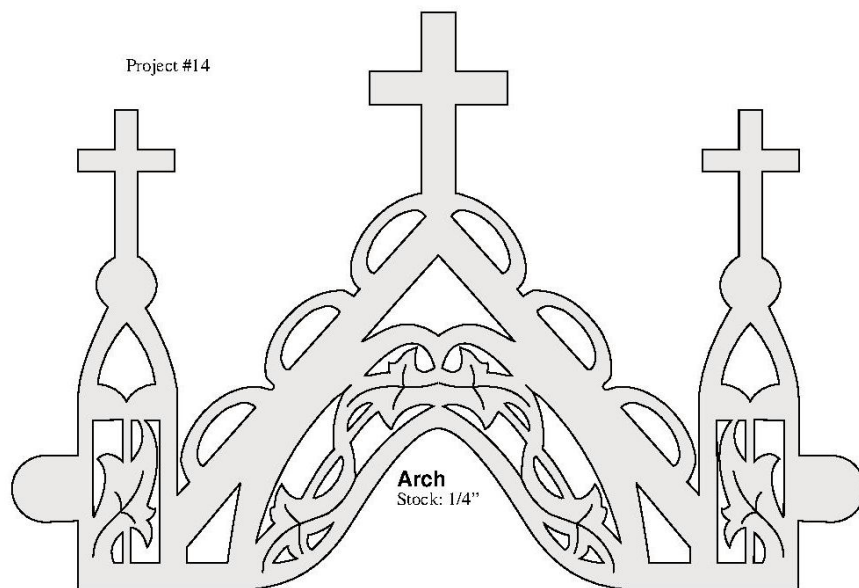 


Frame

Stock: 1 1/2"

Circle indicates
position of key and
turntable shafts.



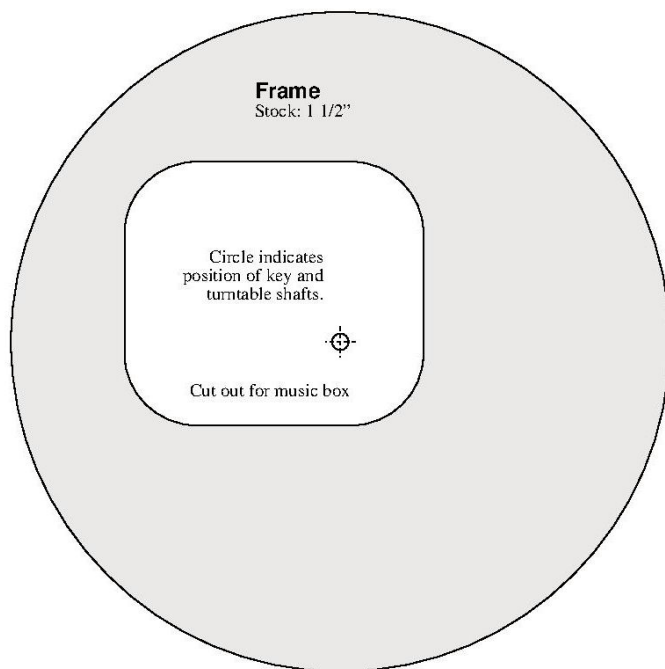 Cut out for music box



Frame
Stock: 1 1/2"

Circle indicates
position of key and
turntable shafts.

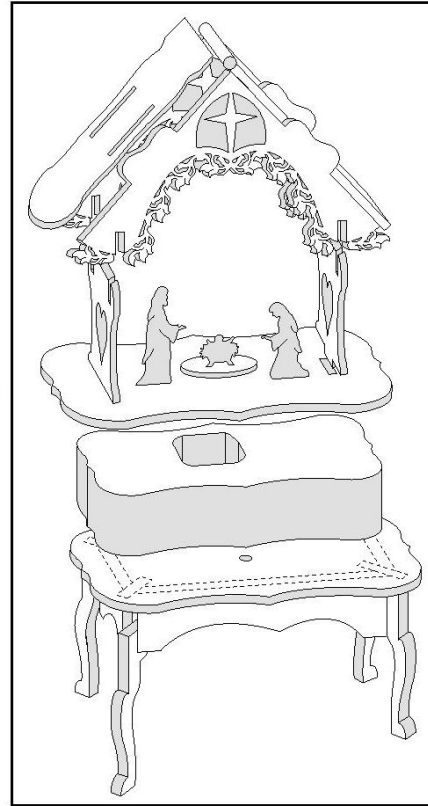 


Cut out for music box



Assembly Instructions

To Assemble, attach Legs to Apron Support with glue. Next, attach the Aprons. Then clamp this assembly to the bottomside of the Bottom and countersink to attach the assembly to the Frame with #6 x 1" F.H. screws.

Project #15





Project #15

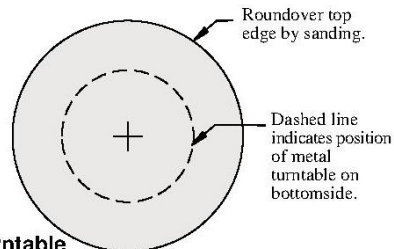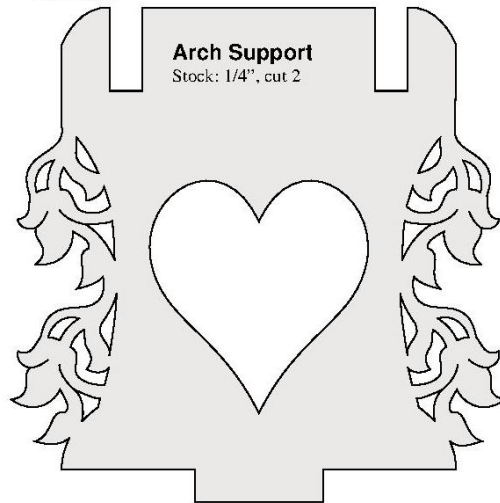  



Turntable

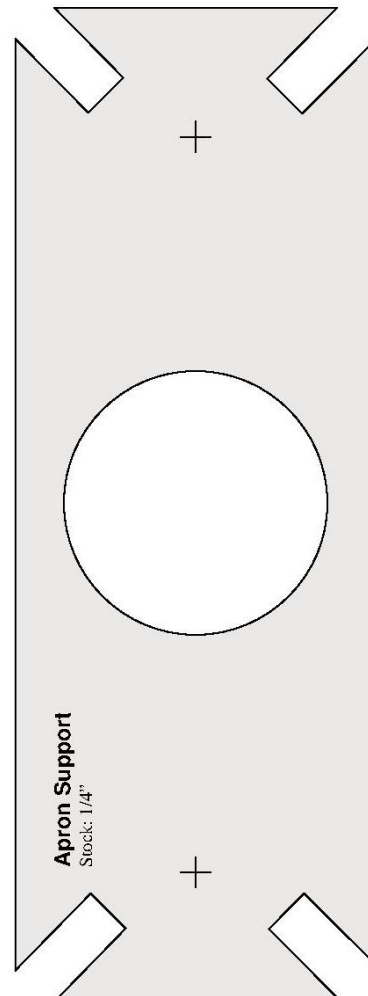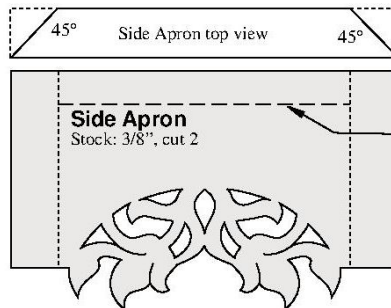  
Stock: 1/4". Countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.



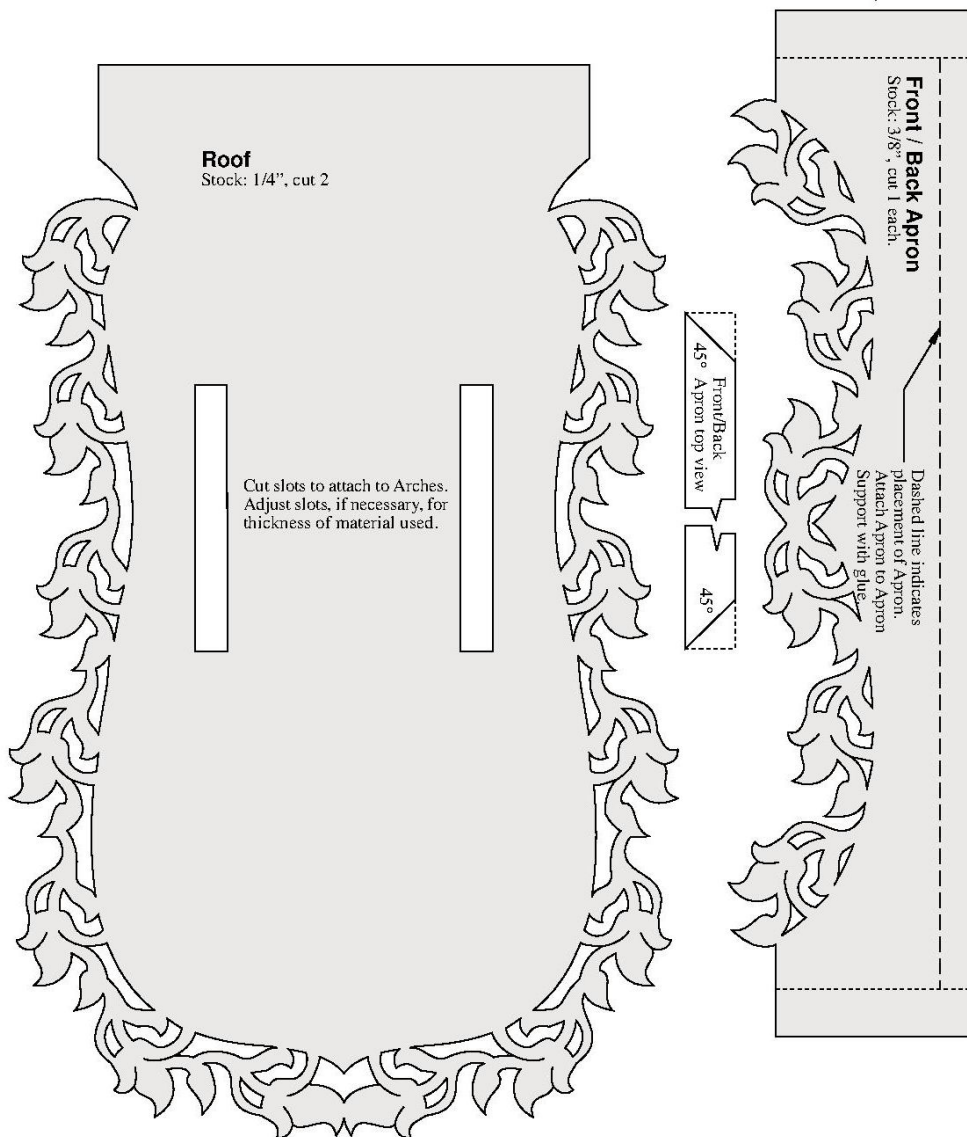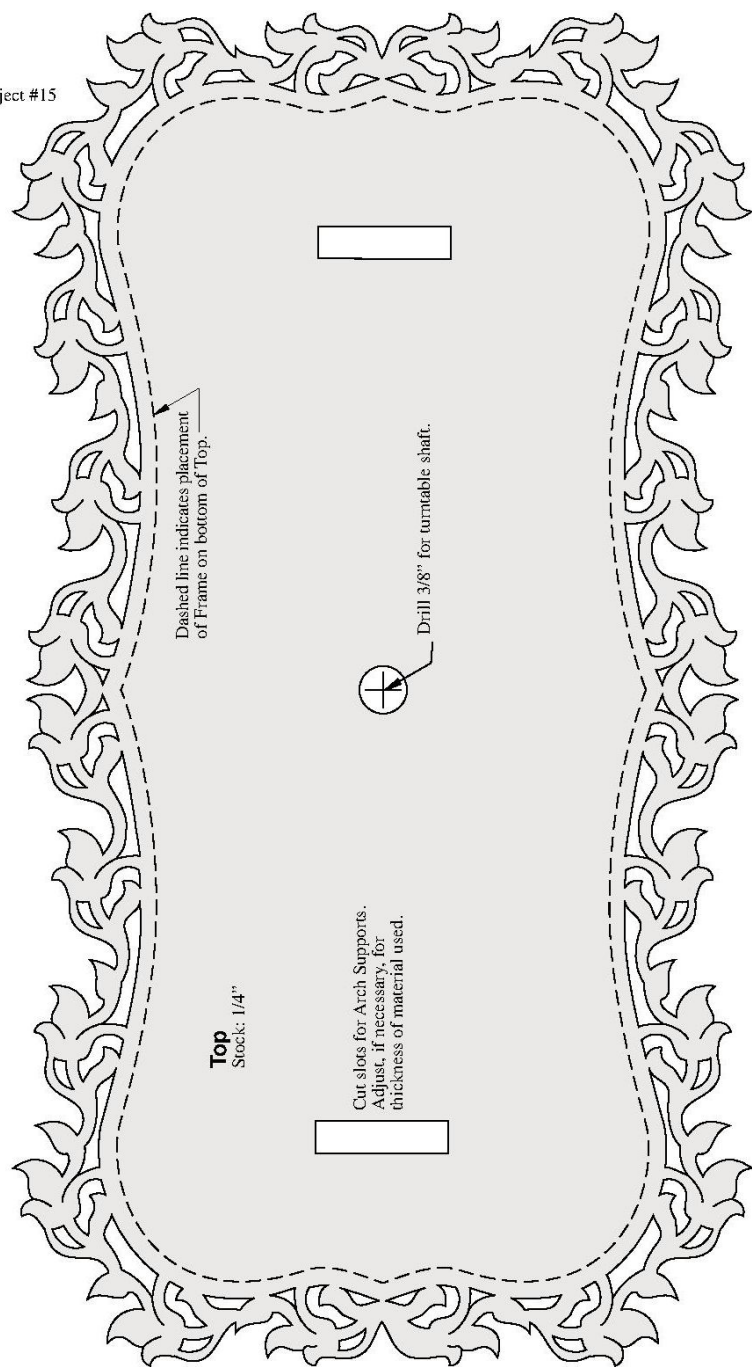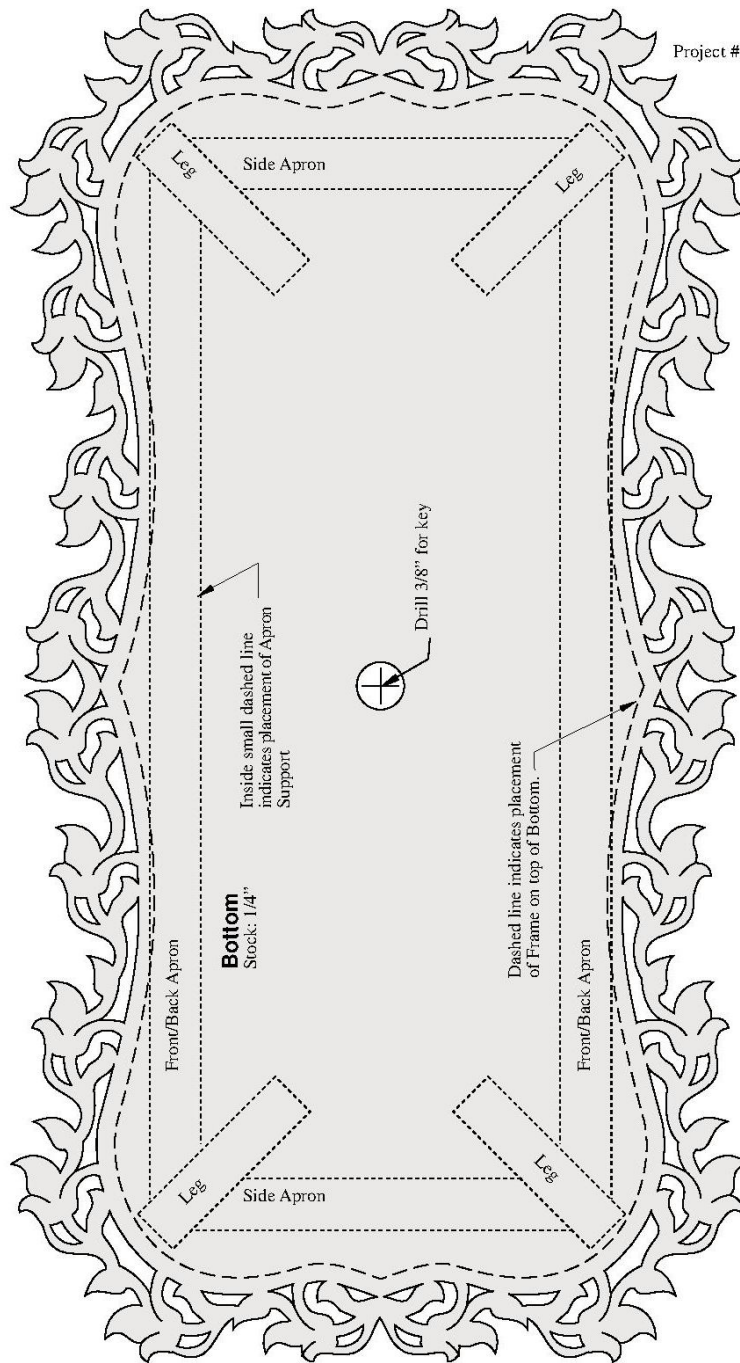   Dashed line indicates placement of Apron. Attach Apron to Apron Support with glue.







Project #15

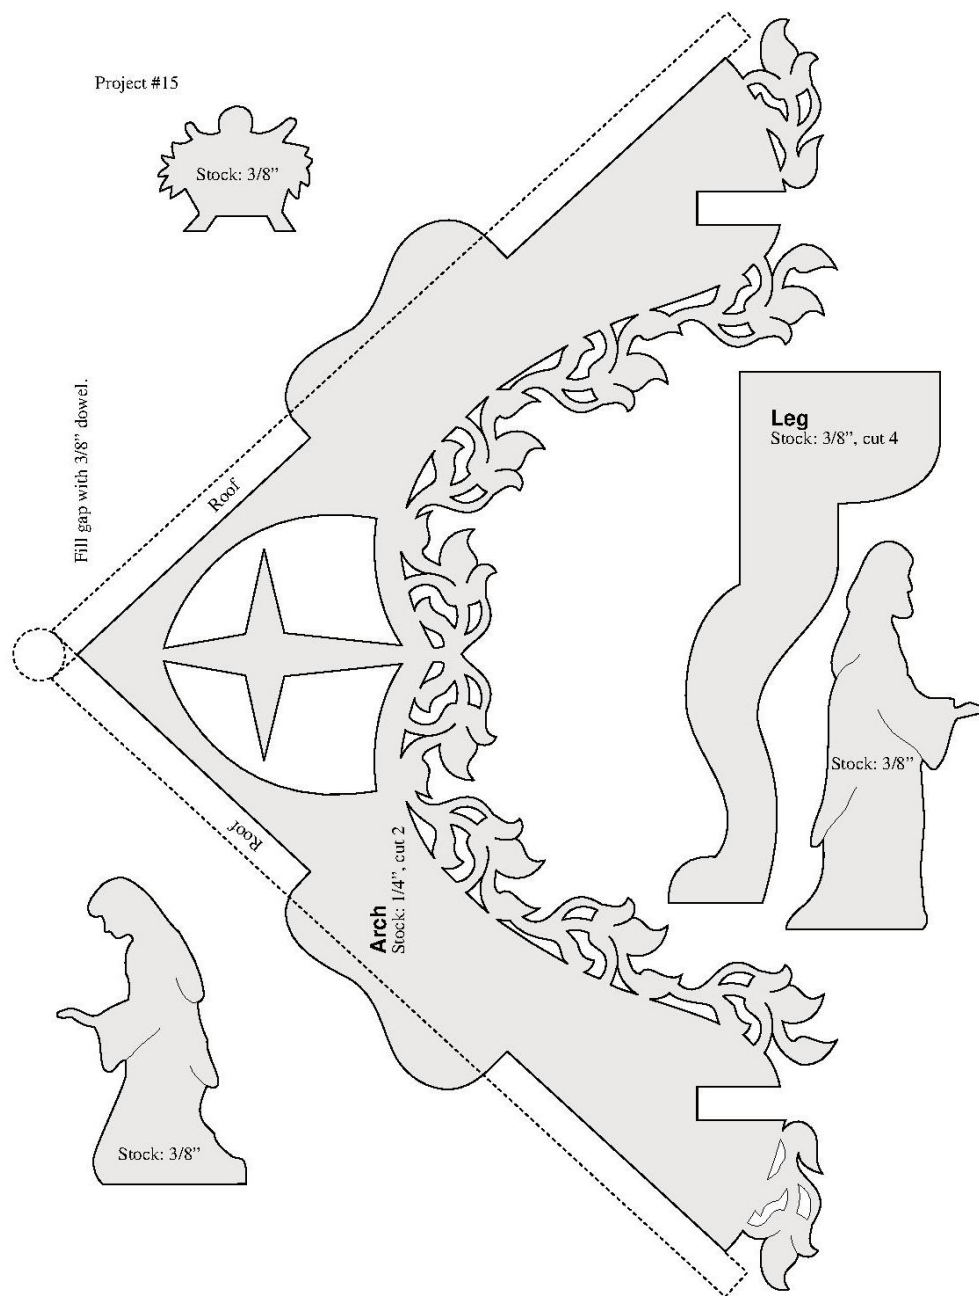 
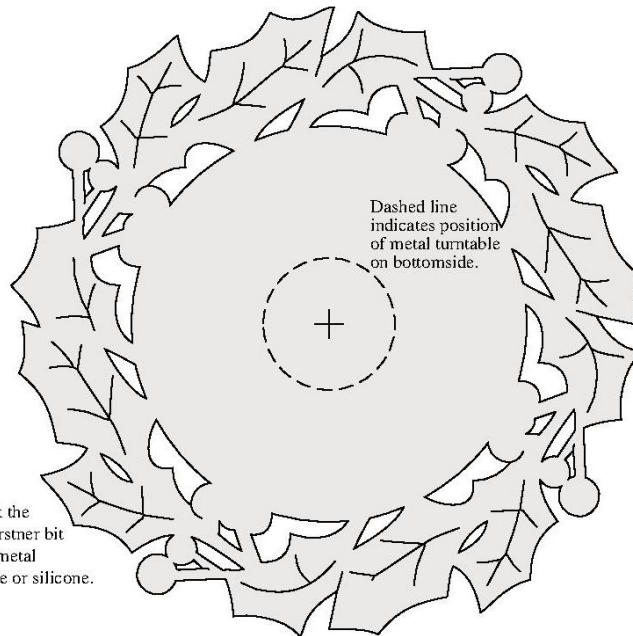 
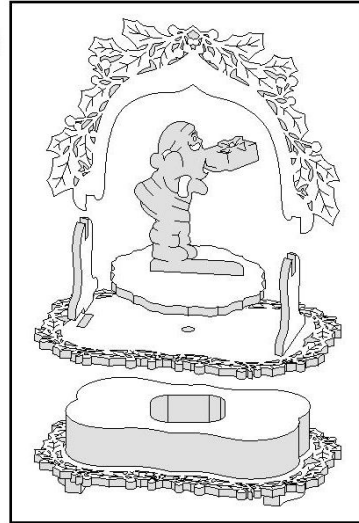 



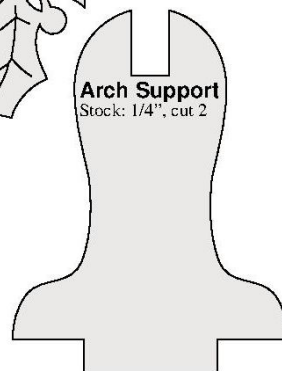 





Figure
Stock: 3/8"

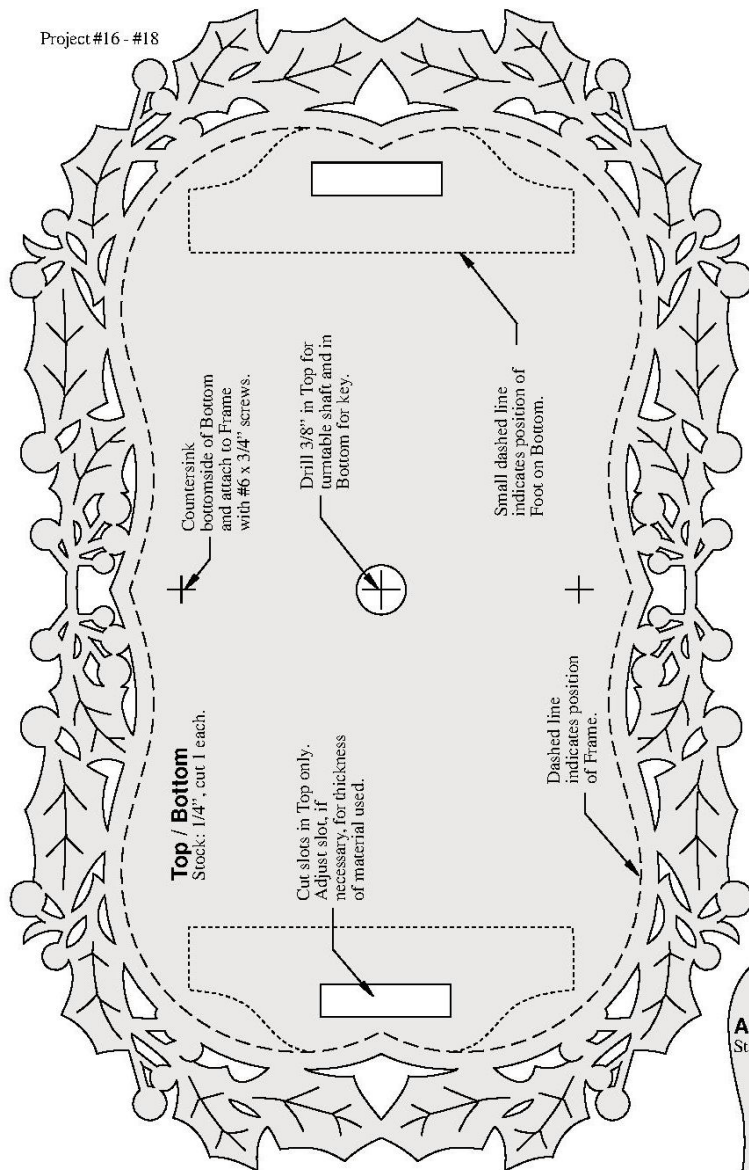 


Turntable

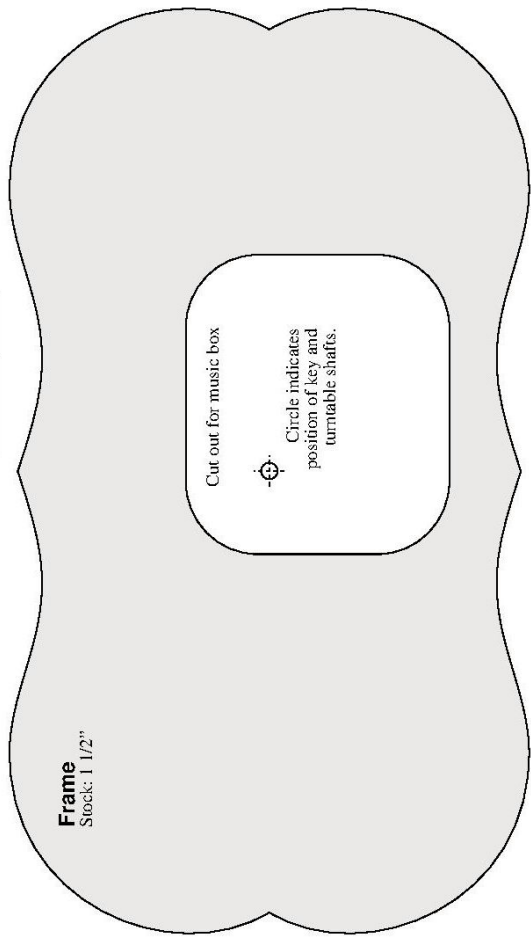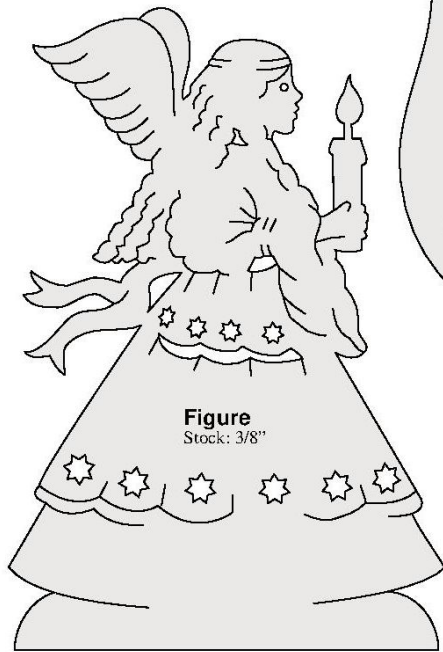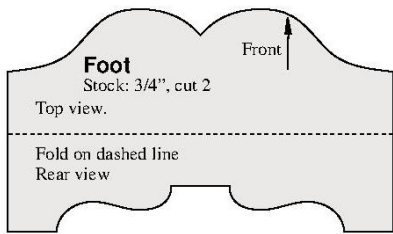   Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.










Project #16 - #18

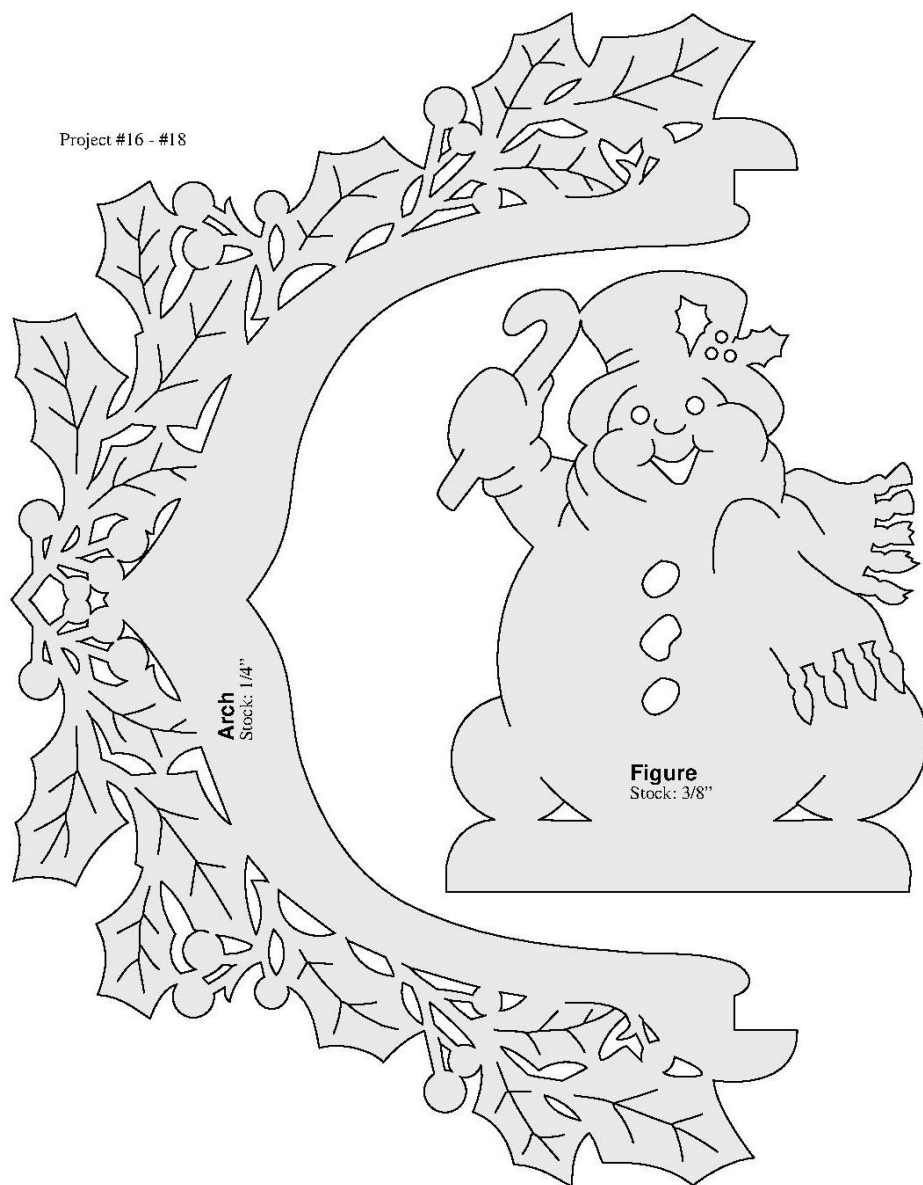 


Cathedral Music Box		
Description	item	Qty
Front Wall	A	1
Back Wall	B	1
Wall Anchor	C	4
Side Wall	D	2
Front & Back Base	E	1 each
Base Side	F	2
Front & Back Spire	G	1 each
Spire Side	H	2
Floor	I	1
Bottom Support	J	2
Side Support	K	2
Ceiling	L	1
Turntable	M	1
Turntable Overlay	N	1
Figure	O	1

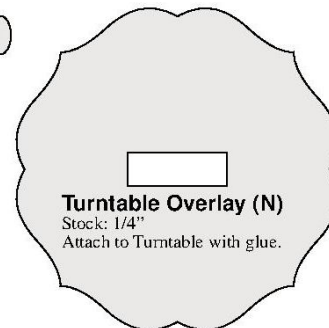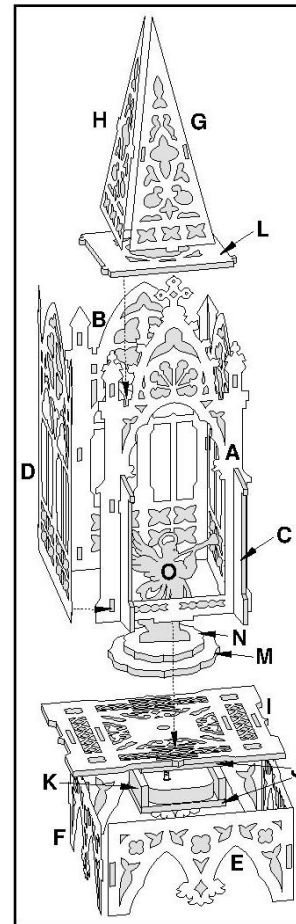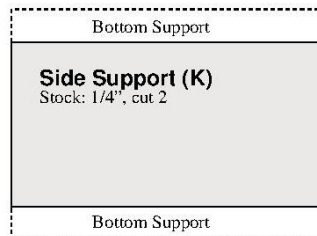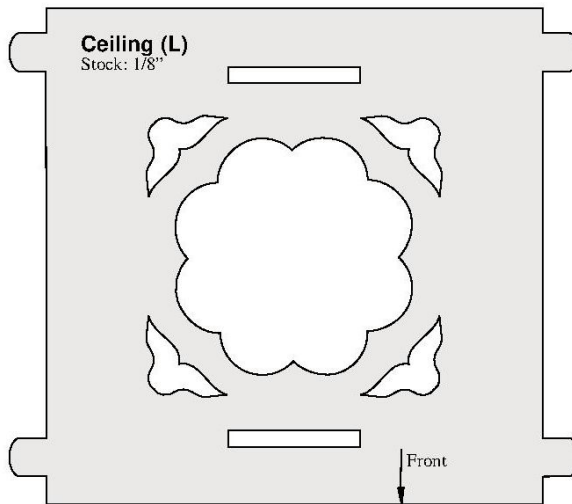    




Project #19

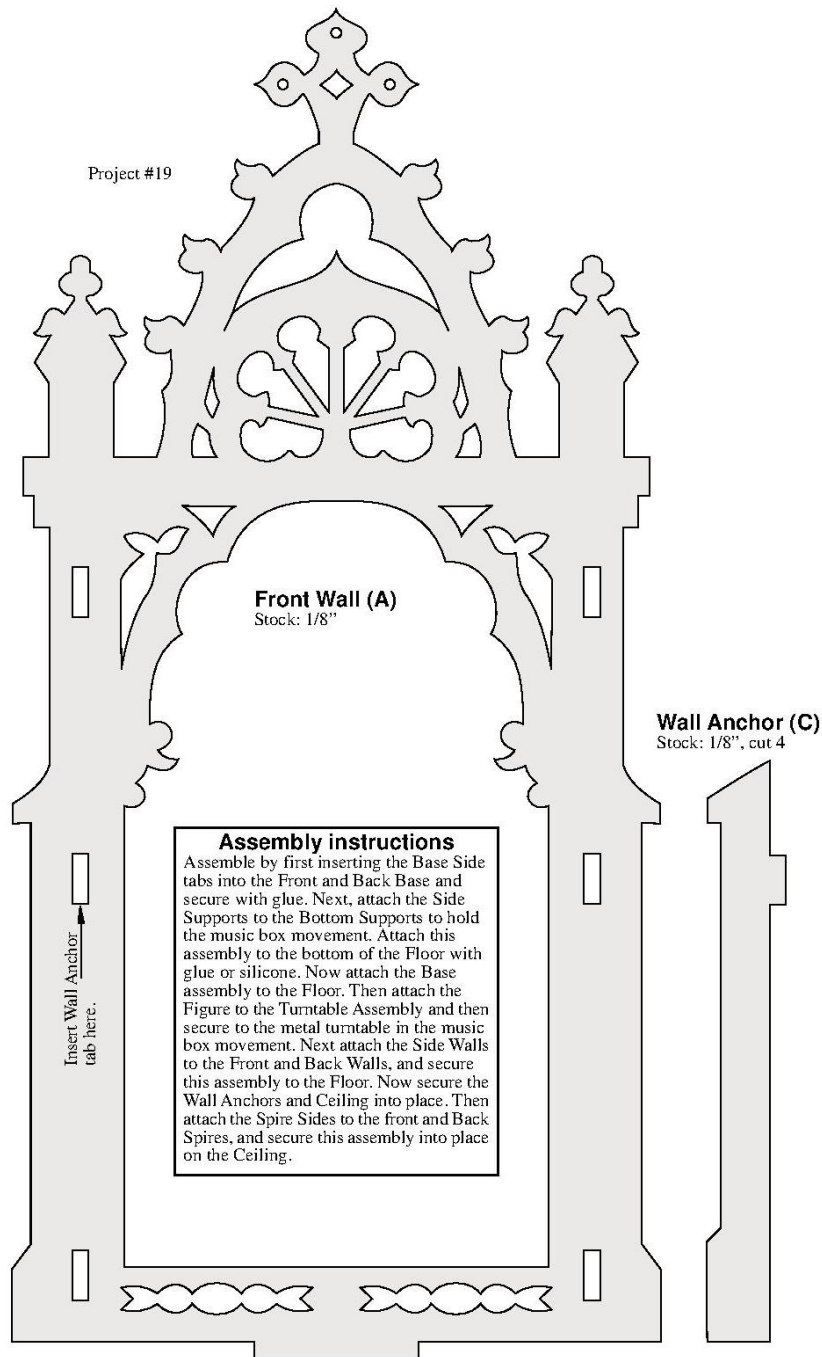 

Project #19

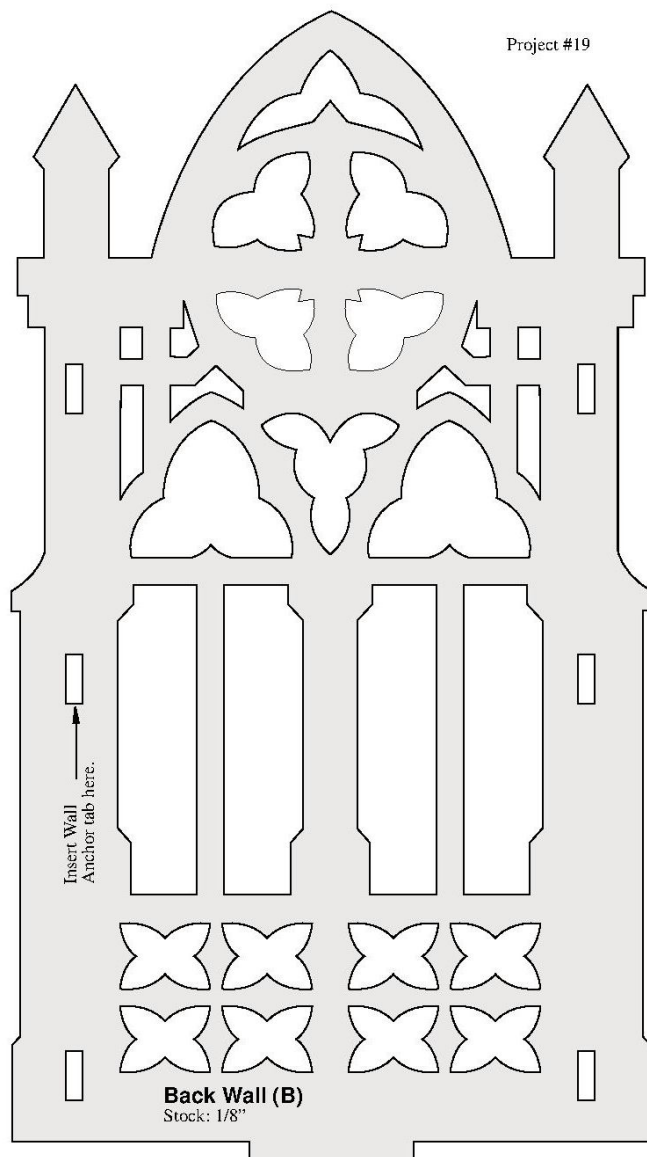 


Project #19

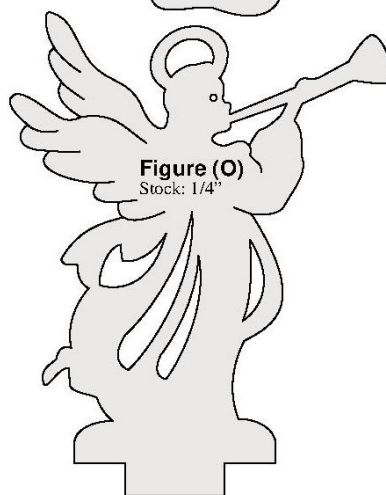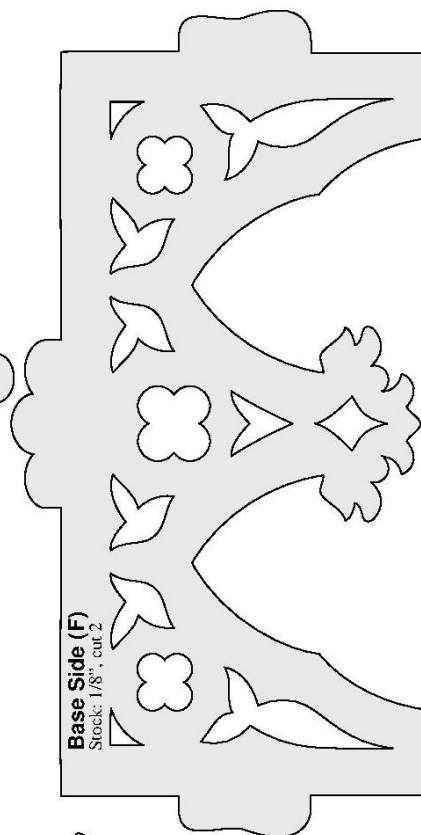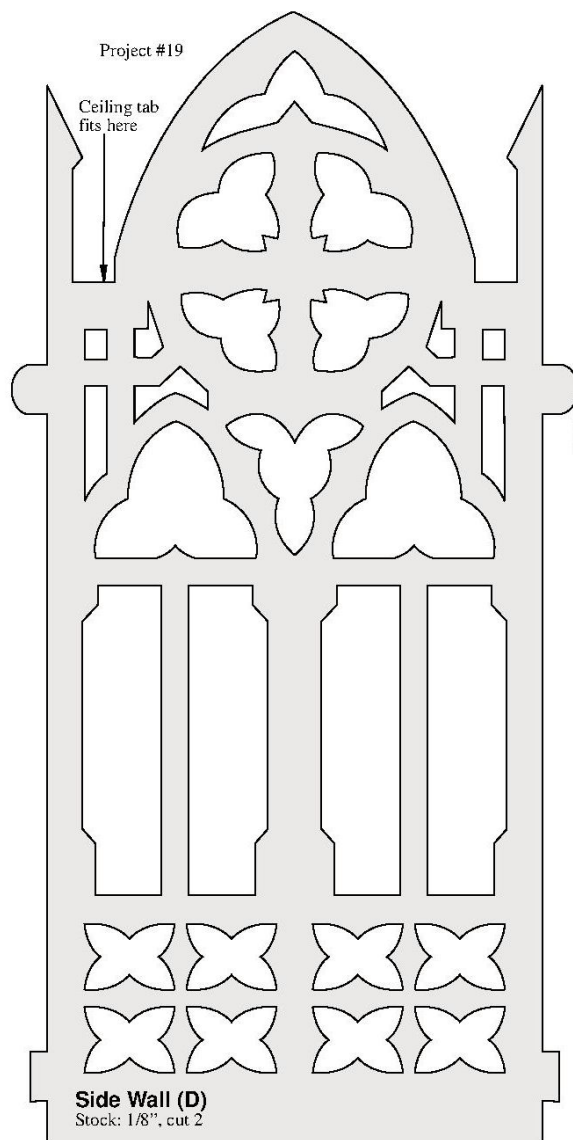   


Front & Back Base (E)

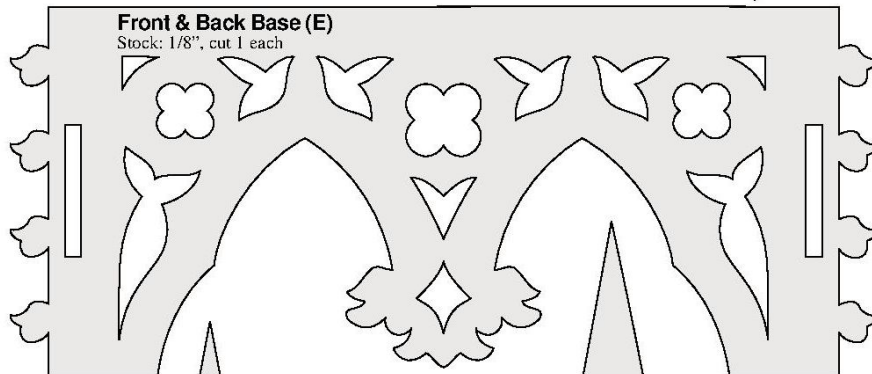 Stock: 1/8", cut 1 each




Front & Back Spire (G)

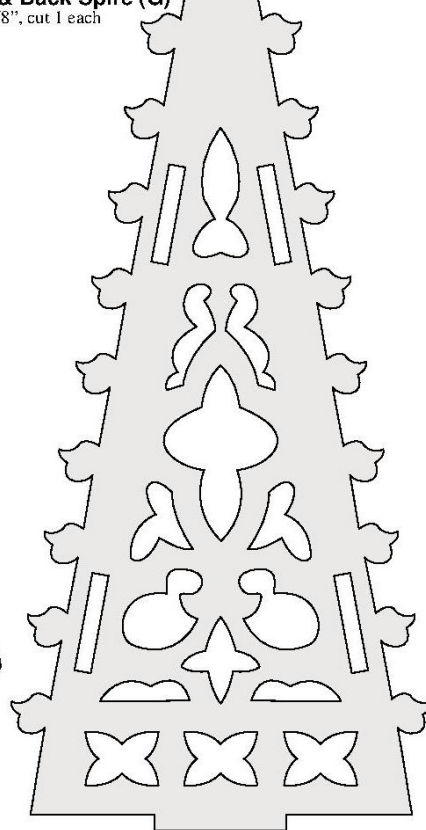 
Stock: 1/8", cut 1 each




Spire Side (H)

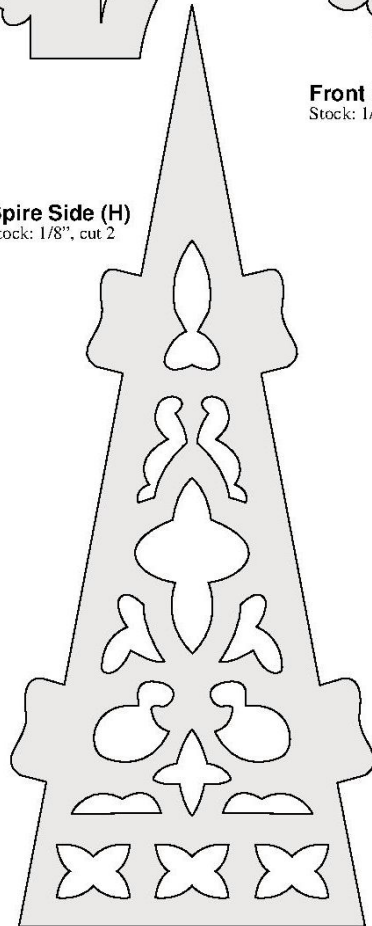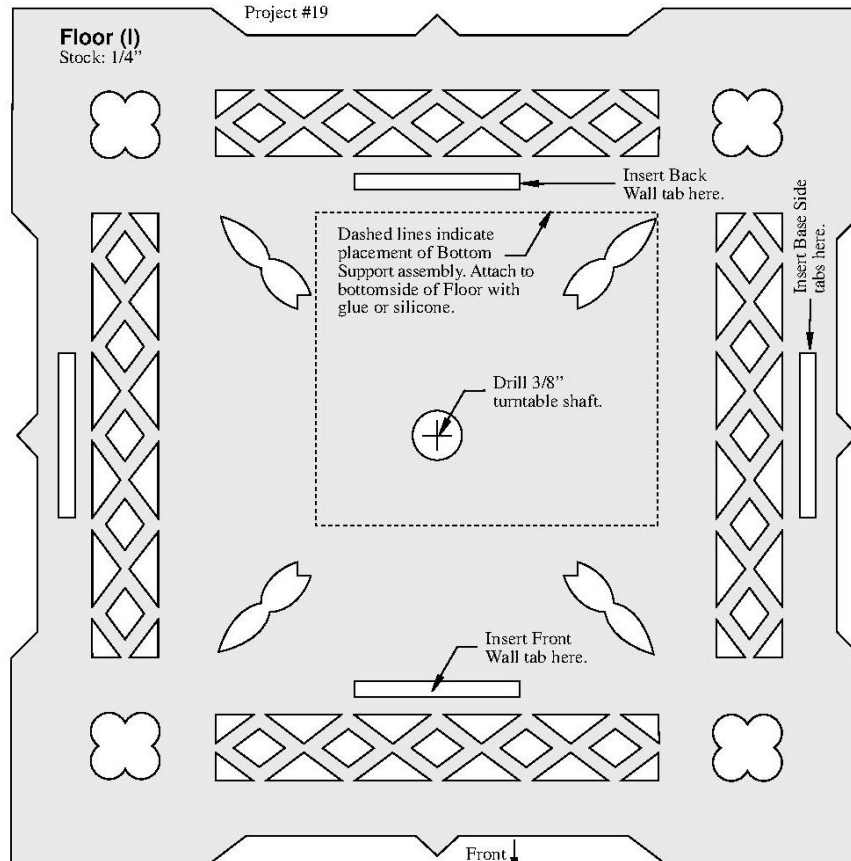  Stock: 1/8", cut 2



Floor (I)
Stock: 1/4"

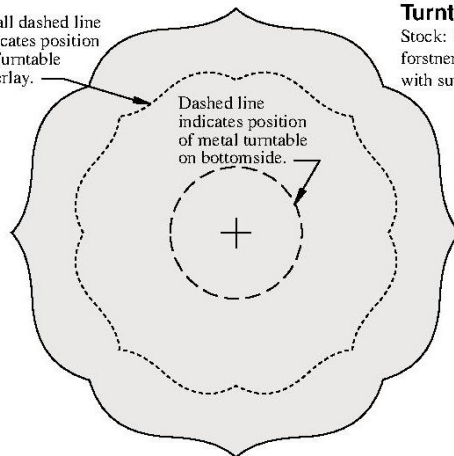 Small dashed line indicates position of Turntable Overlay.

**Turntable**

Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

Front ↓

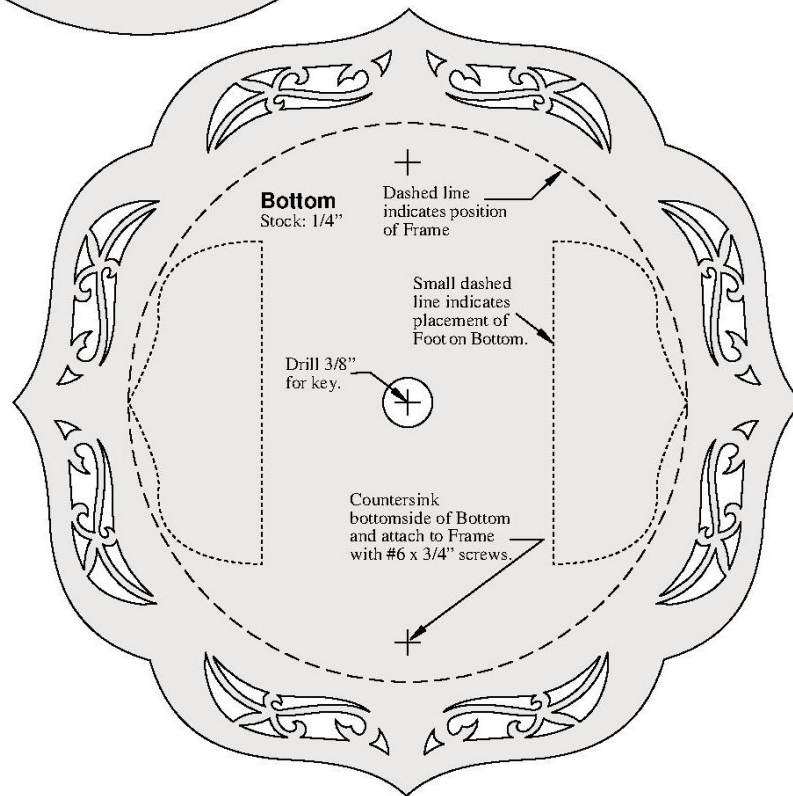 
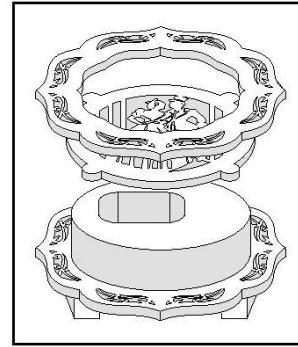 
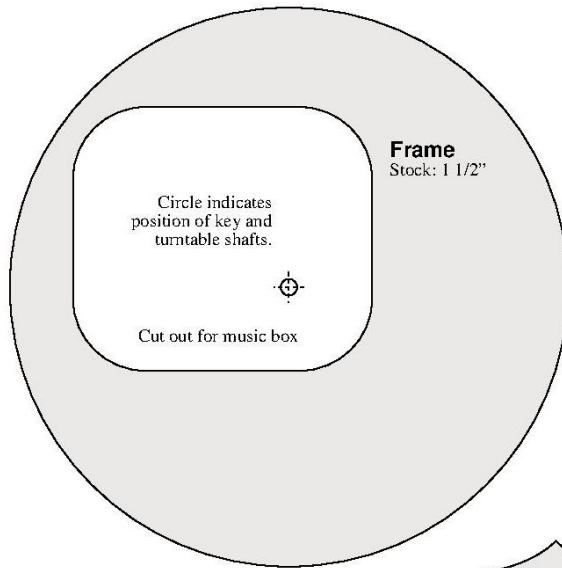 
Bottom Support (J)

Stock: 1/4", cut 2


Drill 3/8" for key.





Attach Side Supports with glue and finishing nails.




Project #20


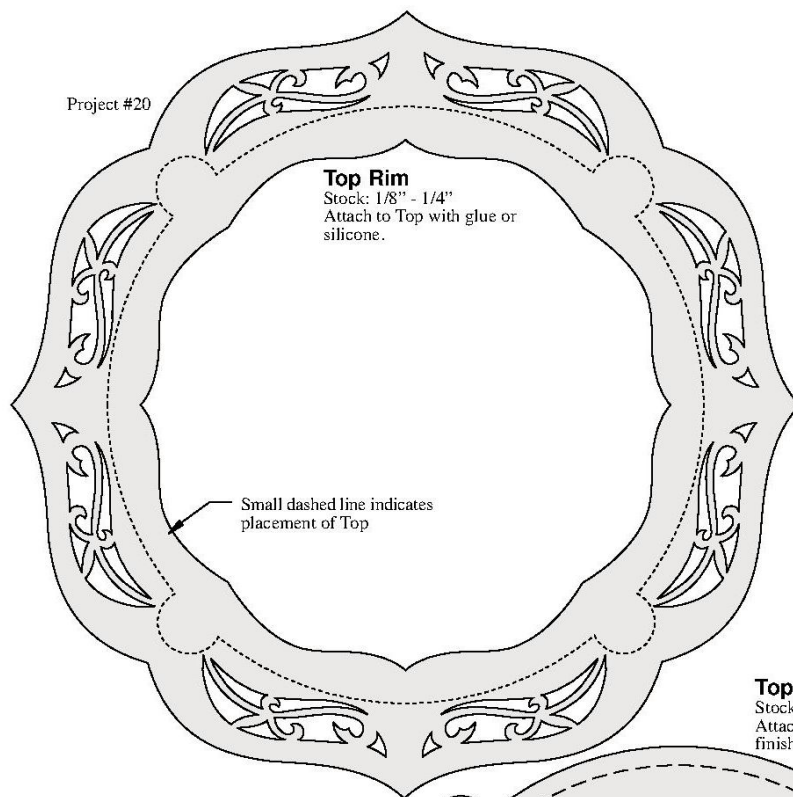 


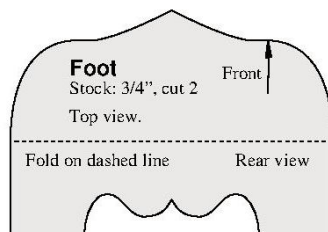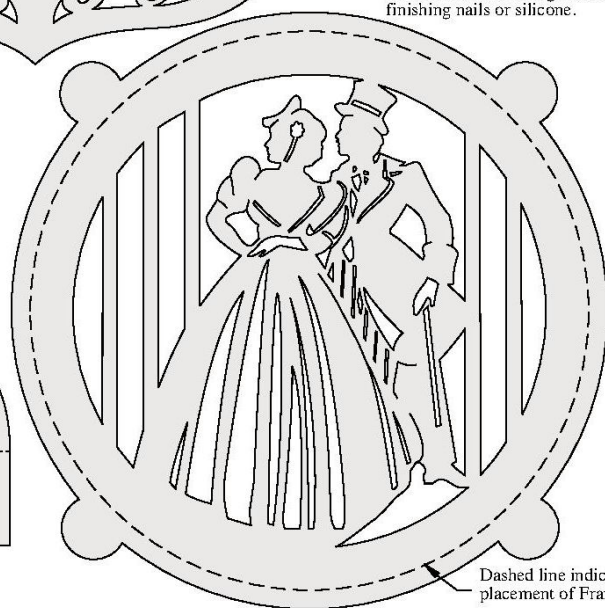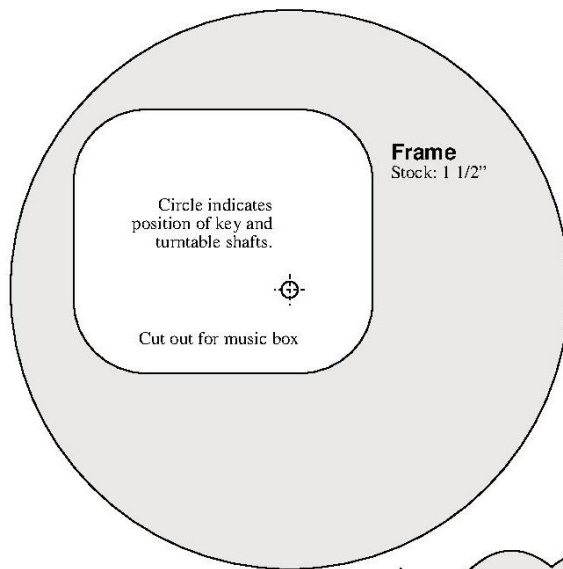   Top
Stock: 1/8" - 1/4"
Attach to Frame with glue and finishing nails or silicone.







Project #21

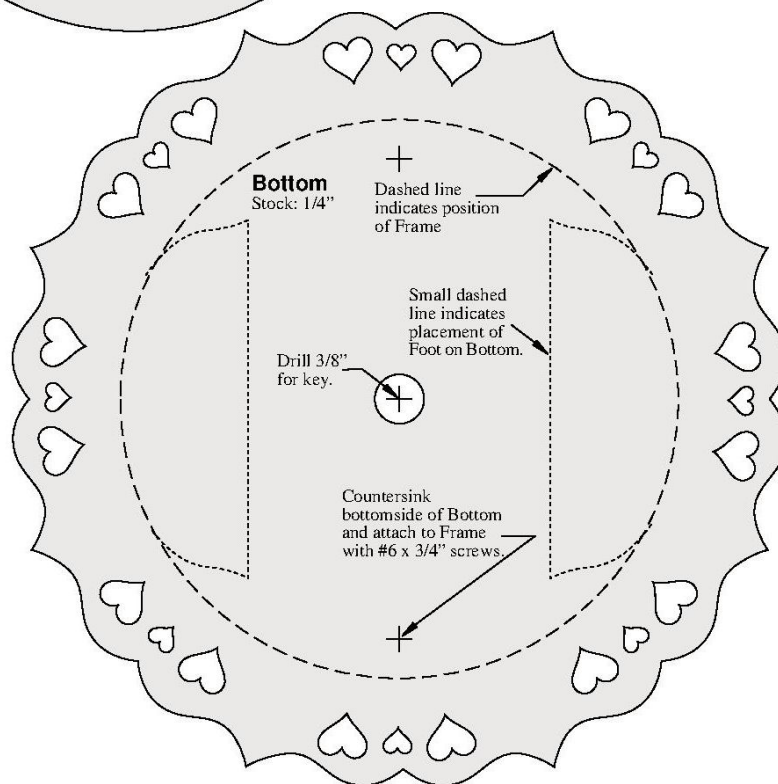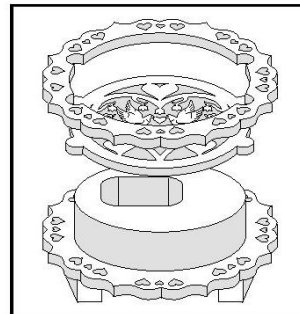  




Project #21

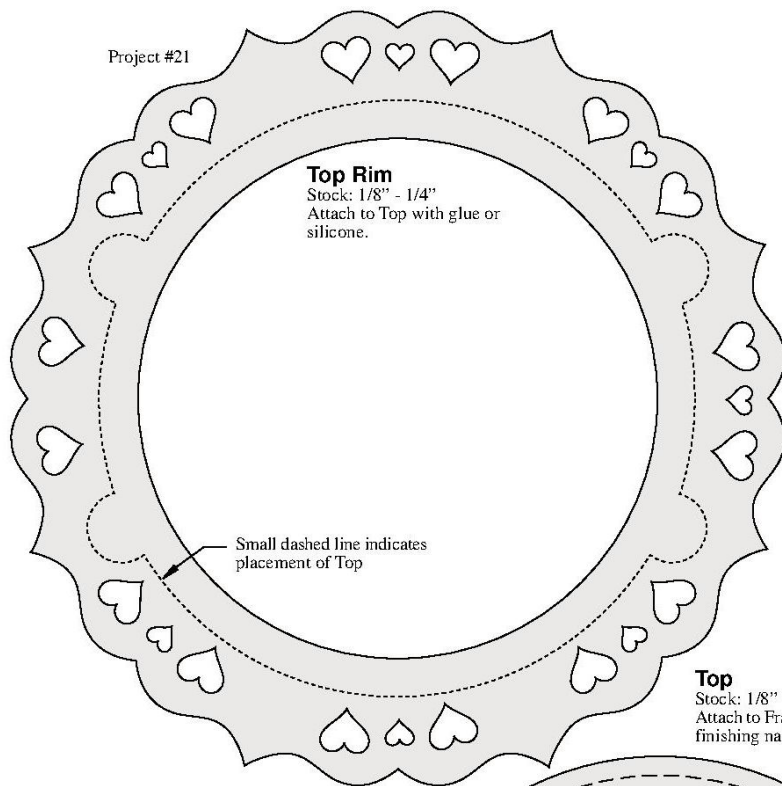 

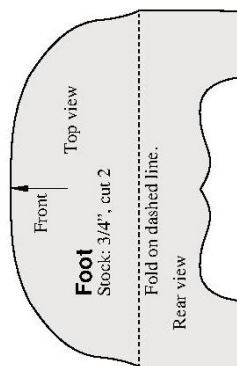 Top
Stock: 1/8" - 1/4"
Attach to Frame with glue and finishing nails or silicone.



Project #22

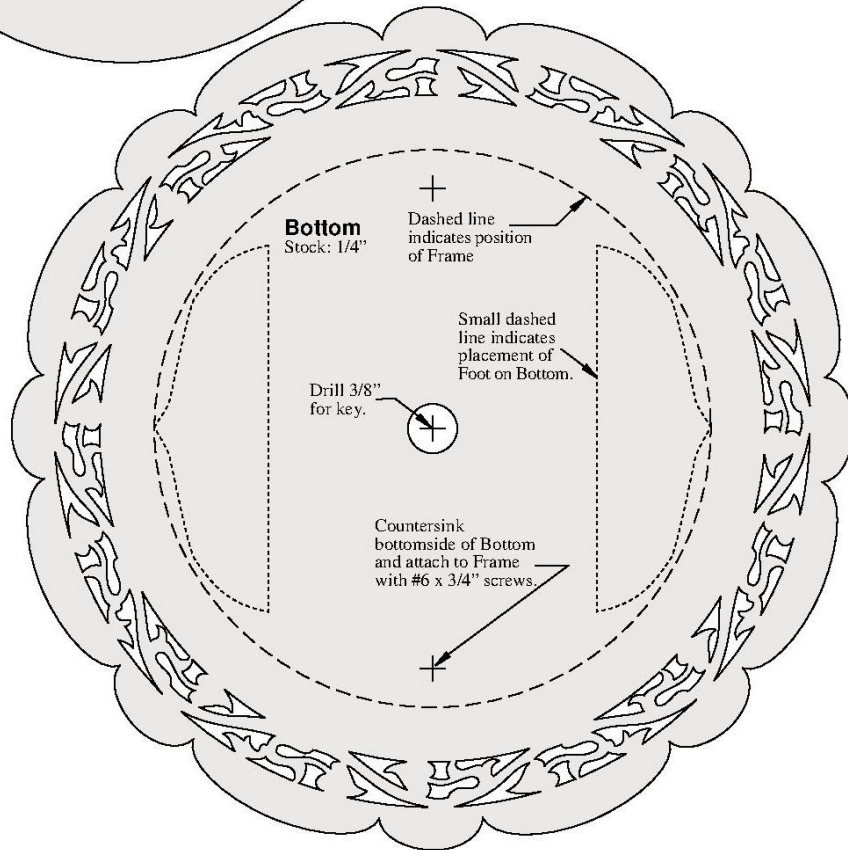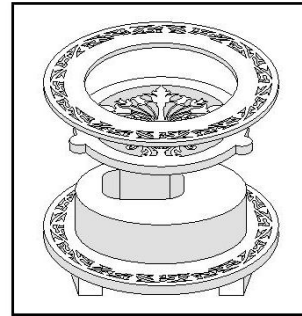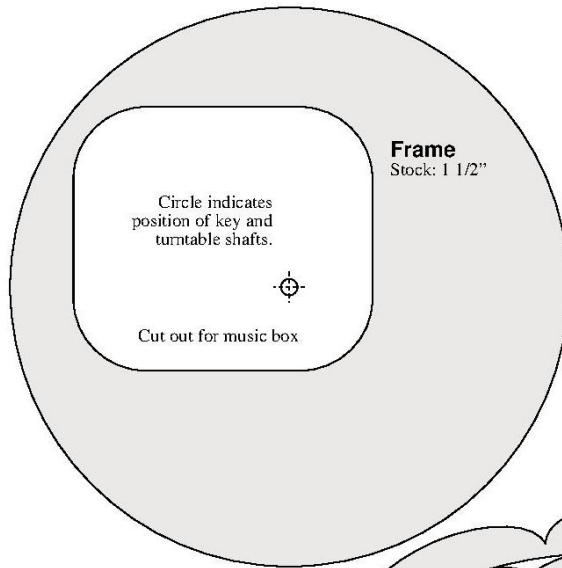   


Project #22


Top Rim

Stock: 1/8" - 1/4"

Attach to Top with glue or
silicone.

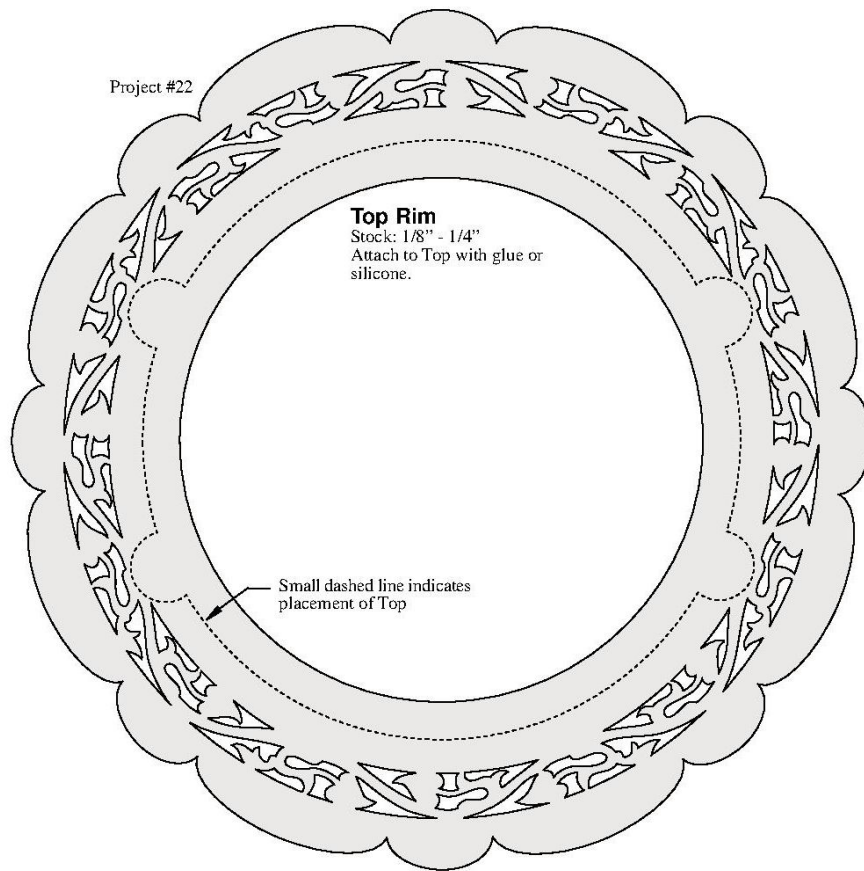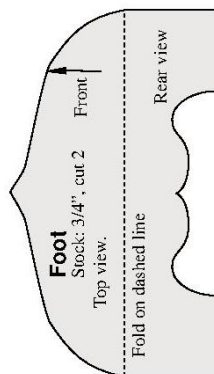  Small dashed line indicates
placement of Top









Top

Stock: 1/8" - 1/4"

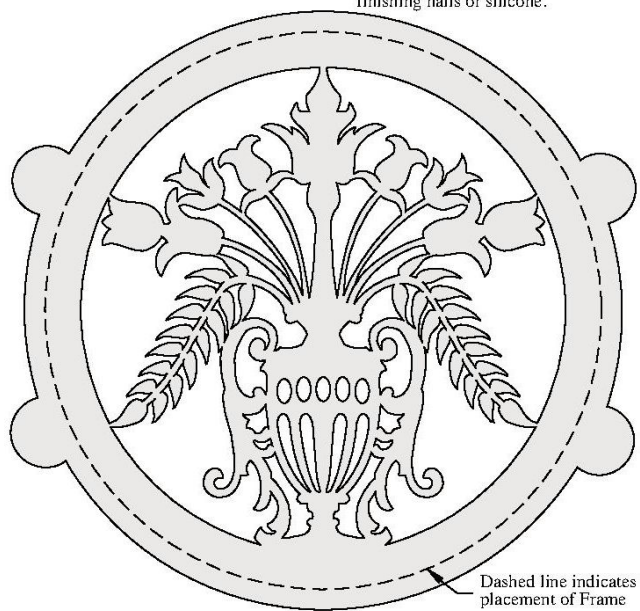 
Attach to Frame with glue and finishing nails or silicone.




Project #23

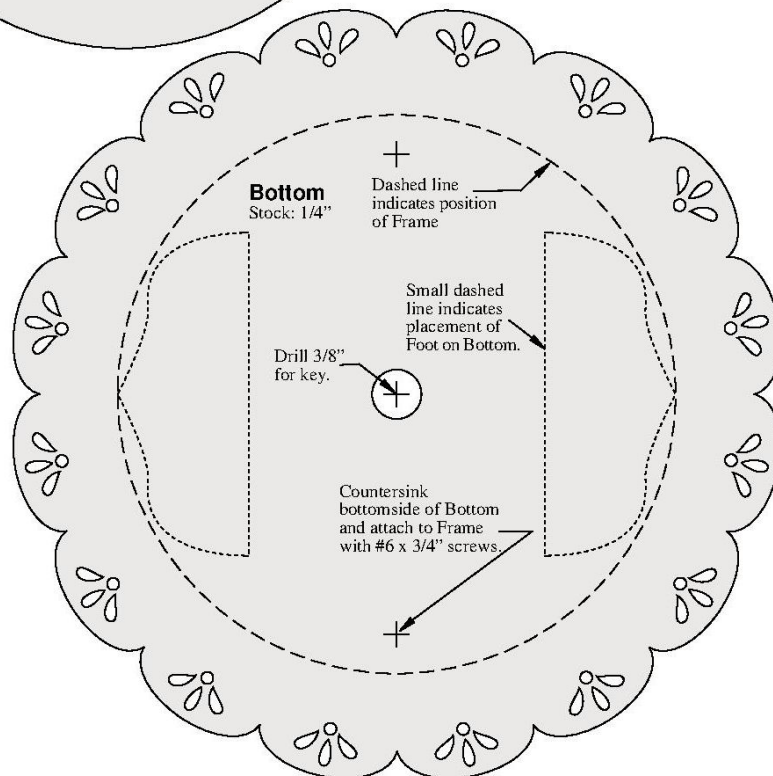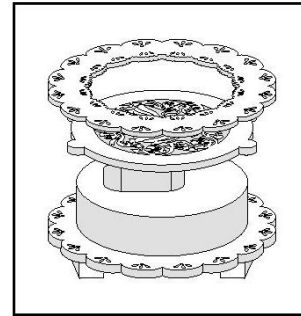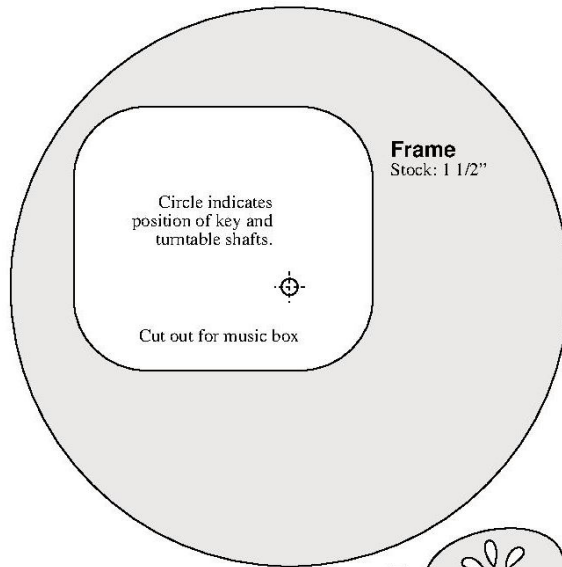   




Project #23

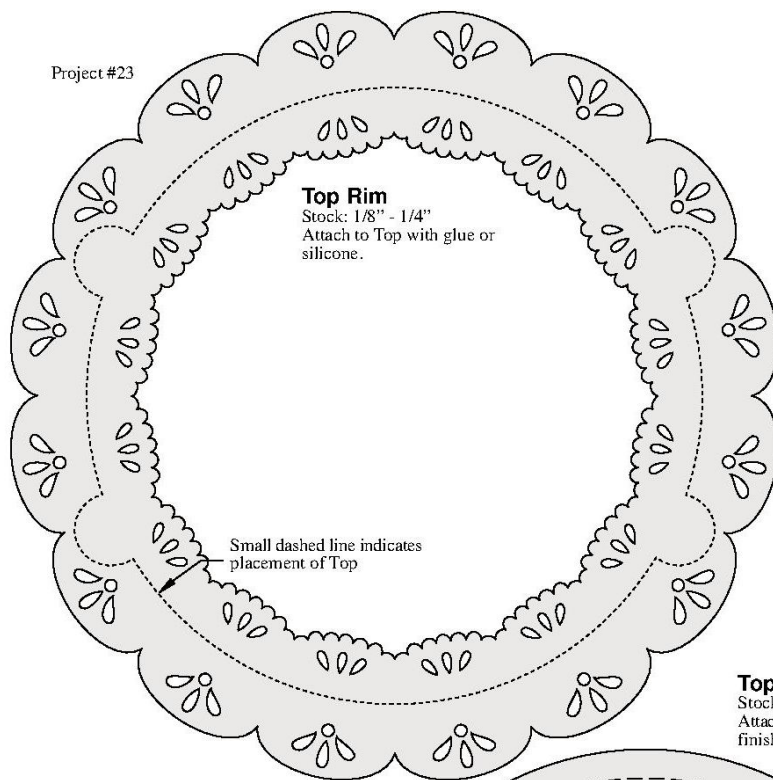 

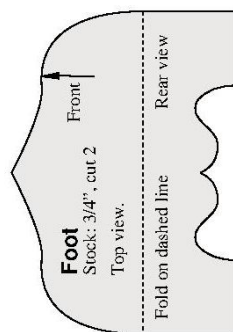 Top
Stock: 1/8" - 1/4"
Attach to Frame with glue and finishing nails or silicone.




Project #24

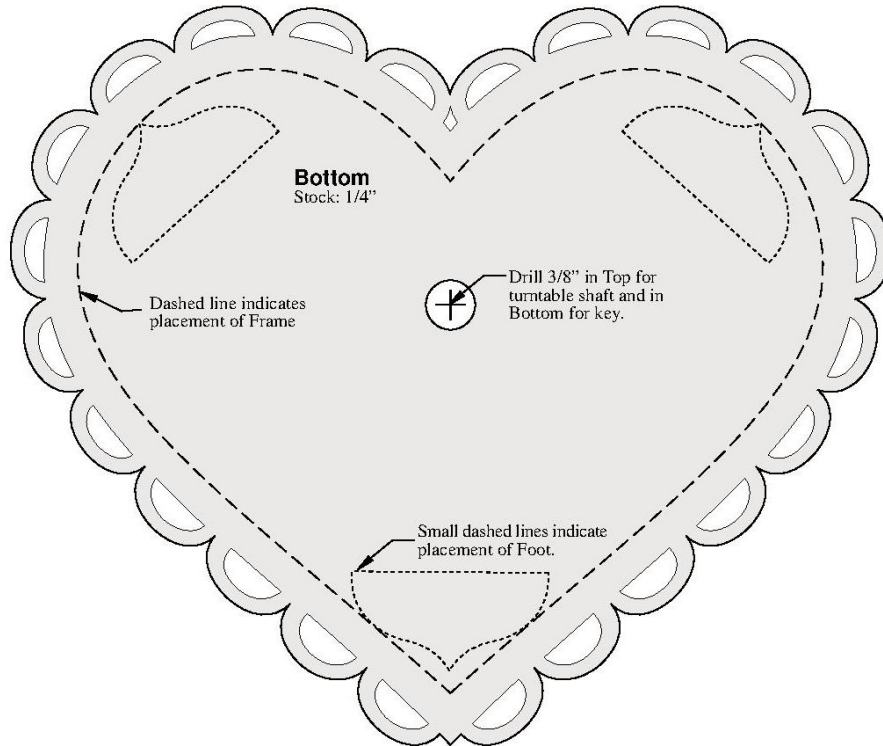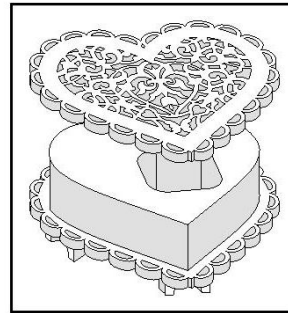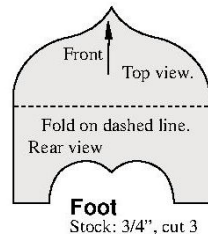   

Project #24

Frame



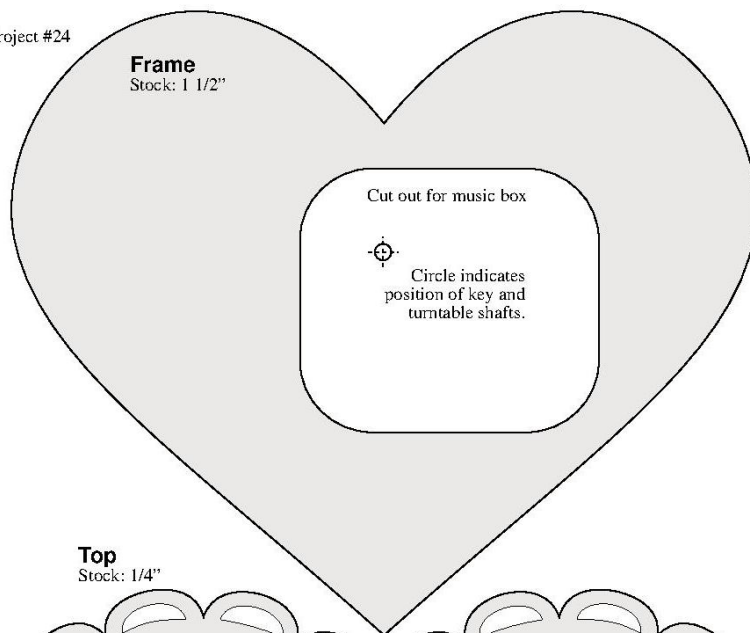 
Stock: 1 1/2"



Top

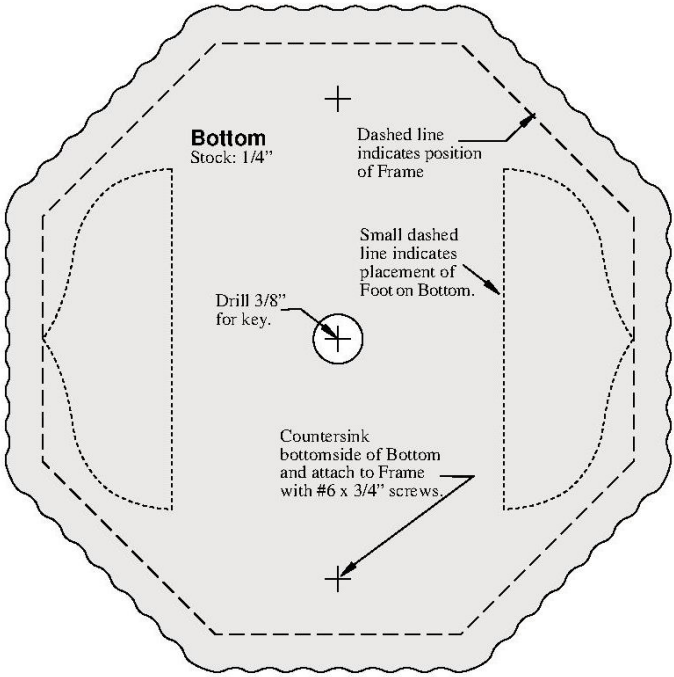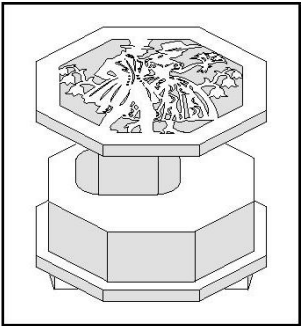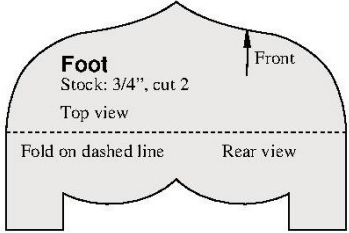   Stock: 1/4"







Project #25

Top
Stock: 1/4"





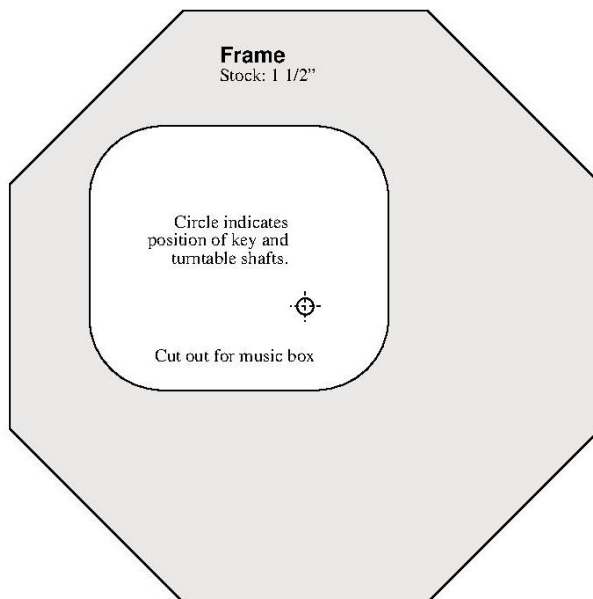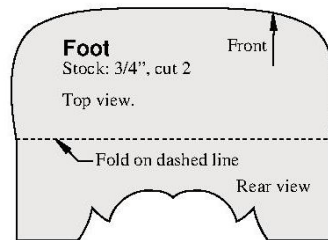  
Frame
Stock: 1 1/2"








Project #26

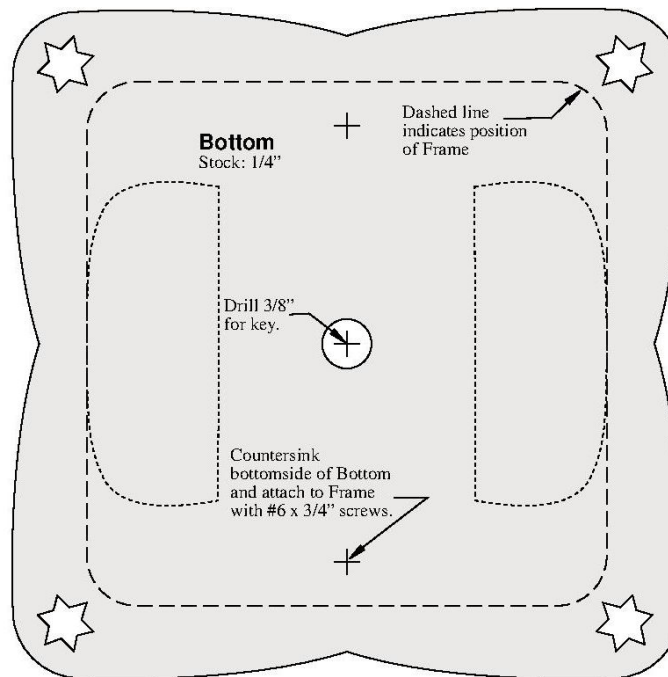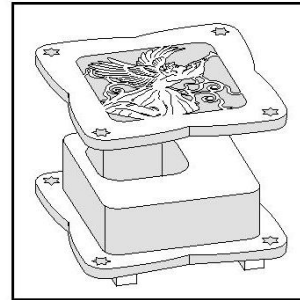  


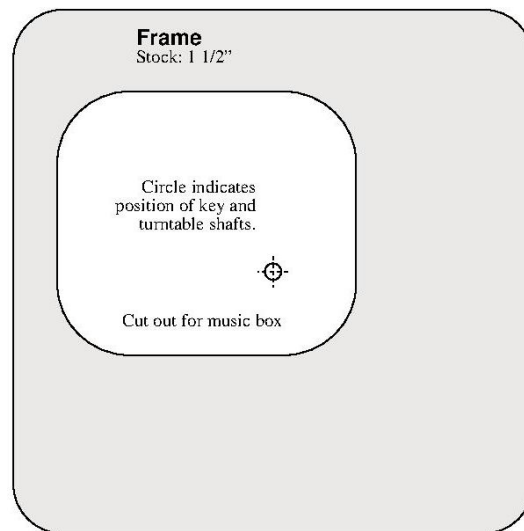 

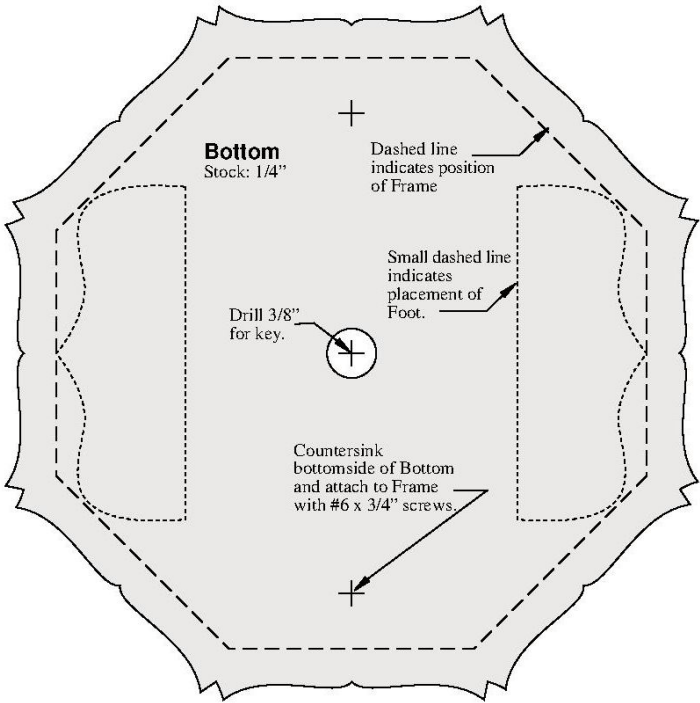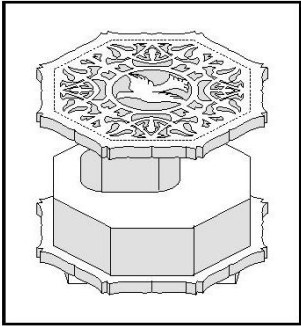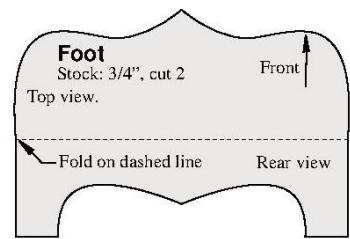   





Project #27

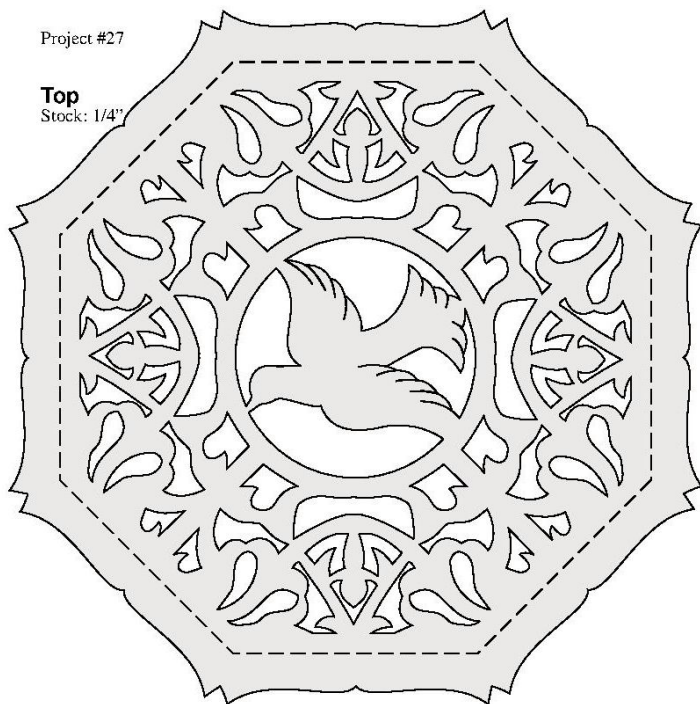 Top
Stock: 1/4"




Frame
Stock: 1 1/2"

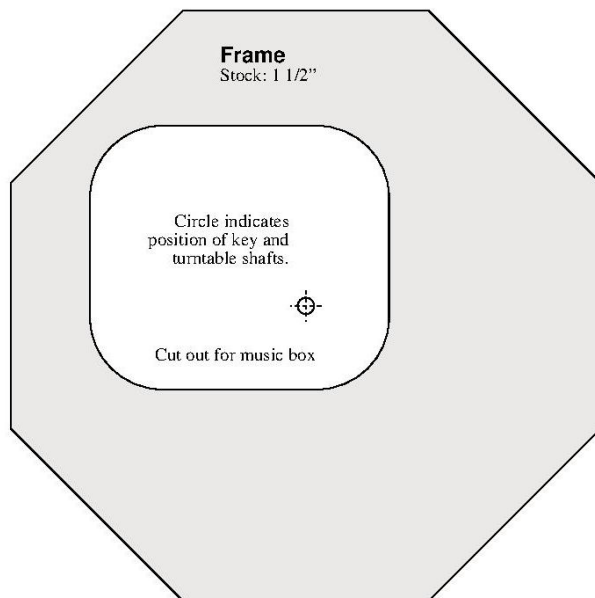 


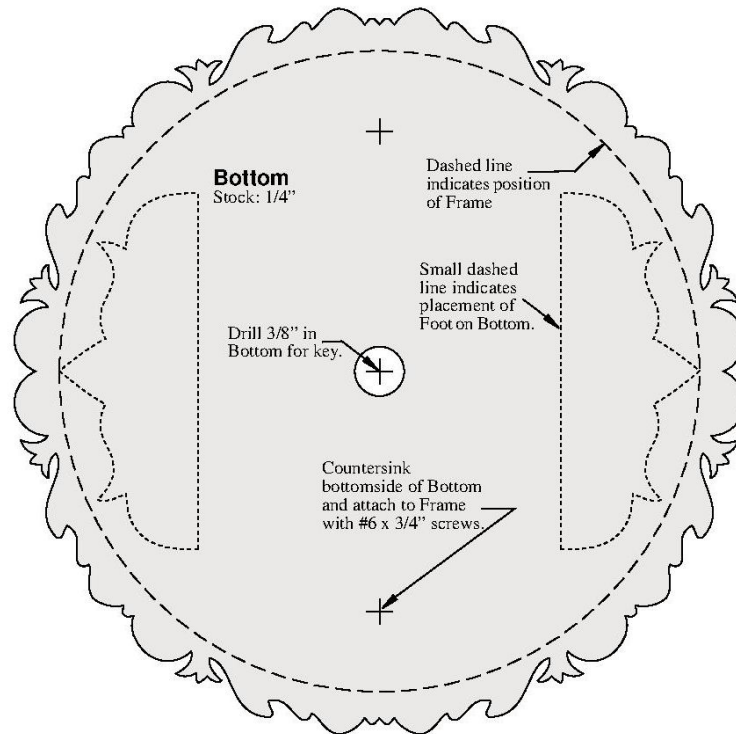 
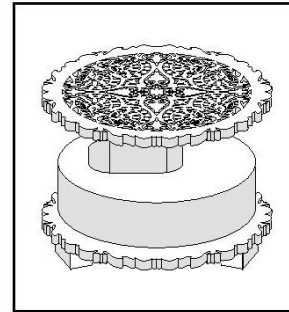 
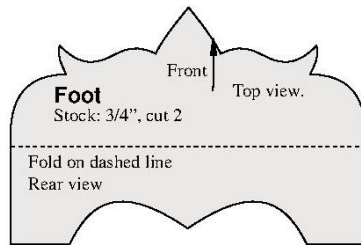 



Project #28



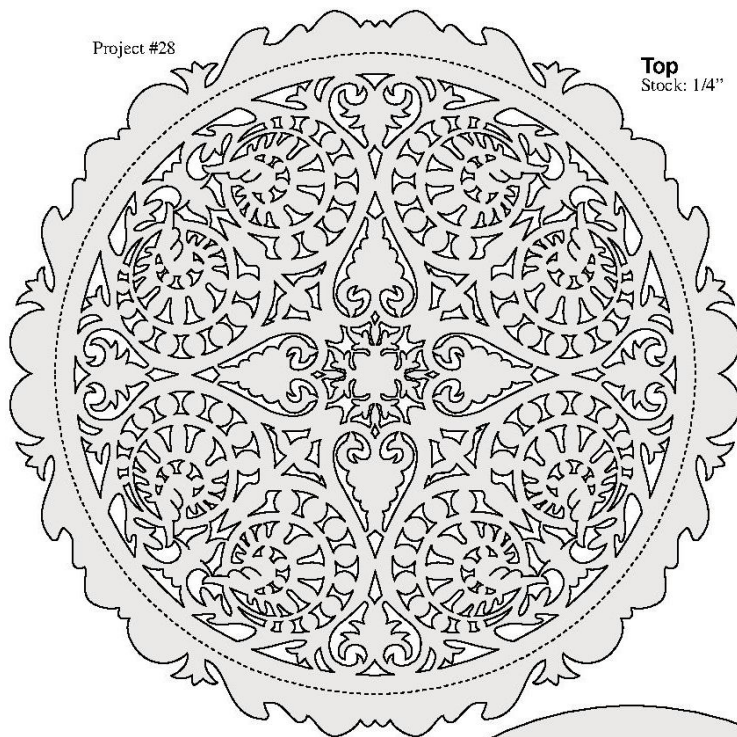 


Top
Stock: 1/4"

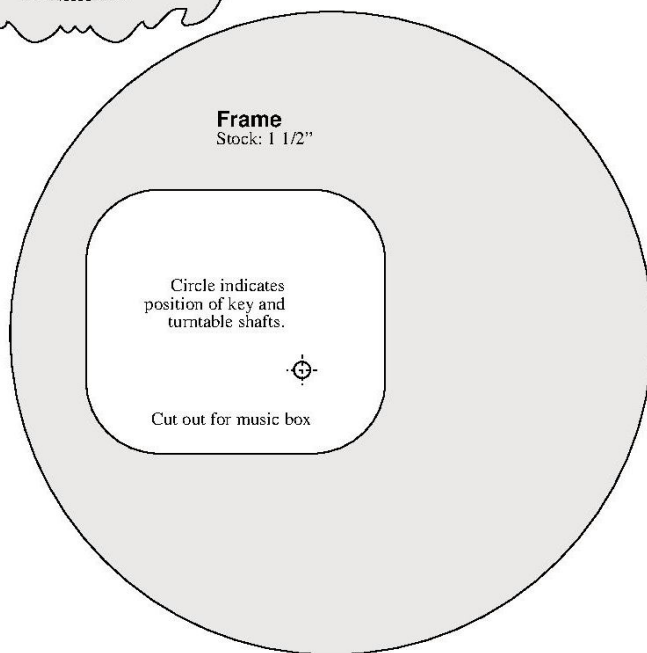 


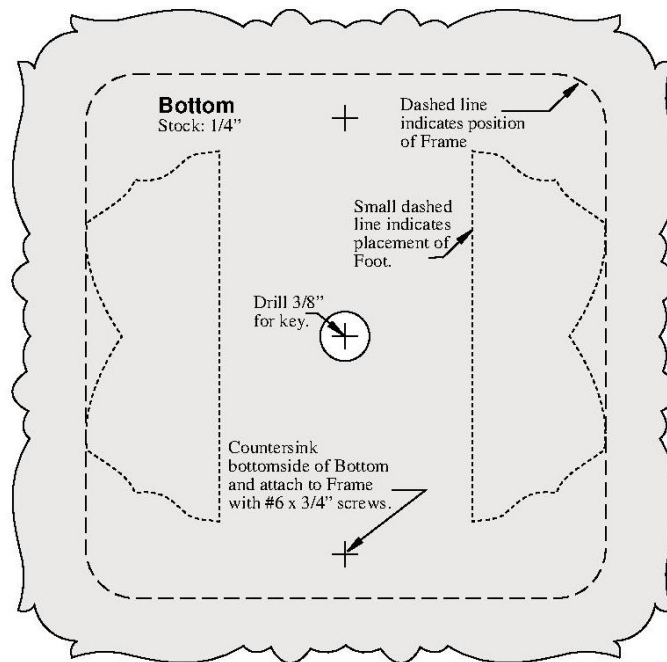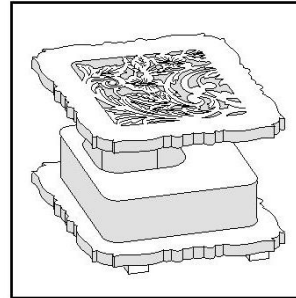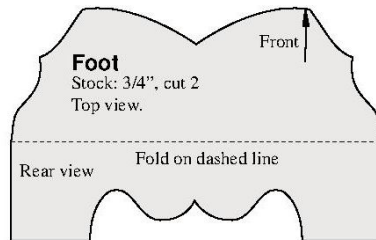   

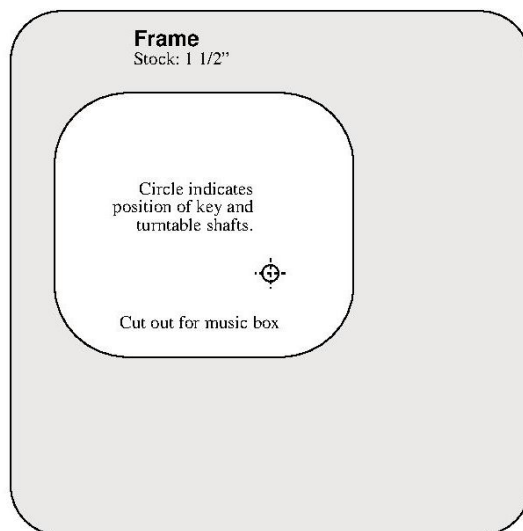 


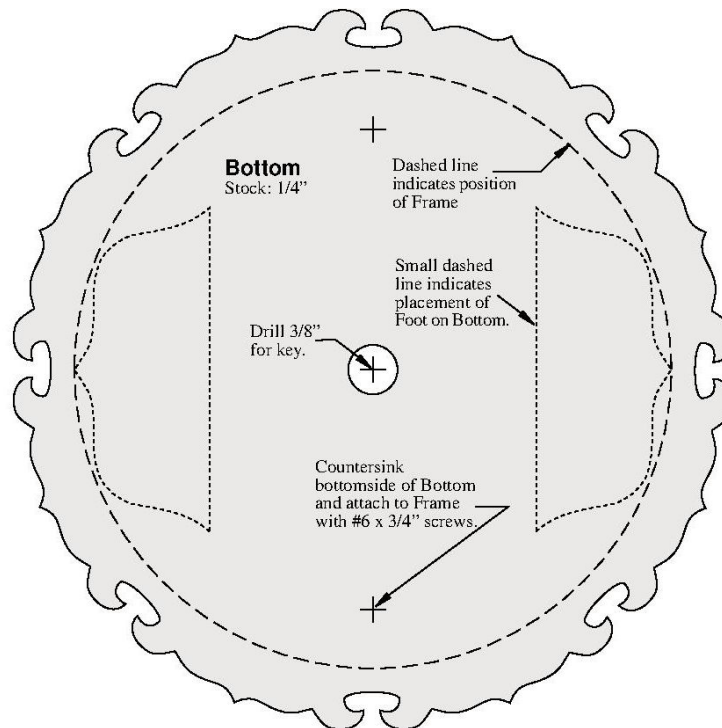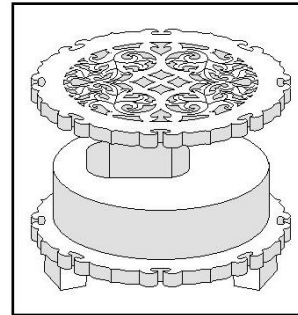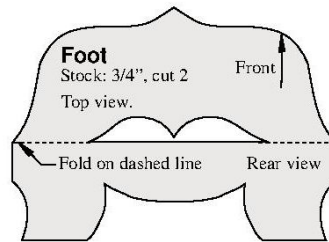   

Project #30

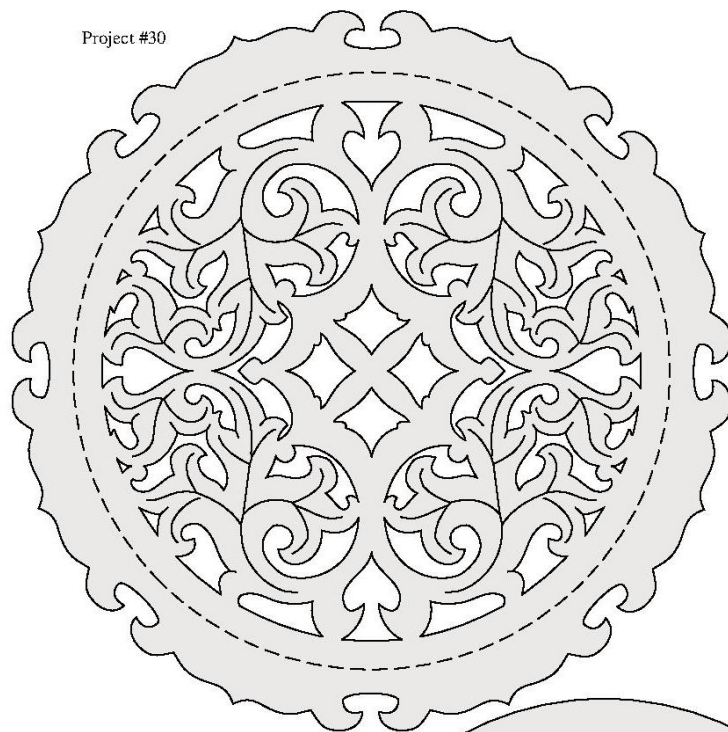 

Top
Stock: 1/4"

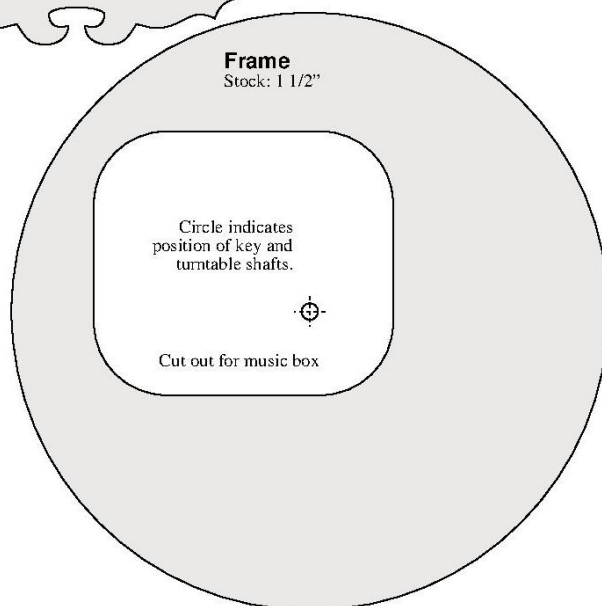 


Frame
Stock: 1 1/2"

Circle indicates
position of key and
turntable shafts.



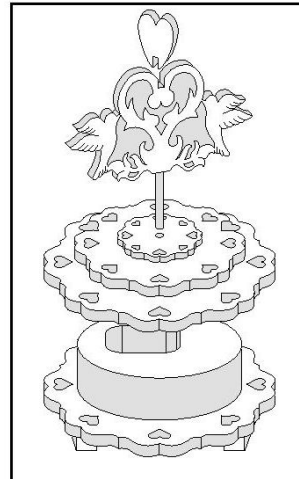 Cut out for music box



Turntable Overlay

Stock: 1/4". Attach to Turntable with glue or silicone.



Drill 1/4" hole for dowel.

Frame

Stock: 1 1/2"

Circle indicates position of key and turntable shafts.



Cut out for music box

Project #31

**Top
Figure**

Figure
Stock: 1/4"

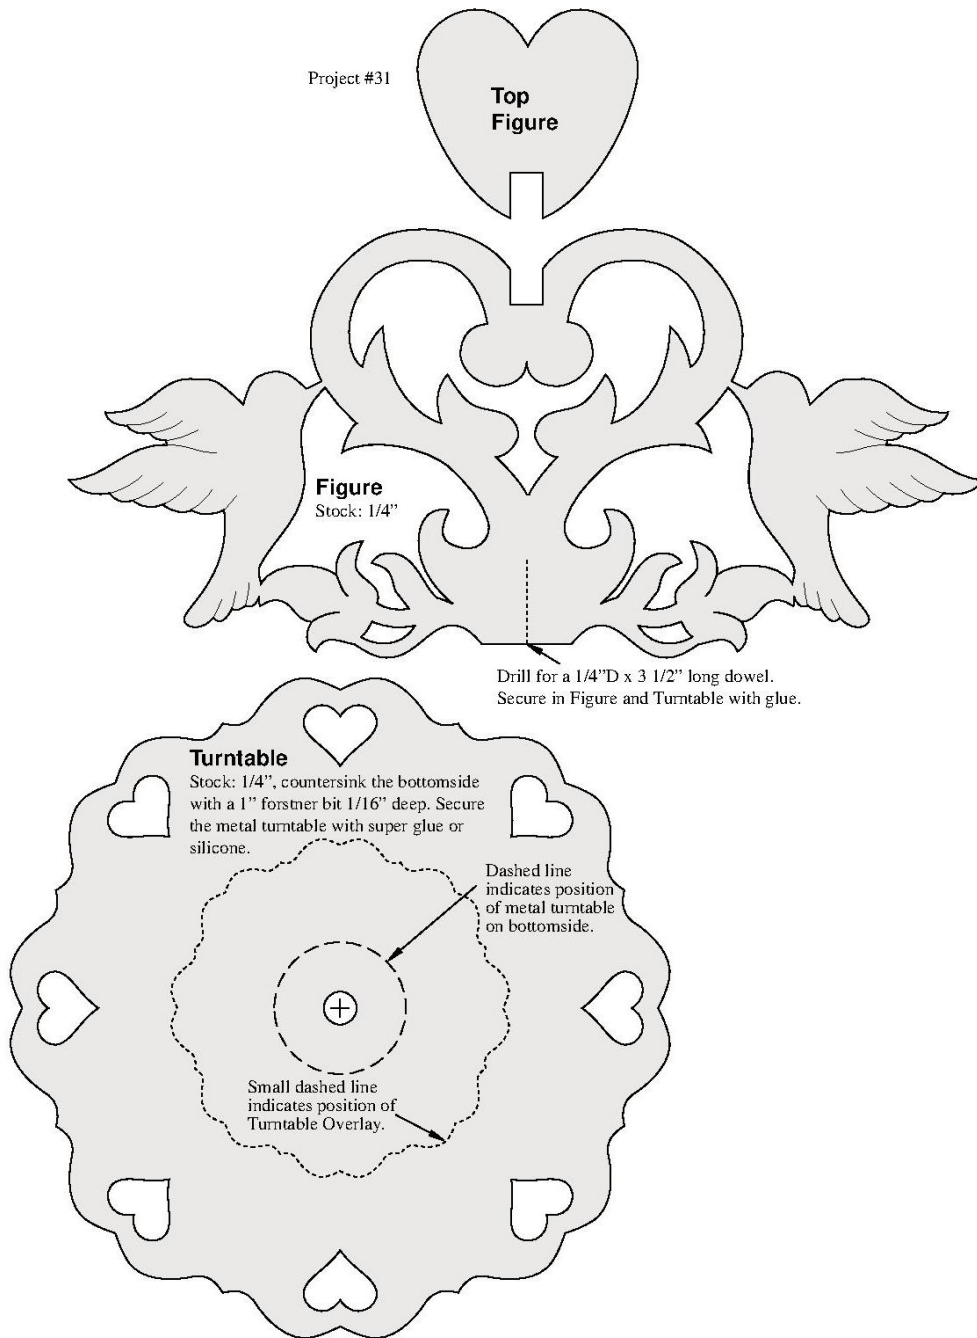 
Drill for a 1/4"D x 3 1/2" long dowel.
Secure in Figure and Turntable with glue.

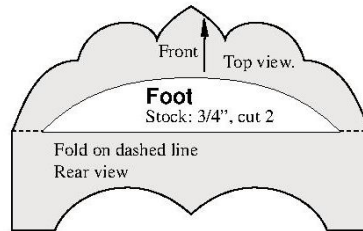 
Turntable

Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.


Dashed line indicates position of metal turntable on bottomside.

Small dashed line indicates position of Turntable Overlay.





Project #31

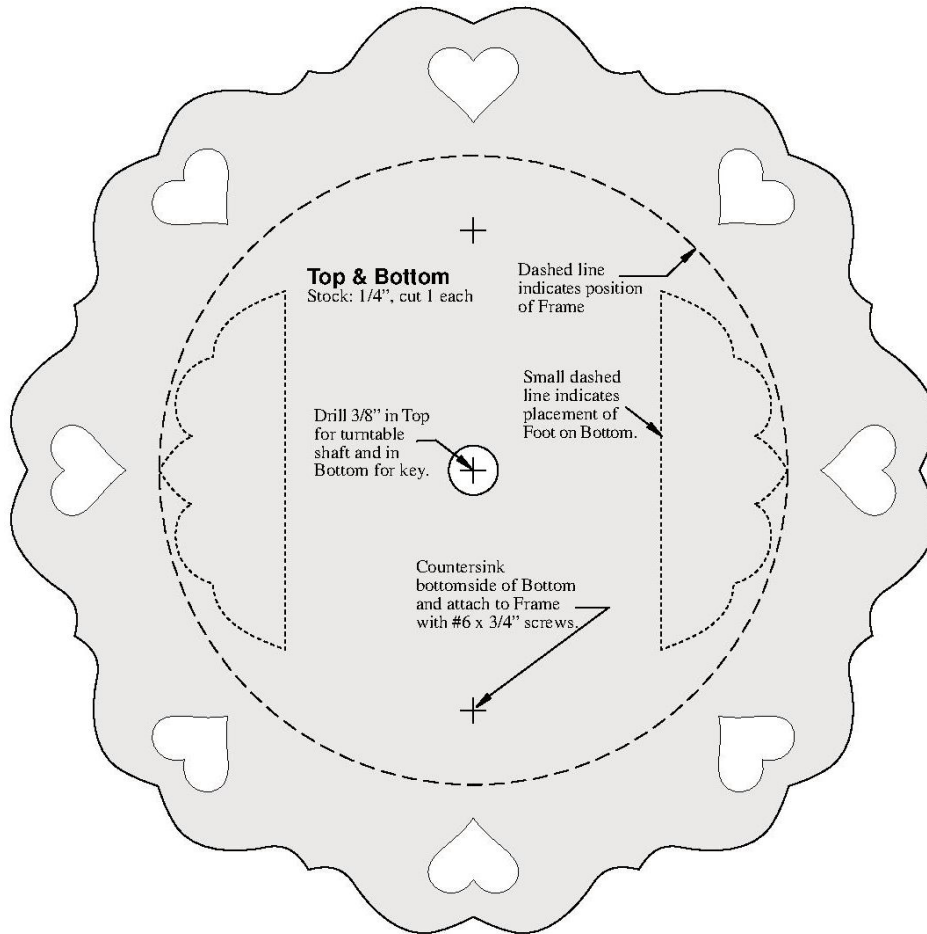 

Project #32



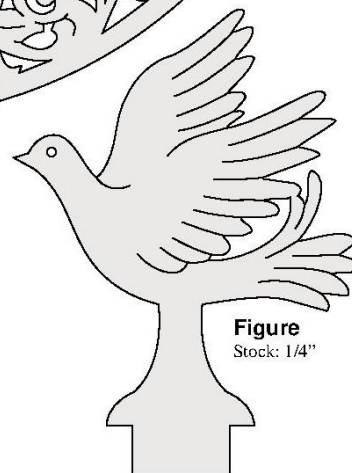 
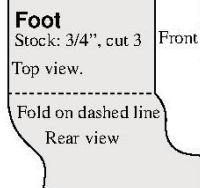 
 
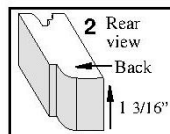 
 
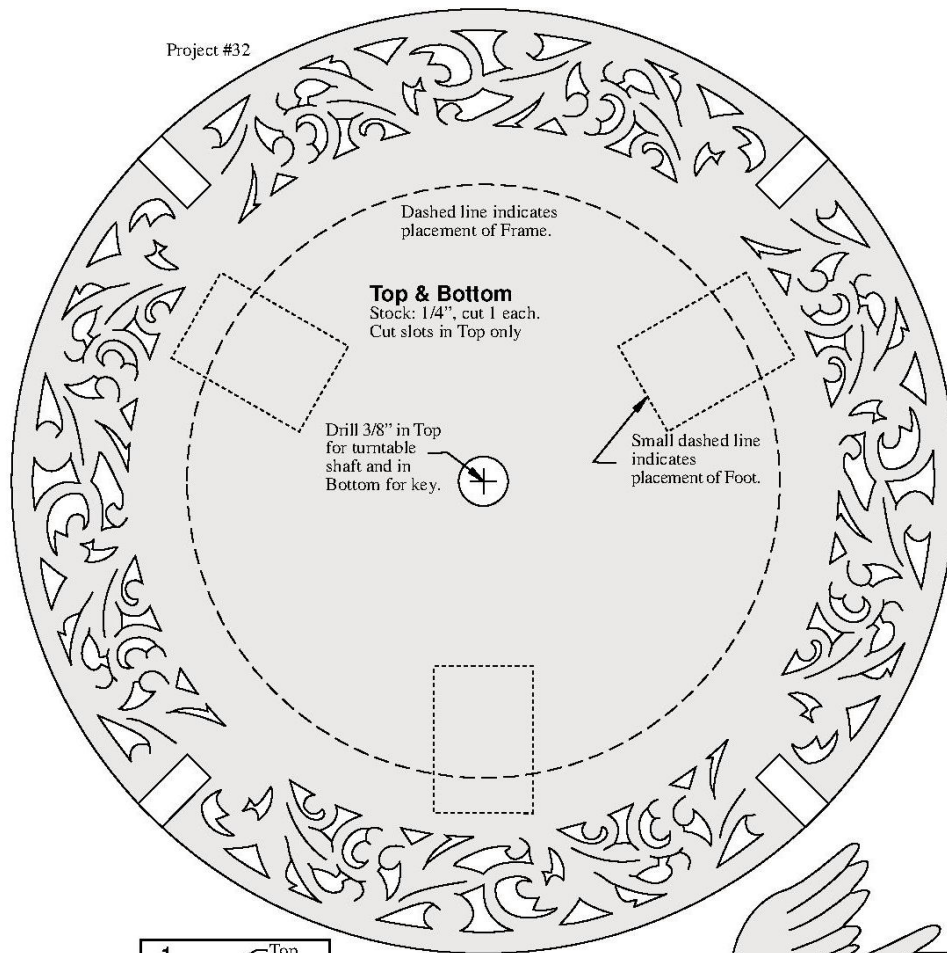 
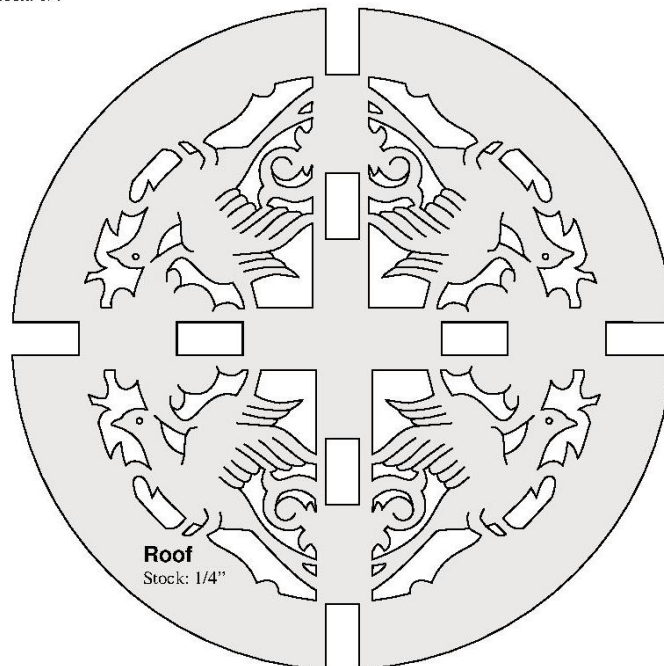 
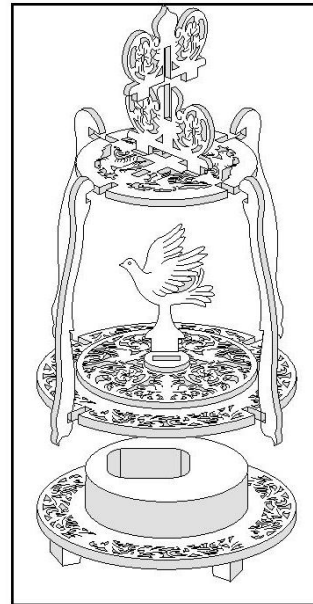 
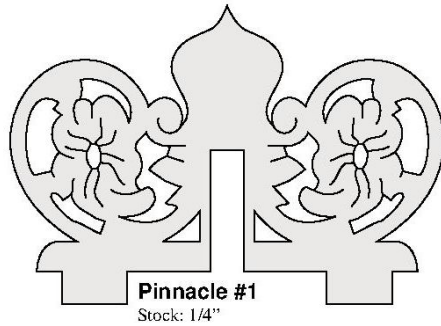 


Figure
Stock: 1/4"

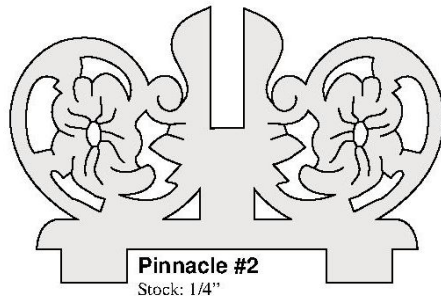 


Project #32

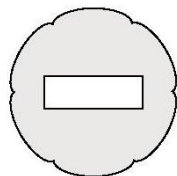 


Turntable Overlay

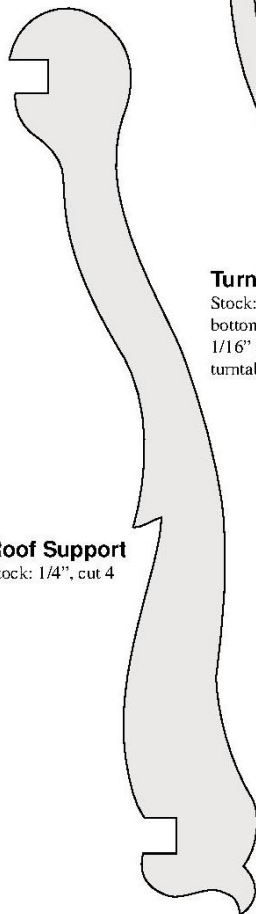 Stock: 3/8"



Roof Support

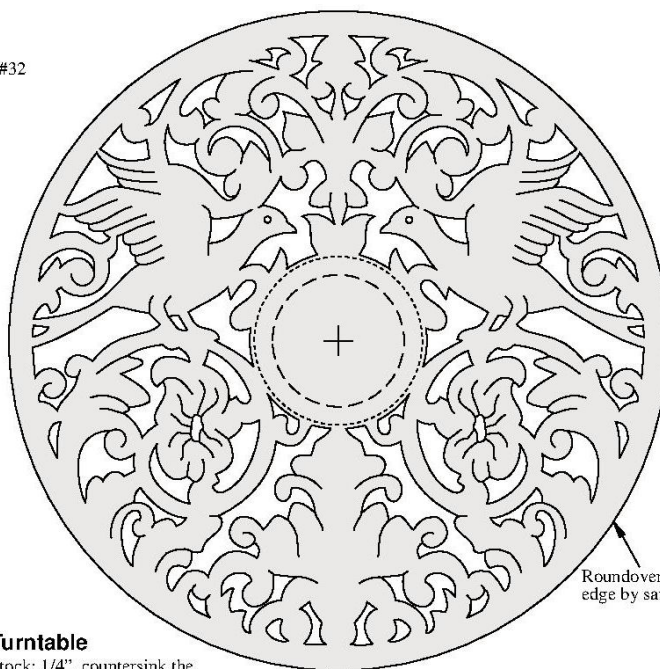 
Stock: 1/4", cut 4



Turntable

Stock: 1/4", countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.

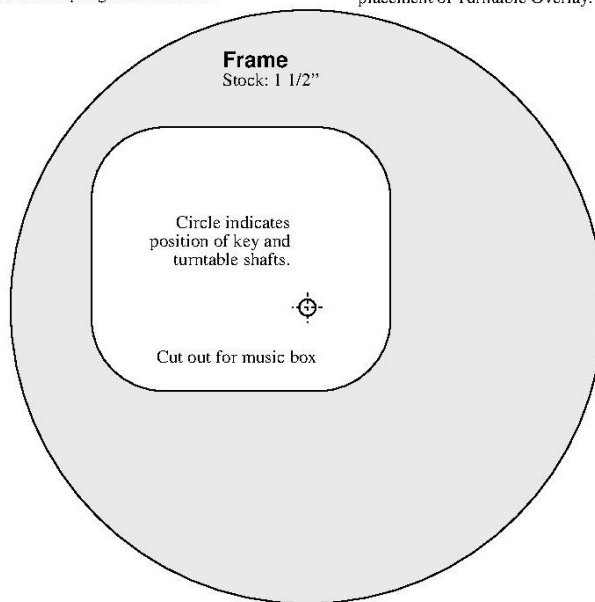 Dashed line indicates position of metal turntable on bottomside. Small dashed line indicates placement of Turntable Overlay.





Frame



Stock: 1 1/2"


Circle indicates position of key and turntable shafts.

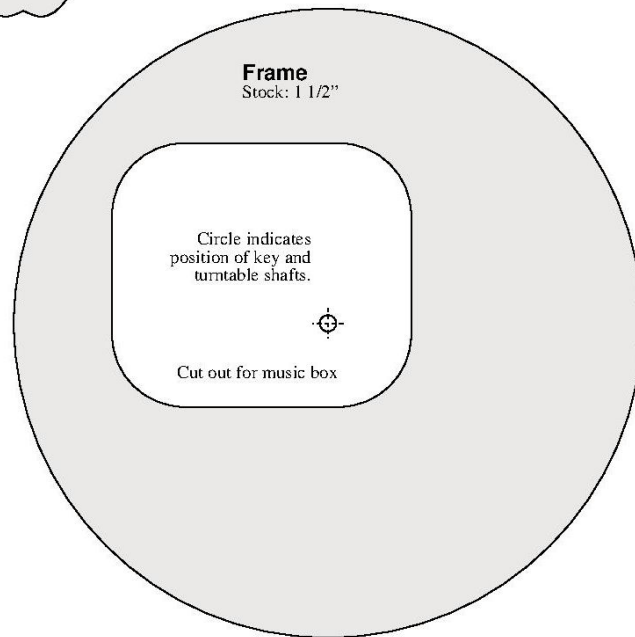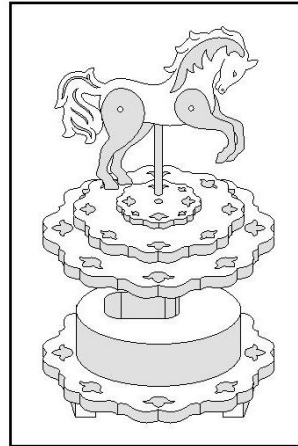  
Cut out for music box



Project #33

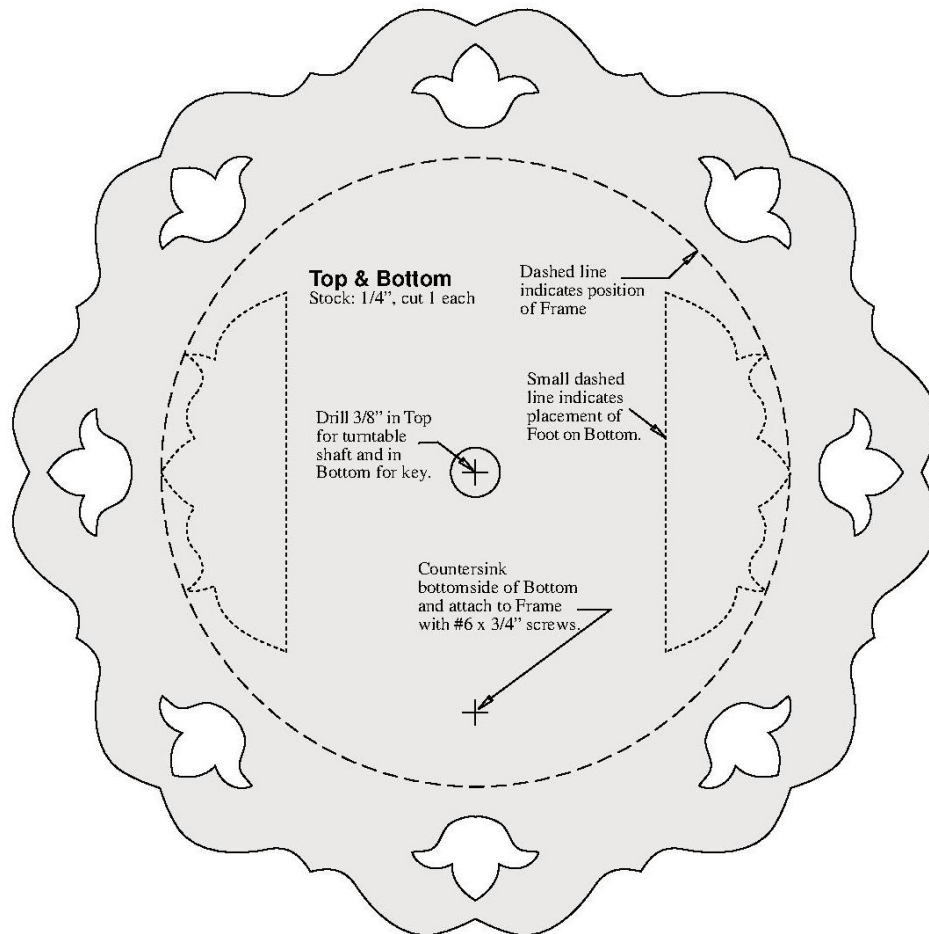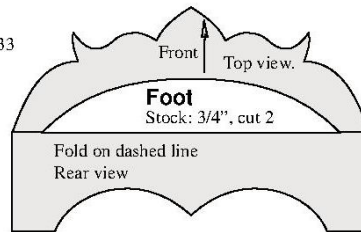  

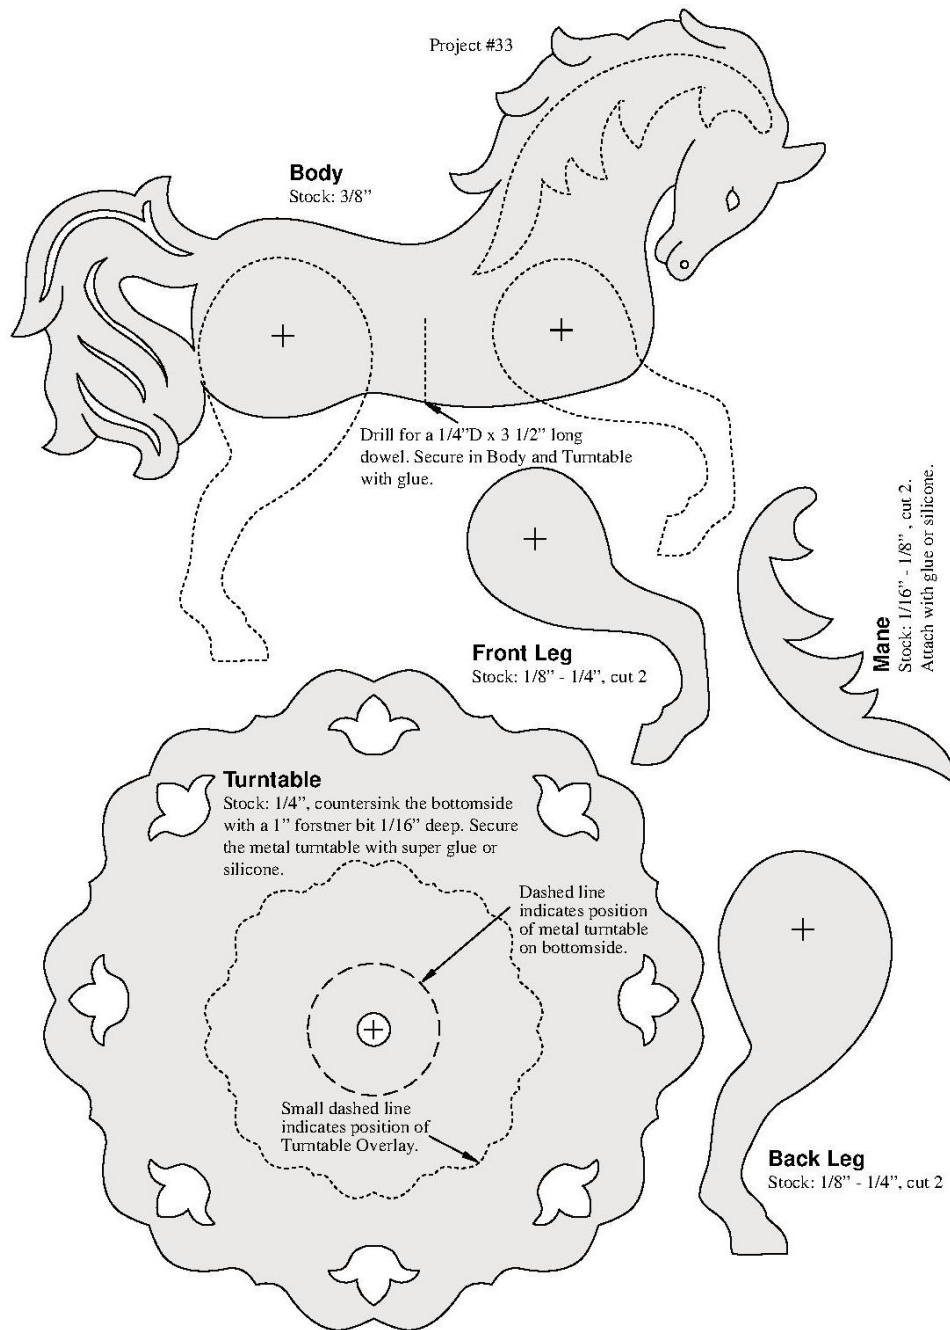 


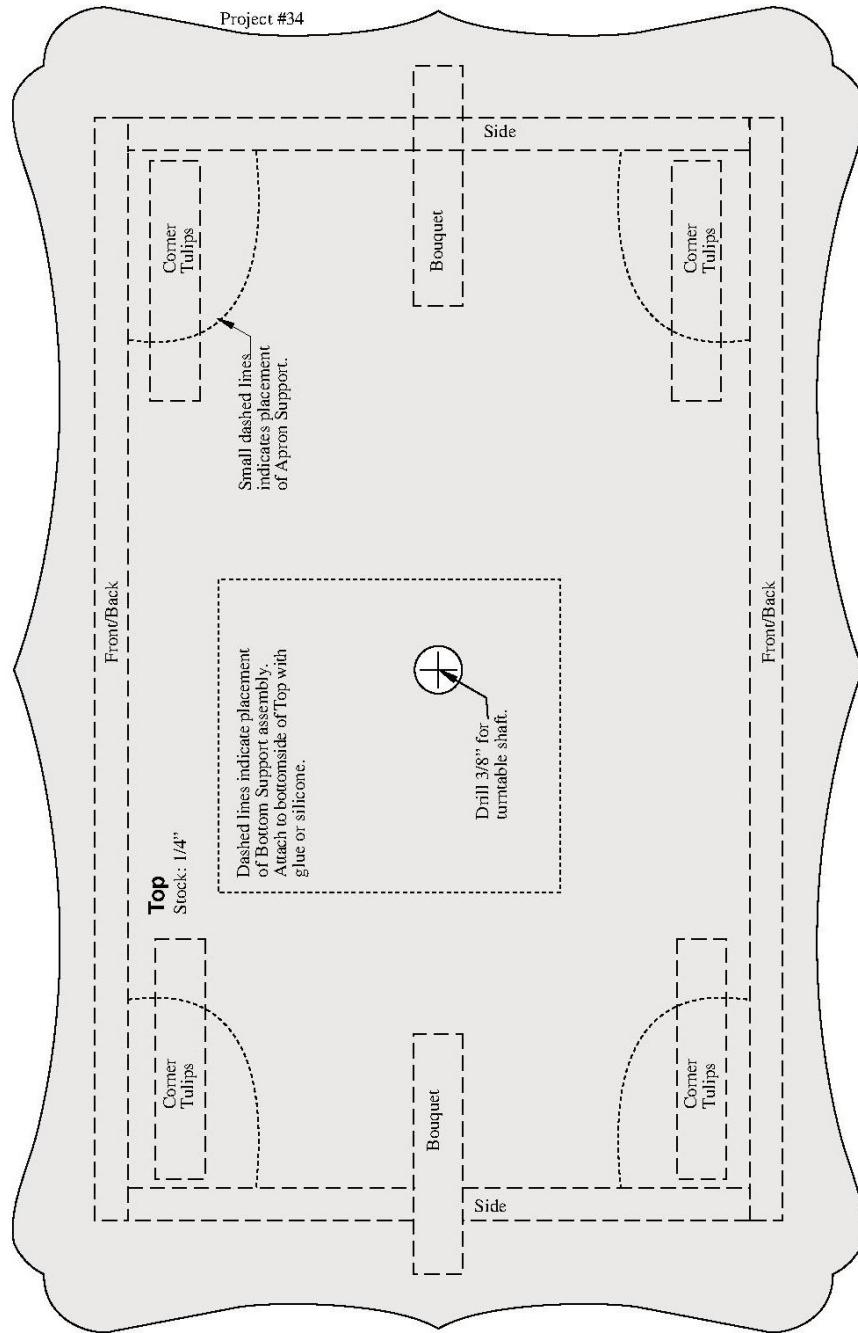 

Turntable Overlay


Stock: 1/4". Secure to the Turntable with glue or silicone.

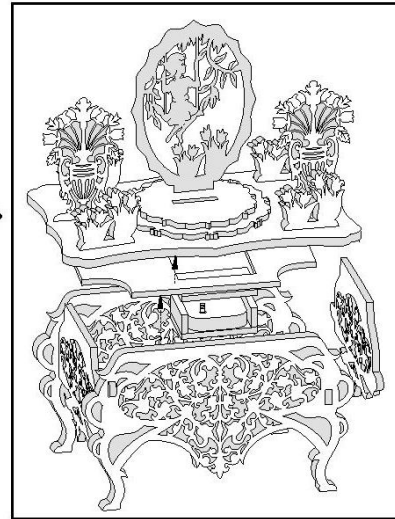 Adjust slot if necessary for thickness of material used.



Turntable

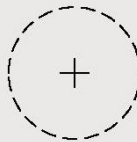 
Stock: 1/4", countersink the bottomsides with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.




Dashed line indicates placement of Turntable Overlay.

Corner Tulips

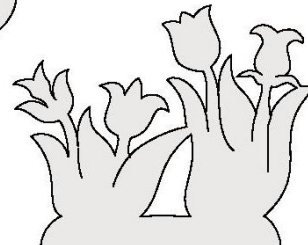 Stock: 3/8", Cut 4.
Secure to Top with glue or silicone.




Project #34



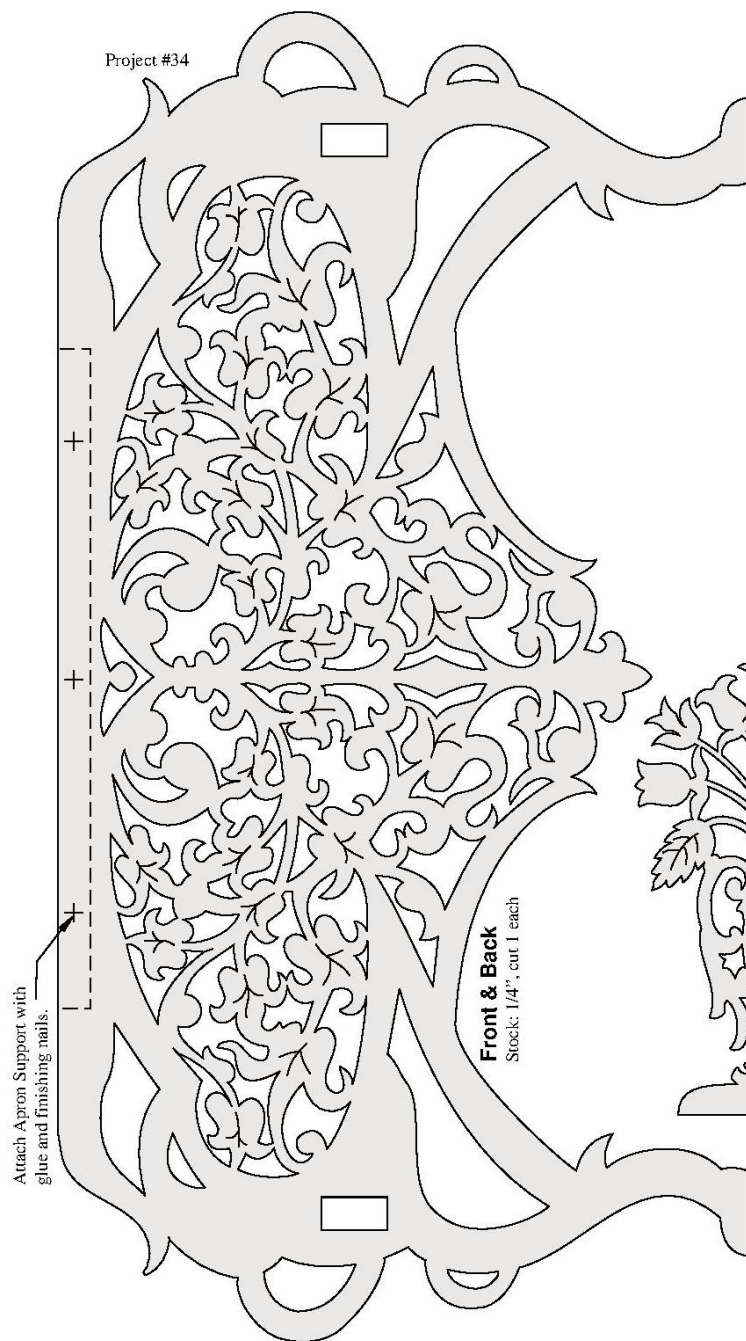 


Attach Apron Support with
glue and finishing nails.

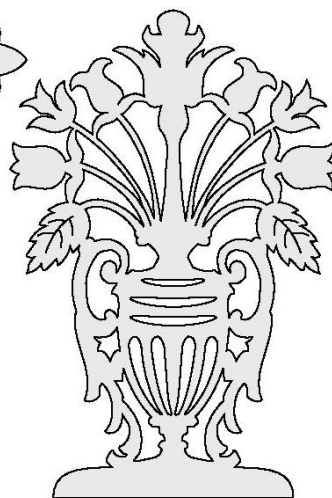 Front & Back
Stock: 1/4", cut 1 each



Bouquet
Stock: 3/8", cut 2

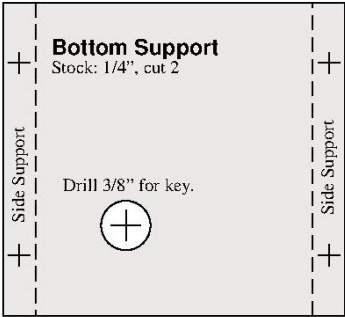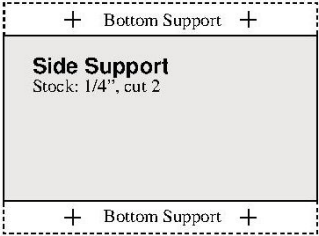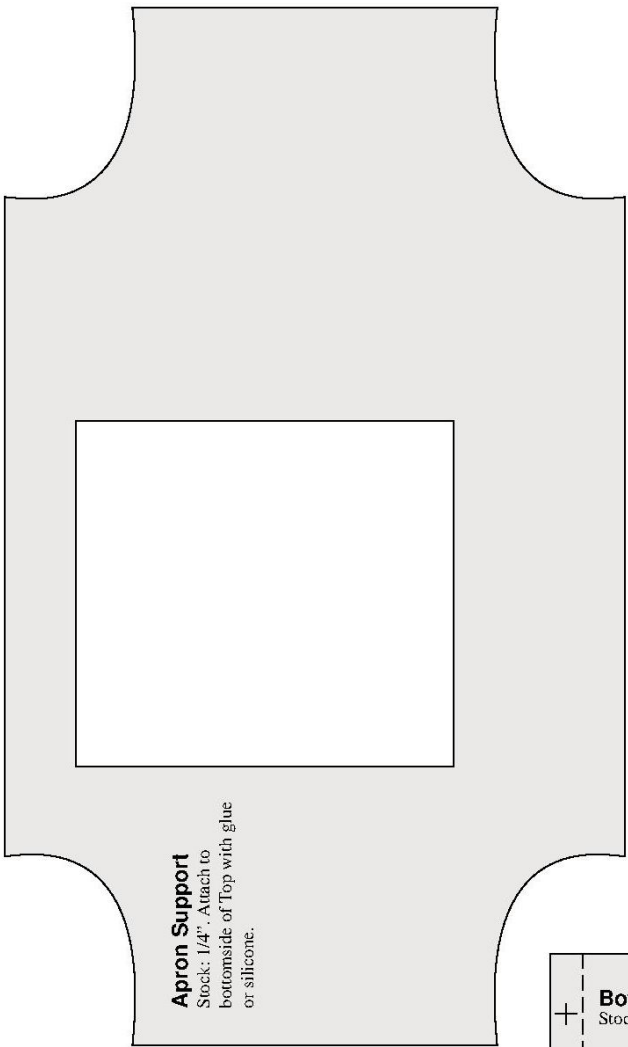   

Assembly Instructions

Assemble by first attaching the Sides to the Front and Back. Next attach the Apron Support. Now attach the Bottom Supports to the Side Supports. Insert the music box movement and secure in place with silicone. Attach the Leg assembly to the bottom of the Top and secure with glue or silicone. Insert the music box movement assembly into position on the underside of the Top and glue in place. Secure the Turntable Overlay to the Turntable and secure the figures into place. Then attach the wood Turntable to the metal turntable.

Project #34

Side

Stock: 1/4", cut 2


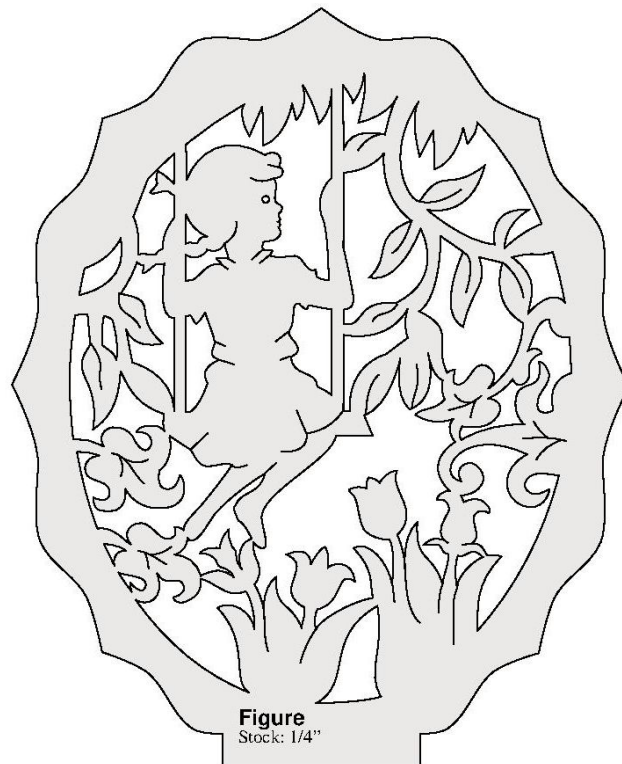 
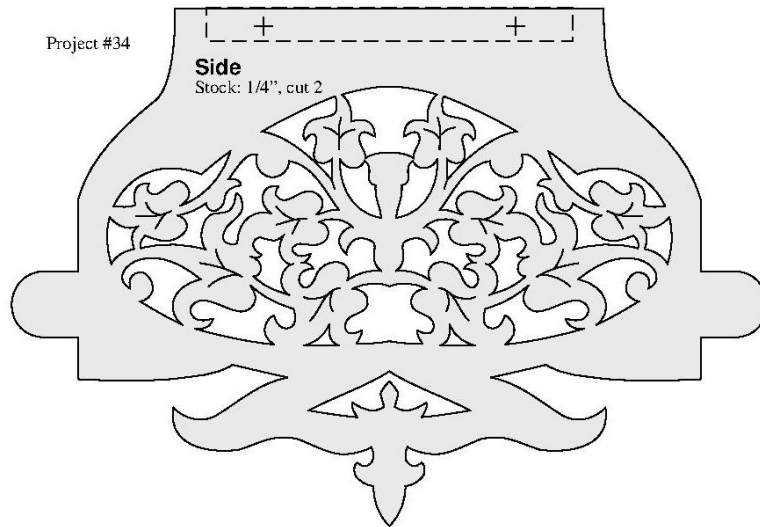 
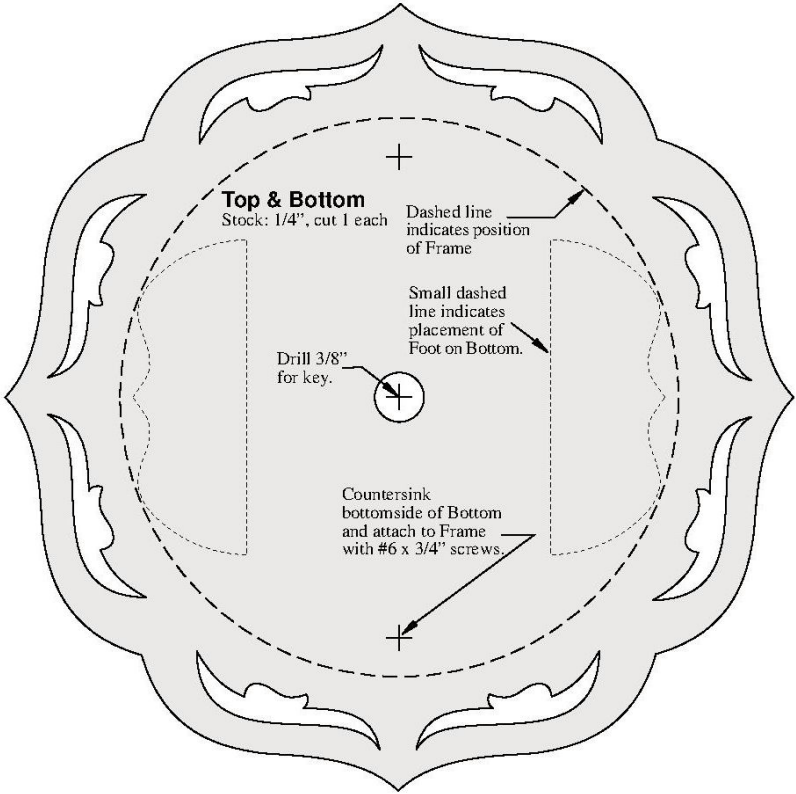 
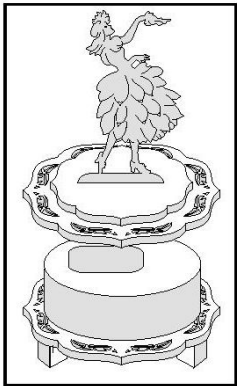 



Figure
Stock: 1/4"

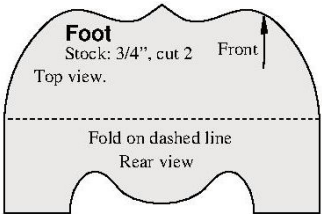 

Project #35-58

Turntable

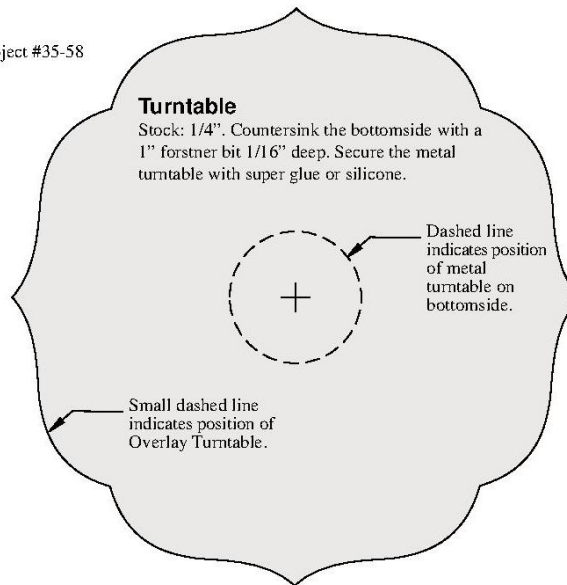 Stock: 1/4". Countersink the bottomside with a 1" forstner bit 1/16" deep. Secure the metal turntable with super glue or silicone.




Frame

Stock: 1 1/2"


Circle indicates position of key and turntable shafts.



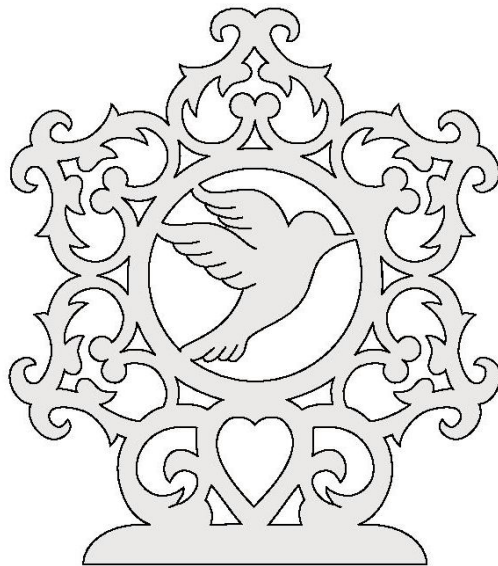 
Cut out for music box




Bird & Hearts
Stock: 3/8"

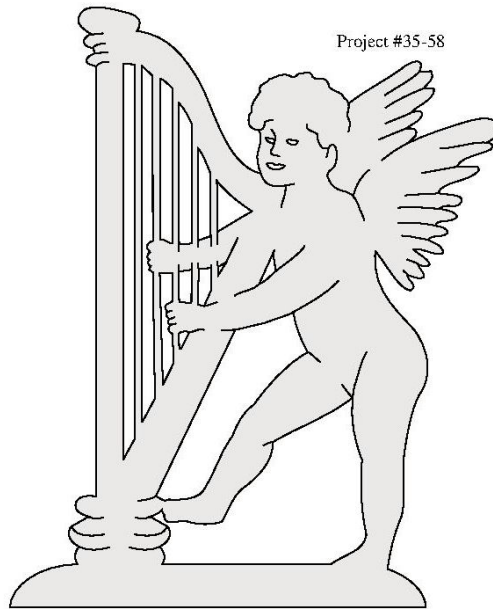 

Cupid & Harp
Stock: 3/8"

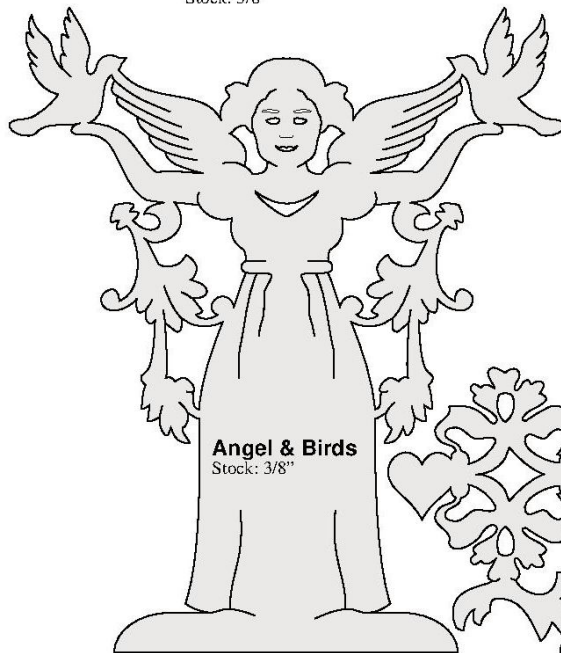 

Angel & Birds
Stock: 3/8"

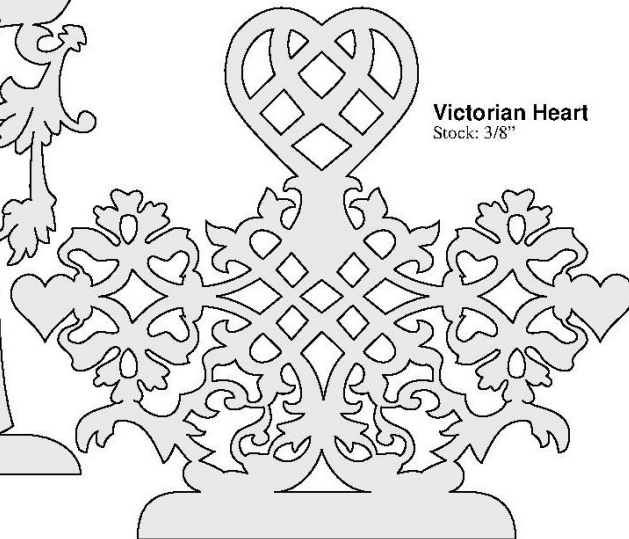 

Victorian Heart
Stock: 3/8"

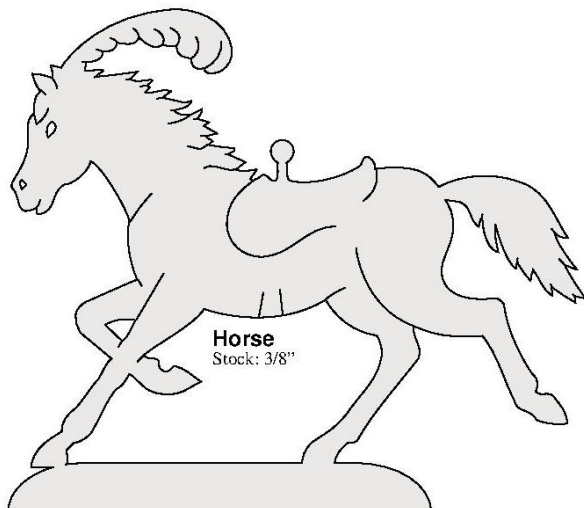 
Project #35-58




Gal
Stock: 3/8"




Roses
Stock: 3/8"




Horse
Stock: 3/8"

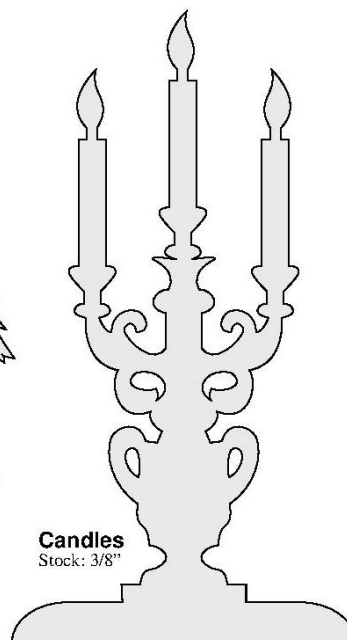 

Candles
Stock: 3/8"

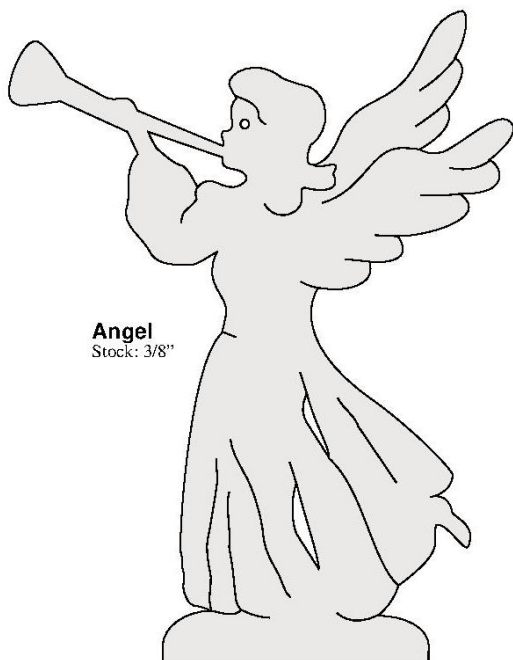 

Angel
Stock: 3/8"

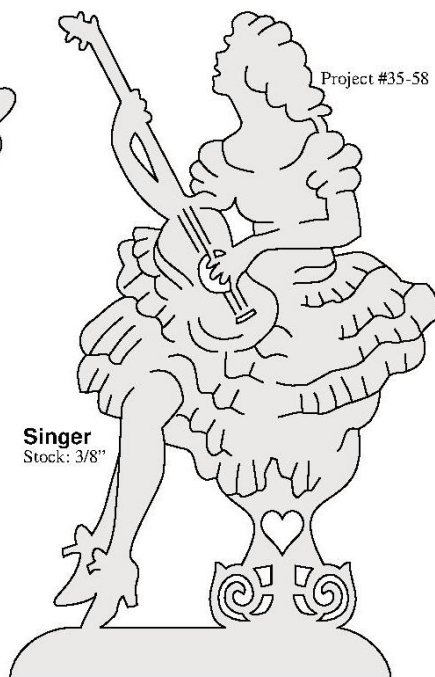 


Project #35-58


Singer
Stock: 3/8"



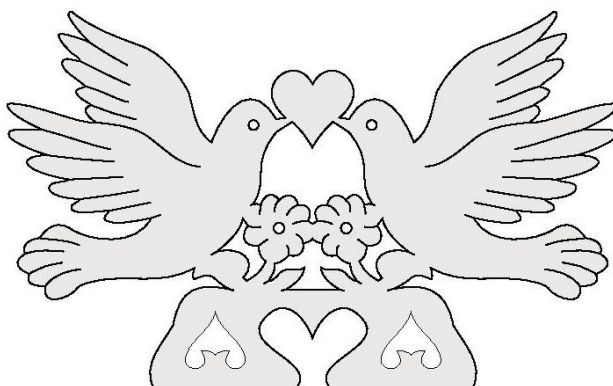 
Flowers
Stock: 3/8"




Love Birds
Stock: 3/8"

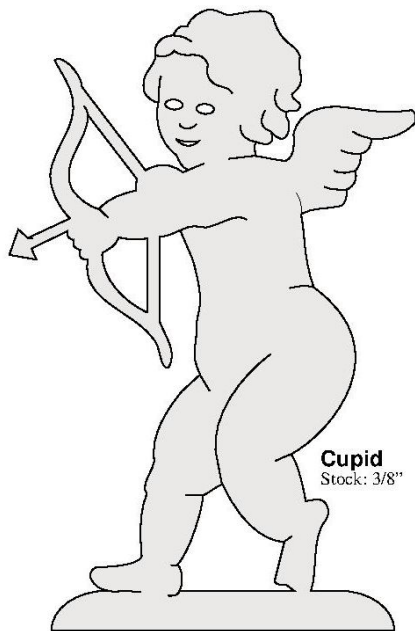 


Cupid
Stock: 3/8"

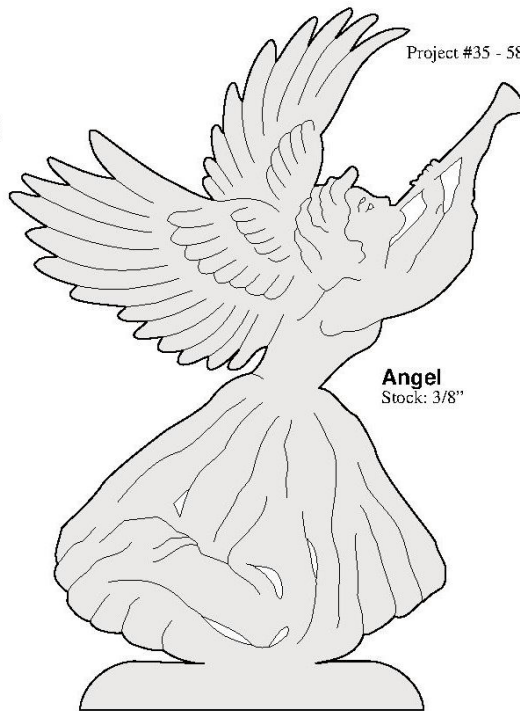 

Angel
Stock: 3/8"

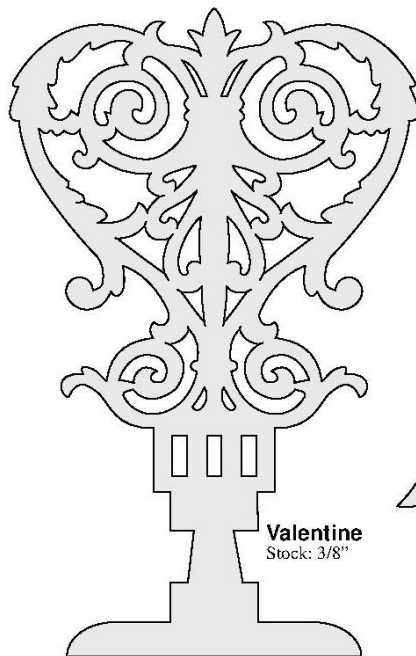 


Valentine
Stock: 3/8"

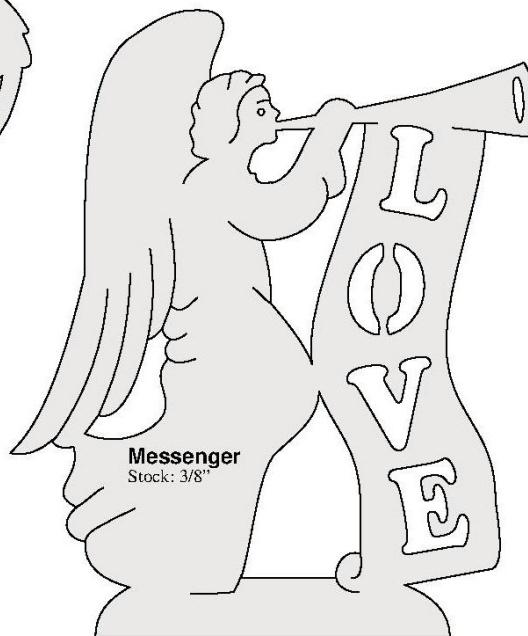 

Messenger
Stock: 3/8"

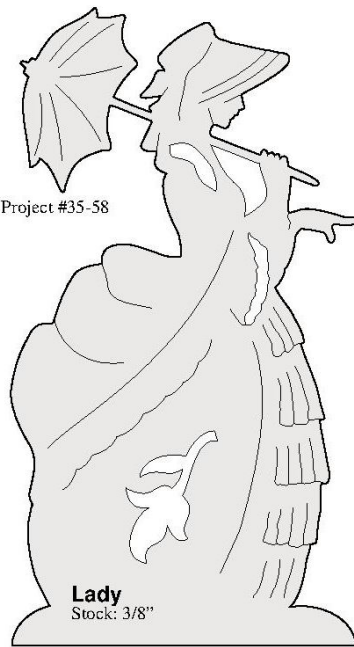 
Project #35-58




Lady
Stock: 3/8"



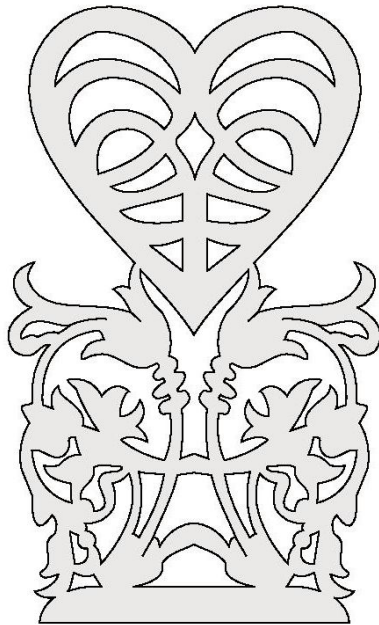 Gentleman
Stock: 3/8"



Flowerly Heart
Stock: 3/8"

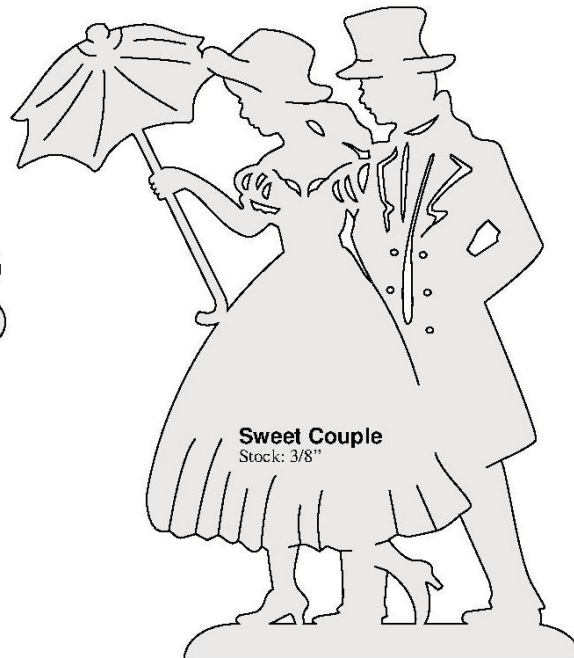 

Sweet Couple
Stock: 3/8"