





Sanding an Arc

Sanding a curved surface with a square sanding block is like trying to fit a square peg into a round hole. So whenever I have to sand an arc smooth, I use the waste piece from the arc cutout to make a curved sanding block.

To do this, simply cut a small section from the middle of the waste piece (as shown at right). Then apply a piece of self-adhesive sandpaper to the curved edge of the block (see Detail illustration). The curve will match the arc perfectly.

Have a nice weekend,

Kevin Shoesmith
Online Editor, Workbench

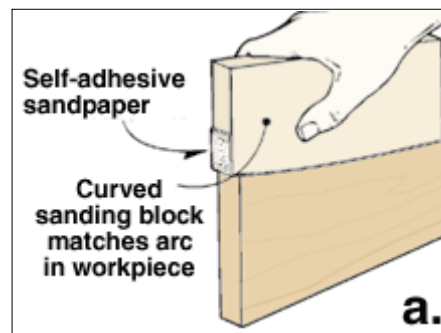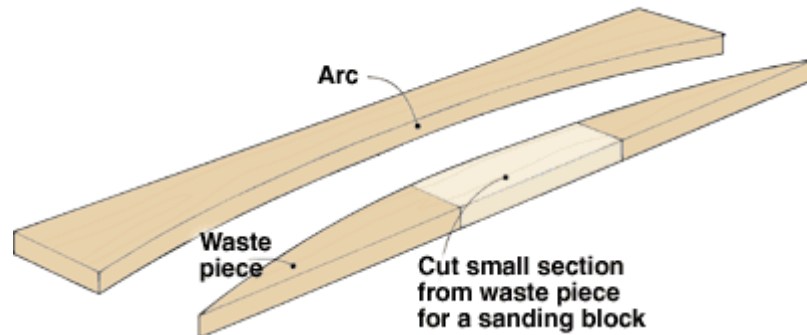

Workbench on CD!
[Find out more](#)

More Tips & Techniques

- ▶ [Index of Tips byEmail](#)
- ▶ [101 Tips & Techniques](#)

WoodNet

© August HomePublishing Co. All Rights Reserved.

Your Email Account

- ▶ [Update Your EmailAddress](#)
- ▶ [Unsubscribe](#)
- ▶ [Privacy Policy](#)

Subscriber Links

- ▶ [Email This Page To AFriend](#)
- ▶ [ContactUs](#)