



SIMPLE WOODWORKING: TOOL TOTE



PARTS

Bottom (1) - 3/4 x 11 1/4 x 18

Sides (2) - 3/4 x 3 1/2 x 18

Ends (2) - 3/4 x 5 1/2 x 12 3/4

Handle (1) - 3/4 x 7 1/4 x 18

LUMBER

1 - 1 x 4 x 4

1 - 1 x 6 x 4

1 - 1 x 12 x 4

HARDWARE/SUPPLIES

1 1/4" pocket hole screws

pocket hole plugs


wood glue

TOOLS


table saw, miter saw, jig saw, drill/driver, Kreg pocket hole jig, clamps, 1-inch drill bit

NOTE


Use the layouts below as guides for marking, cutting, and drilling pocket holes in the Bottom, Sides, and Ends. Be sure to set your Kreg Pocket Hole Jig and drill bit for drilling into 3/4-inch stock.

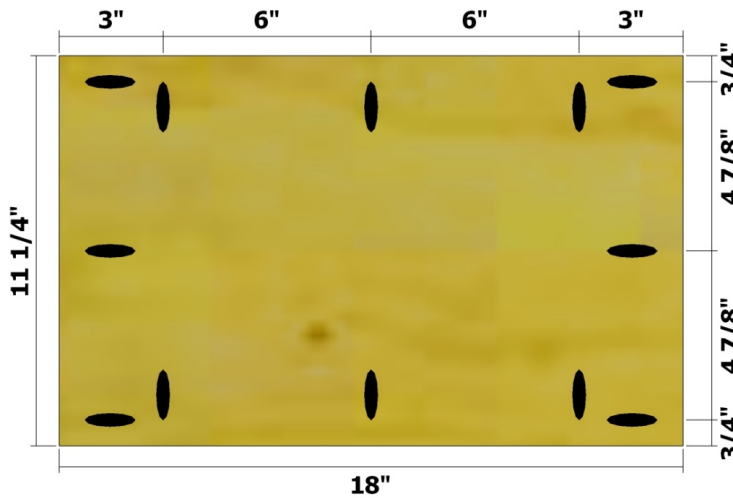


Bottom

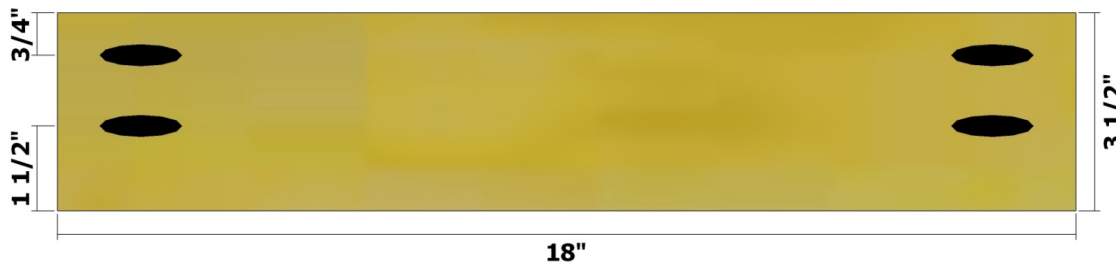

Side

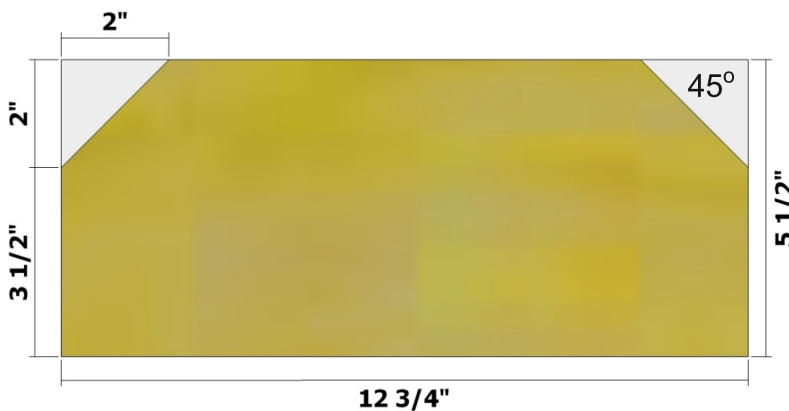



End

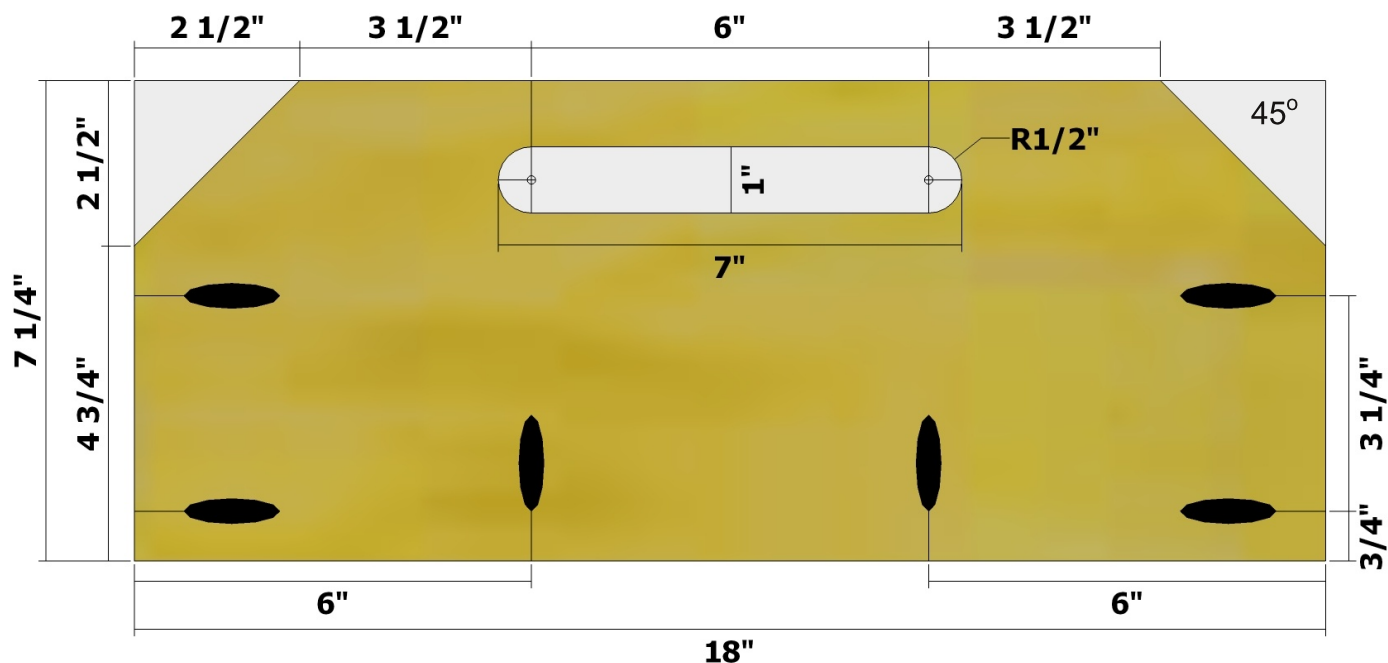*Handle***NOTE**

Use the layout above as a guide for marking, cutting, and drilling pocket holes in the Handle. Be sure to set your pocket hole jig and drill bit for 3/4-inch stock. To cut out the handle opening, start by drilling 1-inch holes at the marks indicated, then cut out the remainder using a jig saw.


**NOTE**

Use the exploded views as guides for attaching the parts using glue and 1 1/4-inch pocket hole screws. Attach the Bottom to the Sides, the Bottom and Sides to the Ends, and the Handle to the Ends and Bottom. Finish by inserting pocket hole plugs in the pocket holes, sanding, and applying the desired finish.

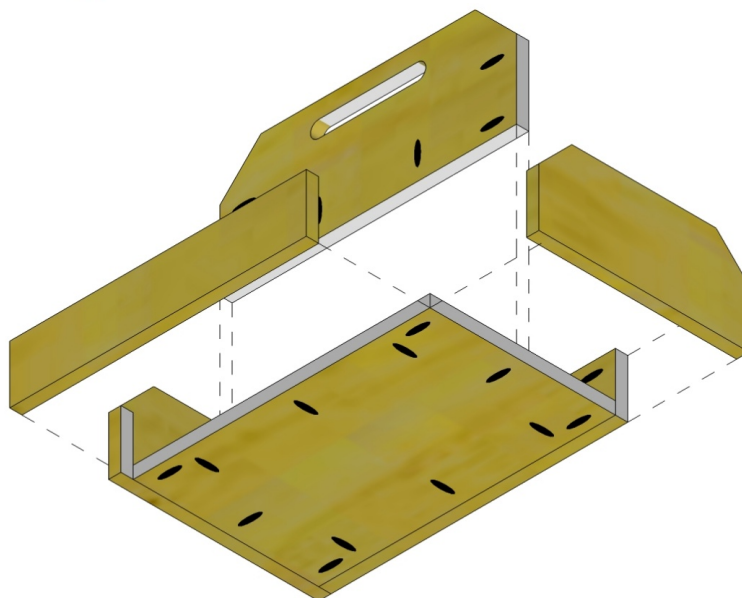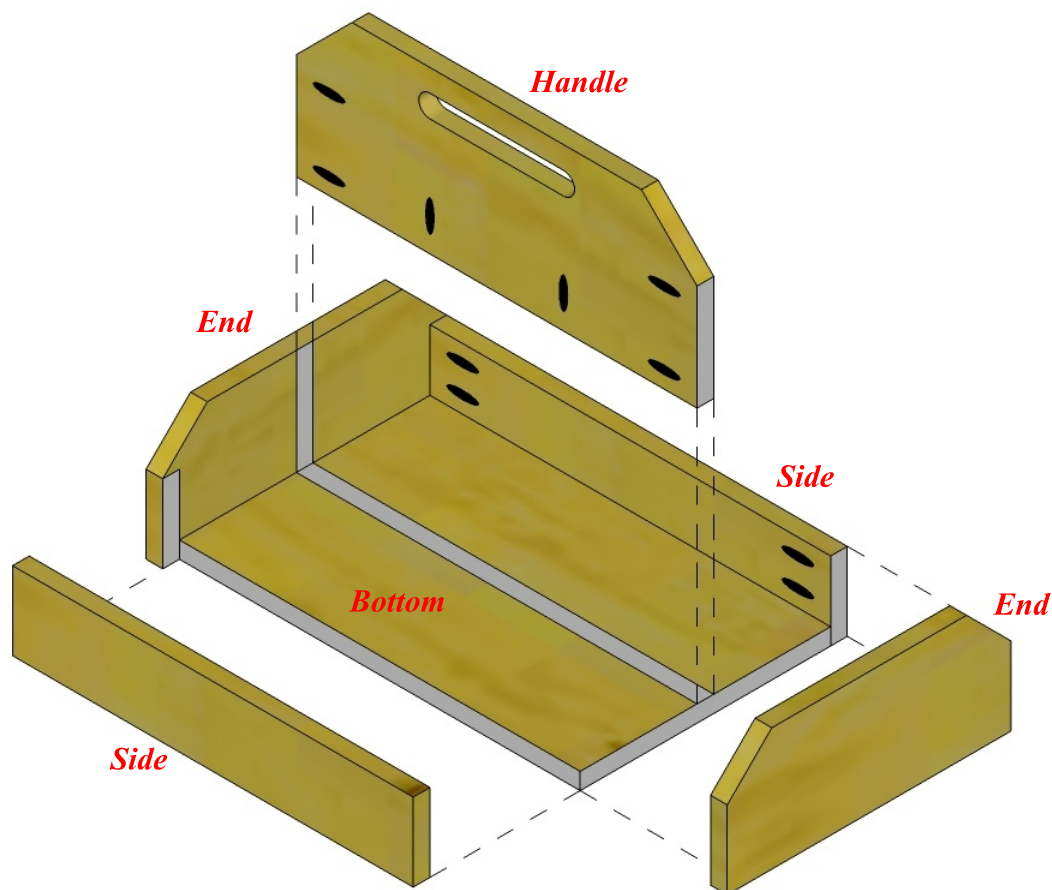




CUTTING DIAGRAM

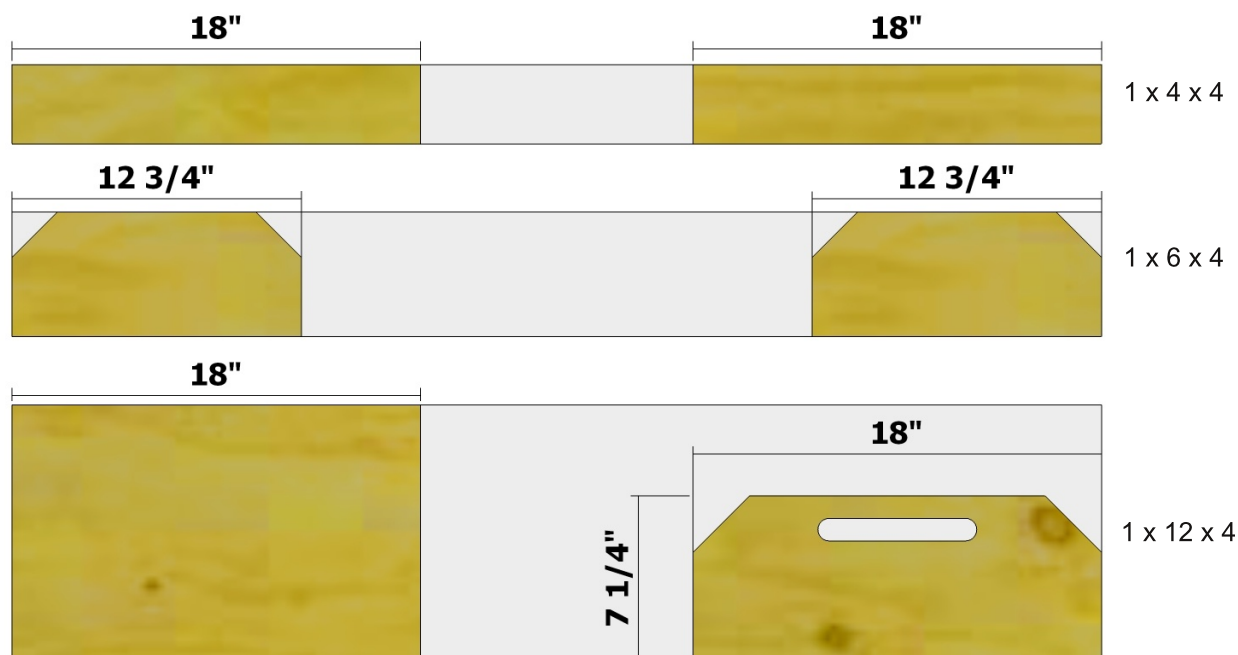

PARTS

Bottom (1) - 3/4 x 11 1/4 x 18
 Sides (2) - 3/4 x 3 1/2 x 18
 Ends (2) - 3/4 x 5 1/2 x 12 3/4
 Handle (1) - 3/4 x 7 1/4 x 18

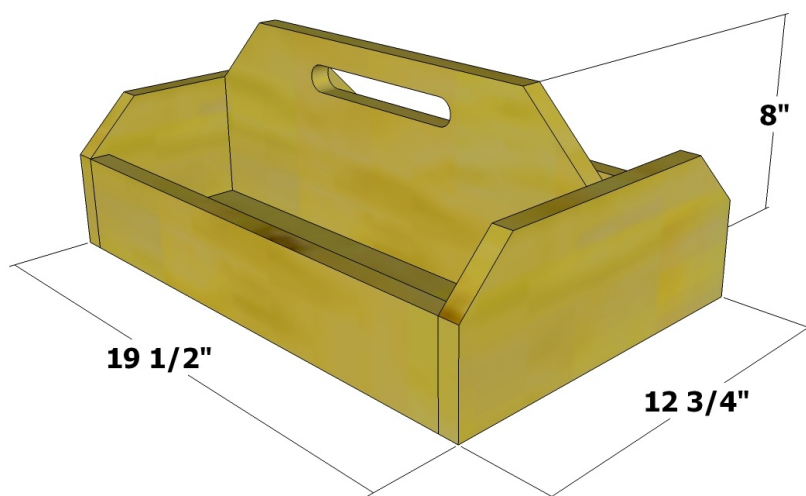

HEADS UP

Follow ALL SAFETY GUIDELINES AND RECOMMENDATIONS provided by the manufacturers of your tools, and any chemicals such as glue and finishes you use in this project. YOU are responsible for your safety, so use common sense when working in the shop!