



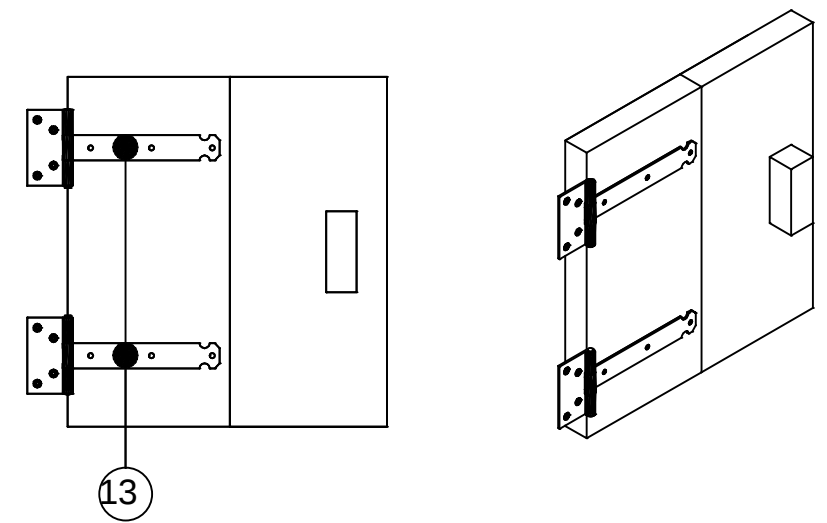

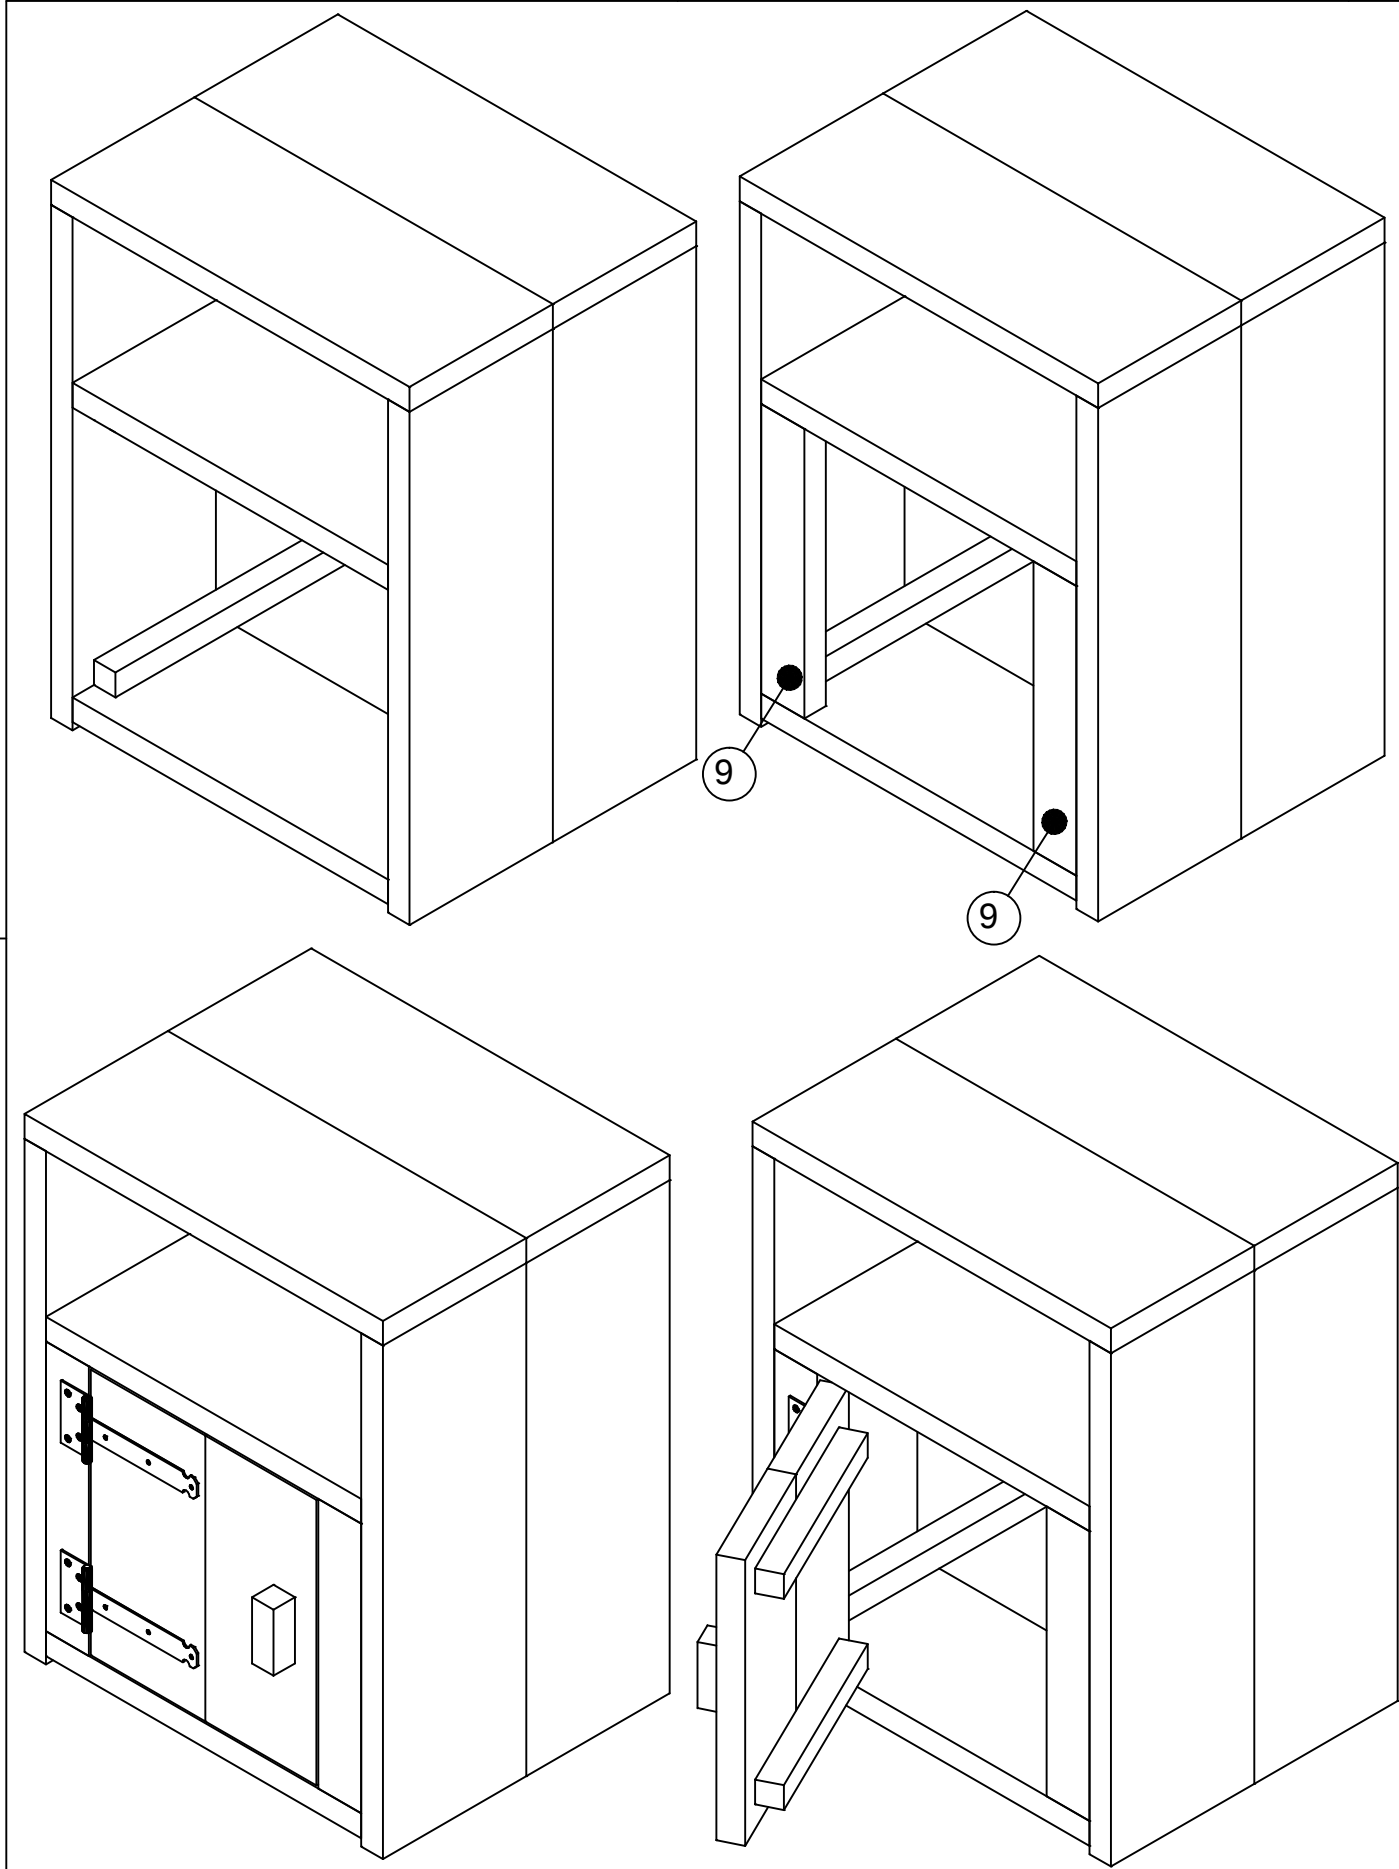

Hengens aanbrengen aan deurtje

Diepte	Hoogte	Breedte	Item	Aantal	Materiaal	Dikte	Breedte	Lengte		
400	450	500	1	4	Steigerhout	30	200	420		
Maat	Lengte		2	2	Steigerhout	30	200	440		
(a)	420		3	2	Steigerhout	30	200	500		
(b)	120		4	2	Steigerhout	30	170	440		
(c)	260		5	1	Steigerhout	30	155	145		
			6	1	Steigerhout	30	165	145		
			7	2	Steigerhout	30	200	410		
			8	1	Steigerhout	30	40	410		
			9	2	Steigerhout	30	60	150		
			10	4	Steigerhout	30	30	340		
			11	2	Steigerhout	30	30	260		
			12	1	Steigerhout	30	30	80		
			13	2	Hengelen L=150					
			14	RVS schroeven 5x50 voorboren						
			15	RVS schroeven 4x25 voorboren						