
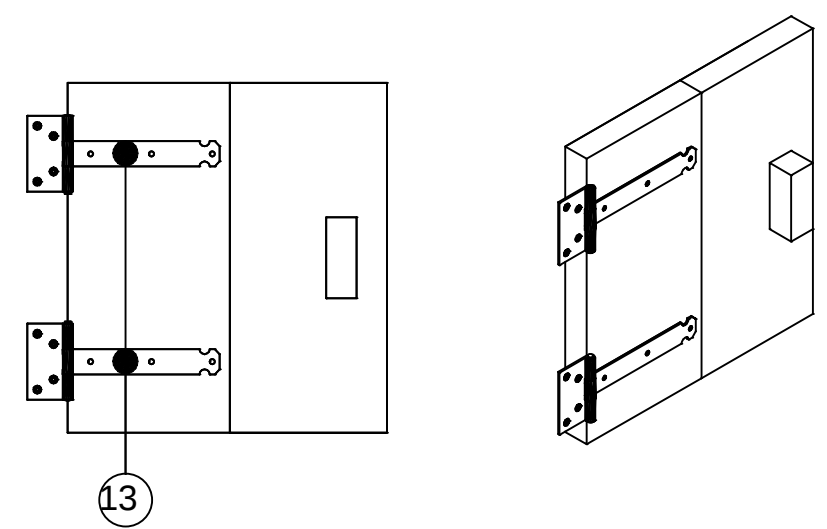


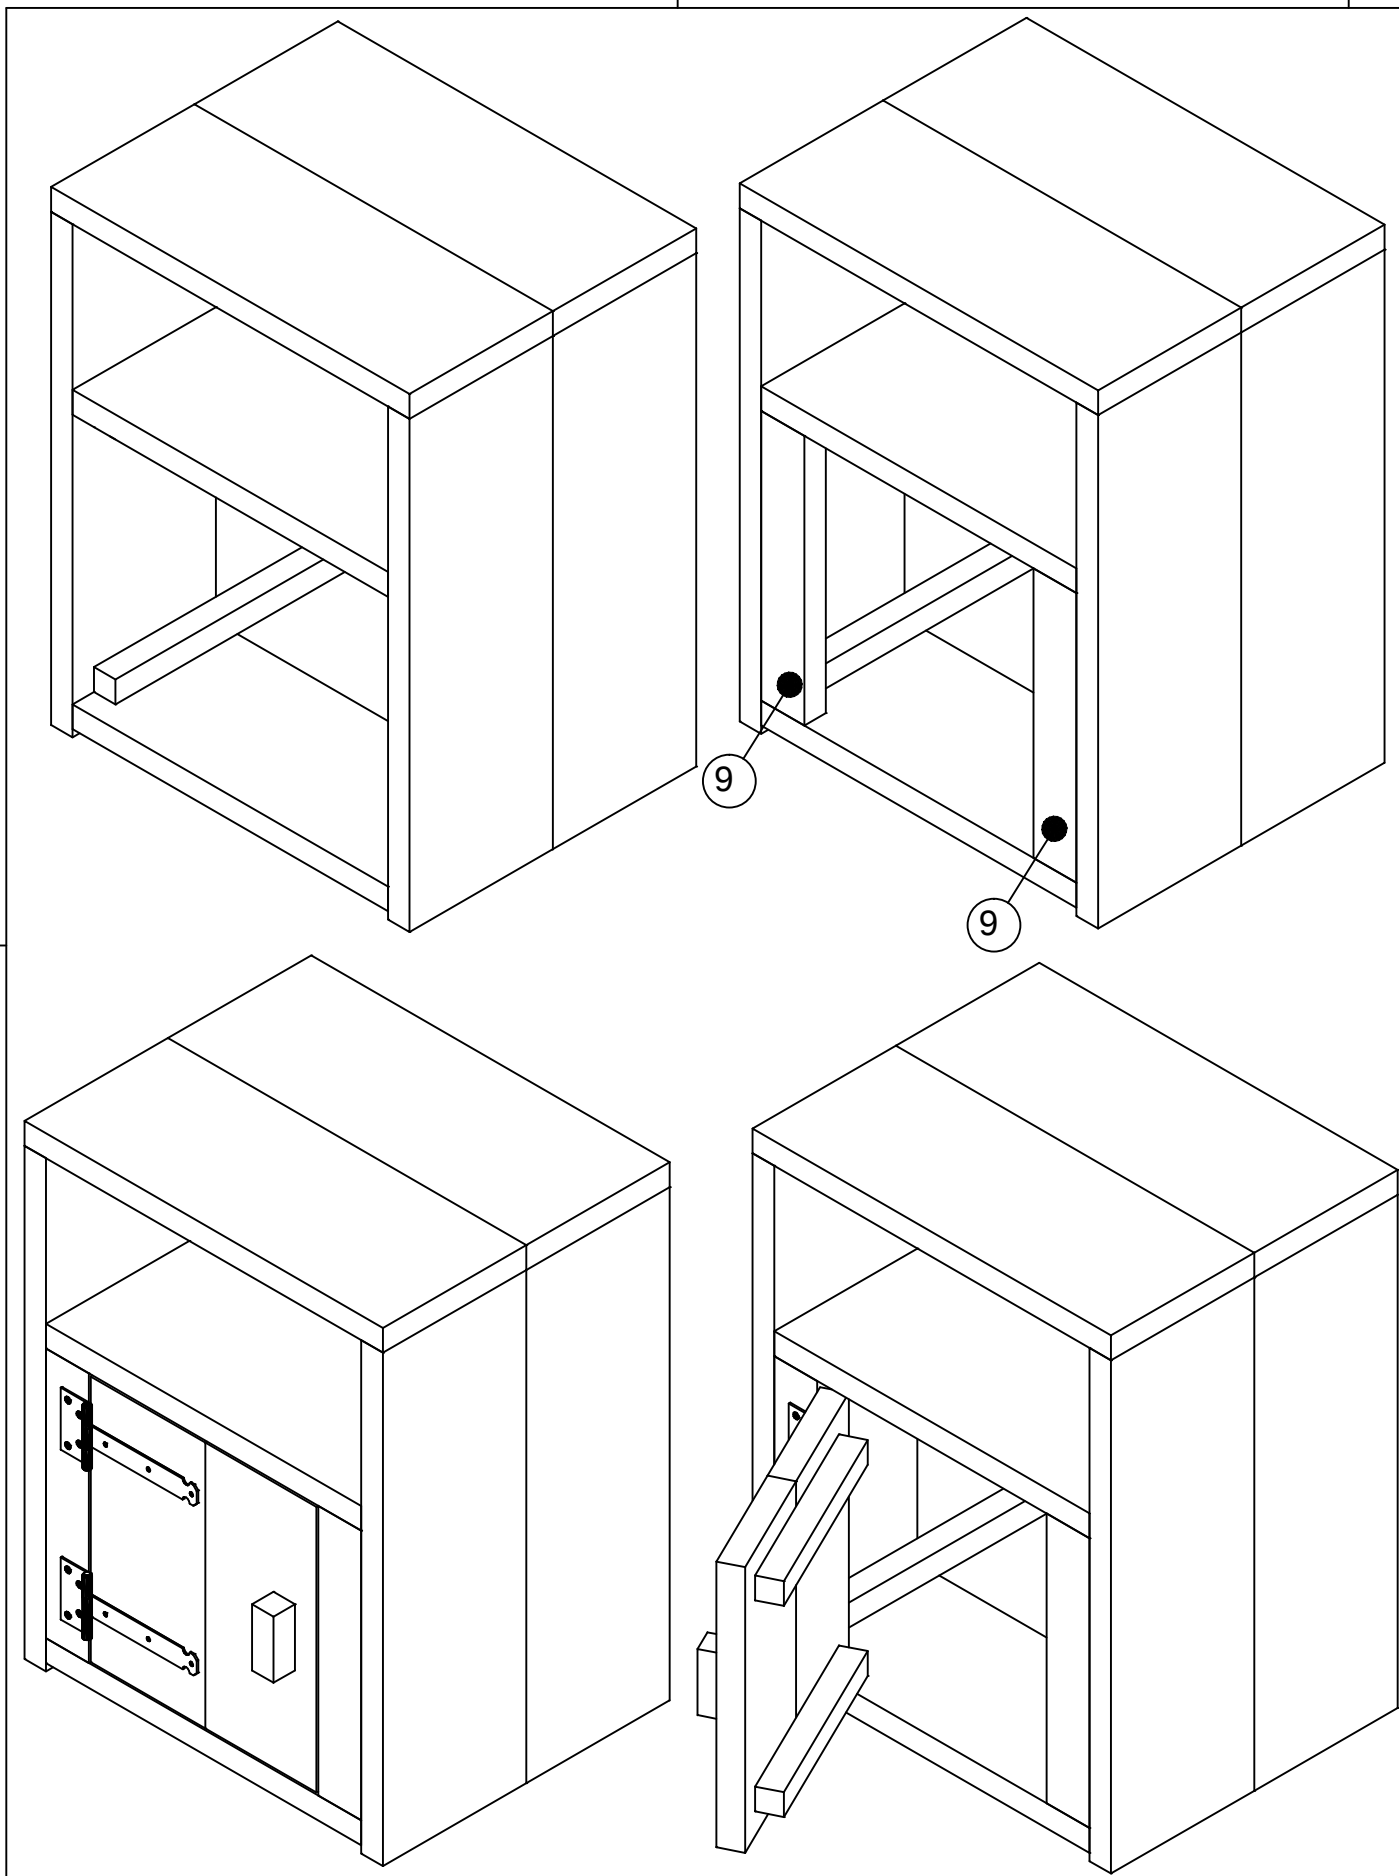

Hengens aanbrengen aan deurtje

Diepte	Hoogte	Breedte	Item	Aantal	Materiaal	Dikte	Breedte	Lengte		
400	600	600	1	4	Steigerhout	30	200	570		
Maat	Lengte		2	2	Steigerhout	30	200	540		
(a)	570		3	2	Steigerhout	30	200	600		
(b)	270		4	2	Steigerhout	30	170	540		
(c)	260		5	1	Steigerhout	30	175	295		
			6	1	Steigerhout	30	185	295		
			7	2	Steigerhout	30	200	560		
			8	1	Steigerhout	30	140	560		
			9	2	Steigerhout	30	90	300		
			10	4	Steigerhout	30	30	340		
			11	2	Steigerhout	30	30	300		
			12	1	Steigerhout	30	30	80		
			13	2	Hengens L=150					
			14	RVS schroeven 5x50 voorboren						
			15	RVS schroeven 4x25 voorboren						