

Making Construction Vehicles for Kids

Complete Plans and Assembly Drawings for Eight Toys that Really Move

Digital Version
on CD



• Full-size Plans • Parts Lists • Great Gift Ideas

by Luc St-Amour

Making Construction Vehicles For Kids

By Luc St-Amour



**Fox
Chapel Publishing Co. Inc.**

1970 Broad Street • East Petersburg, PA 17520 • www.carvingworld.com

Table of Contents

Introduction.....	1
How to use this book.....	2
Recommended Tools	3
Helpful Hints.....	4
Loader.....	8
Dozer	22
Dozer Loader	33
Excavator	46
Grader.....	61
Skidder.....	74
Grapple Skidder	86
Backhoe	97

Introduction

This book is for all those who enjoy building wooden models. In this edition you will learn to build fascinating construction vehicles. Our main objective in creating this book was to help you attain the best possible results in reproducing these vehicles as easily and simply as possible. Building them require patience, know-how and, most importantly, the proper tools.

You will note that special care has been taken to provide you with as many explanations and instructions as possible. All patterns are full size and easily transferred onto wood. Easy-to-follow assembly drawings are also included for each model.

Please keep in mind the most important aspect of woodworking - safety!

I wish you the best of luck with your projects.

Please note: The models you can build with this book are suitable for children 5 years of age and up. If you wish to make display models with more parts and features, you can buy the book entitled *Realistic Construction Models You Can Make* by the same author.

Acknowledgments

I wish to thank all the people who have contributed to this project, especially my family and friends.

I would also like to thank the "Autodesk" company, who supplied me with the "Autocad" computer software.

I dedicate this book to all the people who are young at heart - people who still believe that dreams can come true and that everyday life is full of little joys.

Luc St-Amour

How to use this book

1. Start by reading through the book to get familiar with its contents.
2. Make the two jigs shown on page 4 and 5.
3. Use the materials list to cut all the parts required for a particular model. Label the parts with a pencil using their corresponding number (e.g. L1, L2)
4. You have been supplied with two sets of patterns for each model. The first set is found with the instructions and includes all parts. The second set can be found in the appendix and includes only those parts complicated enough to require a pattern. Using scissors, cut out the second set of patterns needed to make the model you have chosen to build.
5. Attach the pattern to the proper piece of stock.
6. Cut and sand the finished parts.
7. Mark drill holes, if required, and remove the pattern.
8. When all the parts are completed, follow the step-by-step assembly drawings to complete your model.

Recommended Tools

The following is a list of recommended tools. These power tools will give you the precision needed to make the models and will also save you a lot of time.


To make some parts you will be required to make inside cuts. The best tool for this task is the scroll saw.

For sanding purposes, you will need power sanders to save you time and give better results.


The wood needed to make these projects varies in thicknesses which are not standard. This means you will need to use a thickness planner and a bandsaw to re-saw and bring the wood to the specified thickness. (Some of you may have access to these tools at school, from friends or at a store.)

Accessories Needed


- Drill bit set (1/16" to 1/2")
- Brad point bit (1/8")
- Flat drill bit set (3/8" to 1")
- Measuring tape
- Combination square
- Sanding drum set
- Wood vice
- Assorted c-clamps
- Scriber
- Wood glue
- Wood file
- Pencil and eraser
- 12" ruler (clear recommended)
- 1/2" wide masking tape
- Compass

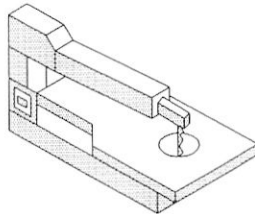


Scroll Saw

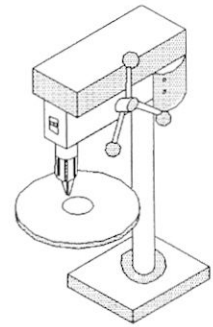


Drill Press

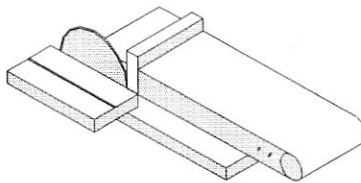


Belt/Disc Sander

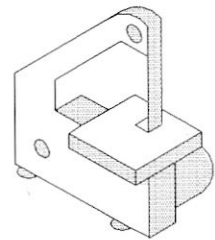

1" Belt Sander

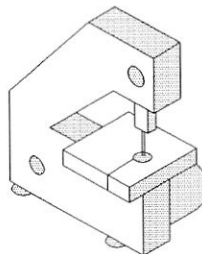

Band Saw

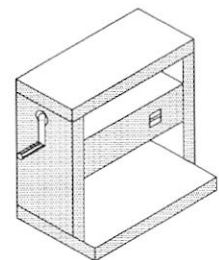

Thickness Planner

Helpful Hints

HINT #1 MAKING A CHANFER ON THE WHEELS

Make a jig to round the edges of your wheels by cutting a bolt (removing the hexagon) and assembling it, as shown. Use this jig with your drill press.

Please note: Drill a 1/4" diameter hole in your wheels to install on this jig. When you finish sanding the wheels, re-drill the 1/4" diameter holes, this time using drill bit as specified in your plans.

Materials needed to make this jig

- (1) 1/4" diameter bolt, 1 3/4" long
- (2) 1/4" int.diameter flat washers
- (1) 1/4" diameter nut

Illustration 1

View of parts necessary to make the sanding jig.



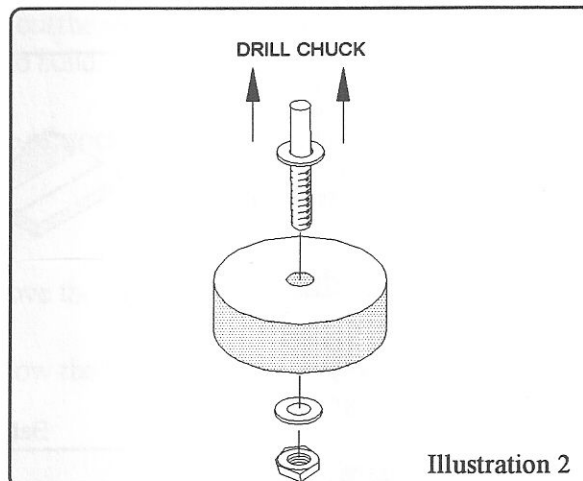


Illustration 2

Insert unthreaded end of bolt into drill press. Tighten chuck and slide on washer, wheel and 2nd washer. Secure everything using the nut.


Illustration 3

You are now ready to make the chanfer on the wheel. Start your drill press at low to medium r.p.m.s. Then, use a wood file to round the edges of your wheel. Use sandpaper to get a smooth finish.

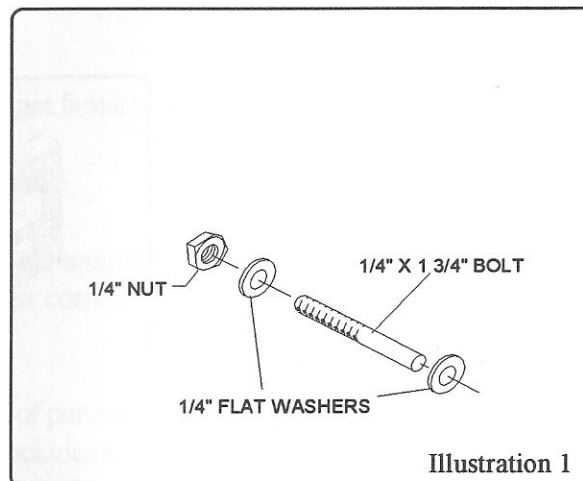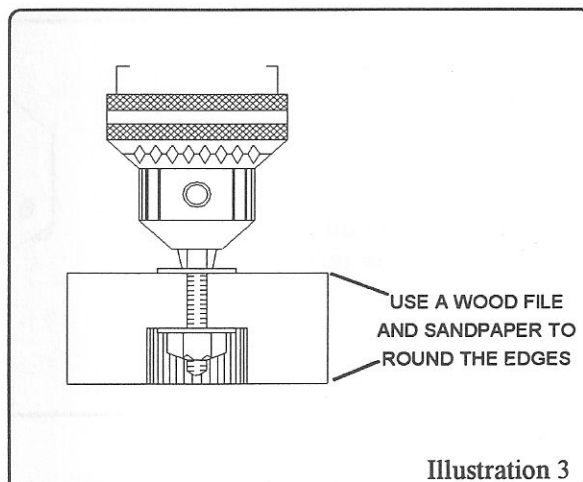


HINT # 2 HOW TO MAKE A TRACK ASSEMBLY

Step 1

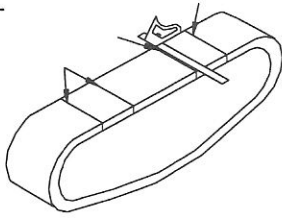


Trace four lines across surface, as shown. See hint #4.

Step 3

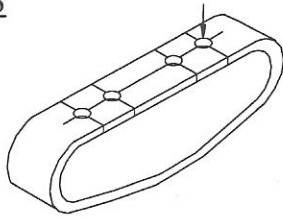


Drill four 1/2" holes on centre marks through first surface only.

Step 5

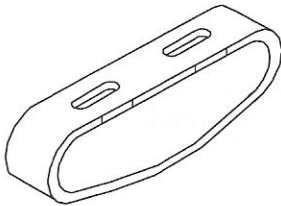


Opening properly cut.

Step 2

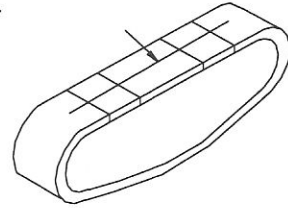

Trace a line down the centre, as shown.


Step 4

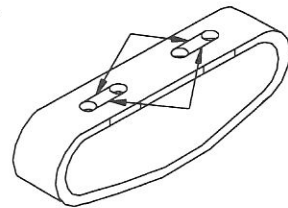

Using a sharp knife, cut lines tangent to holes, as shown.


HOW TO DRILL HOLES TO THE SPECIFIED DEPTH

To get holes to specified depth, use a piece of masking tape (1/2" wide or less). Wrap it around drill bit, as shown.

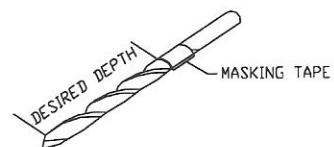


HINT # 3 MAKING A SHOVEL - THE EASY WAY

Step 1

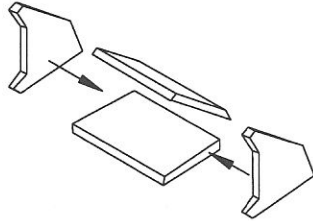


Glue shovel sides to shovel, top and bottom, as shown.

Step 2

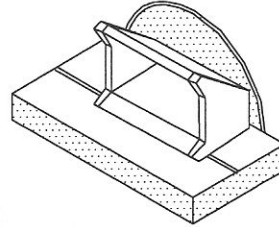


Sand the back surface to get a straight face.

Step 3

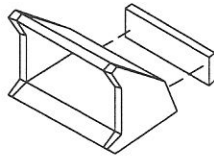

Glue on shovel back. Note: Shovel top, bottom and back are oversized to allow sanding.

Step 4

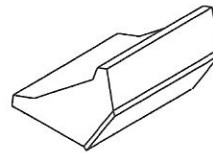


Do a final sanding to get your finished shovel.

HINT # 4 TRANSFERING THE GUIDELINES FROM PATTERNS

IMPORTANT: This section applies to these models only:

- Dozer
- Dozer Loader
- Excavator

Before removing pattern from material, transfer guidelines, as shown below.

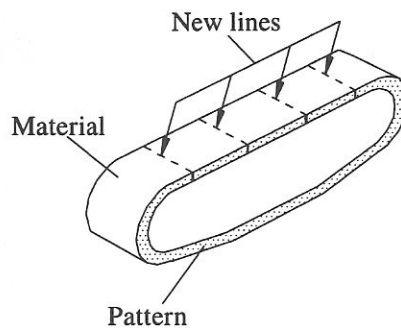

HINT #5 MAKE YOUR OWN SPECIAL DRILLING JIG

This homemade jig is used to hold the dowel in position while drilling a hole in the centre. This special jig is mainly used to make pins.

Materials needed to make this jig

- (1) 1/4" diameter rod, 3" long
- (2) 1/4" wing nut

Illustration 1

Start by cutting a 1/2" thick stock to 3" wide x 7" long. Cut out opening and drill 17/64" diameter hole, as shown.

Illustration 2

Assembly instructions

Illustration 3

Drawing showing how to use this jig.

IMPORTANT NOTE REGARDING THE FABRICA- TION OF PINS

The pins required to make the models shown in this book are made by using maple dowels.

Their diameters are not always consistent which means that you will need to sand them to get proper results.

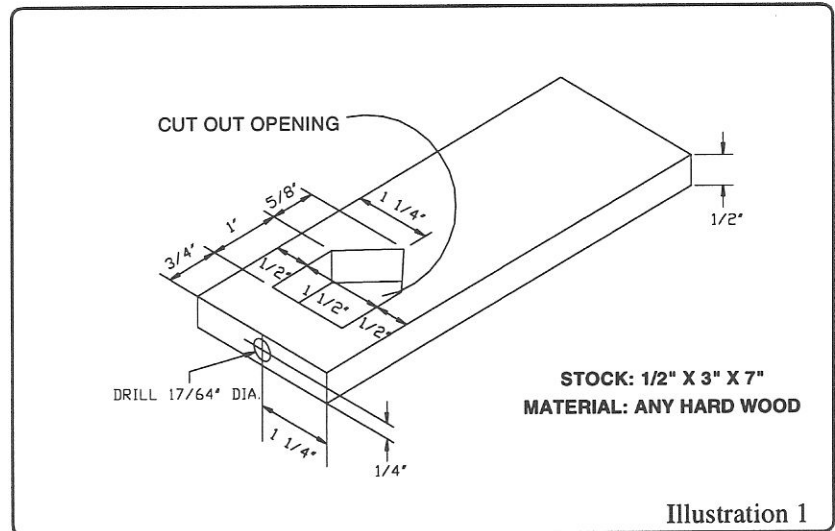


Illustration 1

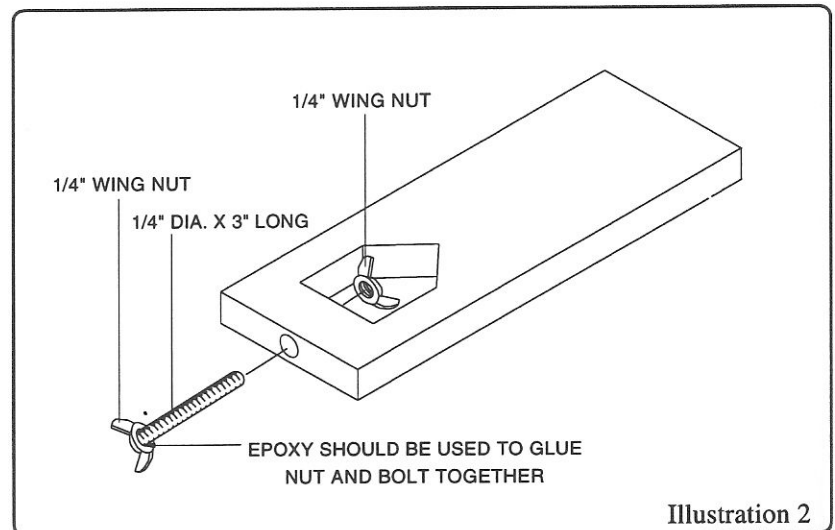


Illustration 2


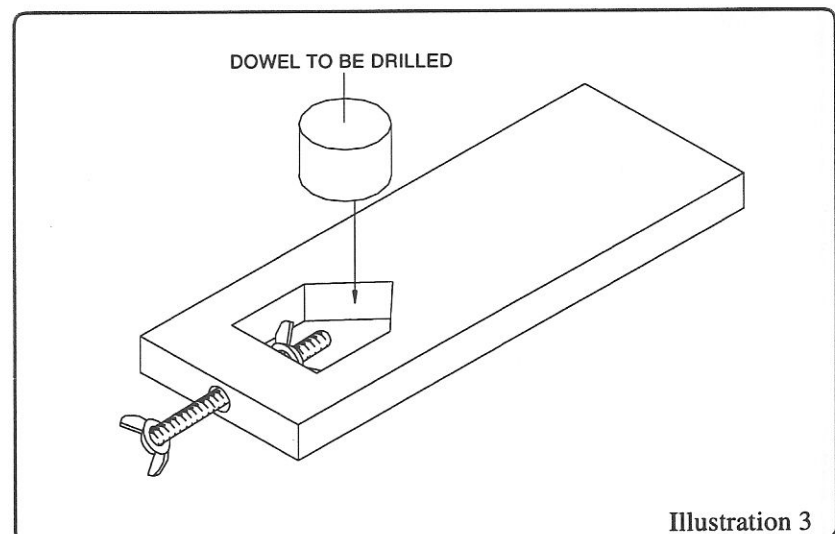


Illustration 3

LOADER

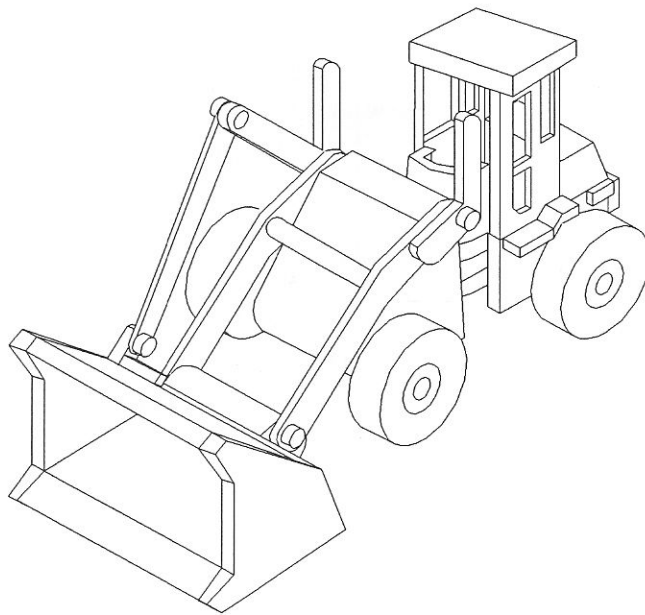


General Instructions – Loader

- 1- Start by cutting materials needed by following the list of materials, paying attention to the rough and finished size. **Identify the parts as they are cut.**

Please note: Different types of wood can be used for the various parts. It is suggested, however, that hard wood be used, since many of the parts would be much too fragile if using soft wood. We have used a combination of pine, maple and oak to give the models a nice contrast!

- 2- Remove the full size patterns found in the appendix. Cut them out, leaving approximately 1/16" all around, and place on the proper piece of wood. Patterns can be secured to wood using either spray adhesive or rubber cement. If using the latter, cut and sand the part first to finished size. If drilling is required, mark the hole by inserting a scribe or nail through the pattern into the wood. Remove the pattern before drilling.

You should have no trouble determining which surface to attach most of the patterns. Some parts, however, can be confusing since the pattern could fit on more than one surface. The drawings below indicate exactly which surface to attach the patterns for these parts:

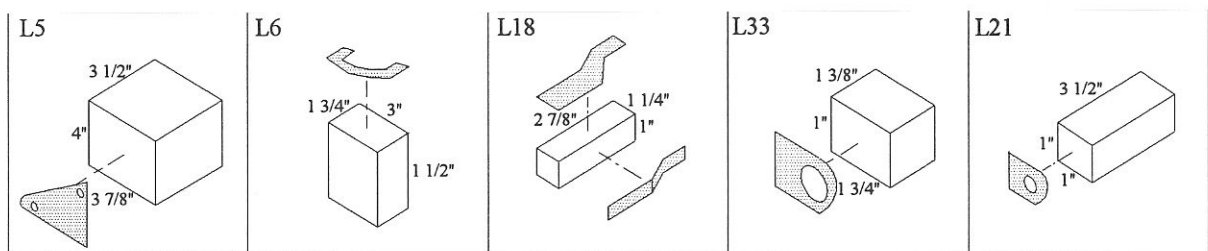

- 3- Look at the full size drawing sheets to finish parts L10 and L23.
- 4- Parts L33 and L18 will need additional cuts and details, please refer to the additional information pages, to complete these parts.
- 5- Using maple dowels, make all pins, shafts, etc.
- 6- Follow the assembly drawings to complete your model.

List of Materials - Loader

Part	T	W	L	Material	Qty.	*	Part	T	W	L	Material	Qty.	*
L1	3/8"	2 3/4"	4"	oak	1	R	L14	3/8"	3 3/8"	3 5/8"	pine	2	R
L2	3/8"	2 3/4"	4"	oak	1	R	L15	1/4"	5/8"	1 1/4"	oak	2	F
L3	3/8"	3"	4"	oak	1	R	L16	3/8"	2 3/4"	3 5/8"	pine	1	F
L4	3/8"	3 1/4"	3 7/8"	maple	1	R	L17	1/2"	1 3/4"	4 1/4"	oak	1	R
L5	4"	3 1/2"	3 7/8"	pine	1	F	L18	1"	1 1/4"	2 7/8"	pine	2	R
L6	1 1/2"	3"	1 3/4"	pine	1	R	L19	1 1/2"	3 9/16"	3 3/8"	pine	1	F
L7	3/8"	2 3/8"	6"	pine	2	R	L20	1/4"	1 1/8"	6 3/4"	maple	1	R
L8	1/4"	1 7/8"	6 1/2"	pine	1	R	L21	1"	1"	3 1/2"	maple	1	F
L9	3/4"	3"	7 5/8"	pine	2	R	L22	3/8"	2 1/8"	7 3/8"	maple	2	R
L10	3/4"	2 13/16"	6 1/8"	pine	1	F	L23	1 1/4"	3 1/8" DIA.		oak	4	F
L11	3/4"	1 1/2"	2 3/4"	maple	1	R	L24	3/8"	3 1/2"	4 5/8"	maple	1	R
L12	3/8"	2 5/8"	5 5/8"	pine	1	F	L33	1"	1 3/8"	1 3/4"	maple	1	F
L13	3/8"	3 1/2"	5 5/8"	pine	1	F							



T = Thickness
W = Width
L = Length





R = Rough size
F = Finished size




Instructions:



R= Rough sizes, the material is cut oversized so you have ample room to apply the pattern on the surface. Sanding is not required at this point.





F = Finished Size: Cut and sand parts to finished size.







Full-Sized Patterns: Set One

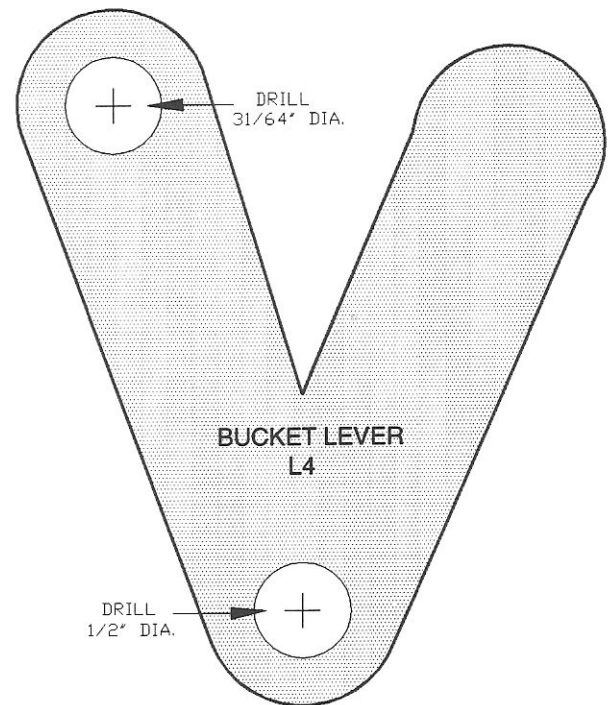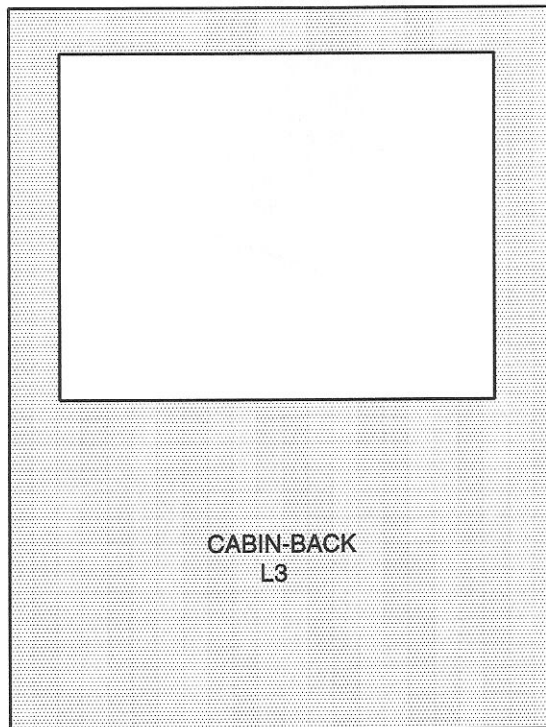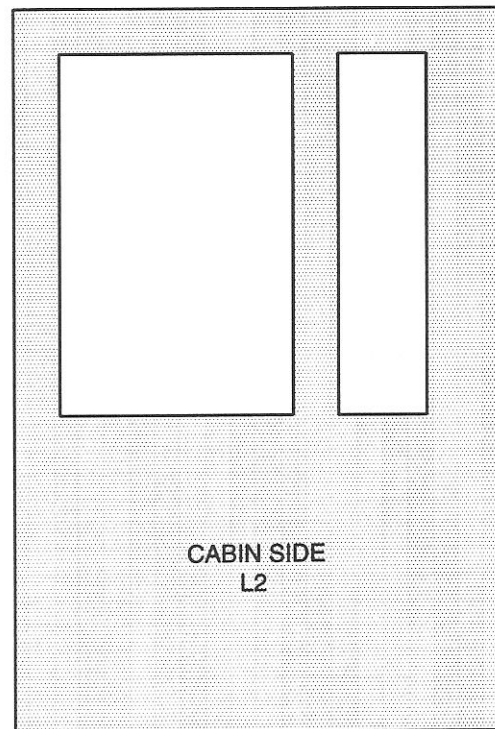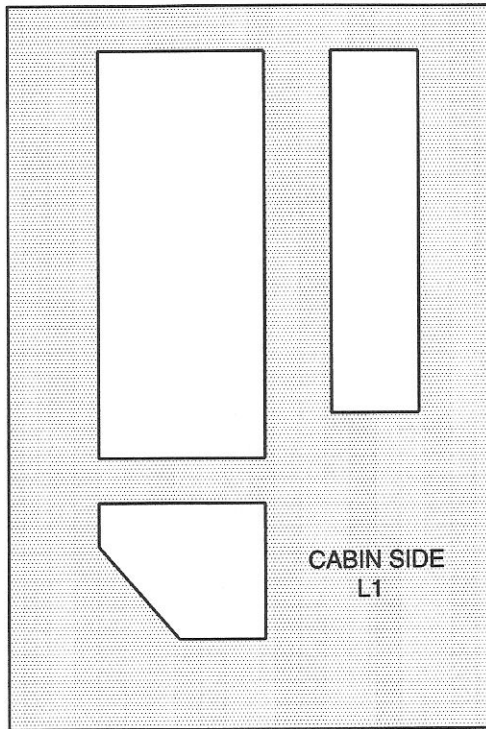


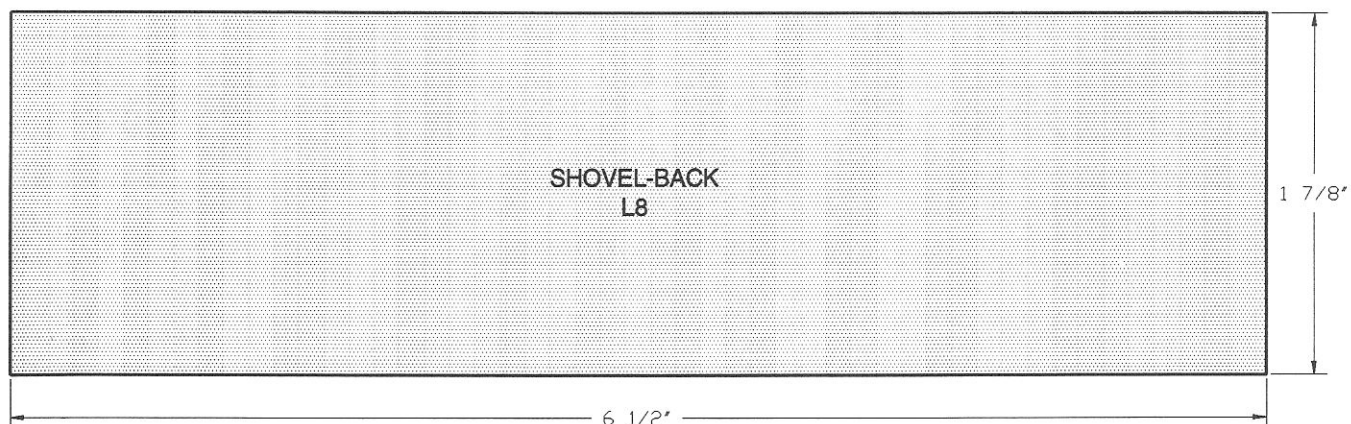
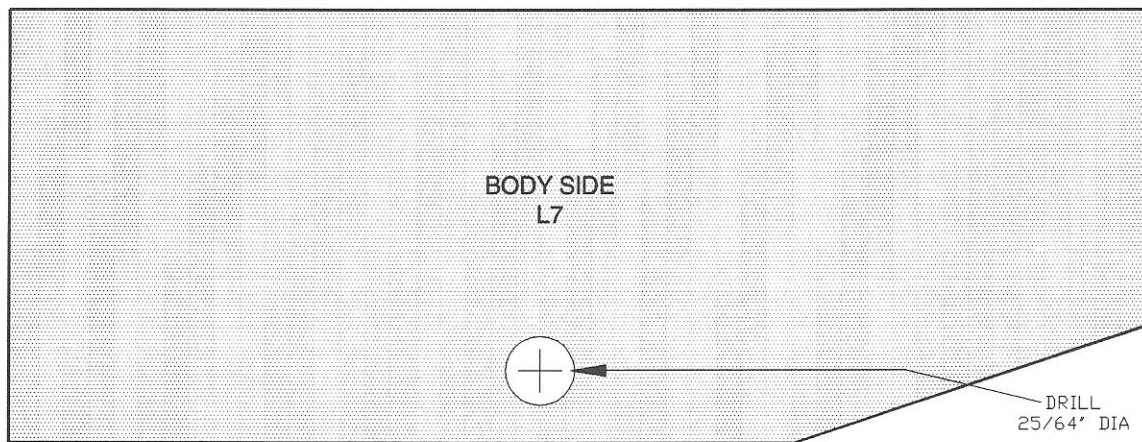
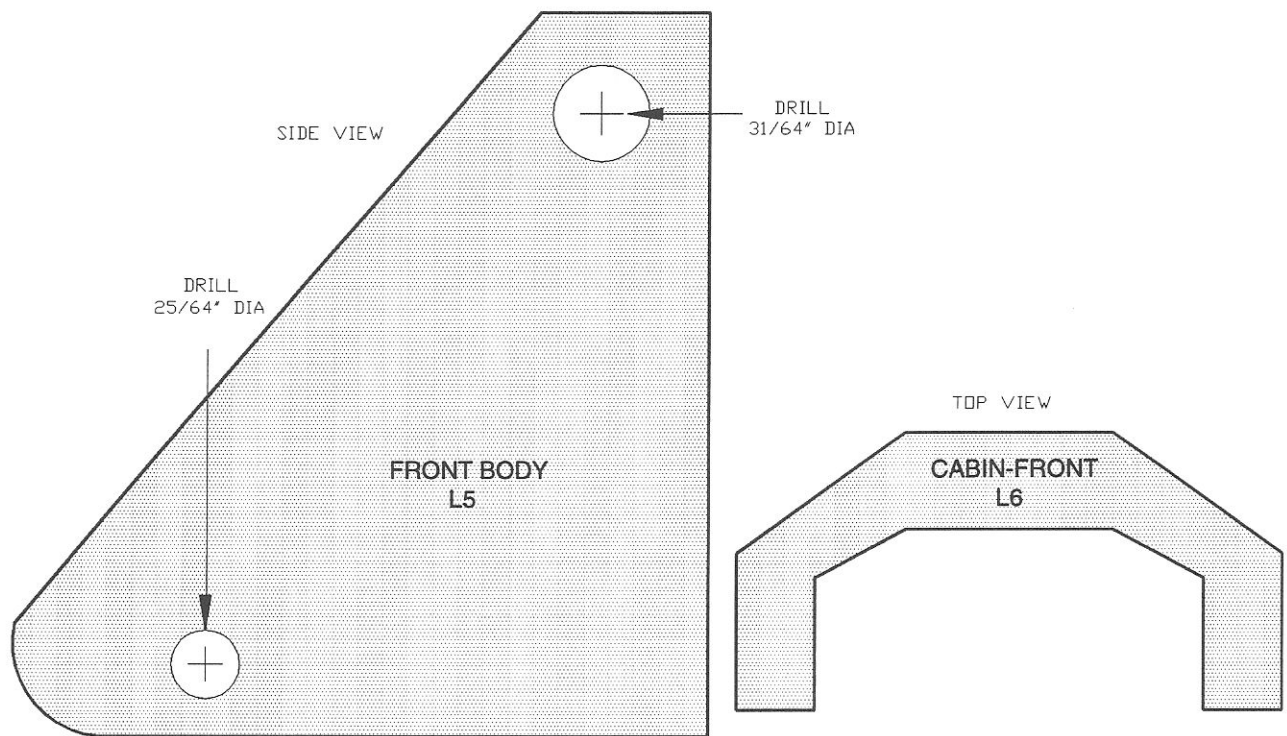


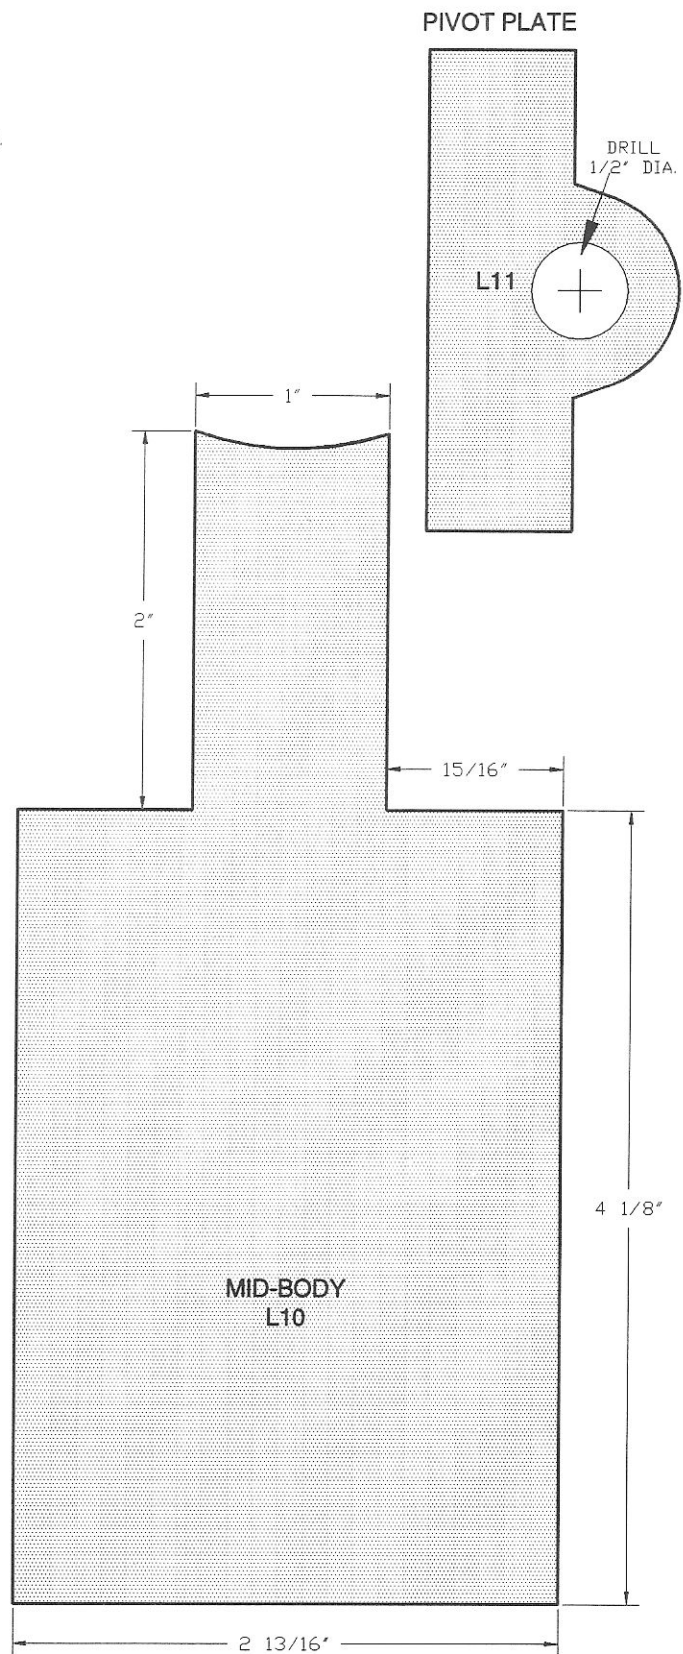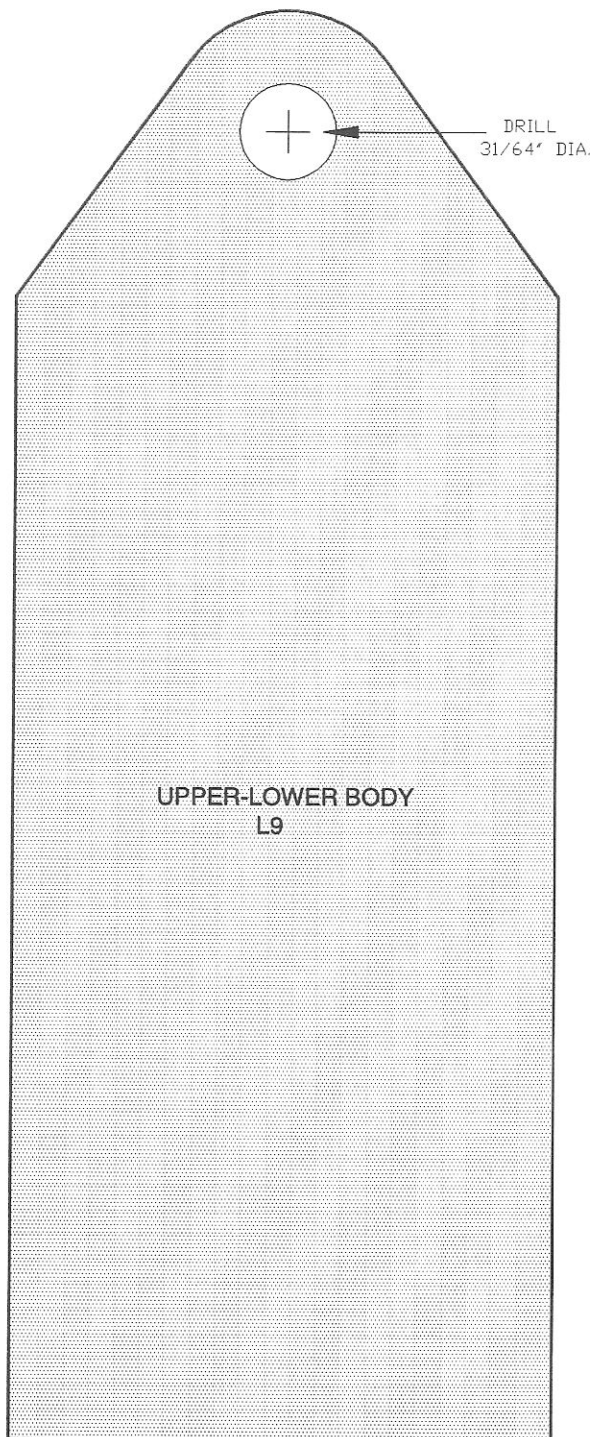

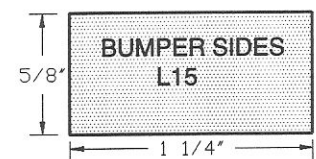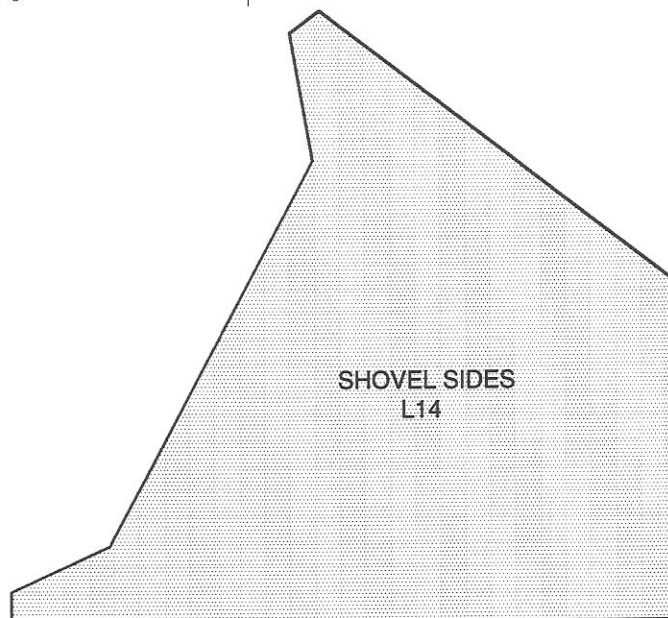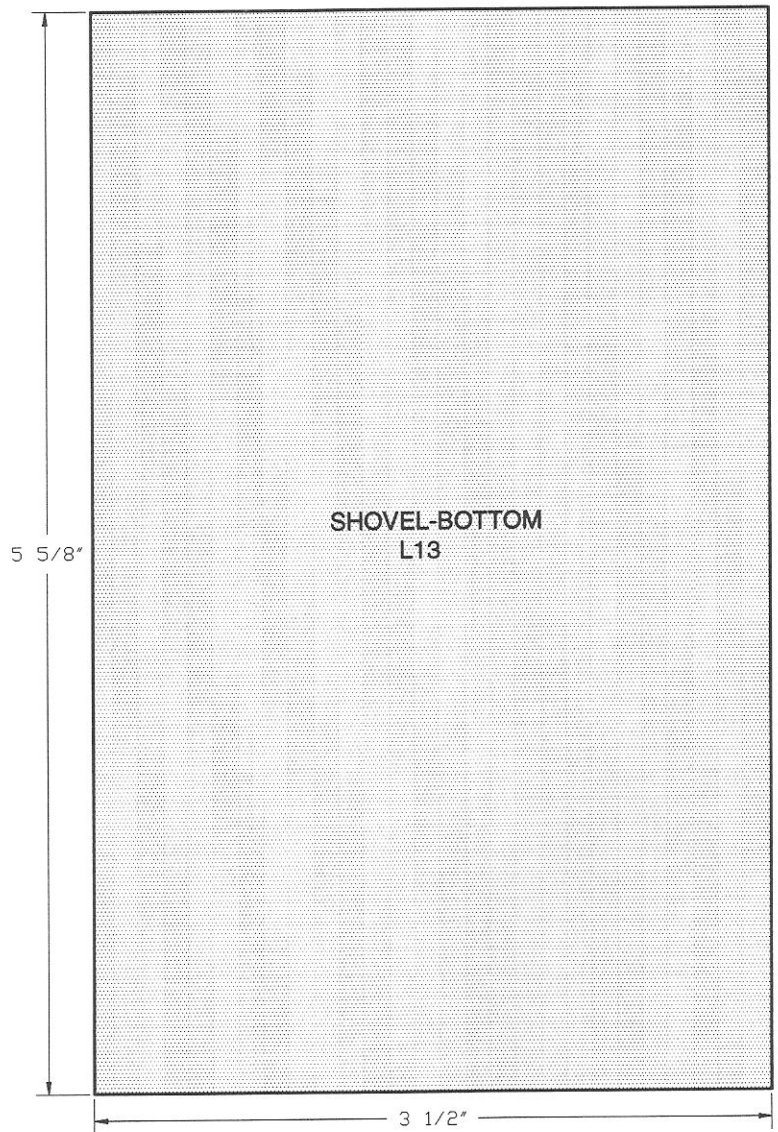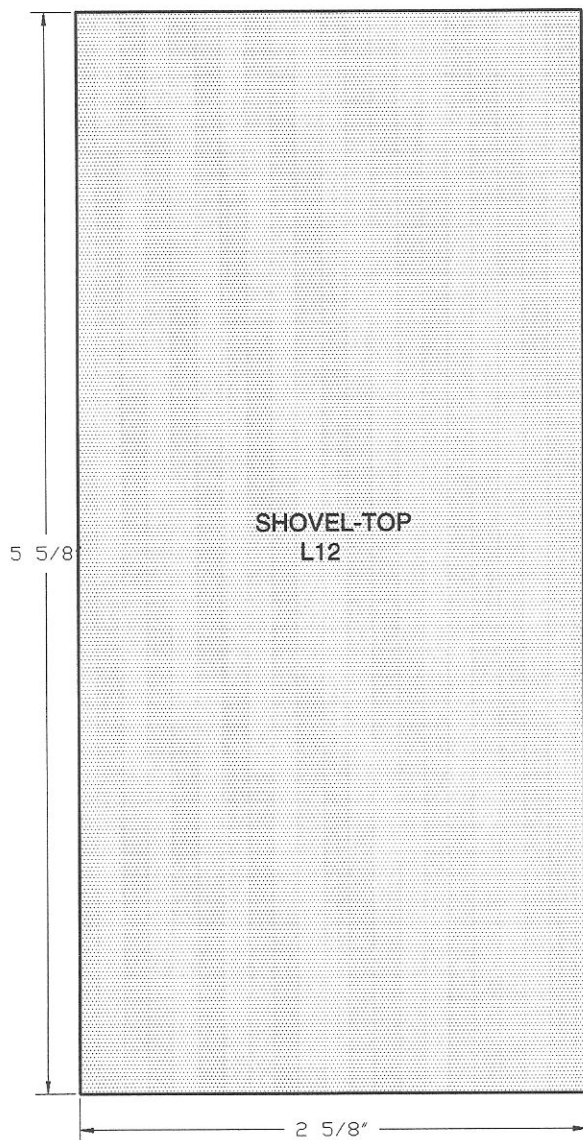

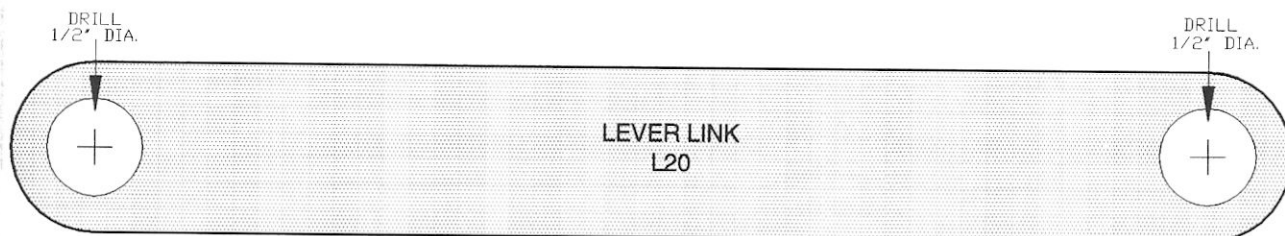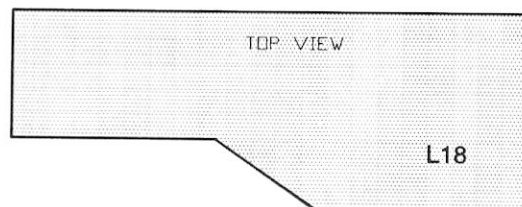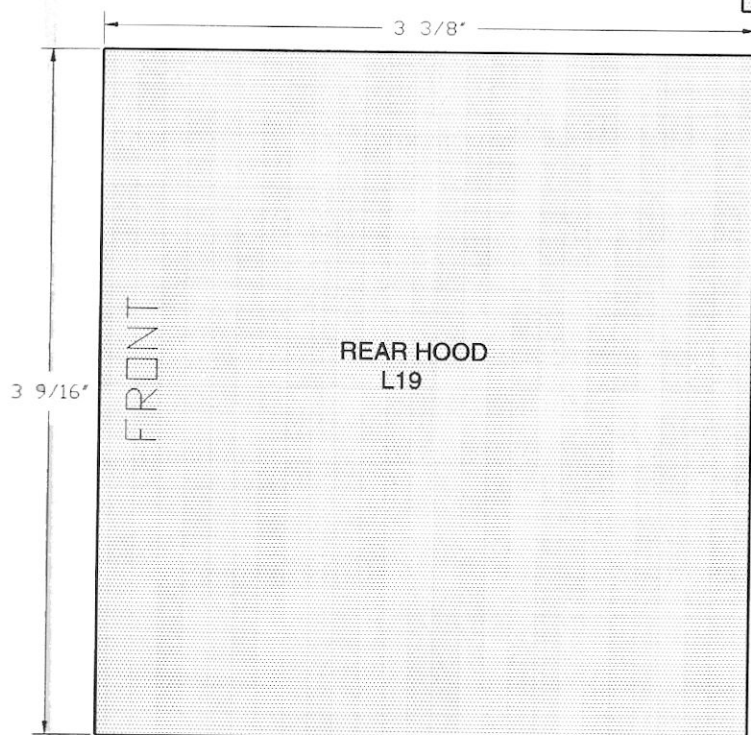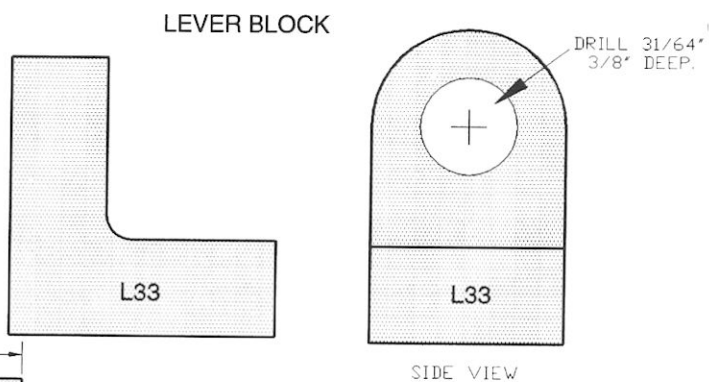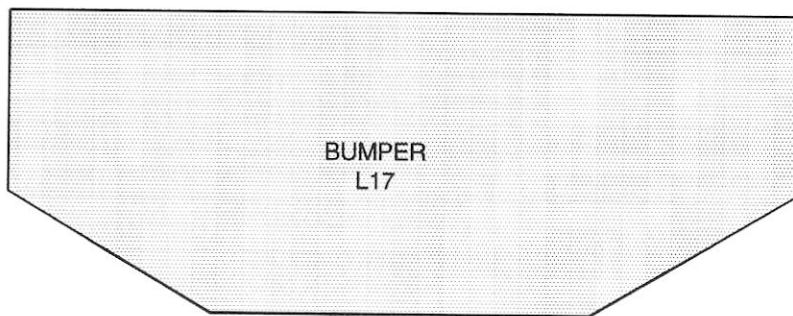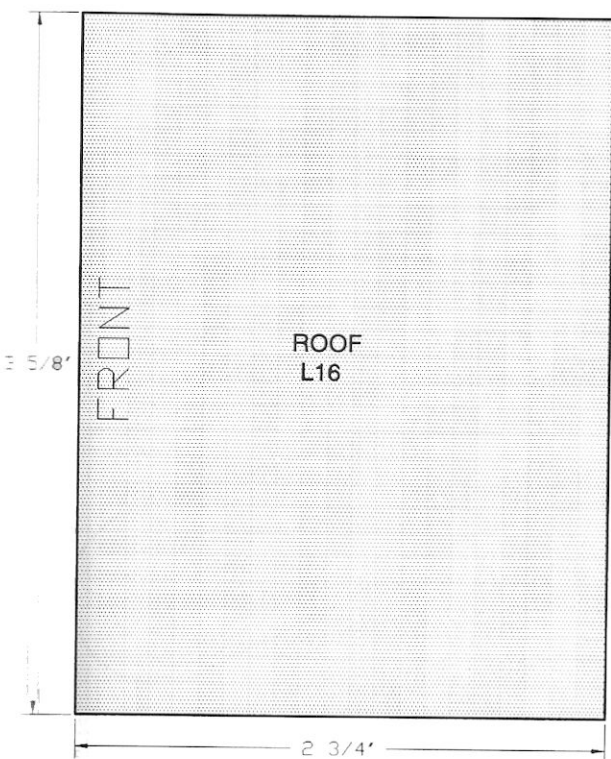


SHOVEL BUSHING SUPPORT

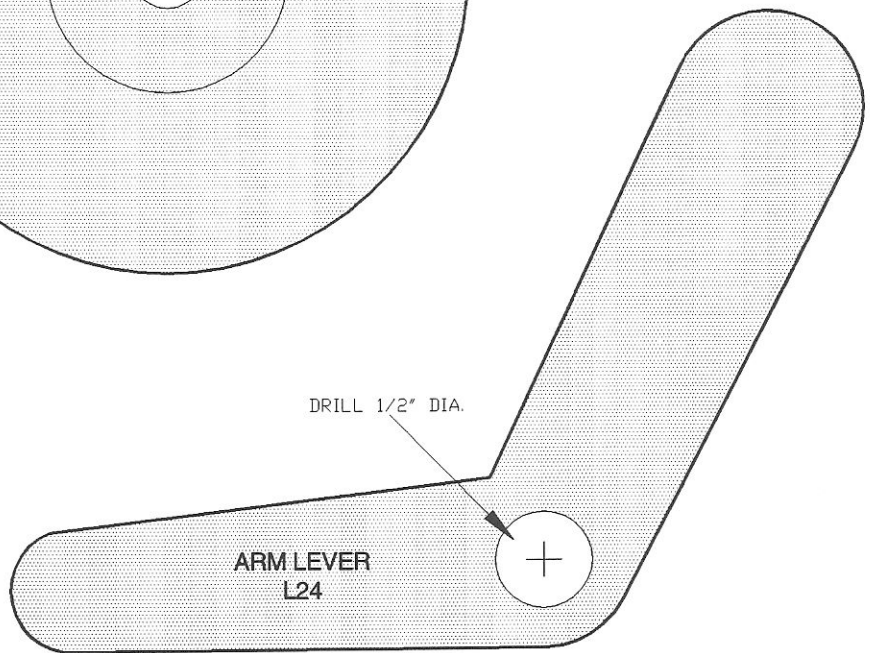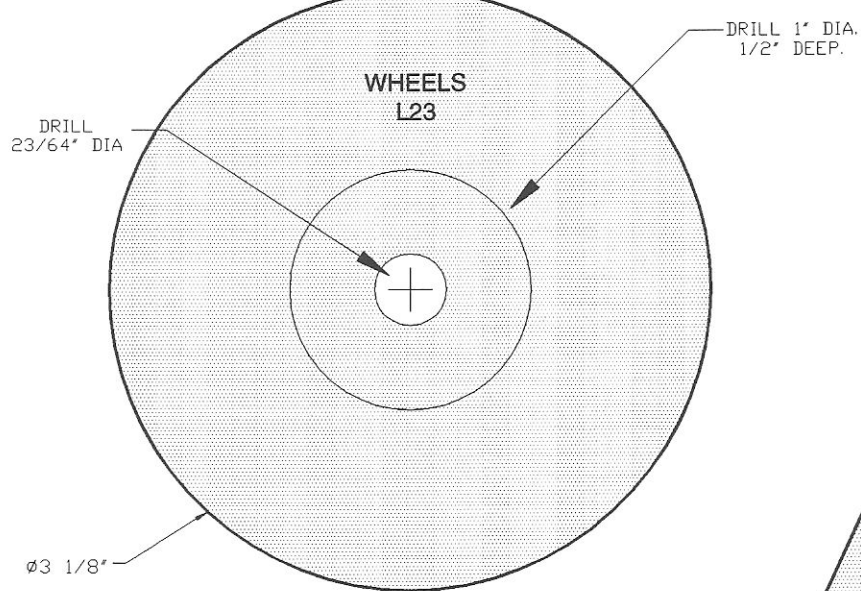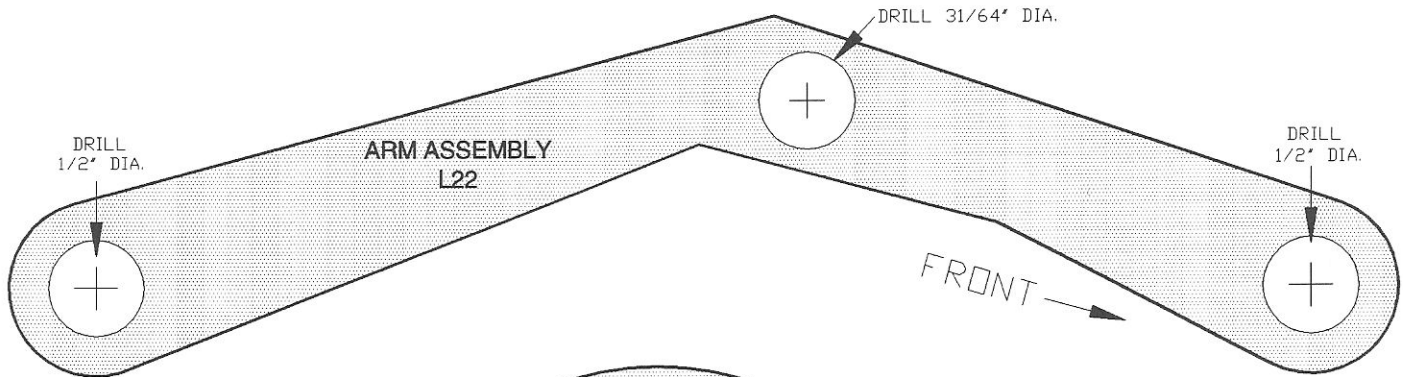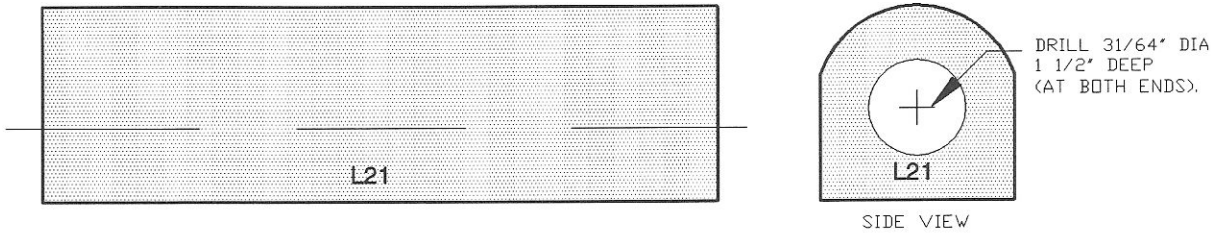


(L25)

WHEEL SHAFT
(4 REQUIRED)

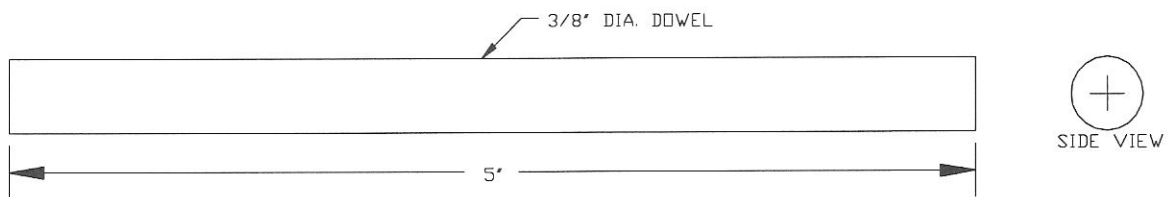


(L28)

RE-ENFORCING BAR
(1 REQUIRED)

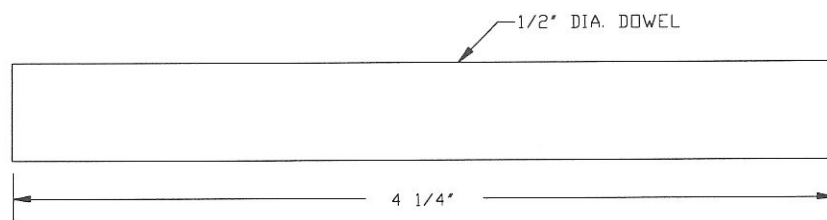


(L29)

MAIN LEVER PINS
(2 REQUIRED)

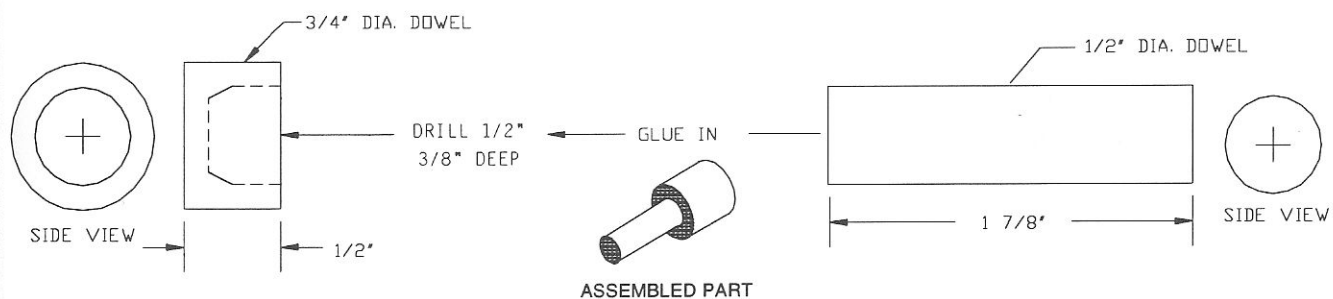


(L30)

MAIN LEVER PINS
(2 REQUIRED)

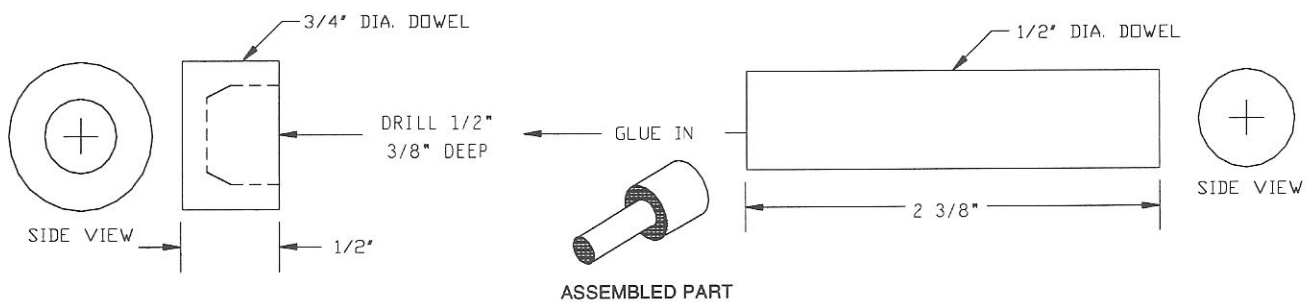


L31

**LOCKING PINS
(2 REQUIRED)**

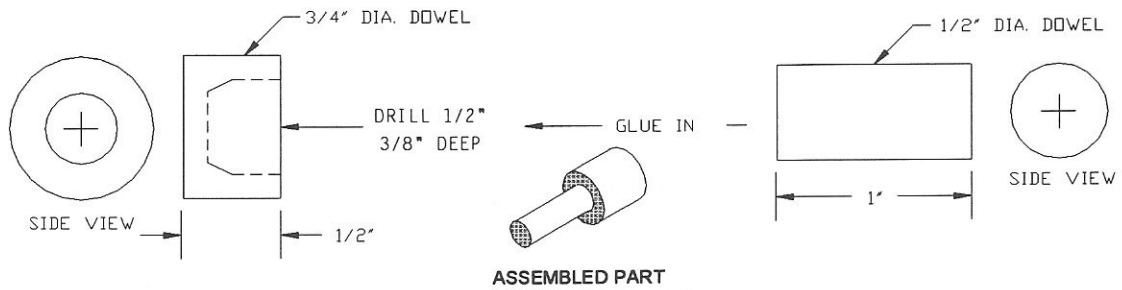


L32


**MAIN PIN
(1 REQUIRED)**

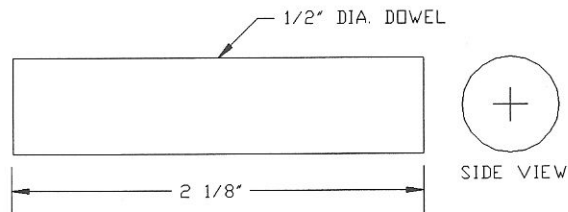


Additional Information - Loader

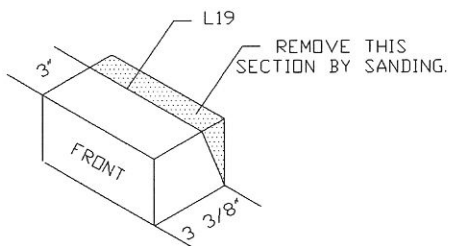


Sand angle on rear hood L19, as shown.

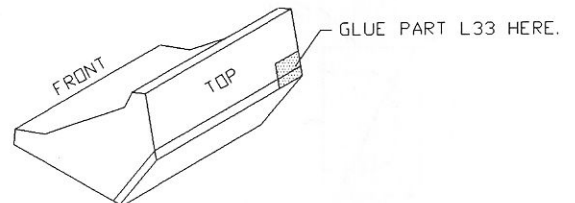

Where to glue part L33 onto shovel assembly.











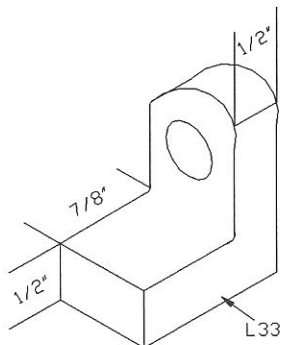



Finished part L33.

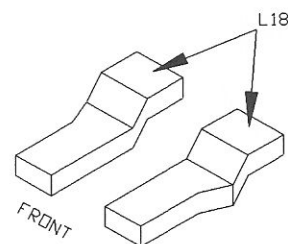


Finished parts L18.

Loader - Assembly Drawings

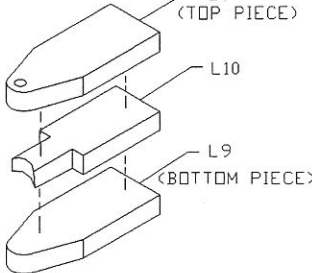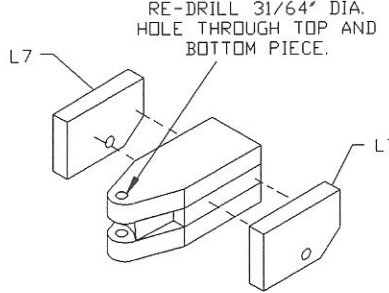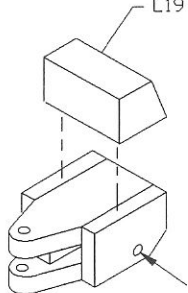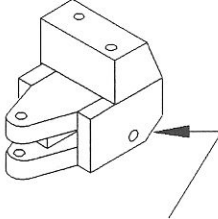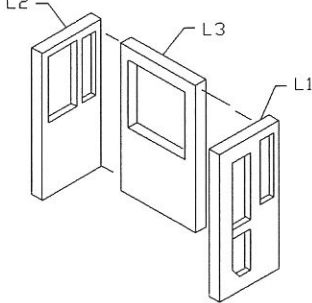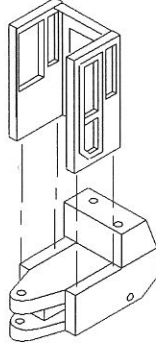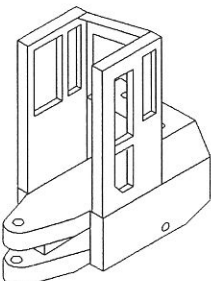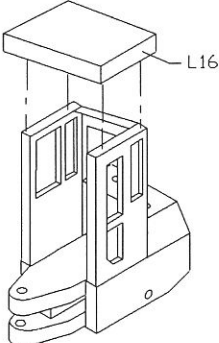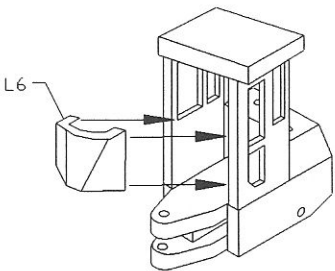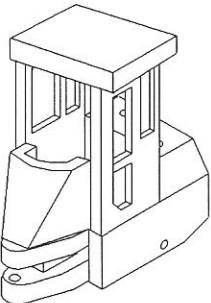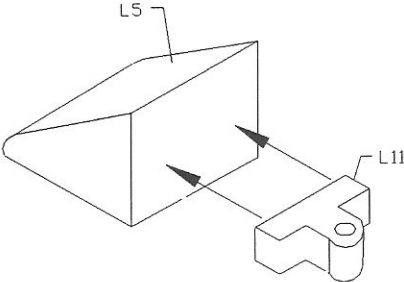1  Glue mid-body L10 between upper and lower body L9.	2  Re-drill hole, as shown. Glue sides L7 to body assembly.	3  Re-drill 25/64" Dia. hole (from side to side). Glue rear hood L19.
4  Re-sand angle (from side to side).	5  Glue cabin sides L1 & L2 to cabin back L3.	6  Glue cabin onto body, as shown.
7  Cabin properly assembled.	8  Glue roof L16 onto cabin.	9 <u>IMPORTANT</u> Cabin must be completely assembled before glue dries so that you may make corrections for proper fit, if necessary.
10  Glue cabin front L6, as shown.	11  Start front body assembly.	12  Glue pivot plate L11 onto body L5. See next frame for exact location.

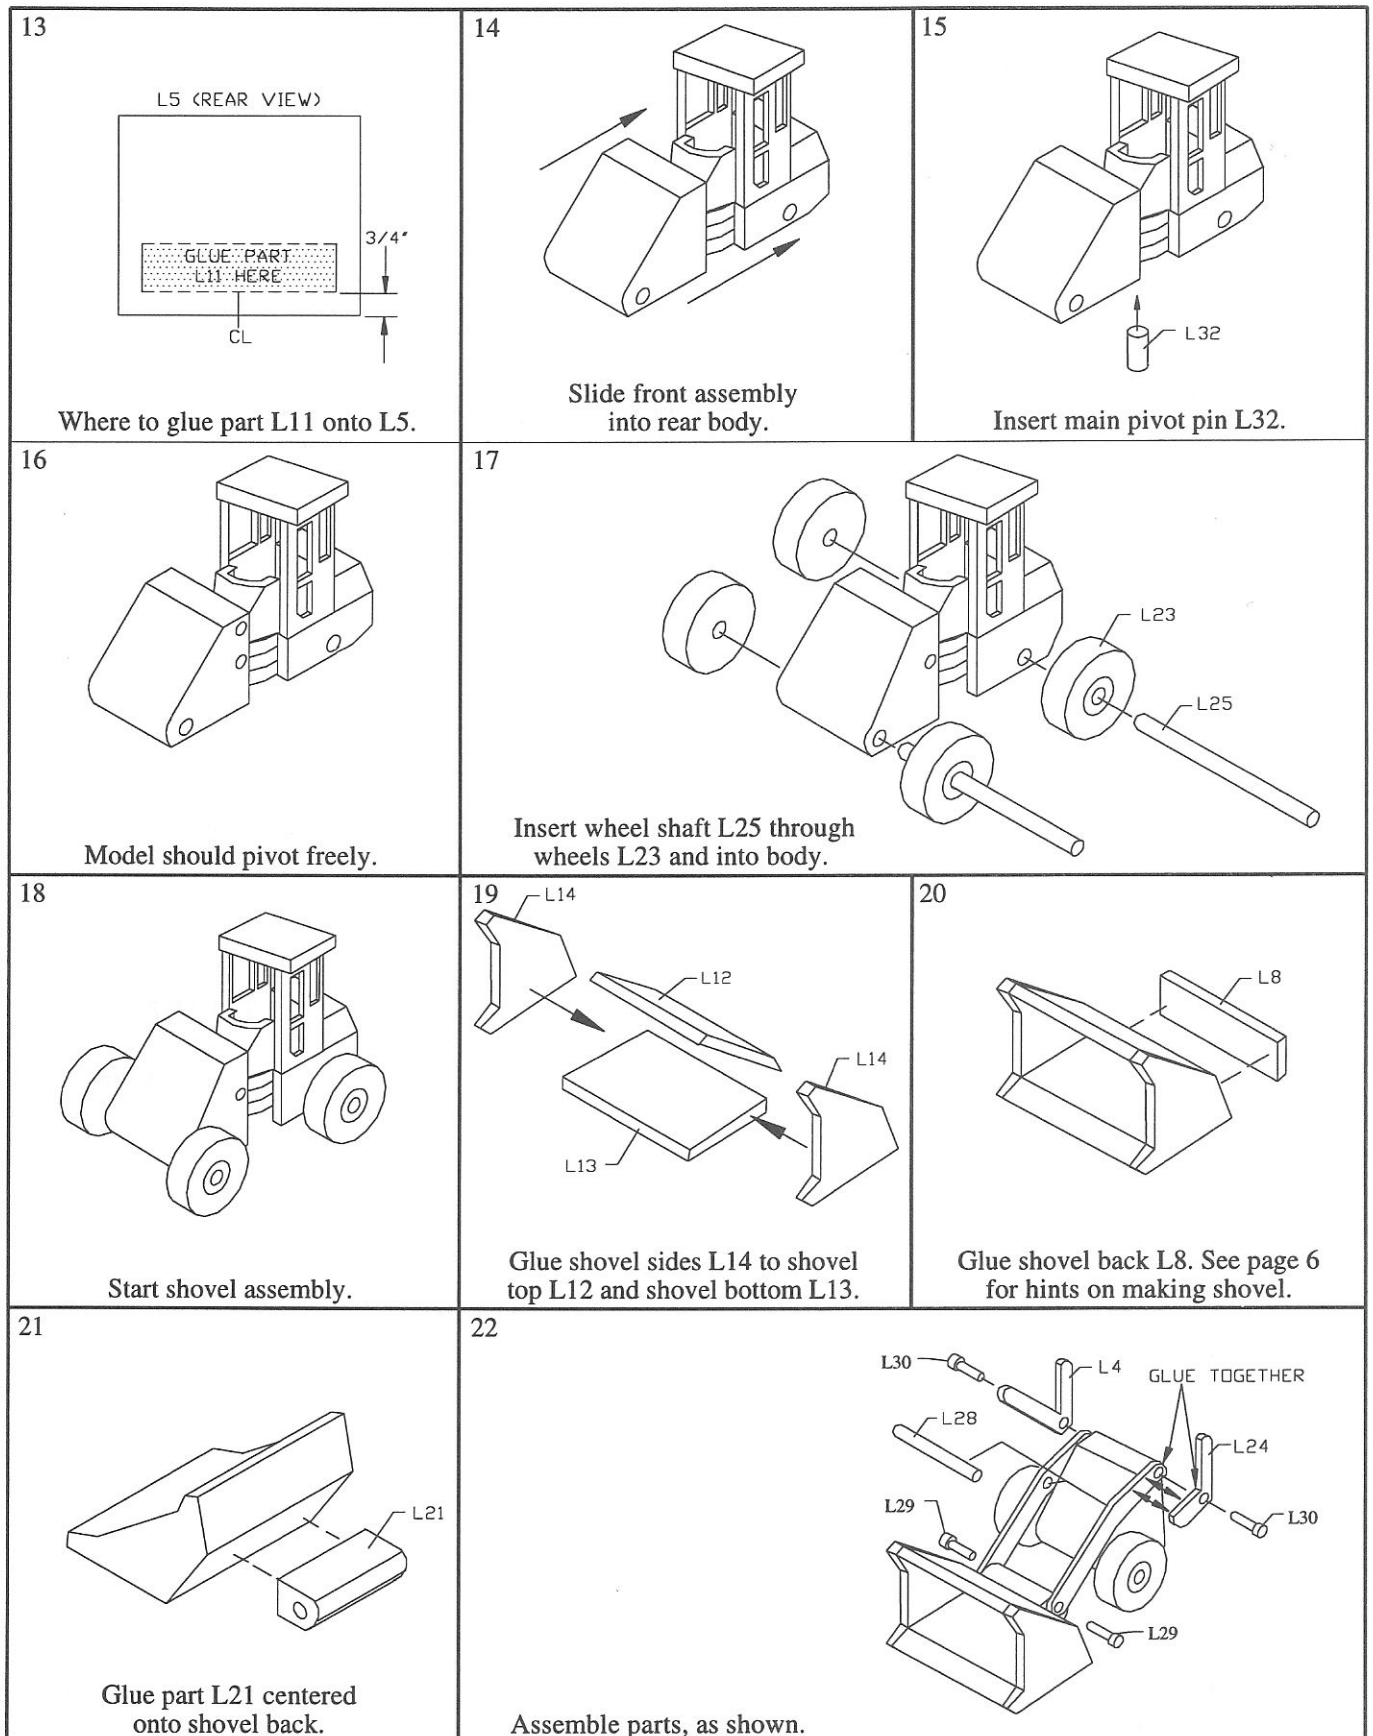


23

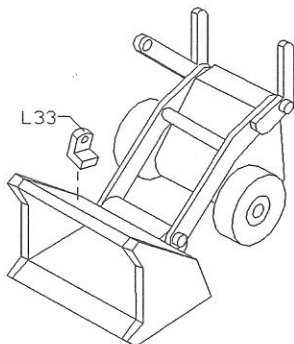


Glue lever block L33. See page 18.

24

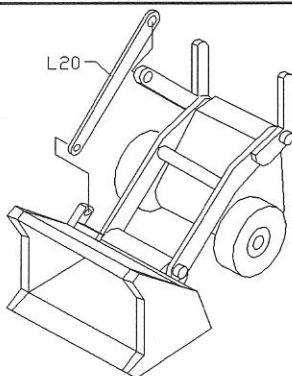


Install lever link L20, as shown.

25

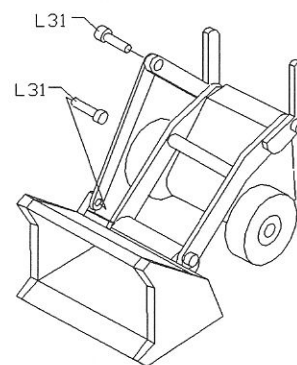


Insert locking pins L31.

26

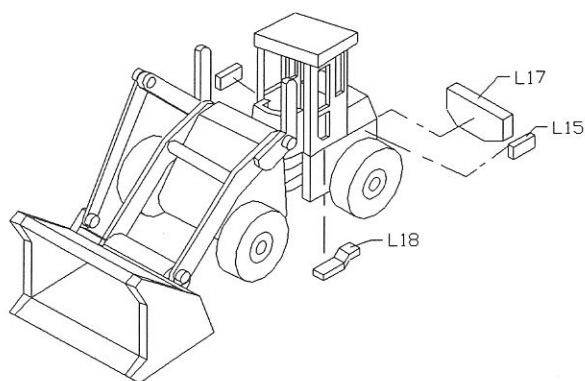


Glue parts, as shown.

27

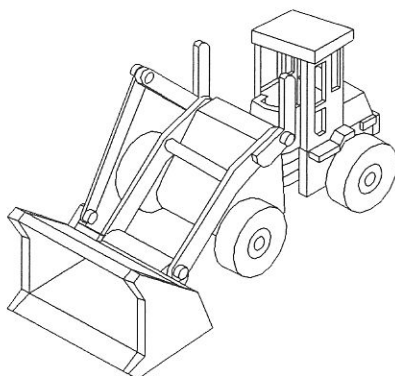

Your model should now be complete.

DOZER

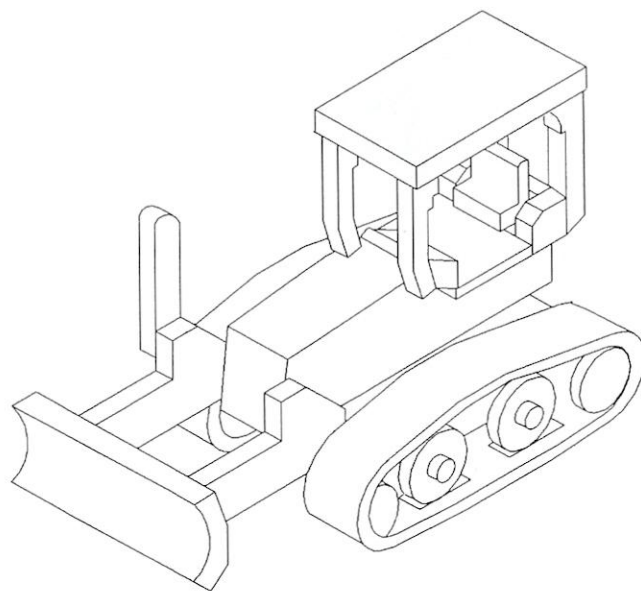


General Instructions - Dozer

- 1- Start by cutting materials needed by following the list of materials, paying attention to the rough and finished size. **Identify the parts as they are cut.**

Please note: Different types of wood can be used for the various parts. It is suggested, however, that hard wood be used, since many of the parts would be much too fragile if using soft wood. We have used a combination of pine, maple and oak to give the models a nice contrast!

- 2- Remove the full-size patterns found in the appendix. Cut them out, leaving approximately $1/16"$ all around, and place on the proper piece of wood. Patterns can be secured to wood using either spray adhesive or rubber cement. If using the latter, cut and sand the part first to finished size. If drilling is required, mark the hole by inserting a scribe or nail through the pattern into the wood. Remove the pattern before drilling.

You should have no trouble determining which surface to attach most of the patterns. Some parts, however, can be confusing since the pattern could fit on more than one surface. The drawings below indicate exactly which surface to attach the patterns for these parts.

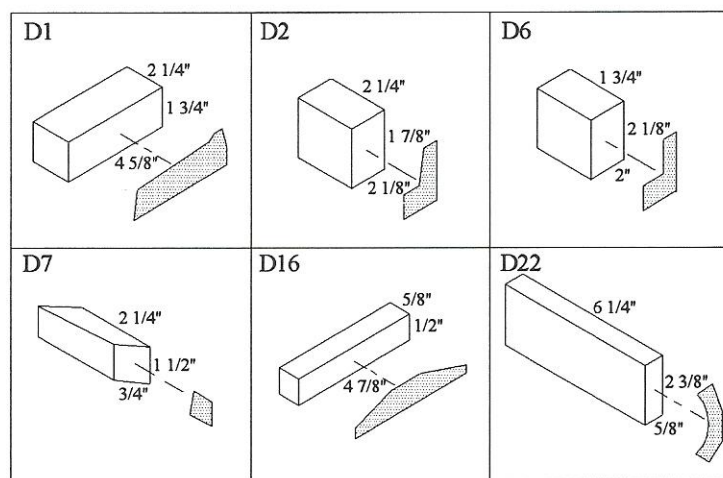

- 3- Look at the full-size drawing sheets to finish parts D3 and D21.
- 4- Using maple dowels, make all pins, shafts, etc.
- 5- Follow the assembly drawings to complete your model.

List of Materials - Dozer

Part	T	W	L	Material	Qty.	*	Part	T	W	L	Material	Qty.	*
D1	1 3/4"	2 1/4"	4 5/8"	pine	1	F	D11	1/4"	1/2"	1 1/4"	pine	6	F
D2	1 7/8"	2 1/4"	2 1/8"	pine	1	F	D12	3/8"	1 7/8"	1 7/8"	maple	4	R
D3	1 1/4"	2 1/4"	8 1/2"	pine	1	F	D13	3/8"	1 3/4"	1 3/4"	maple	4	R
D4	1/2"	2 1/8"	2 3/8"	oak	2	R	D16	1/2"	5/8"	4 7/8"	pine	2	F
D5	3/8"	3 1/4"	1 3/4"	pine	1	F	D17	1 1/2"	2 1/2"	8 3/4"	pine	2	R
D6	1 3/4"	2 1/8"	2"	pine	1	R	D18	1/4"	2 1/4"	3"	maple	2	R
D7	3/4"	2 1/4"	1 1/2"	oak	1	F	D19	3/8"	1 1/4"	3 1/4"	maple	1	R
D8	3/8"	3 1/2"	4 7/8"	pine	1	F	D21	1 1/4"	4 1/16"	7 1/4"	pine	1	F
D9	1/2"	1 1/2"	4 1/4"	oak	2	R	D22	5/8"	2 3/8"	6 1/4"	pine	1	R
D10	1/2"	1 1/2"	4 1/4"	oak	2	R	D23	5/8"	5/8"	2 5/16"	maple	1	F

R = Rough size
F = Finished size

T = Thickness

W = Width


L = Length

Instructions:


R= Rough sizes, the material is cut oversized so you have ample room to apply the pattern on the surface. Sanding is not required at this point.

F= Finished Size: Cut and sand parts to finished size.



Full-Sized Patterns: Set One

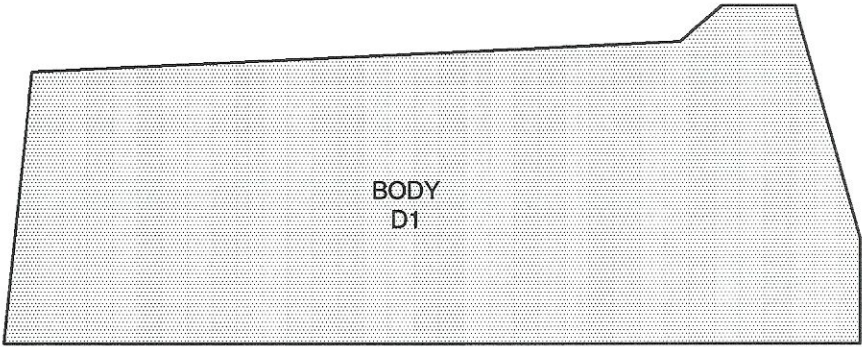

SIDE VIEW

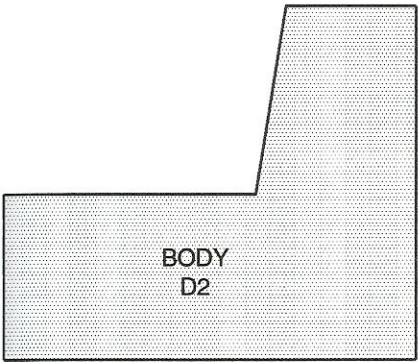


SIDE VIEW

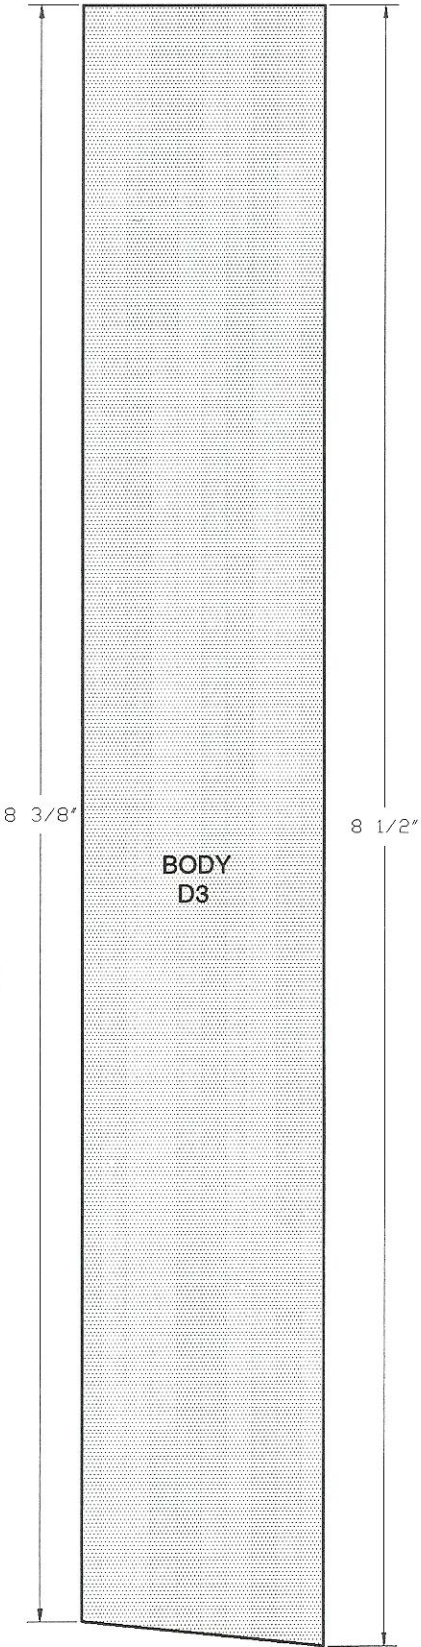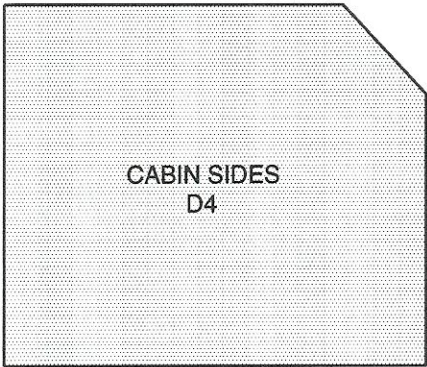


BODY
D3

SIDE VIEW

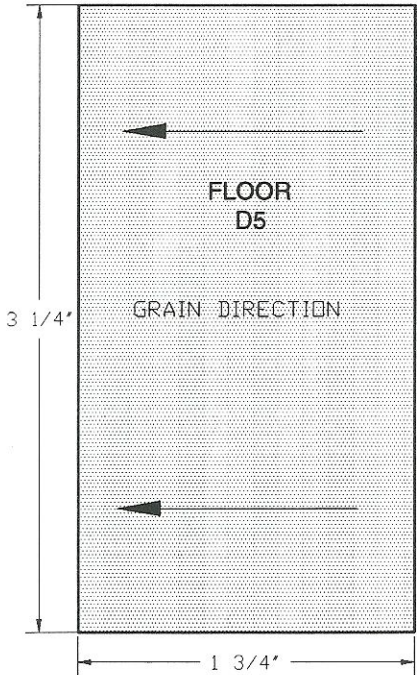

FLOOR
D5

GRAIN DIRECTION

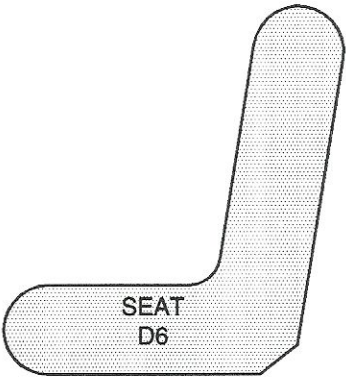


SEAT
D6




END VIEW




DASH
D7

END VIEW


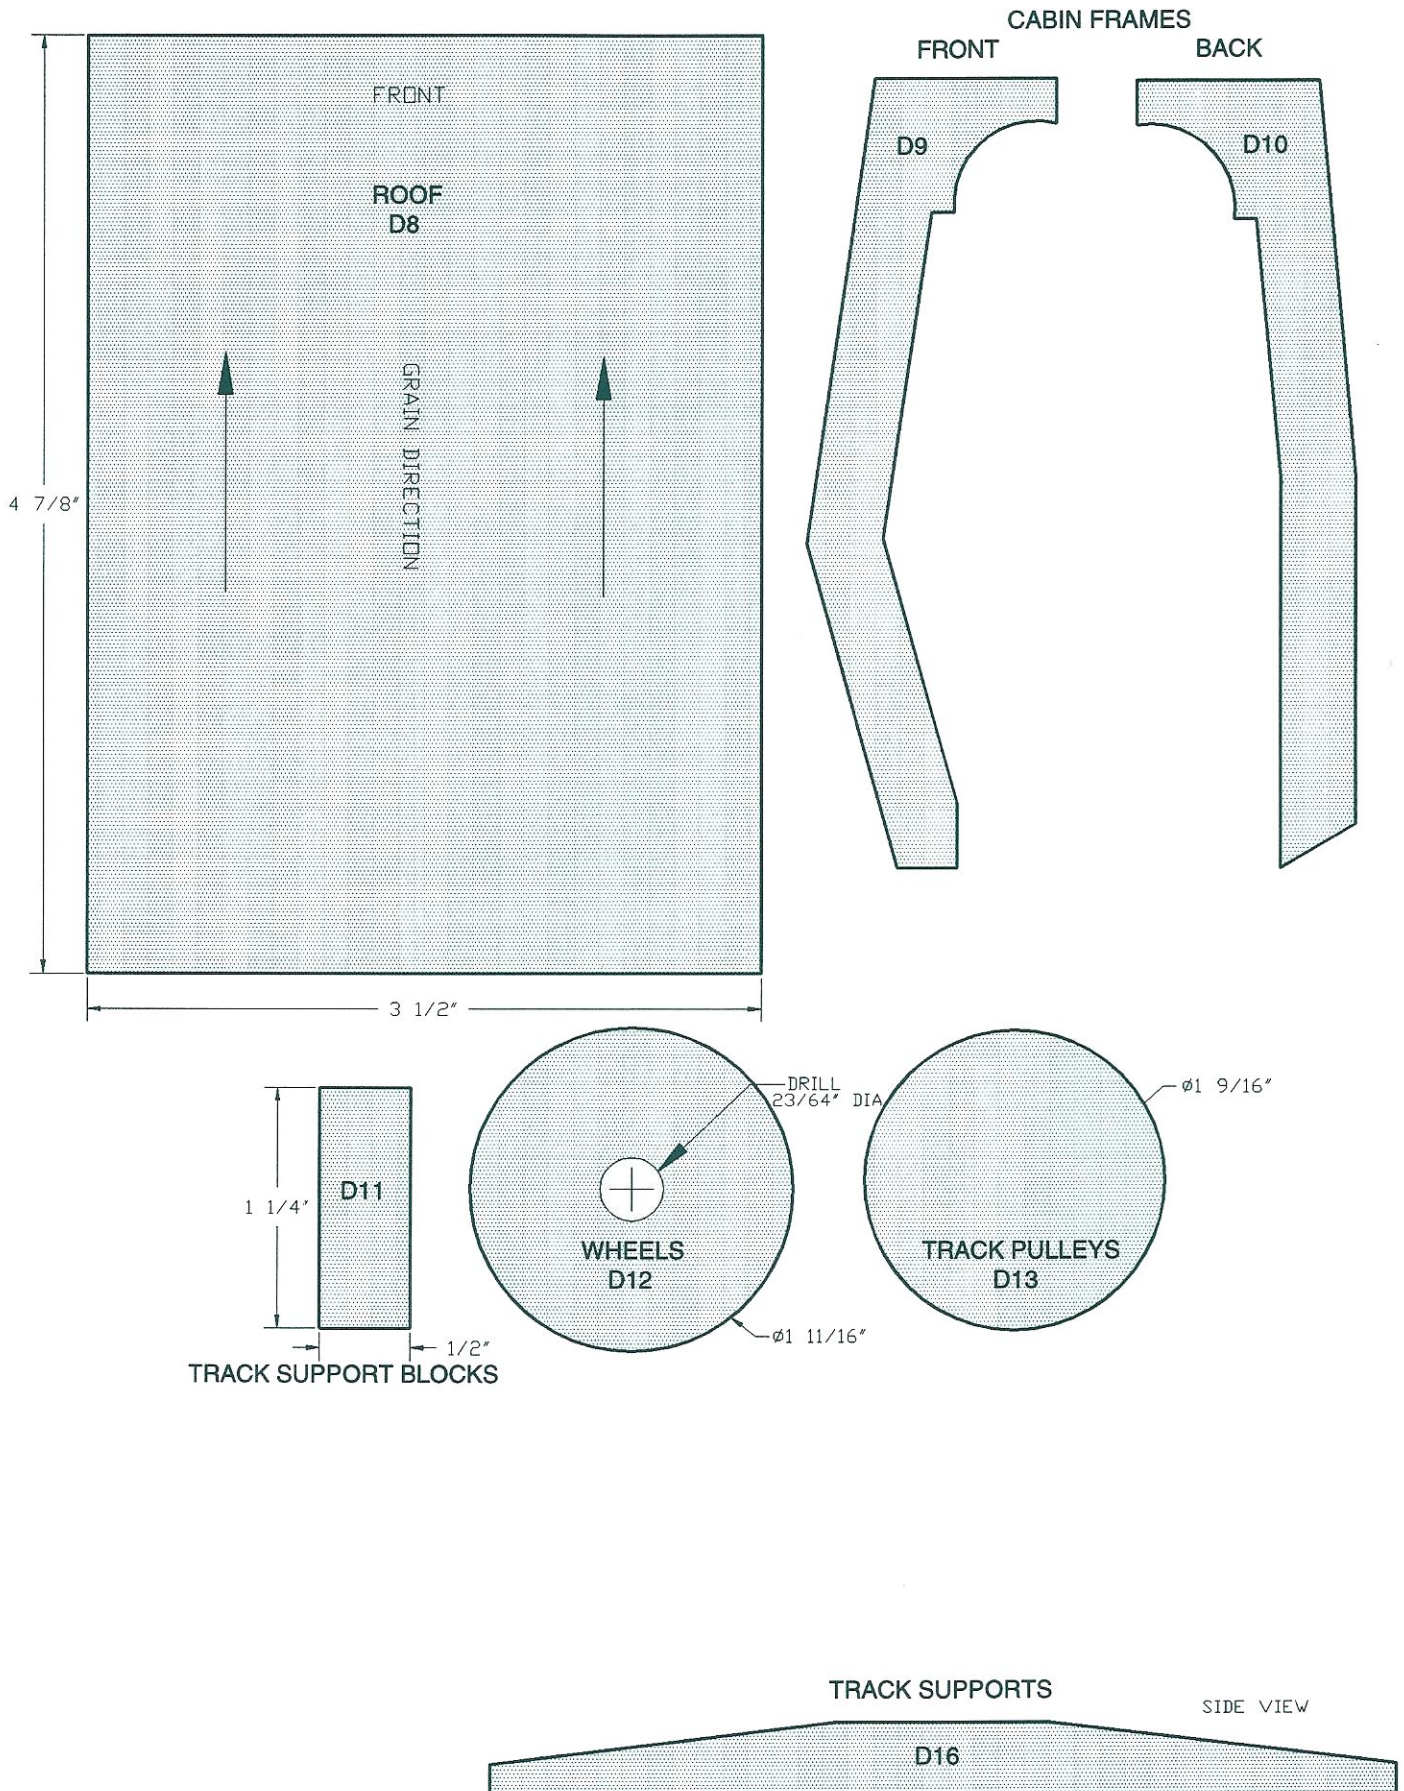


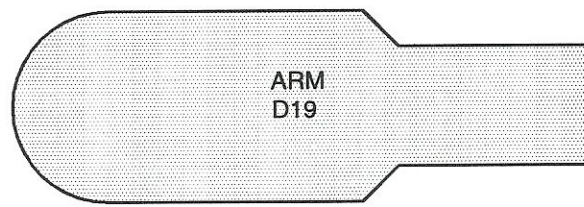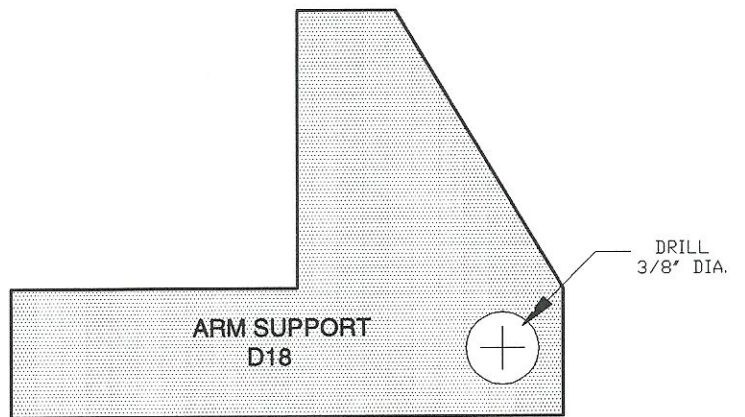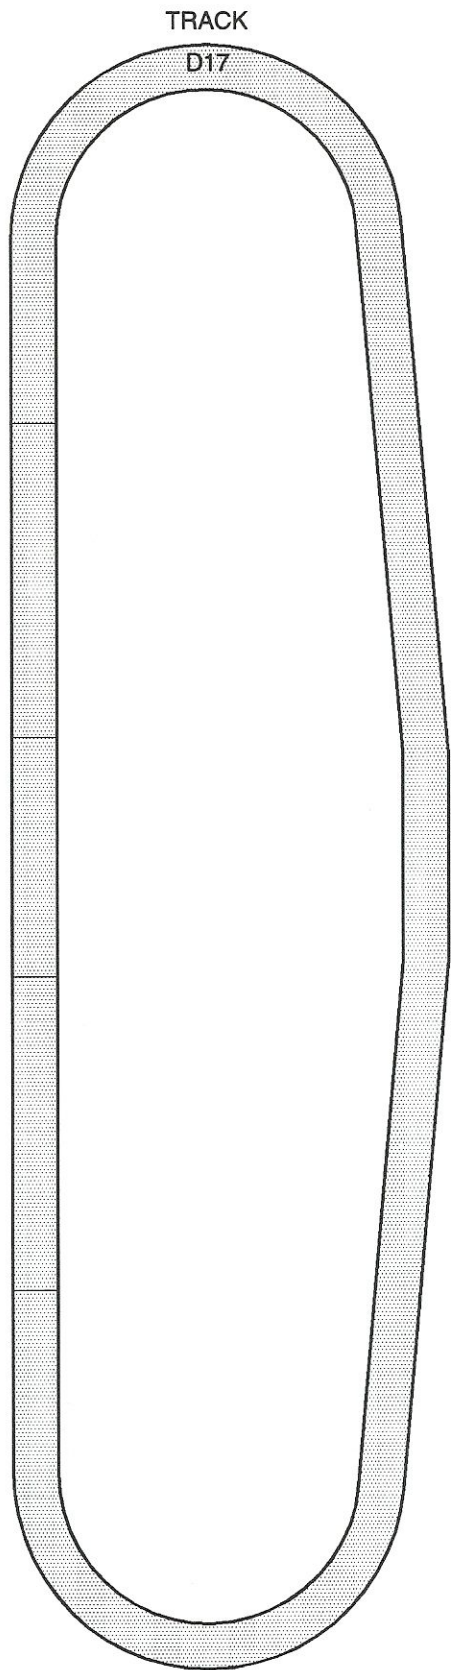

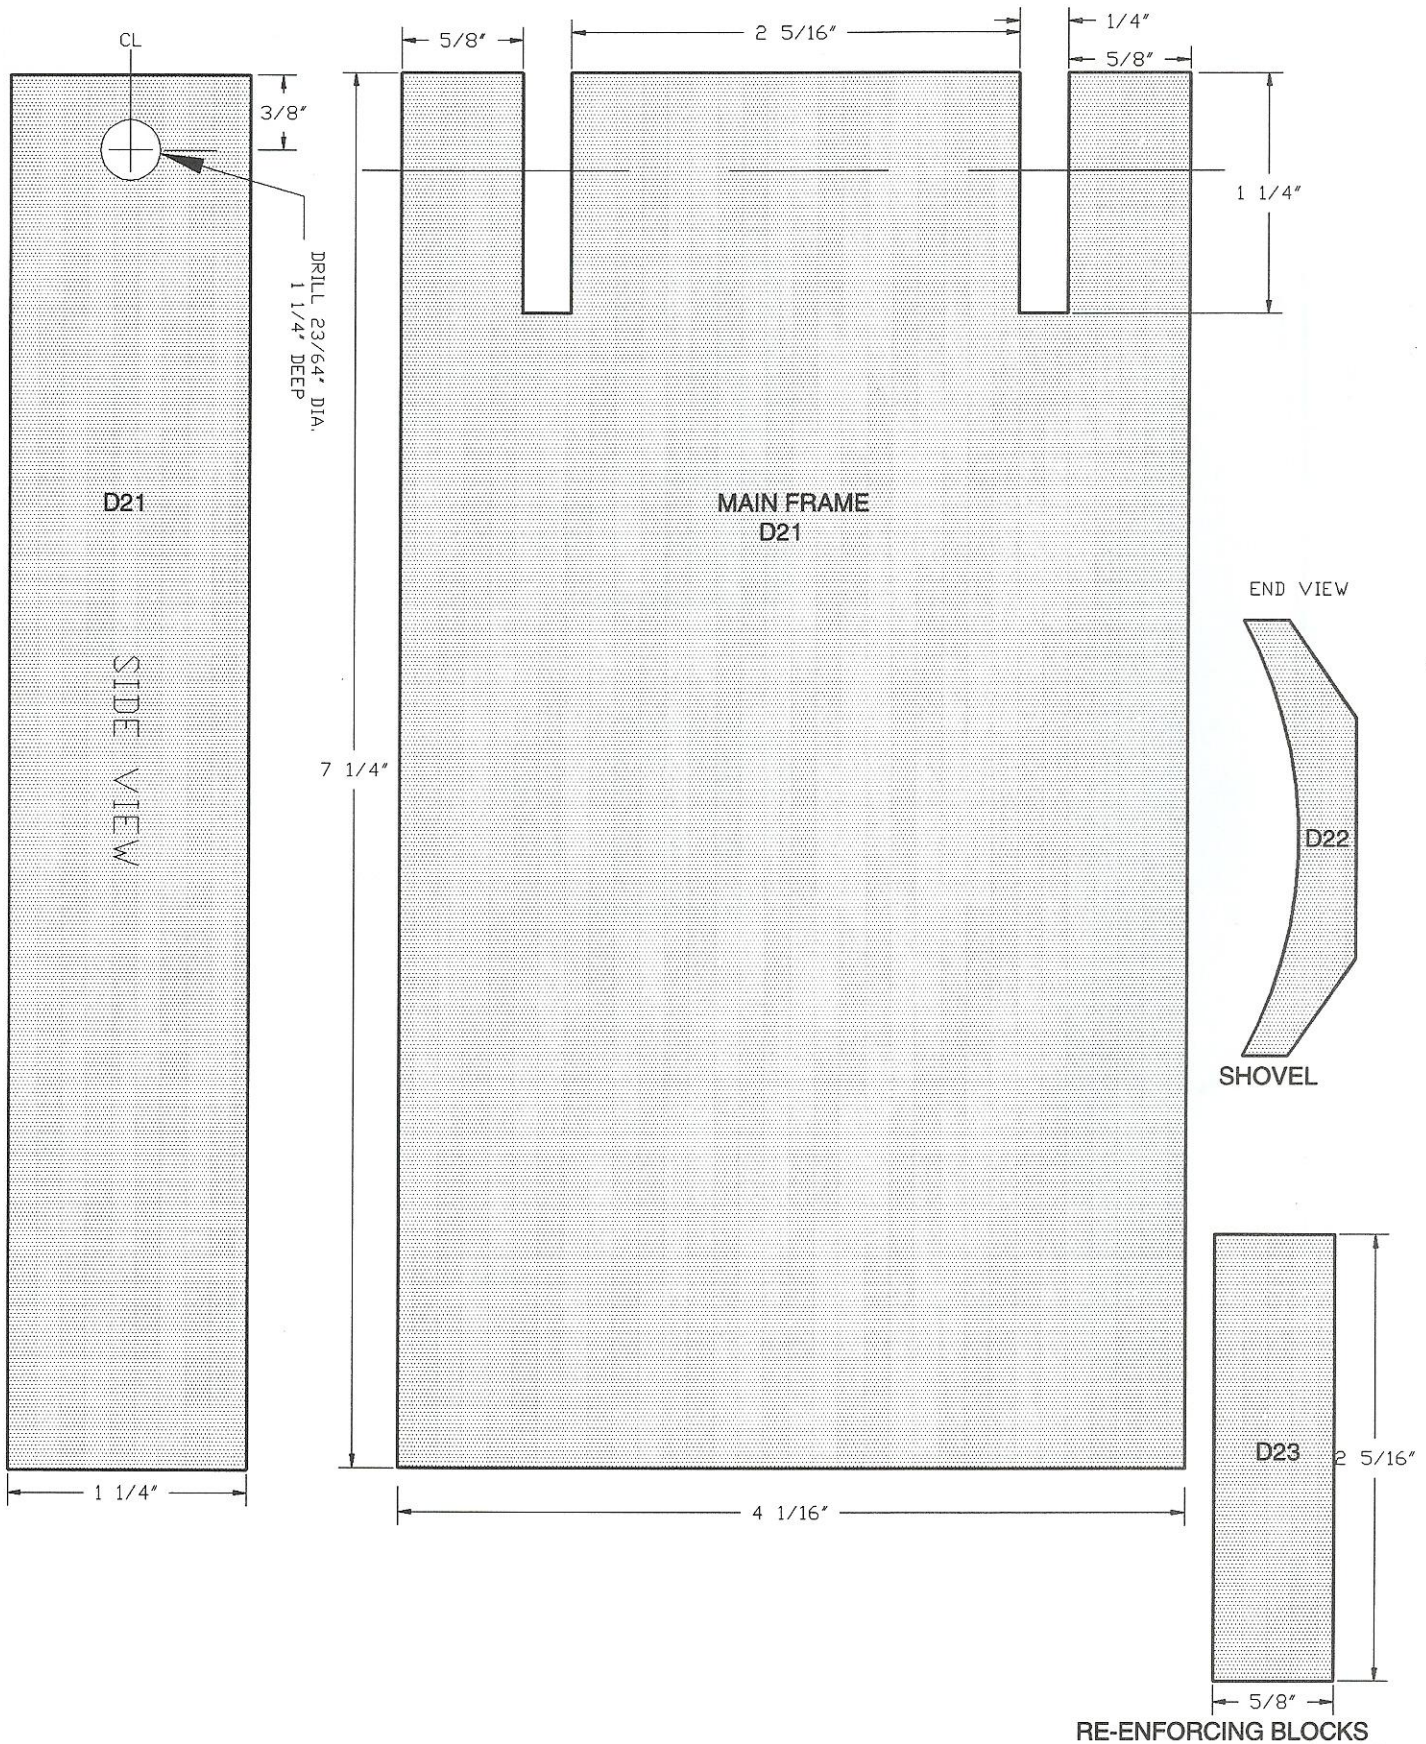


D24

WHEEL SHAFTS
(2 REQUIRED)

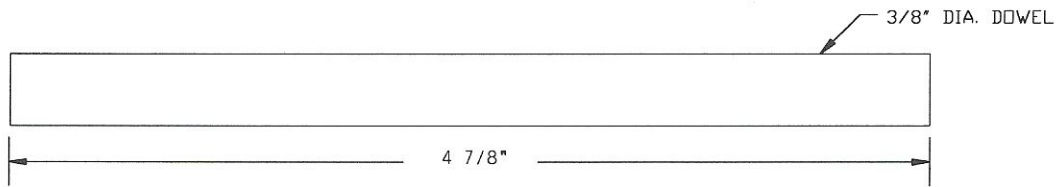


D26


PINS
(2 REQUIRED)

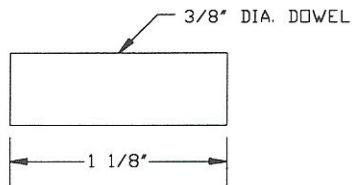

Additional Information - Dozer

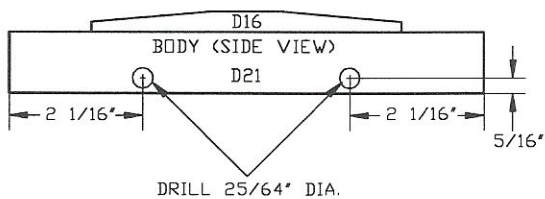


Drill holes into body D21, as shown.

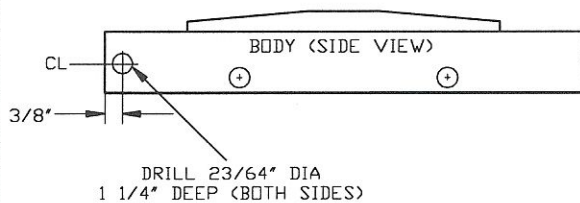


Drill $\frac{23}{64}"$ Dia. hole into body, as shown.

Dozer - Assembly Drawings

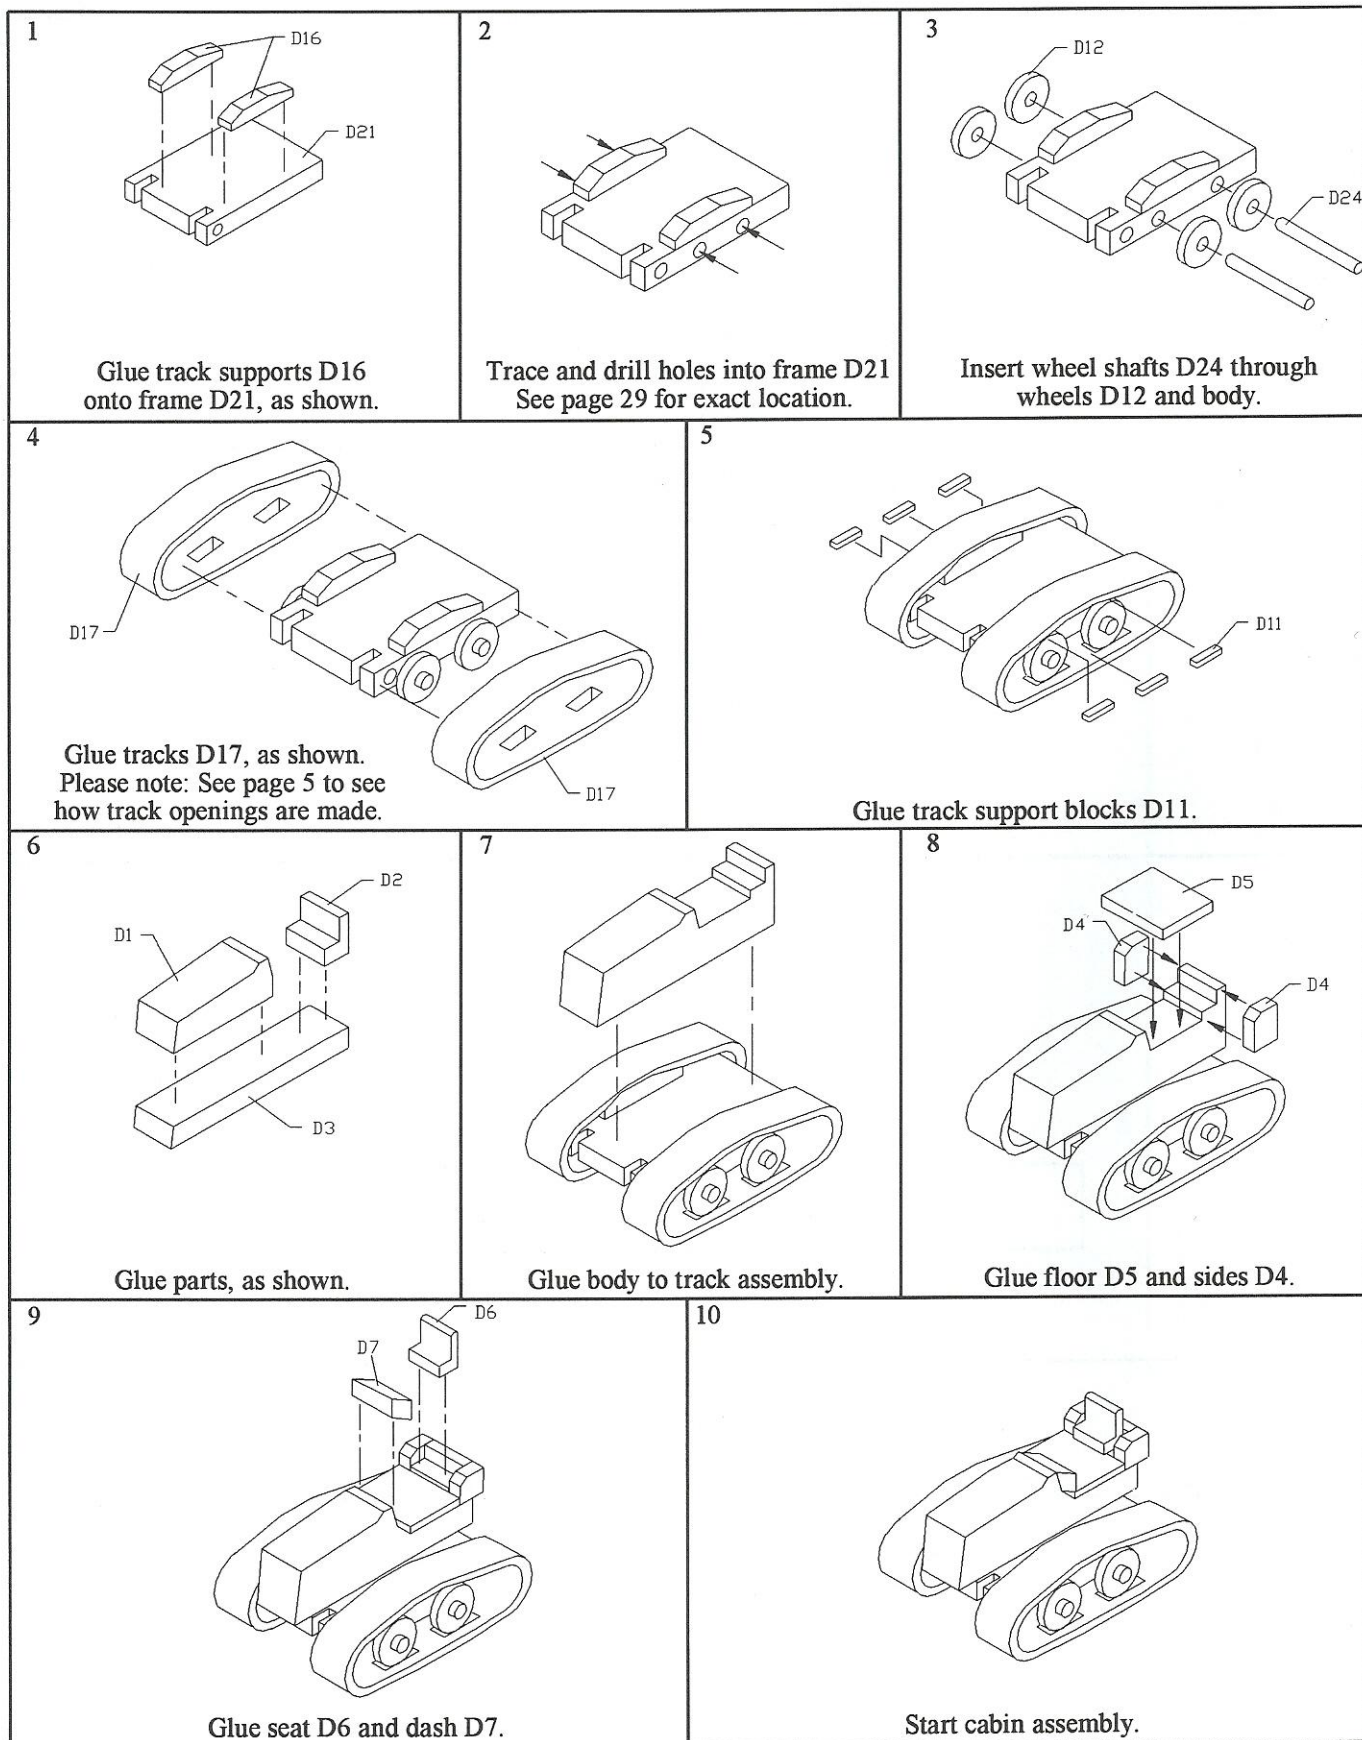

11

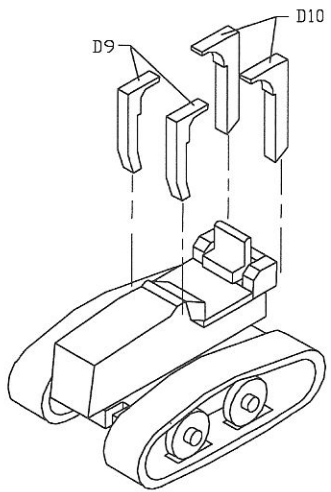


Glue cabin frames D9 and D10.

12


IMPORTANT

Cabin must be completely assembled before glue dries so that you have time to make corrections, if necessary

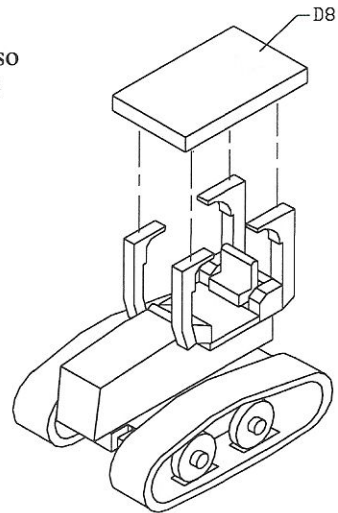


Glue roof D8, as shown.

13

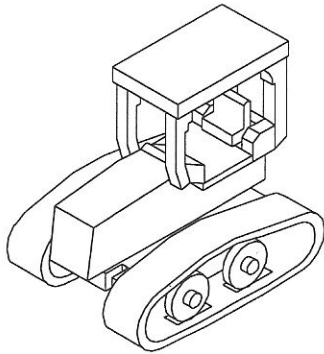


Start shovel assembly.

14

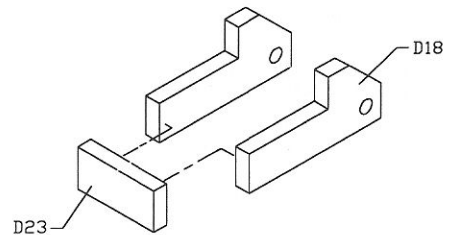


Glue re-enforcing block D23, as shown.

15

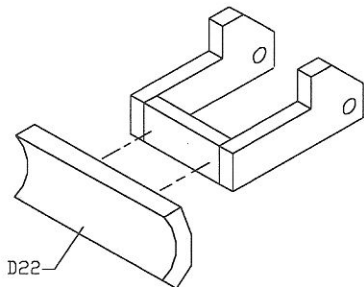


Glue shovel D22.

16

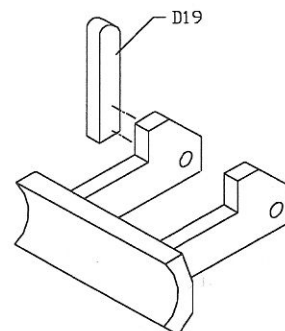


Glue arm D19, as shown.

17

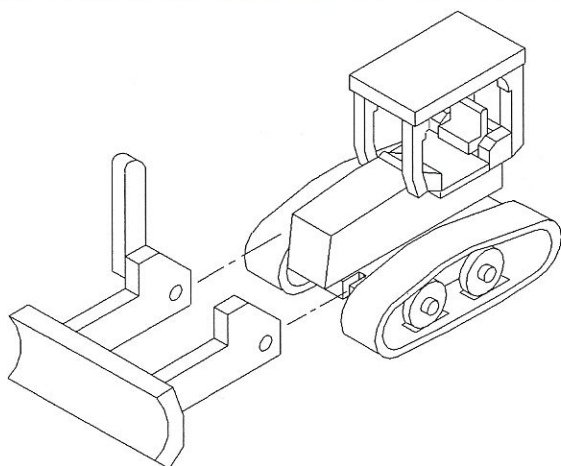


Slide shovel and arm assembly
into body grooves.

18

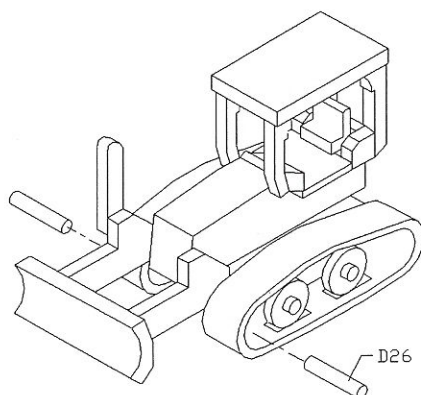


Insert pins D26, as shown.

19

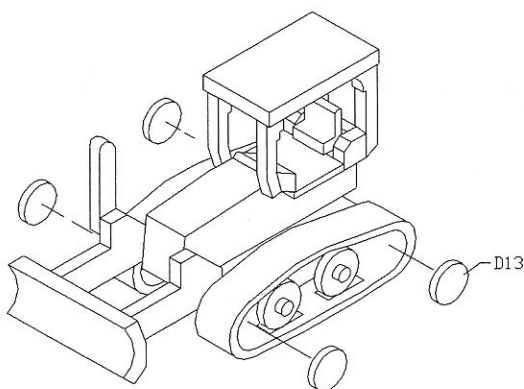


Glue track pulleys D13.

20

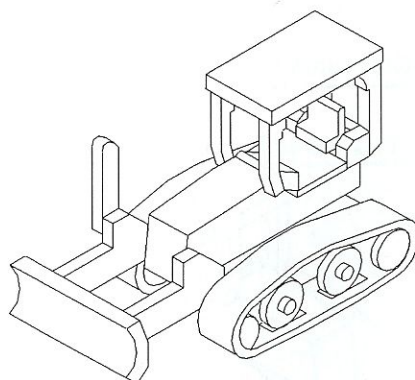

Your model should now be complete.

DOZER LOADER

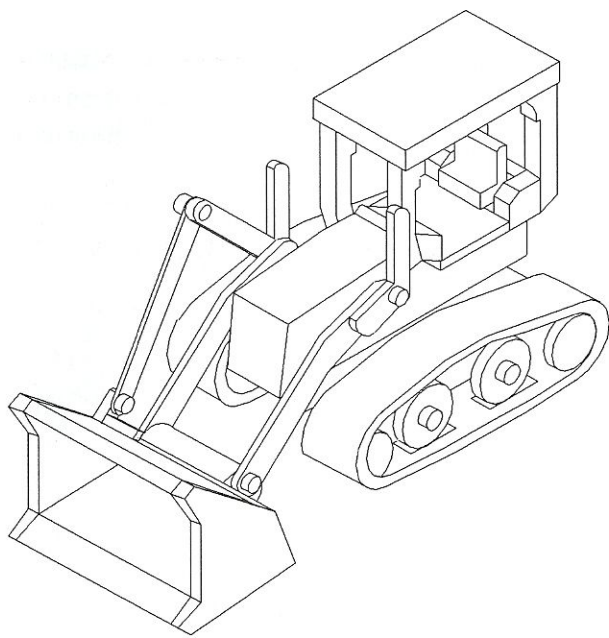


General Instructions - Dozer Loader

- 1- Start by cutting materials needed by following the list of materials, paying attention to the rough and finished size. **Identify the parts as they are cut.**

Please note: Different types of wood can be used for the various parts. It is suggested, however, that hard wood be used, since many of the parts would be much too fragile if using soft wood. We have used a combination of pine, maple and oak to give the models a nice contrast!

- 2- Remove the full-size patterns found in the appendix. Cut them out, leaving approximately 1/16" all around, and place on the proper piece of wood. Patterns can be secured to wood using either spray adhesive or rubber cement. If using the latter, cut and sand the part first to finished size. If drilling is required, mark the hole by inserting a scribe or nail through the pattern into the wood. Remove the pattern before drilling.

You should have no trouble determining which surface to attach most of the patterns. Some parts, however, can be confusing since the pattern could fit on more than one surface. The drawings below indicate exactly which surface to attach the patterns for these parts.

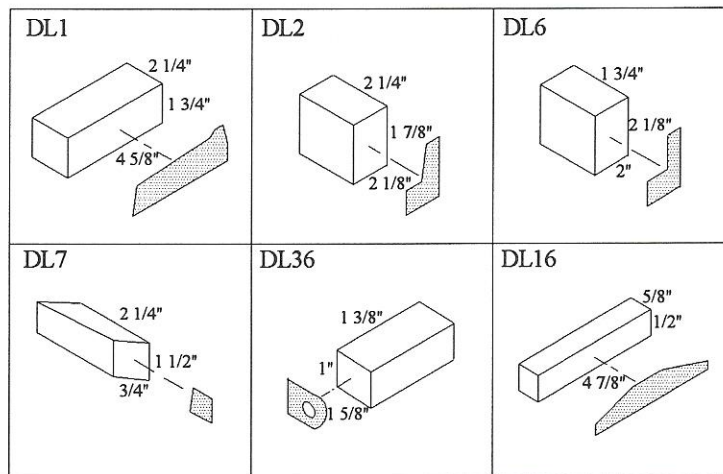

- 3- Look at the full-size drawing sheets to finish part DL3.
- 4- Part DL36 will need additional cuts and details, please refer to the additional information pages, to complete this part.
- 5- Using maple dowels, make all pins, shafts, etc.
- 6- Follow the assembly drawings to complete your model.

List of Materials - Dozer Loader

Part	T	W	L	Material	Qty.	*	Part	T	W	L	Material	Qty.	*
DL1	1 3/4"	2 1/4"	4 5/8"	pine	1	F	DL17	1 1/2"	2 1/2"	8 3/4"	pine	2	R
DL2	1 7/8"	2 1/4"	2 1/8"	pine	1	F	DL18	1"	1 1/8"	2 1/4"	maple	1	F
DL3	1 1/4"	2 1/4"	8 1/2"	pine	1	F	DL19	3/8"	3 3/8"	3 1/2"	pine	2	R
DL4	1/2"	2 1/8"	2 3/8"	oak	2	R	DL20	3/8"	2"	5"	maple	1	R
DL5	3/8"	3 1/4"	1 3/4"	pine	1	F	DL21	3/8"	1 1/8"	3"	maple	1	R
DL6	1 3/4"	2 1/8"	2"	pine	1	R	DL22	3/8"	3"	3 1/8"	maple	1	R
DL7	3/4"	2 1/4"	1 1/2"	oak	1	F	DL23	3/8"	3 3/8"	5 1/2"	pine	1	F
DL8	3/8"	3 1/2"	4 7/8"	pine	1	F	DL24	3/8"	2 5/8"	5 1/2"	pine	1	F
DL9	1/2"	1/2"	4 1/4"	oak	2	R	DL25	1/4"	2 1/8"	6 3/8"	pine	1	R
DL10	1/2"	1/2"	4 1/4"	oak	2	R	DL26	3/8"	1 3/8"	6 1/8"	maple	2	R
DL11	1/4"	1/2"	1 1/4"	pine	6	F	DL28	1 1/4"	4 1/16"	7 1/4"	pine	1	F
DL12	3/8"	1 7/8"	1 7/8"	maple	4	R	DL36	1"	1 3/8"	1 5/8"	maple	1	F
DL13	3/8"	1 3/4"	1 3/4"	maple	4	R	DL37	3/8"	1"	6 1/4"	maple	1	R
DL16	3/8"	5/8"	4 7/8"	pine	2	F							

T = Thickness

W = Width

L = Length

R = Rough size


F = Finished size

Instructions:


R= Rough sizes, the material is cut oversized so you have ample room to apply the pattern on the surface. Sanding is not required at this point.

F = Finished Size: Cut and sand parts to finished size.


Full-Sized Patterns: Set One

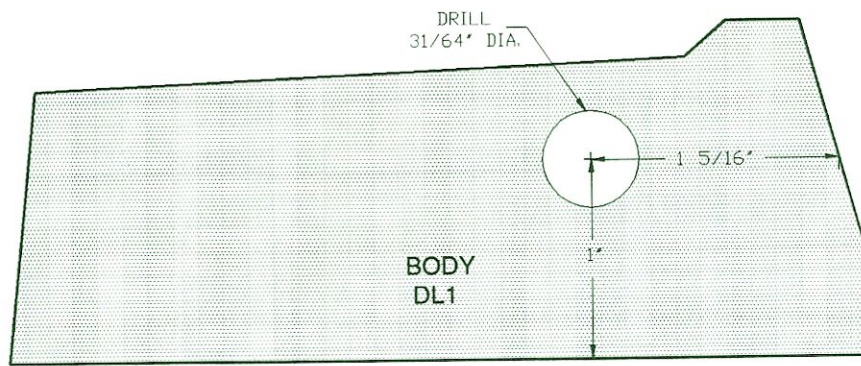




SIDE VIEW

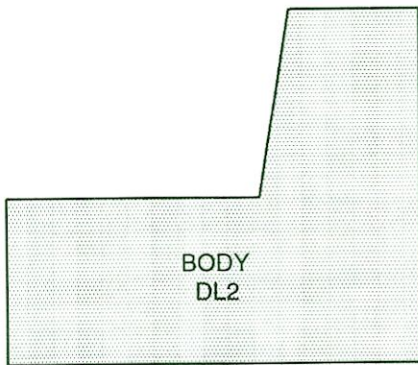

SIDE VIEW

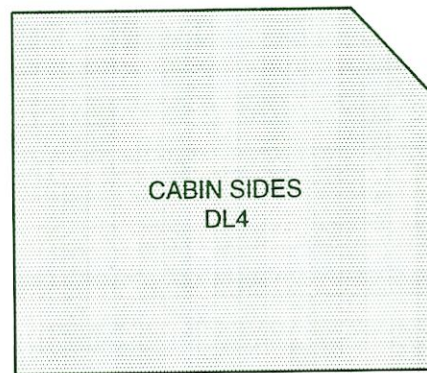


8 3/8"

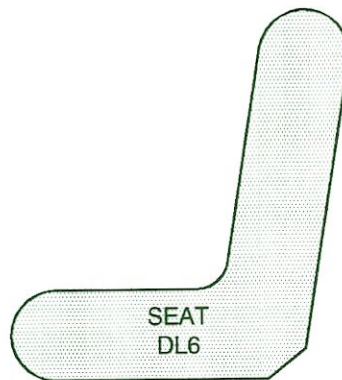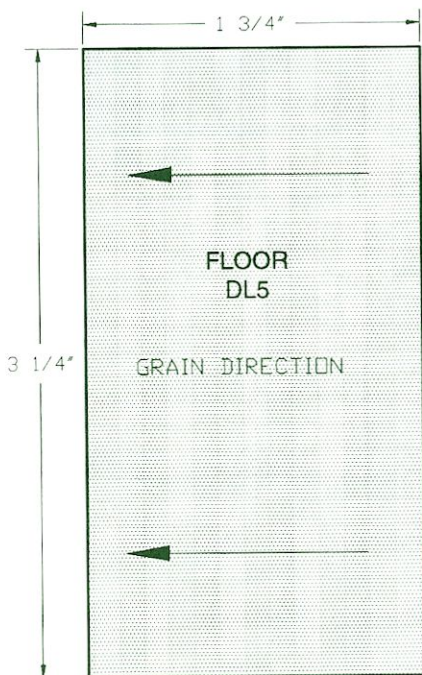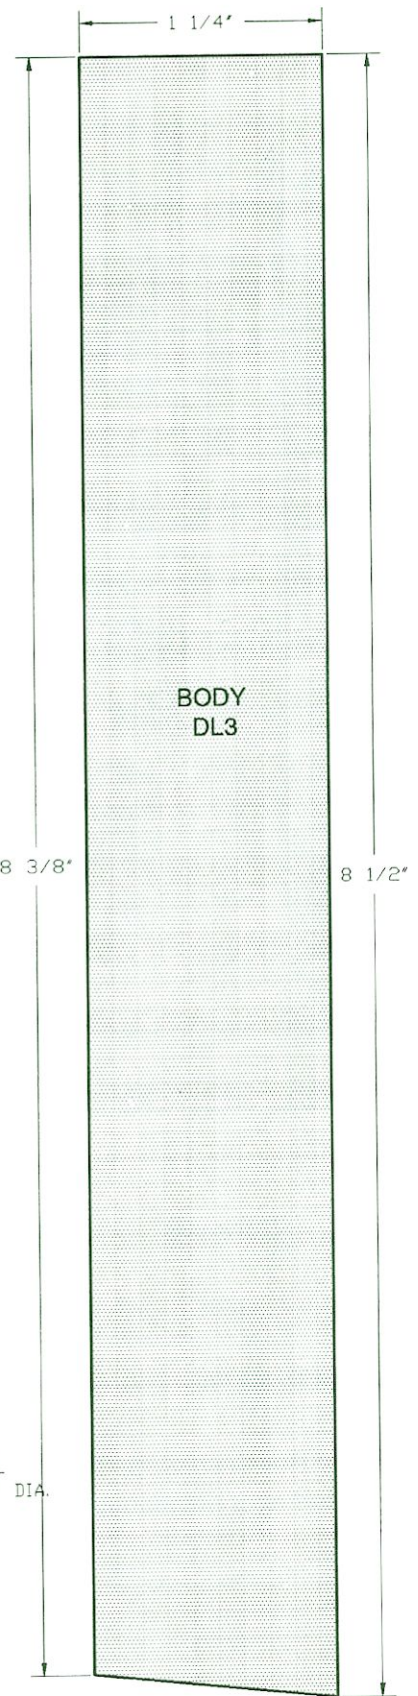


END VIEW




END VIEW

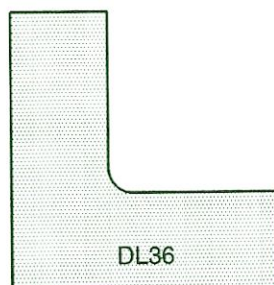




SIDE VIEW

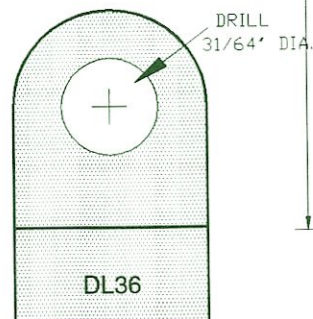


SIDE VIEW




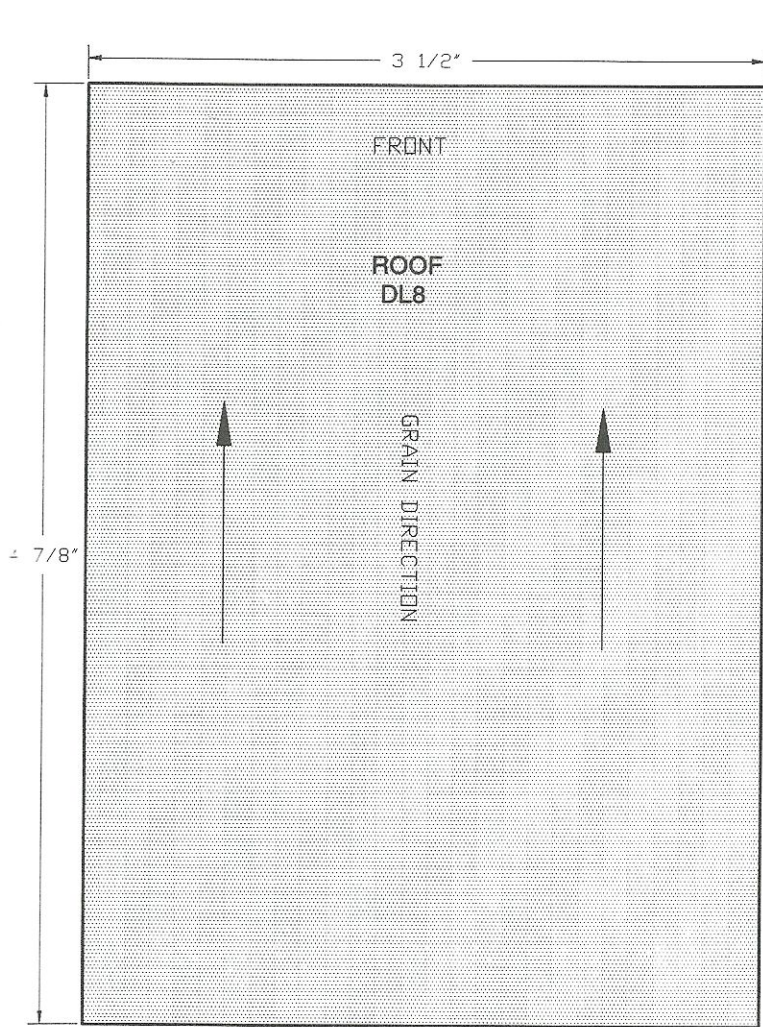





CABIN FRAMES

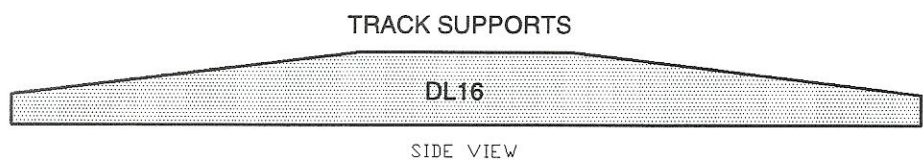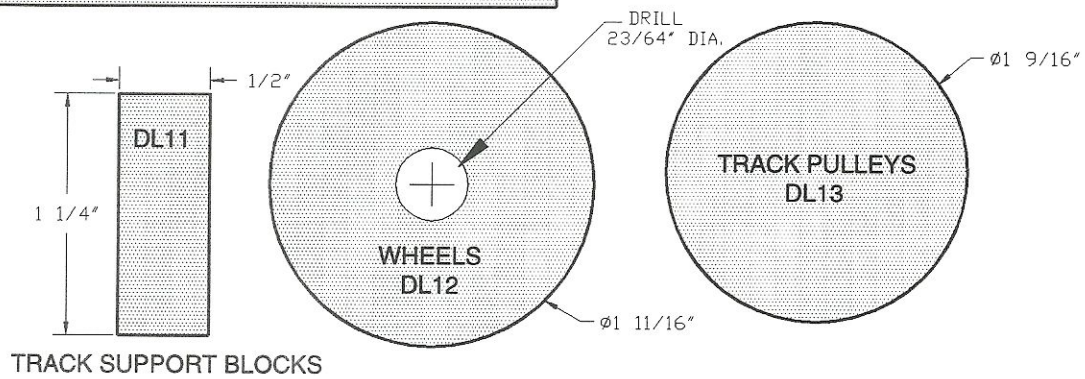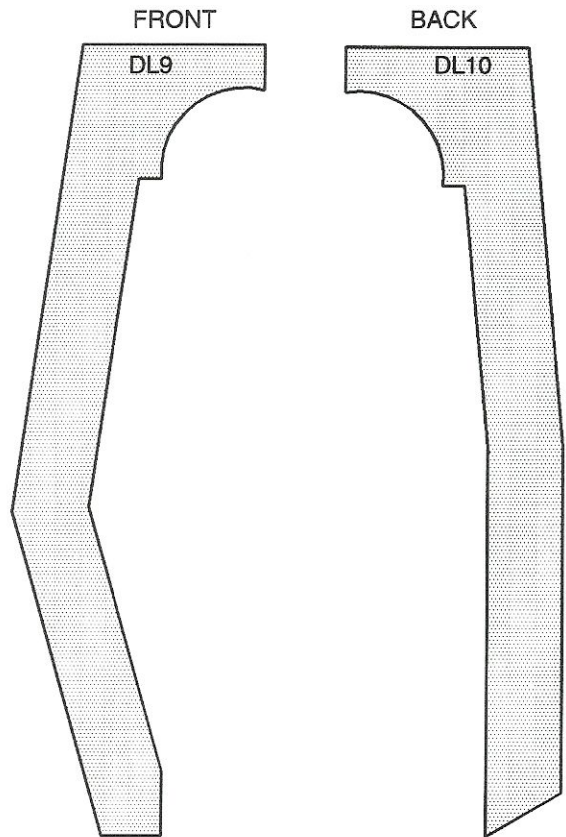


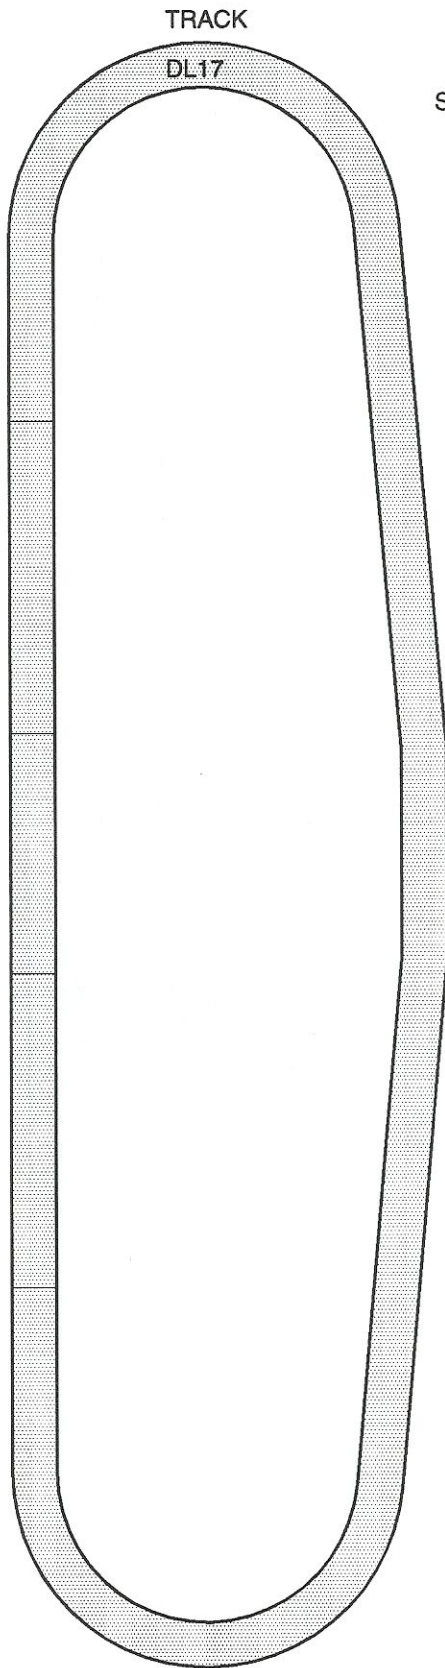

SHOVEL BUSHING SUPPORT

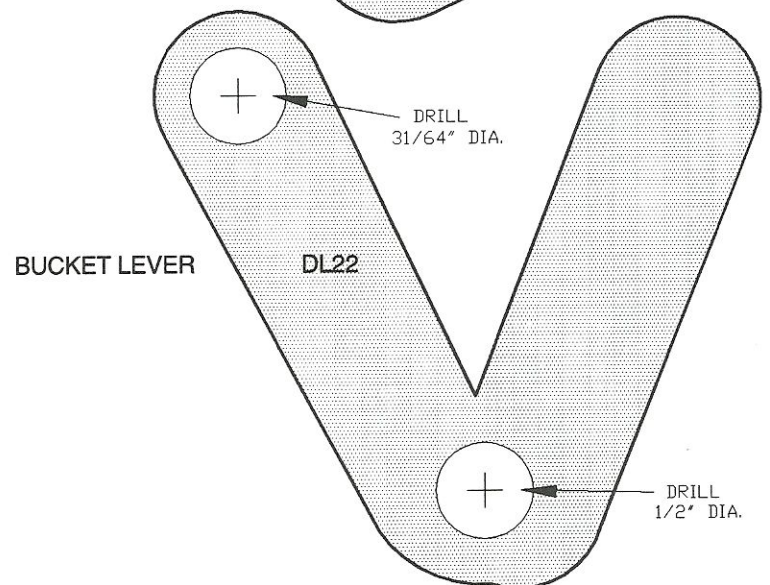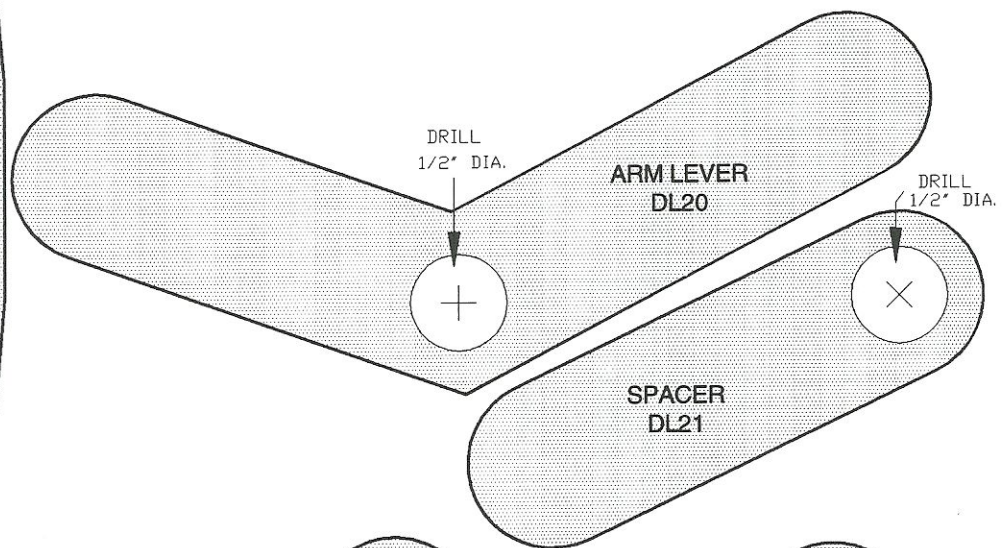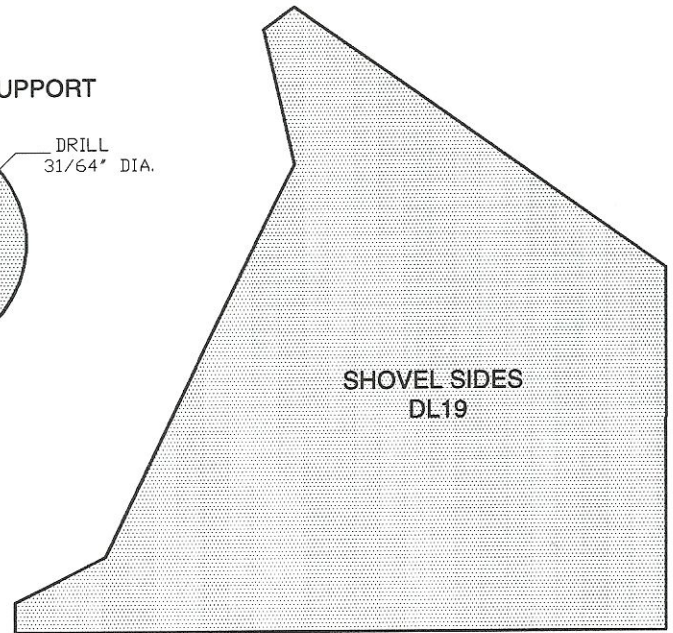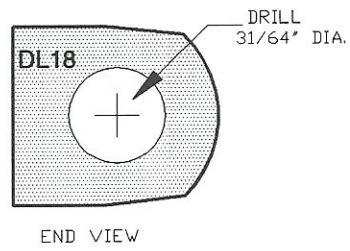


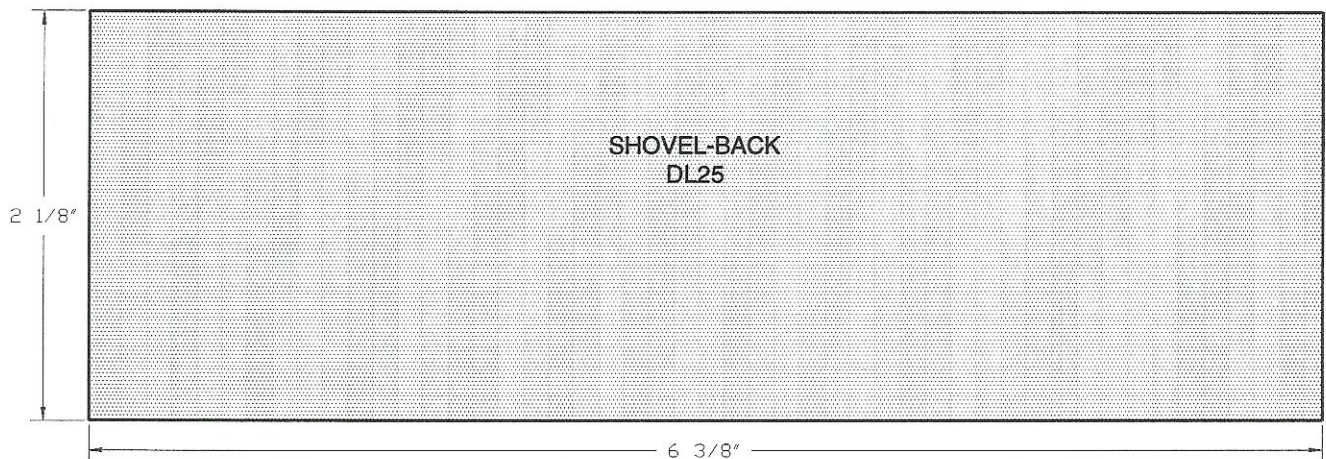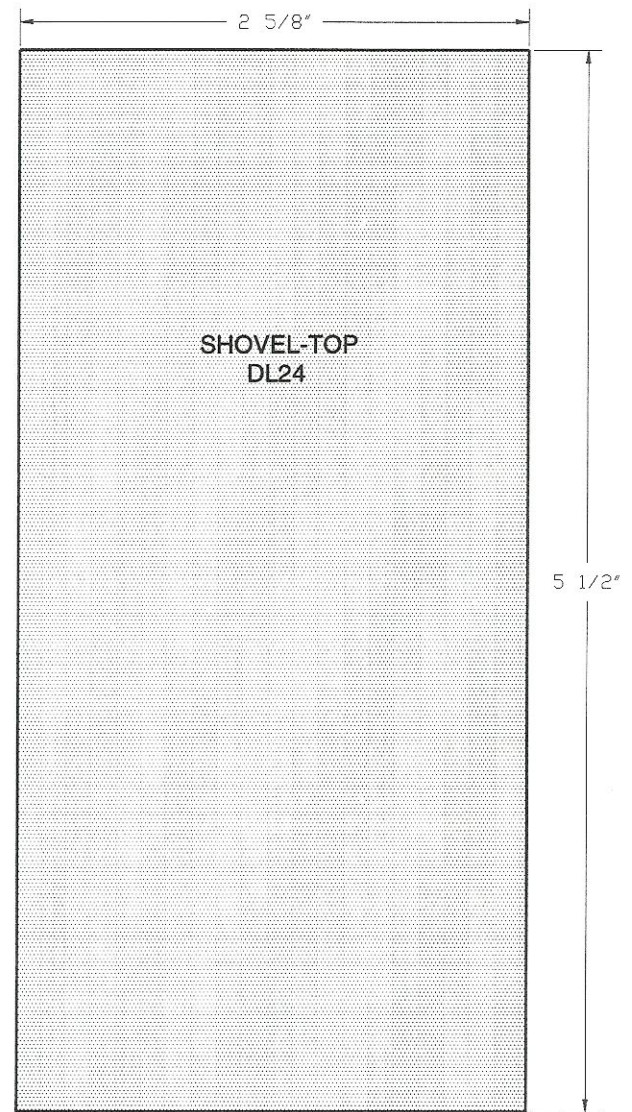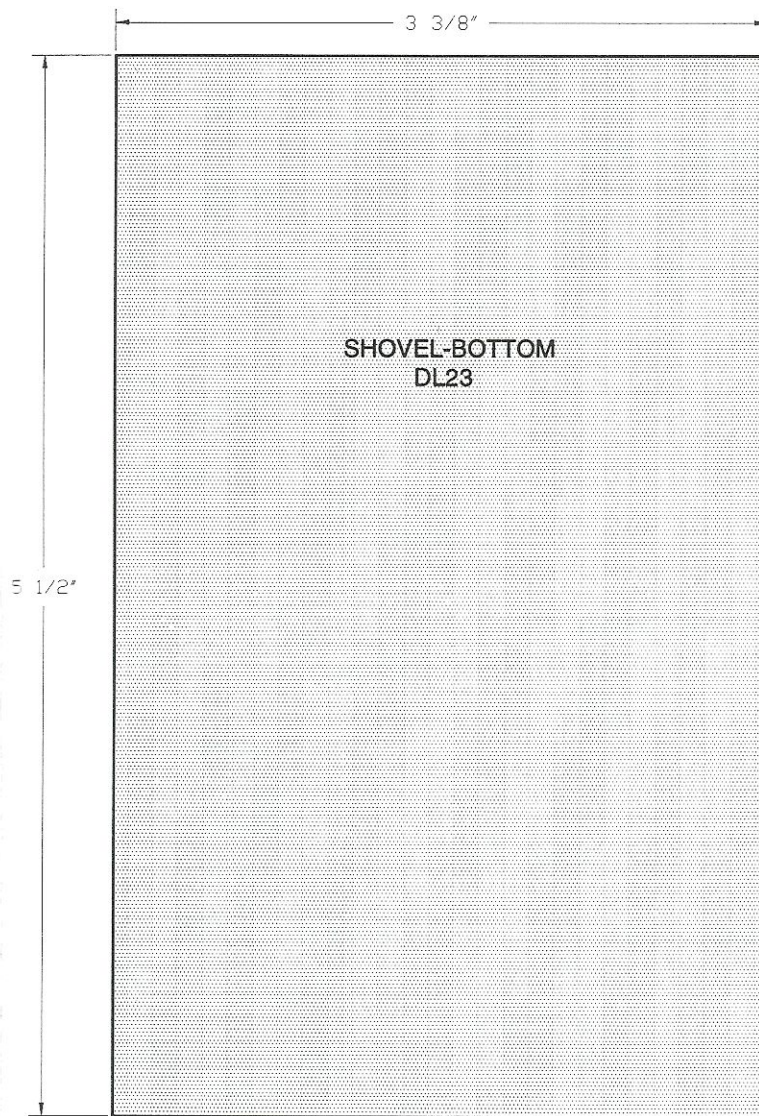

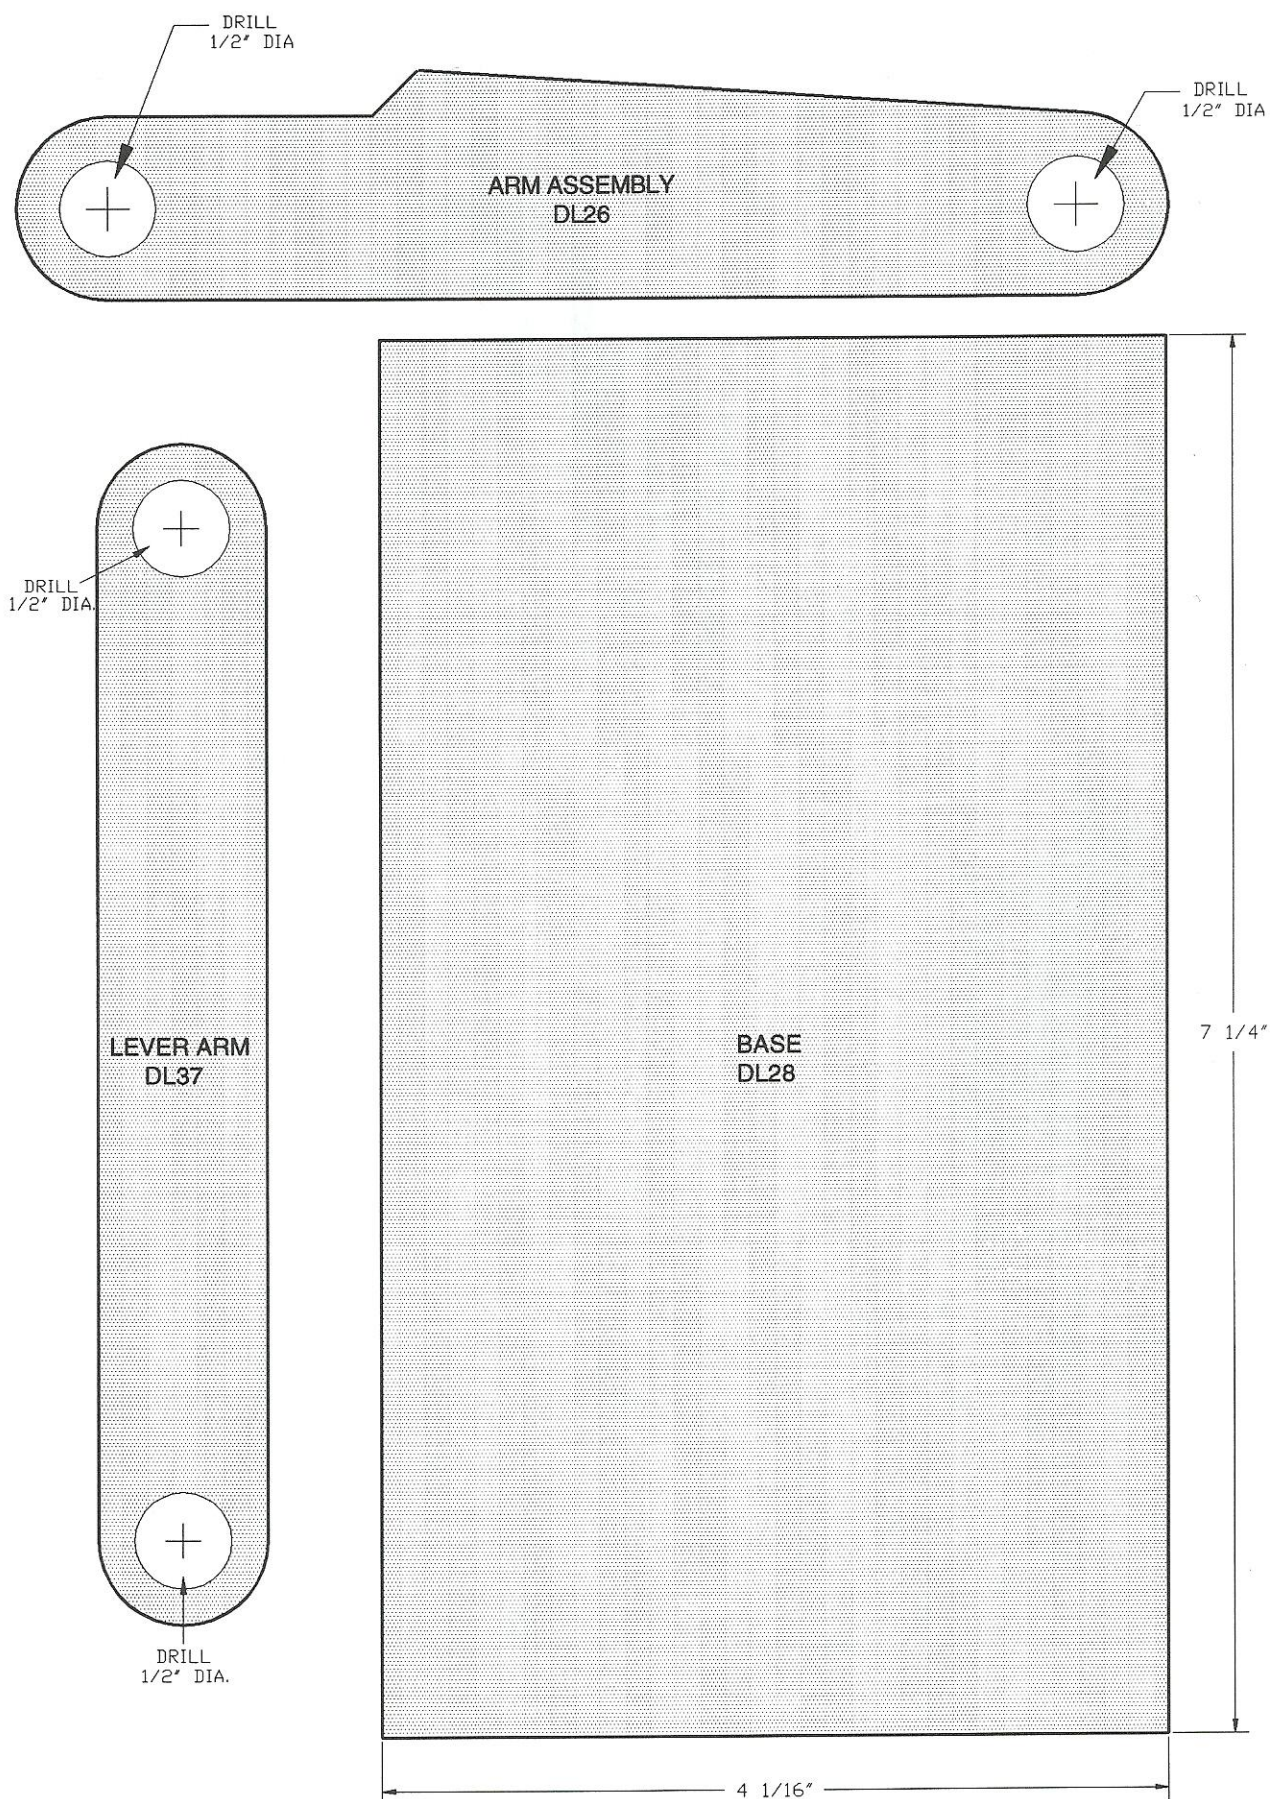


DL29

WHEEL SHAFTS
(2 REQUIRED)

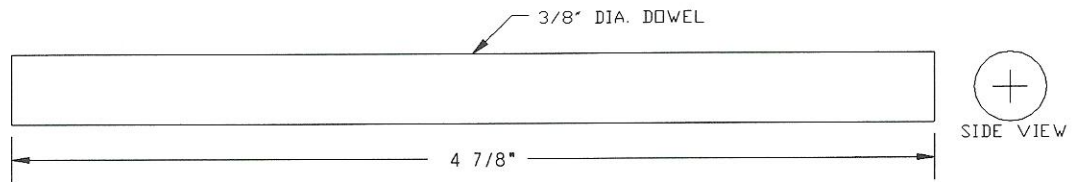

DL32


PINS
(2 REQUIRED)

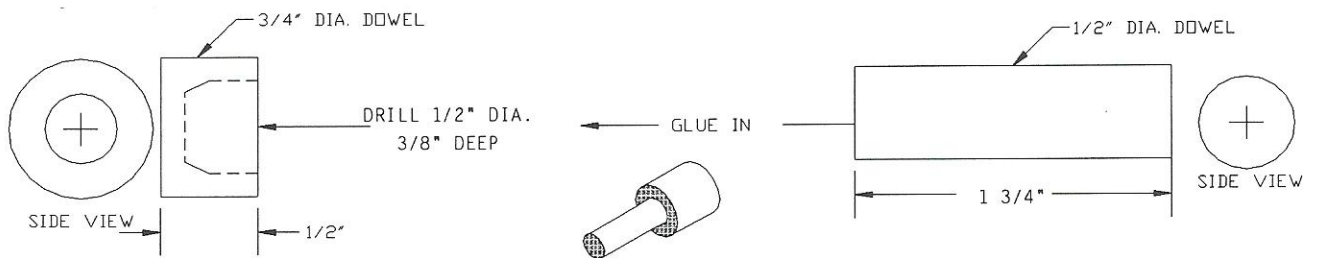

ASSEMBLED PART

DL33


PINS
(2 REQUIRED)

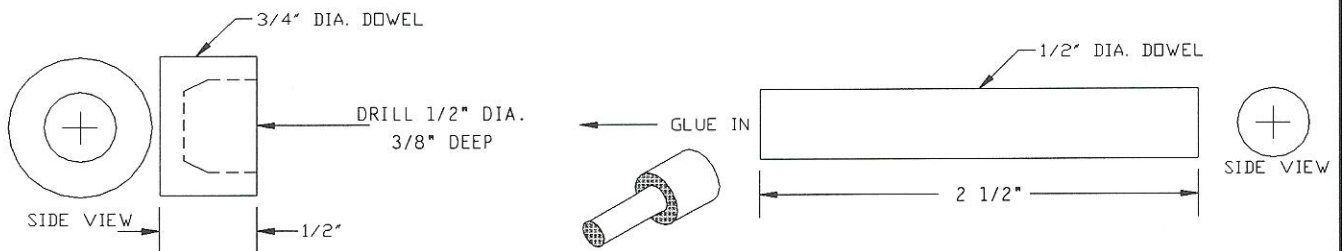

ASSEMBLED PART

DL34


LOCKING PINS
(2 REQUIRED)

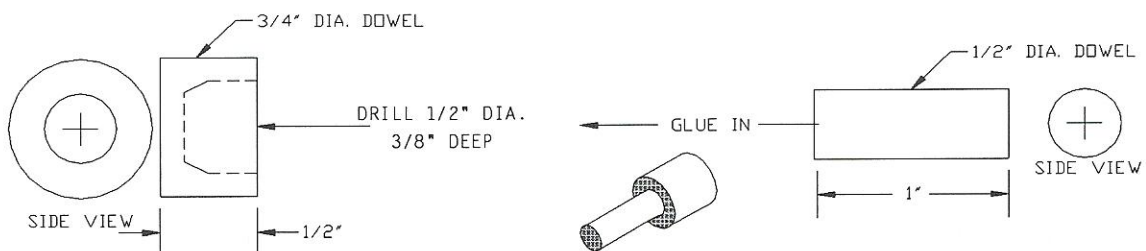


ASSEMBLED PART

DL35


**SPACER
(1 REQUIRED)**

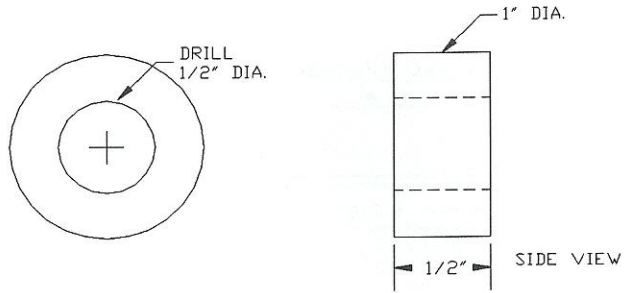


Additional Information - Dozer Loader

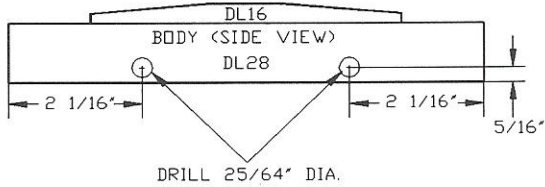


Drill holes into body DL28, as shown.

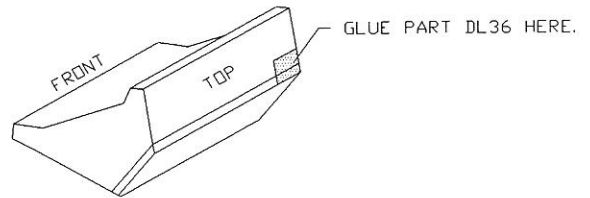

Where to glue part DL36 onto shovel assembly.

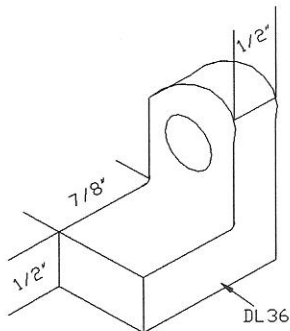


Part DL36 completed.

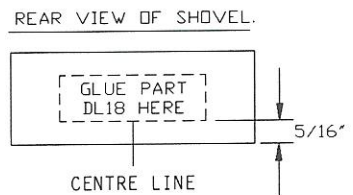


Where to glue part DL18
onto shovel assembly.

Dozer Loader - Assembly Drawings

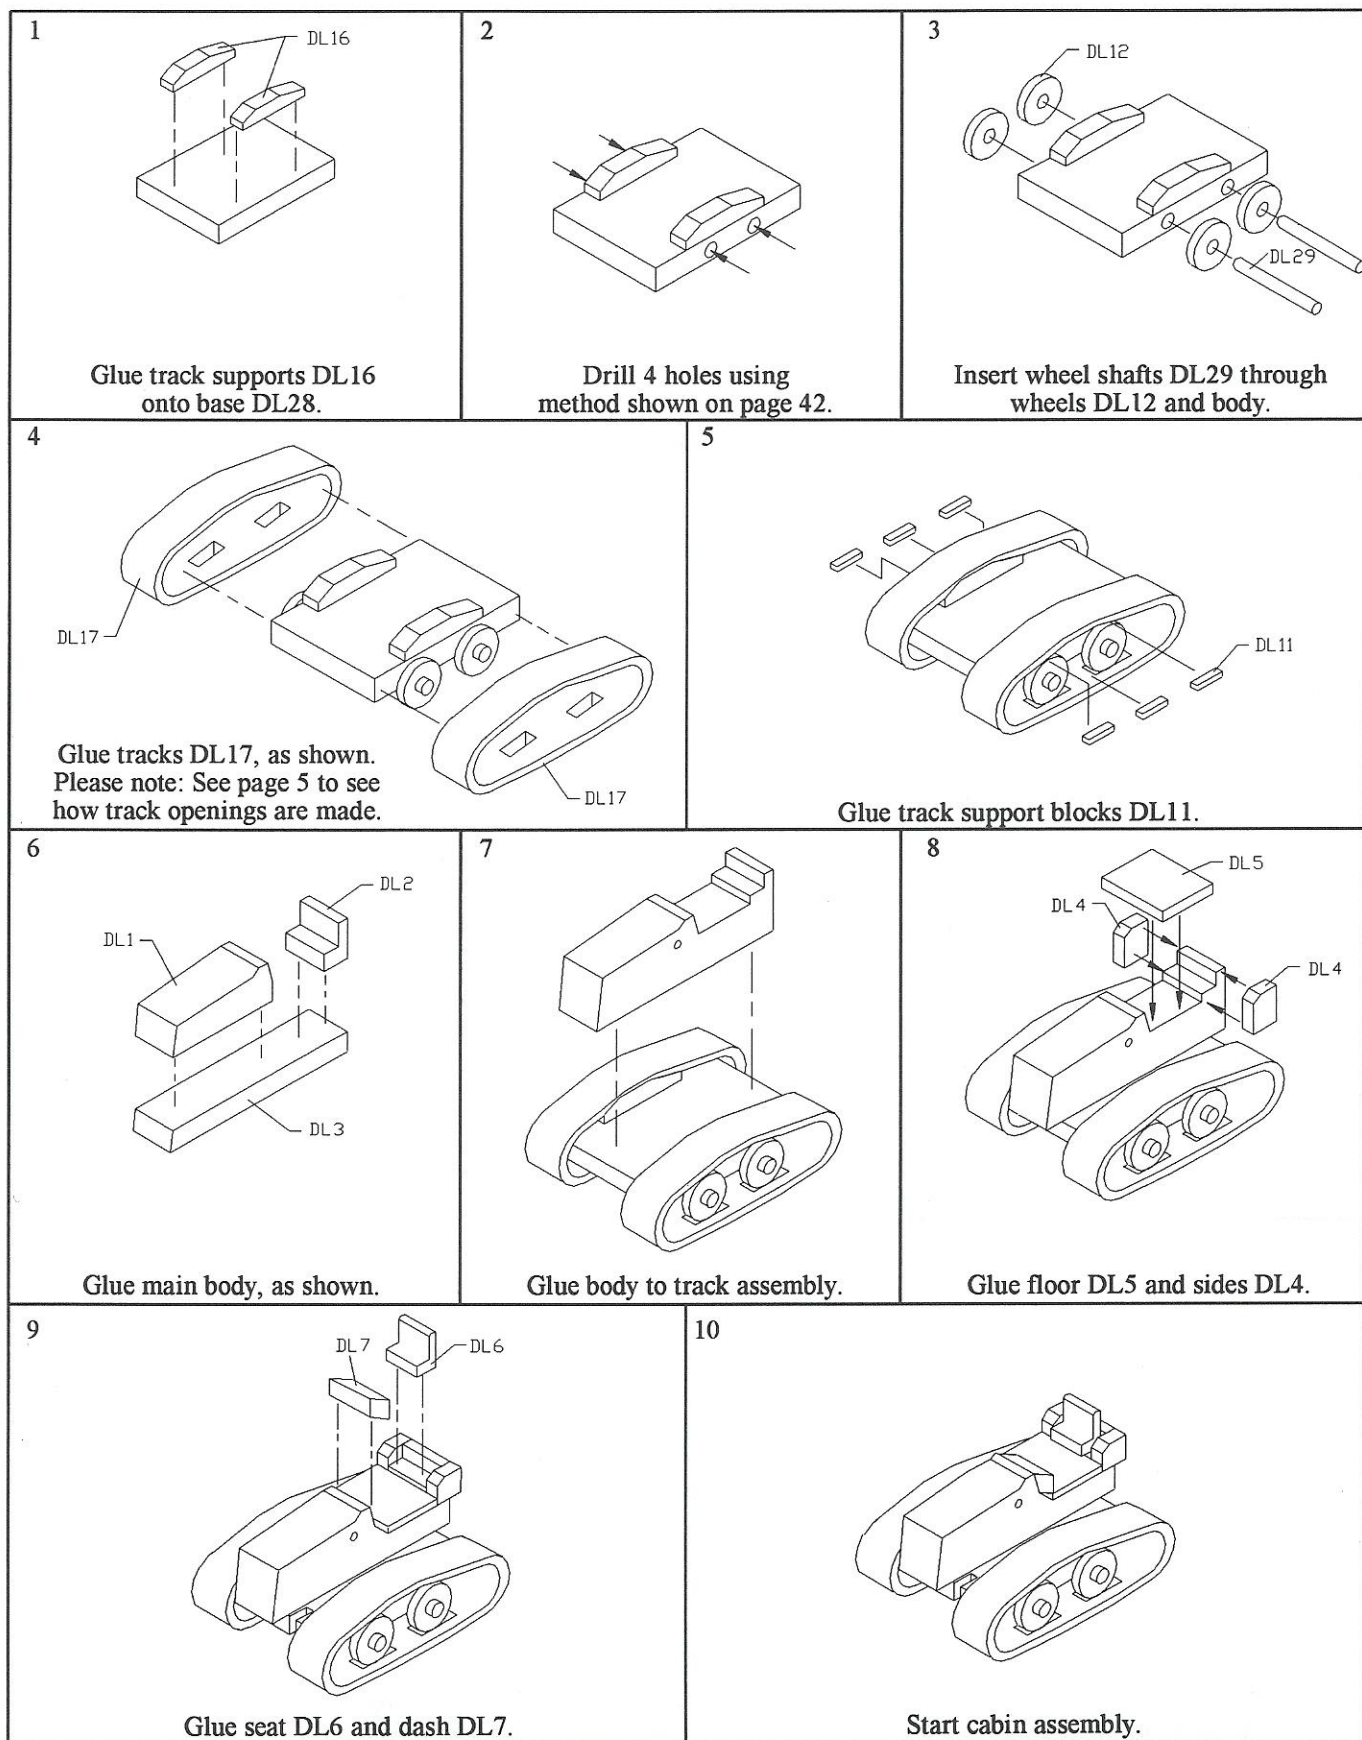

11

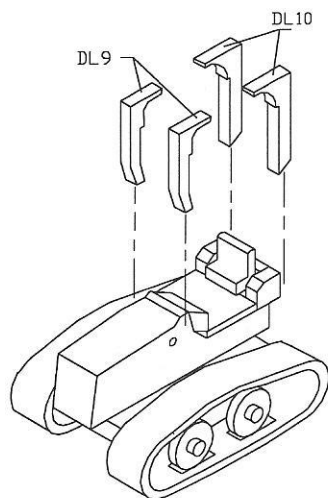


Glue cabin frames DL9 and DL10.

12


IMPORTANT

Cabin must be completely assembled before glue dries so that you have time to make corrections, if necessary.

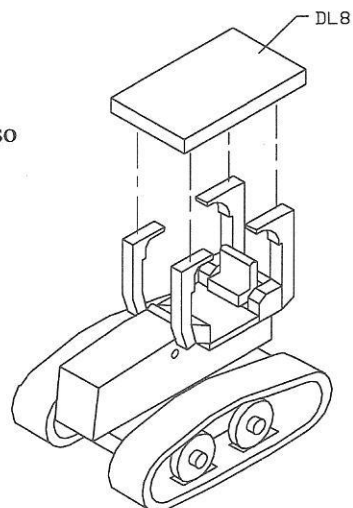


Glue roof assembly DL8.

13

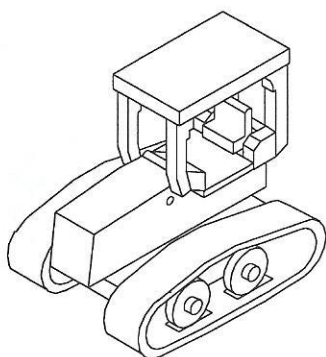


Start shovel assembly.

14

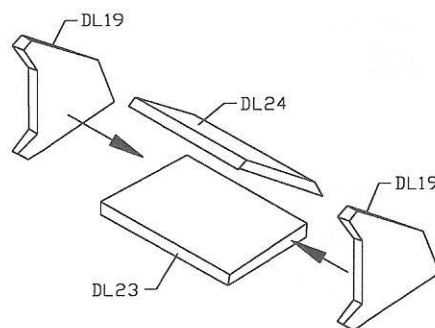


Glue shovel sides DL19 to shovel top DL24 and shovel bottom DL23.

15

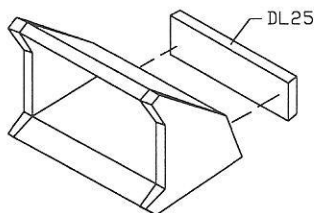


Glue shovel back DL25, as shown. See page 6 for hints on making the shovel assembly.

16

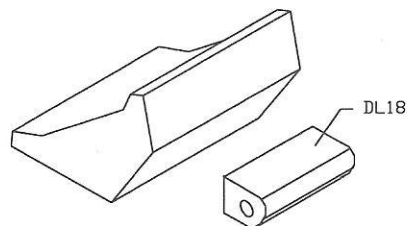


Glue shovel bushing support DL18 to shovel. See page 42 for exact location.

17

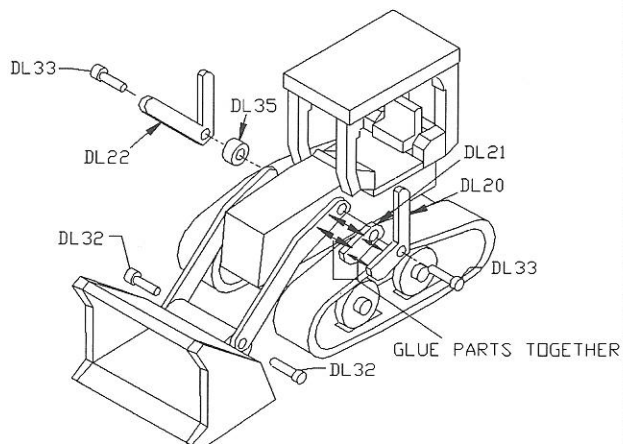


Assemble parts, as shown.

18

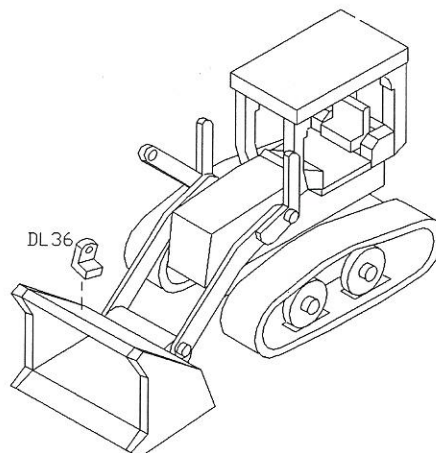


Glue lever block DL36. See page 42 for exact location.

19

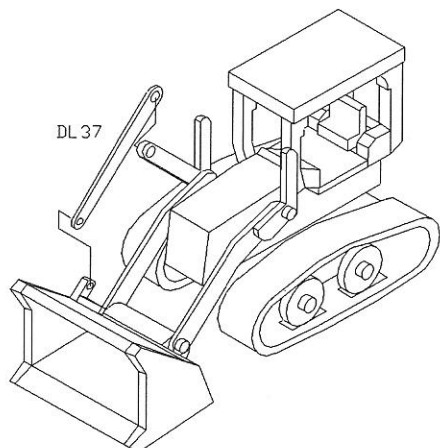


Install lever arm DL37.

20

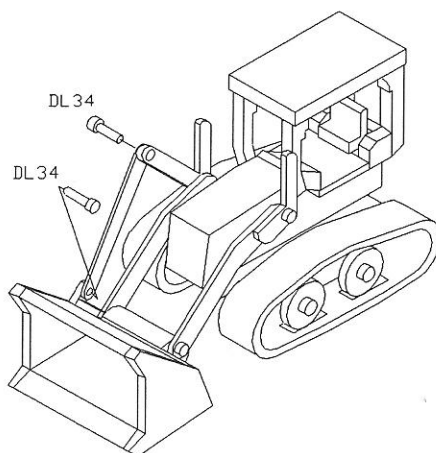


Insert locking pins DL34.

21

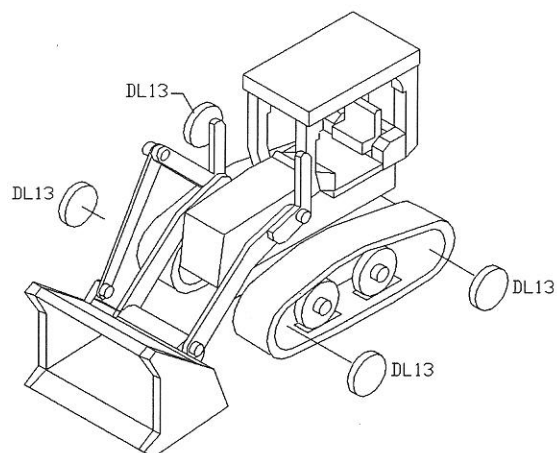


Glue parts, as shown.

22

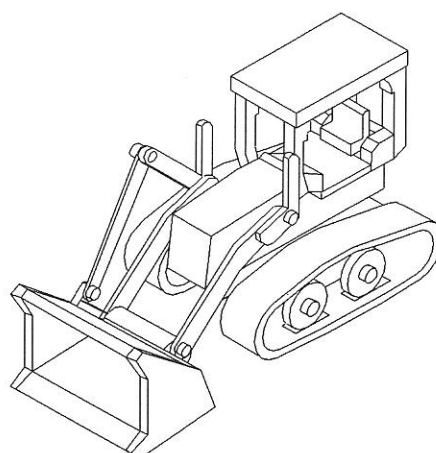

Your model should now be complete.

EXCAVATOR

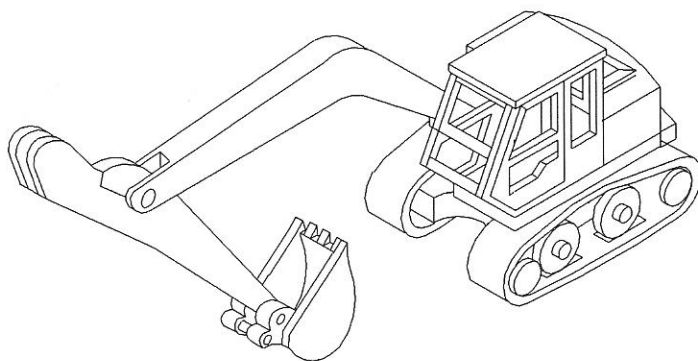


General Instructions - Excavator

- 1- Start by cutting materials needed by following the list of materials, paying attention to the rough and finished size. **Identify the parts as they are cut.**

Please note: Different types of wood can be used for the various parts. It is suggested, however, that hard wood be used, since many of the parts would be much too fragile if using soft wood. We have used a combination of pine, maple and oak to give the models a nice contrast!

- 2- Remove the full-size patterns found in the appendix. Cut them out, leaving approximately $1/16"$ all around, and place on the proper piece of wood. Patterns can be secured to wood using either spray adhesive or rubber cement. If using the latter, cut and sand the part first to finished size. If drilling is required, mark the hole by inserting a scribe or nail through the pattern into the wood. Remove the pattern before drilling.

You should have no trouble determining which surface to attach most of the patterns. Some parts, however, can be confusing since the pattern could fit on more than one surface. The drawings below indicate exactly which surface to attach the patterns for these parts.

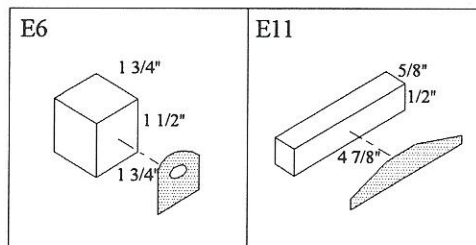

- 4- Look at the full-size drawing sheets to finish parts E5, E12, and E13.
- 5- Parts E6 and E19 will need additional cuts and details, please refer to the additional information pages, to complete these parts.
- 6- Using maple dowels, make all pins, shafts, etc.
- 7- Follow the assembly drawings to complete your model.

List of materials - Excavator

Part	T	W	L	Material	Qty.	*
E1	3/8"	4"	4"	oak	1	R
E2	3/8"	2"	4"	oak	1	R
E3	3/8"	4"	4"	oak	1	R
E4	3/8"	2 5/8"	3 1/8"	pine	1	F
E5	1/2"	5 9/16"	6 3/8"	pine	1	F
E6	1 1/2"	1 3/4"	1 3/4"	maple	1	R
E7	3/8"	1 7/8"	1 7/8"	maple	4	R
E8	3/8"	3/8"	1 3/4"	oak	2	F
E9	1/4"	1/2"	1 1/4"	pine	6	F
E10	1 1/2"	3 7/8"	5 5/8"	pine	1	R
E11	3/8"	5/8"	4 3/4"	pine	2	F
E12	1/4"	1 7/8"	3 7/16"	pine	1	F

Part	T	W	L	Material	Qty.	*
E13	1 1/4"	3 7/8"	7"	pine	1	F
E14	3/8"	2 5/8"	2 5/8"	maple	1	R
E15	1/2"	2 3/8"	2 3/8"	maple	1	R
E17	1"	3 3/4"	11"	maple	1	R
E18	1/4"	2"	3 1/8"	maple	2	R
E19	1 3/4"	2 1/2"	3 1/2"	maple	1	R
E20	1/2"	1 1/2"	5 5/8"	oak	1	R
E21	1 1/2"	2 1/2"	8 3/4"	pine	2	R
E22	3/8"	1 3/8"	7"	maple	2	R
E23	3/8"	2"	7 7/8"	maple	1	R
E25	1/4"	1 9/16" DIA.		maple	4	R

R = Rough size
F = Finished size

T = Thickness

W = Width





L = Length



Instructions:

R= Rough sizes, the material is cut oversized so you have ample room to apply the pattern on the surface. Sanding is not required at this point.


F = Finished Size: Cut and sand parts to finished size.

Full-Sized Patterns: Set One

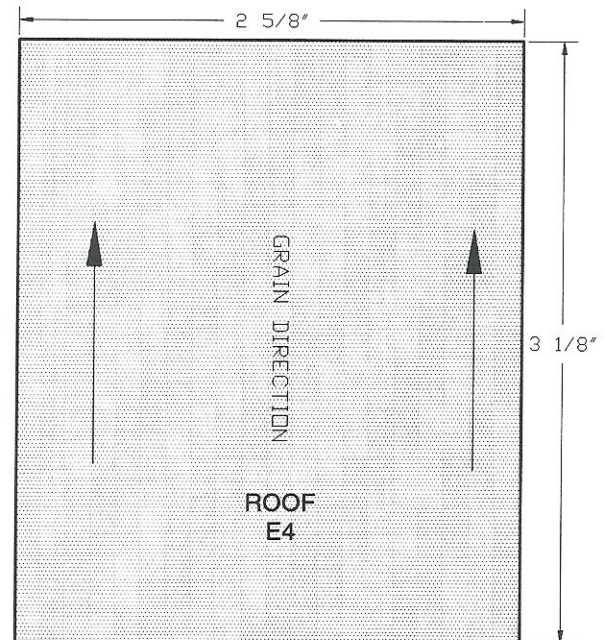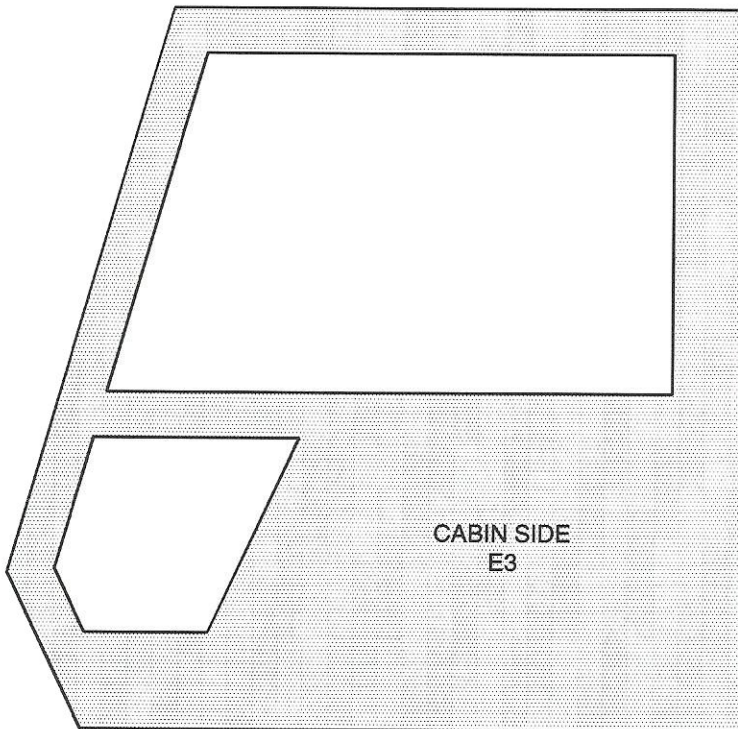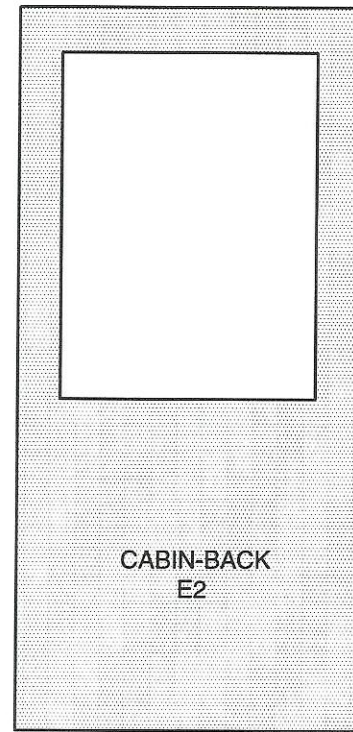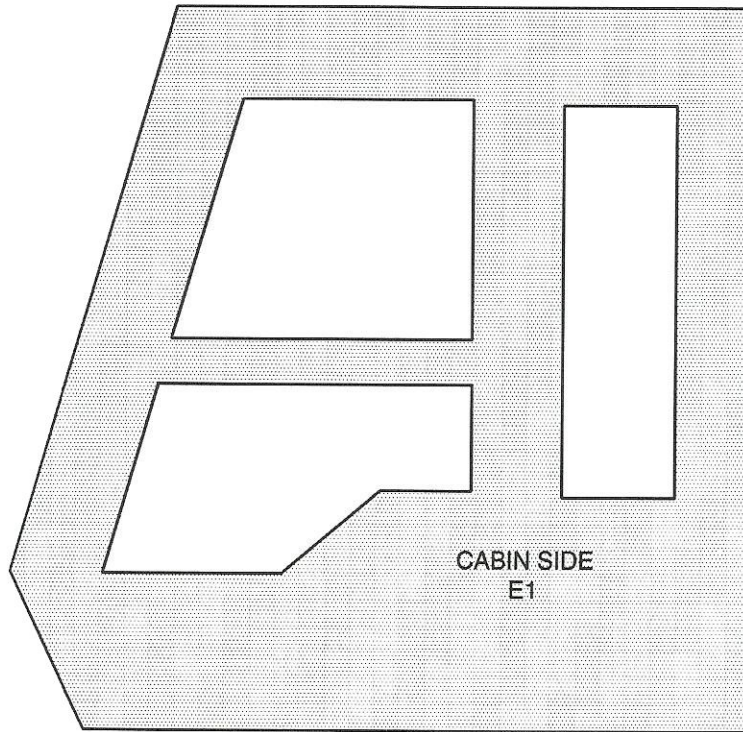


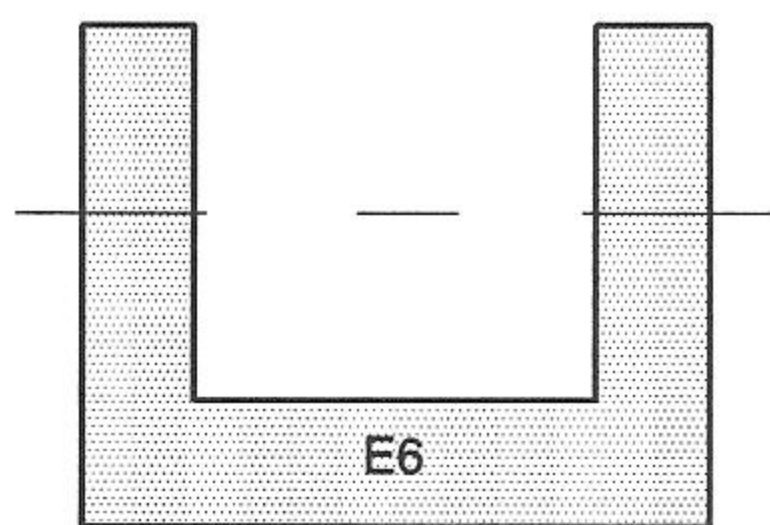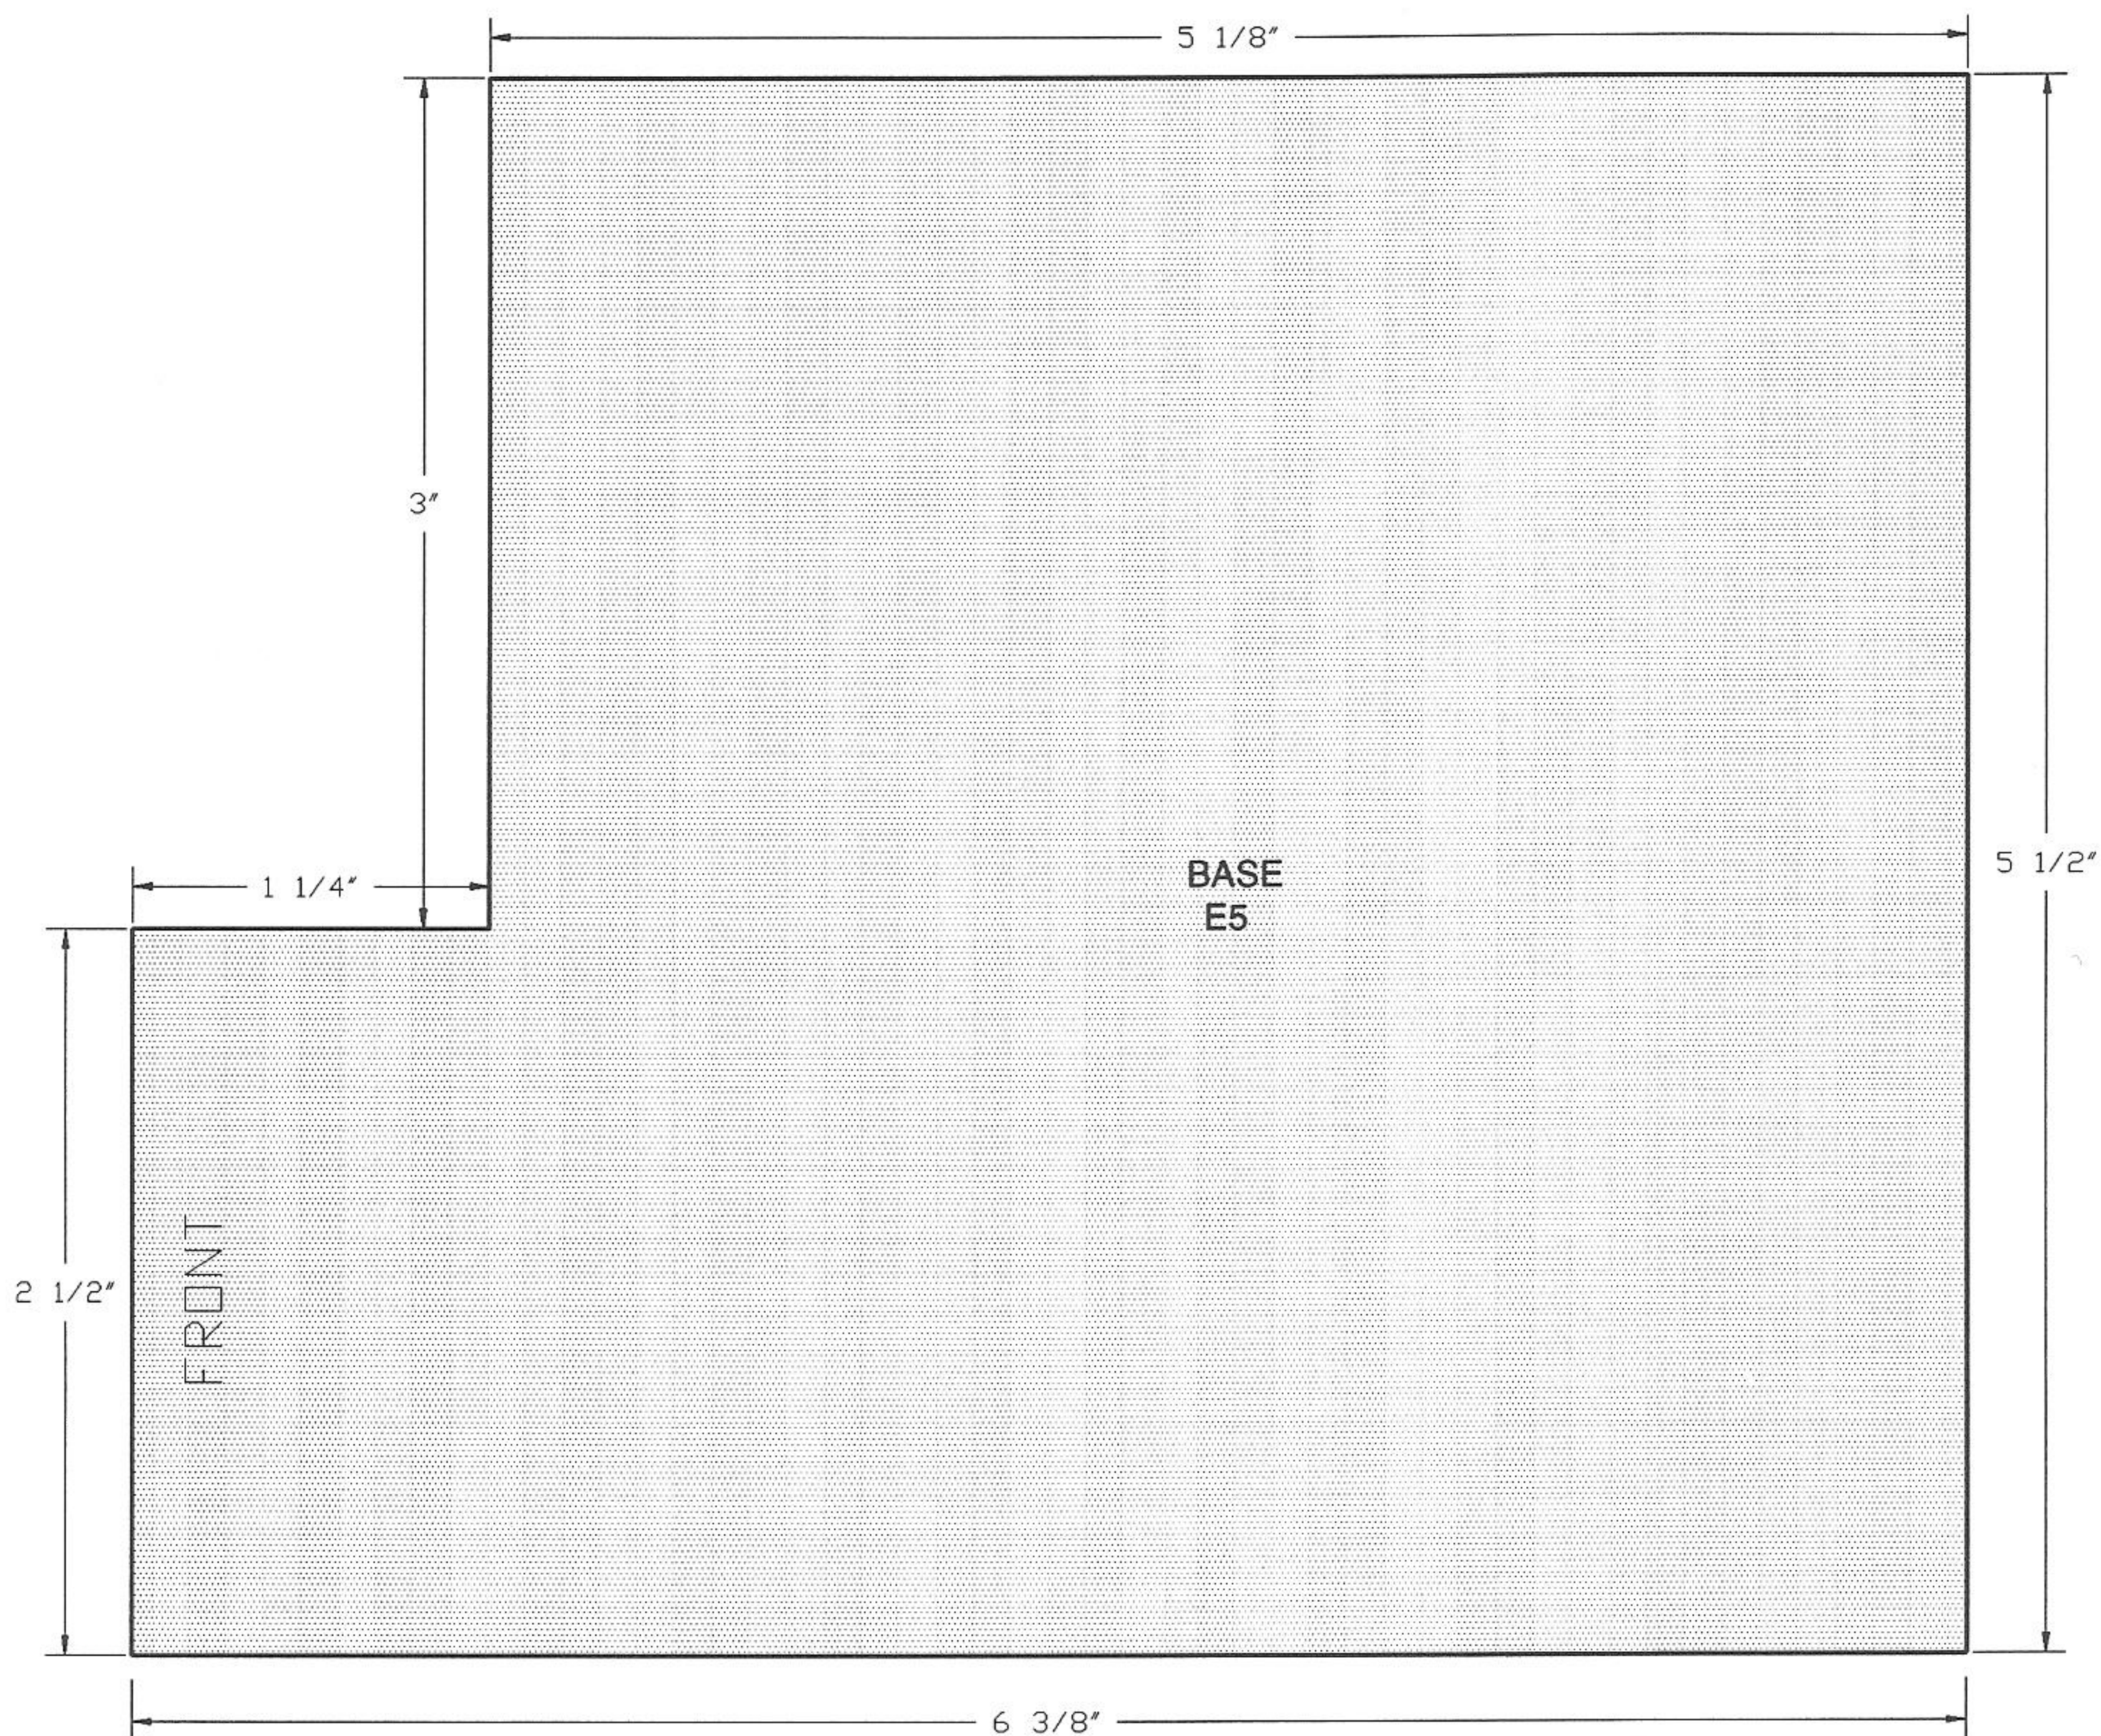




SIDE VIEW

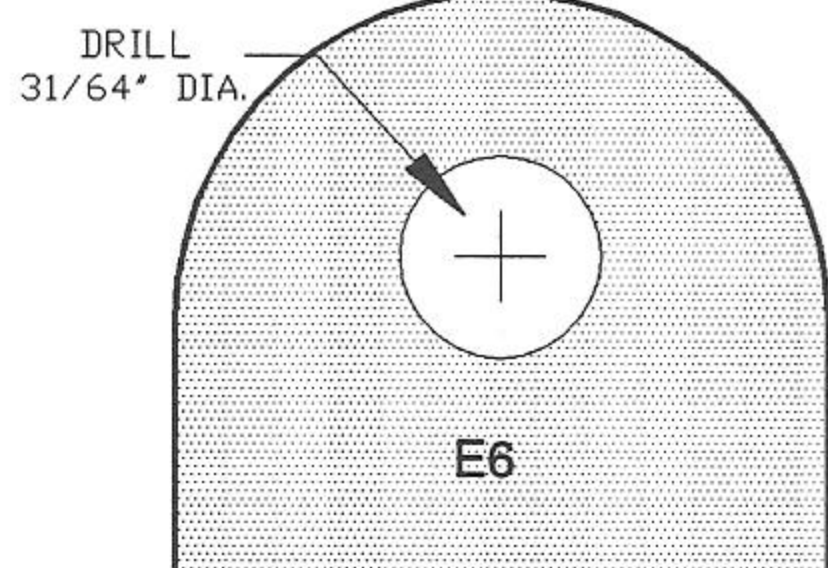


MAIN ARM SUPPORT

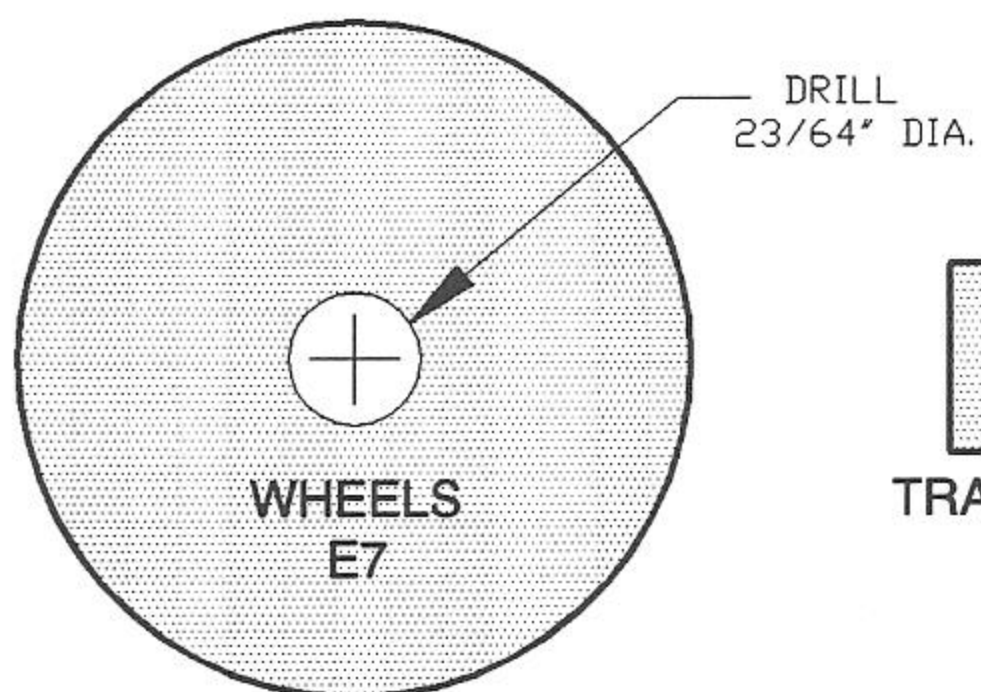


TRACK SUPPORT BLOCKS

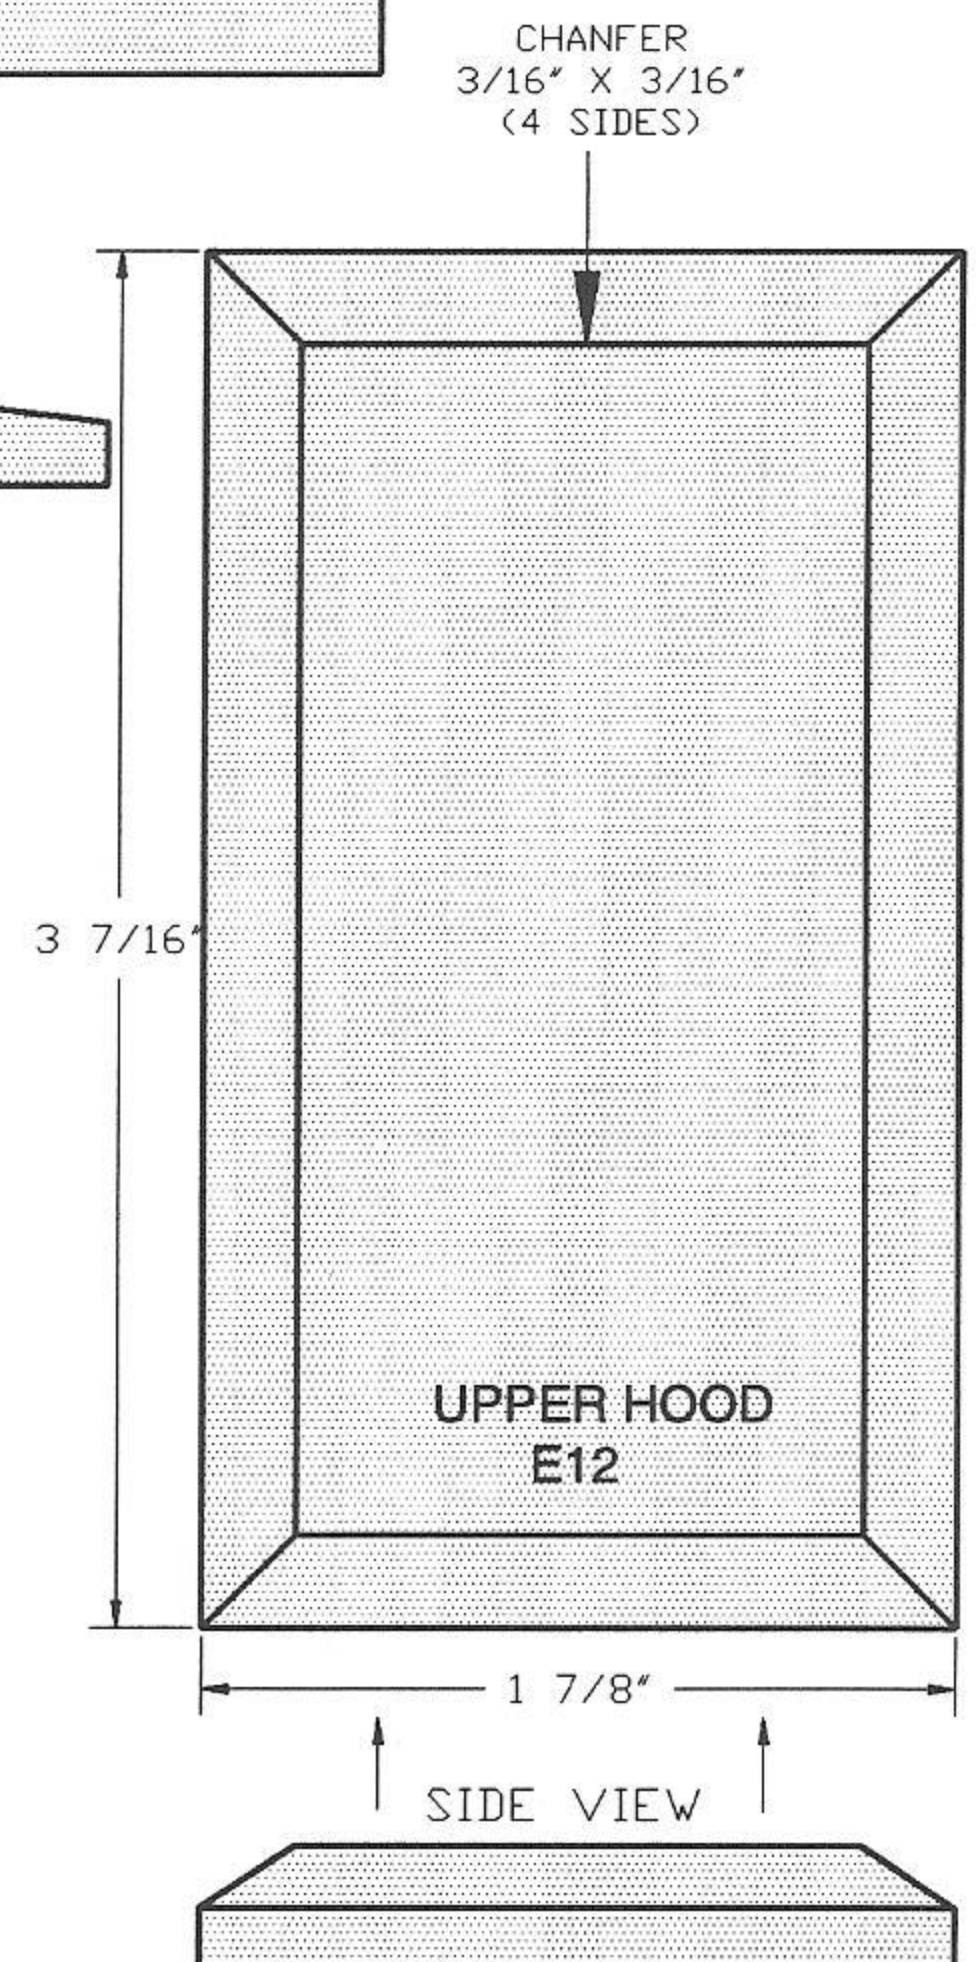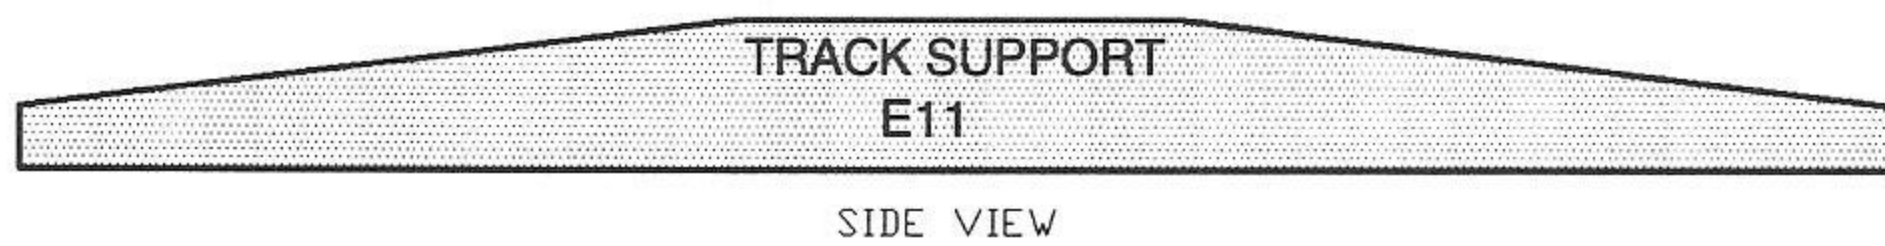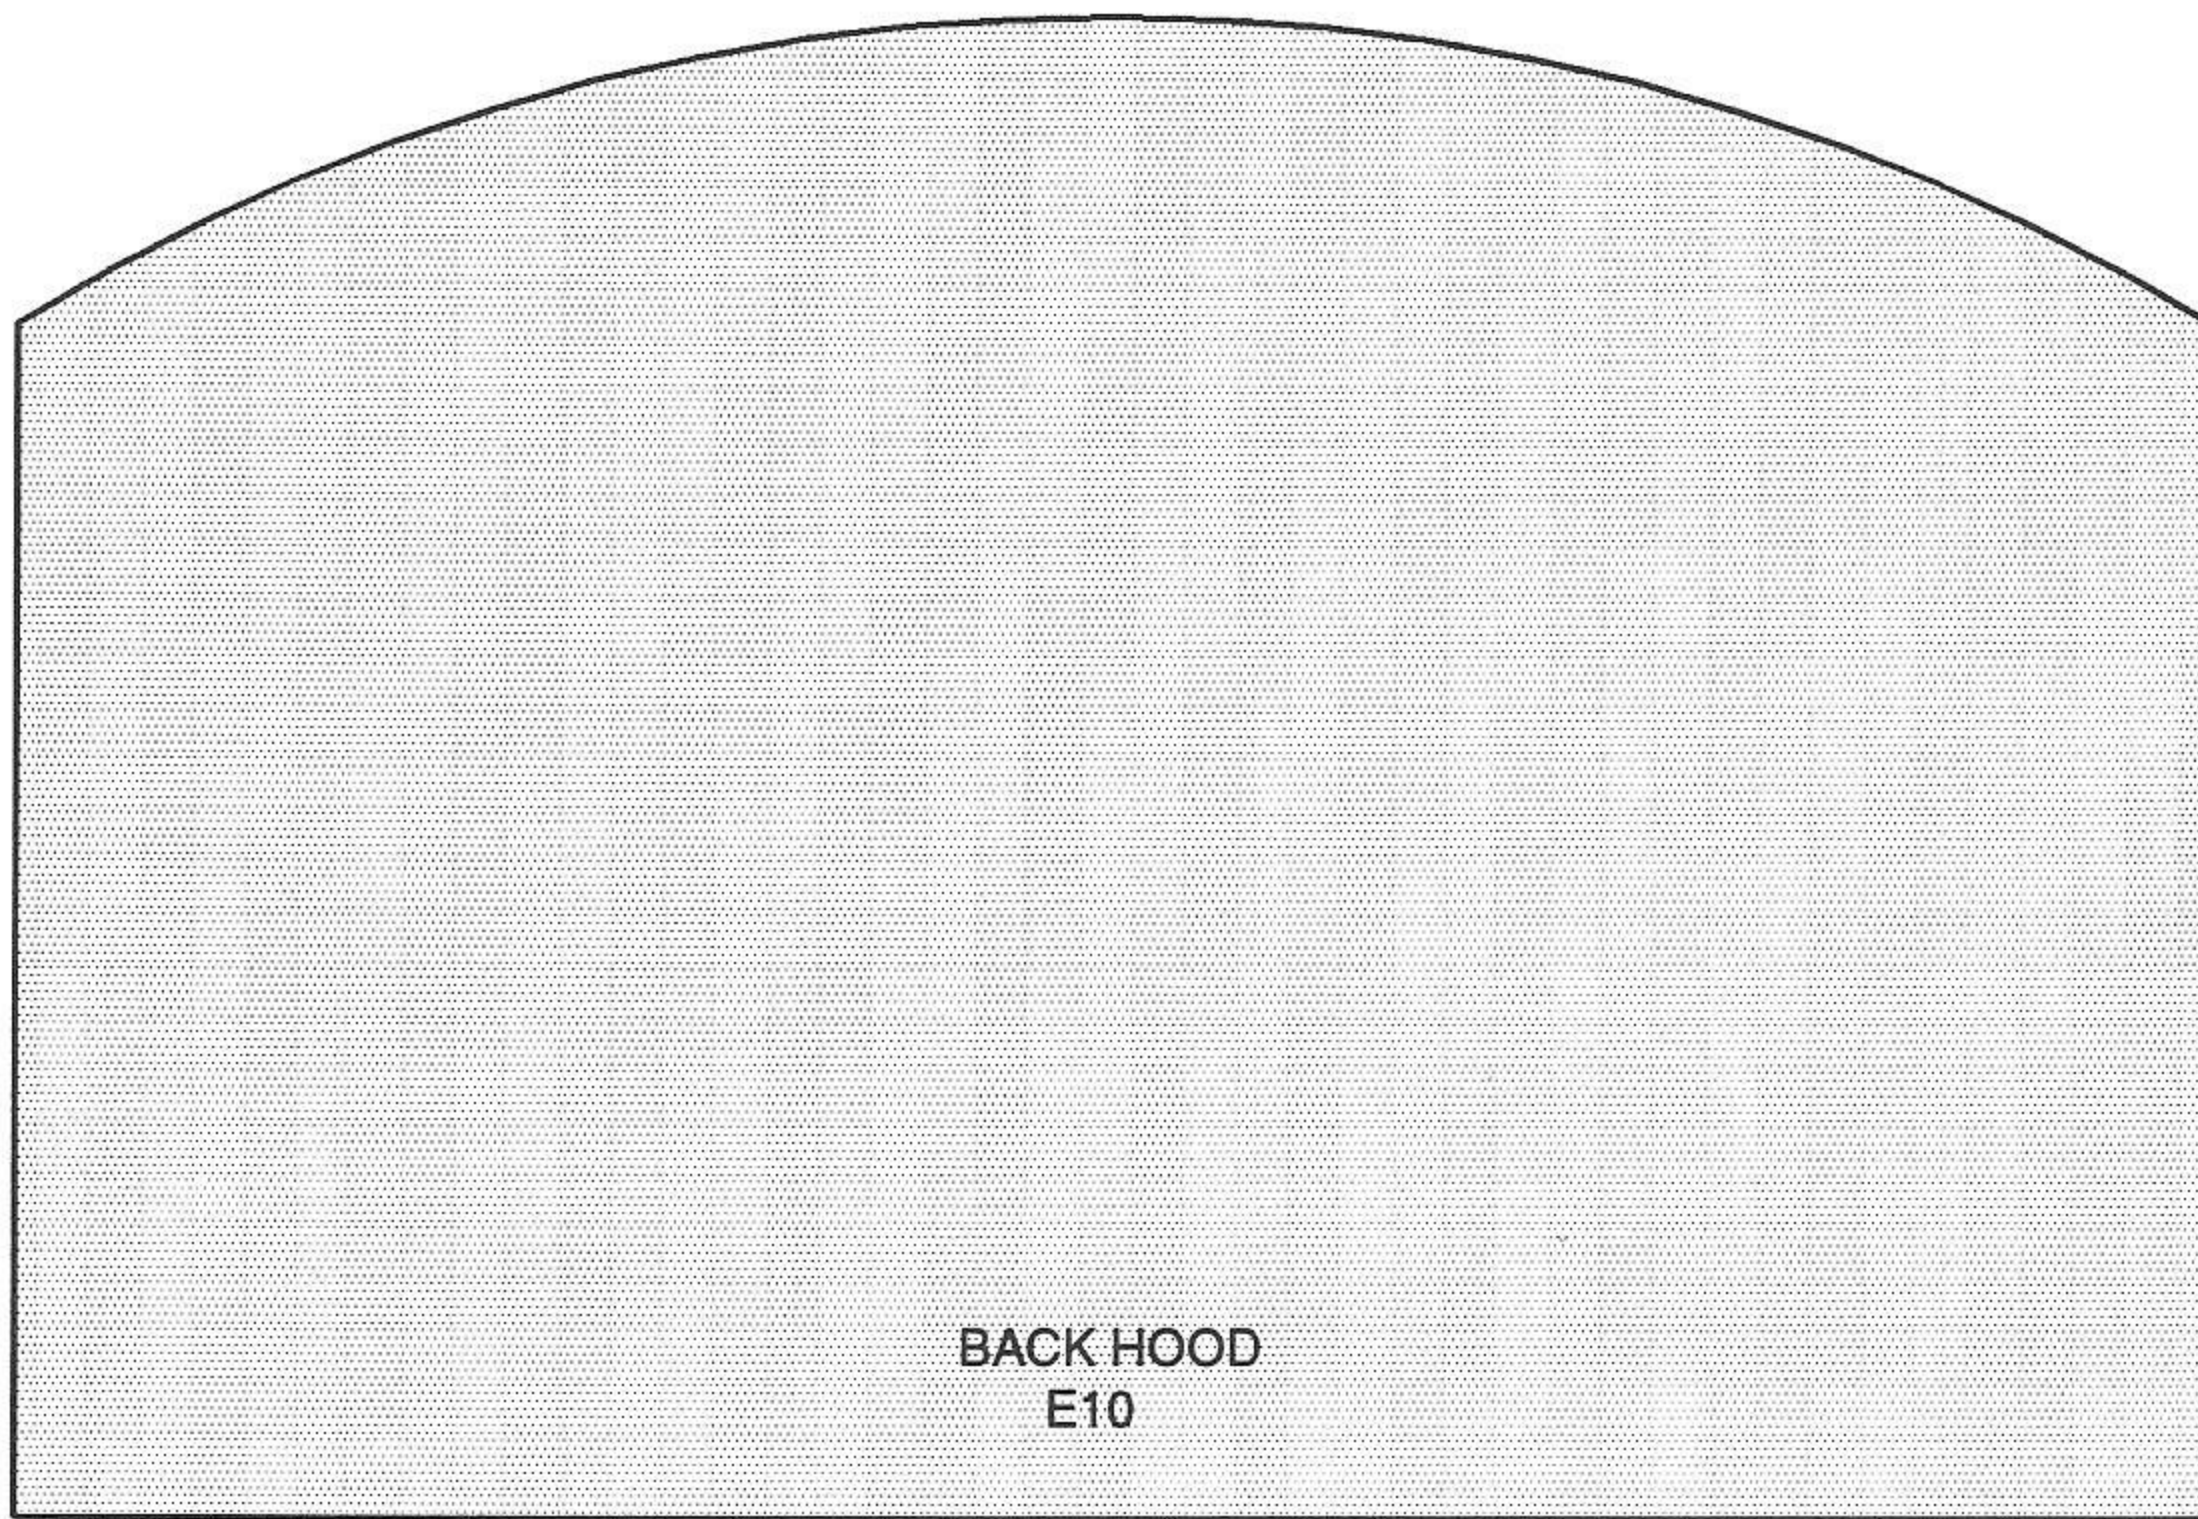

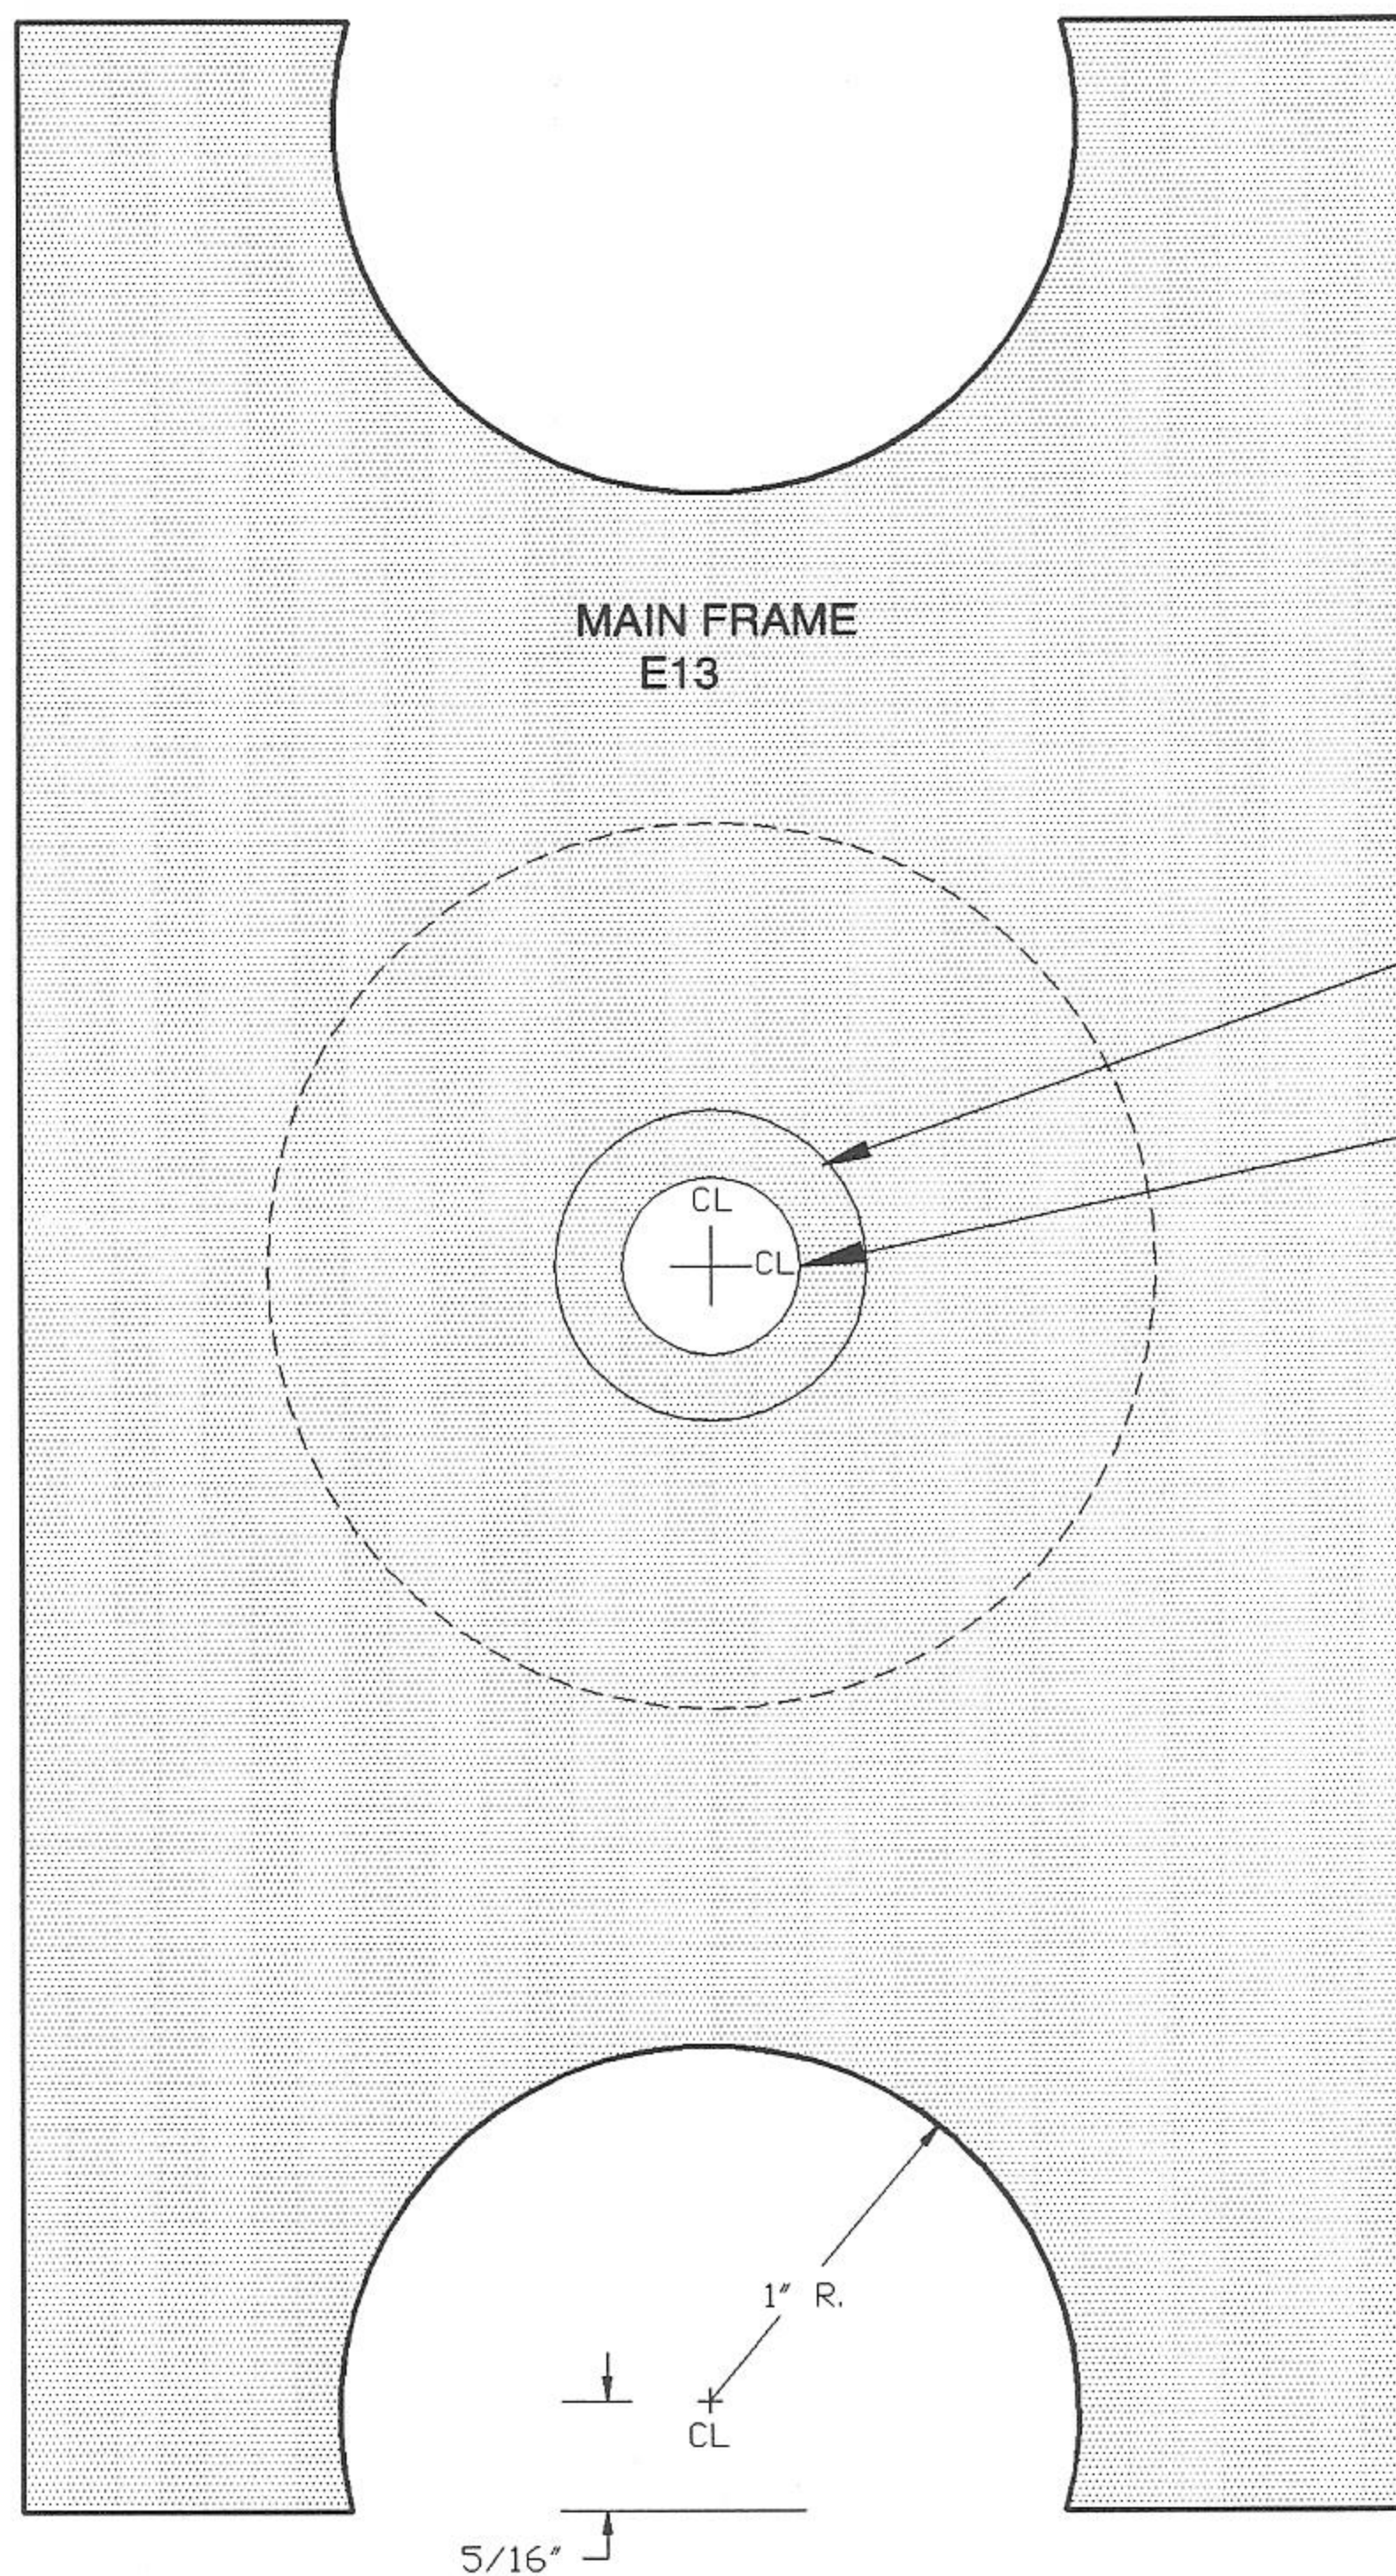



NOTE: CL=CENTRE LINE

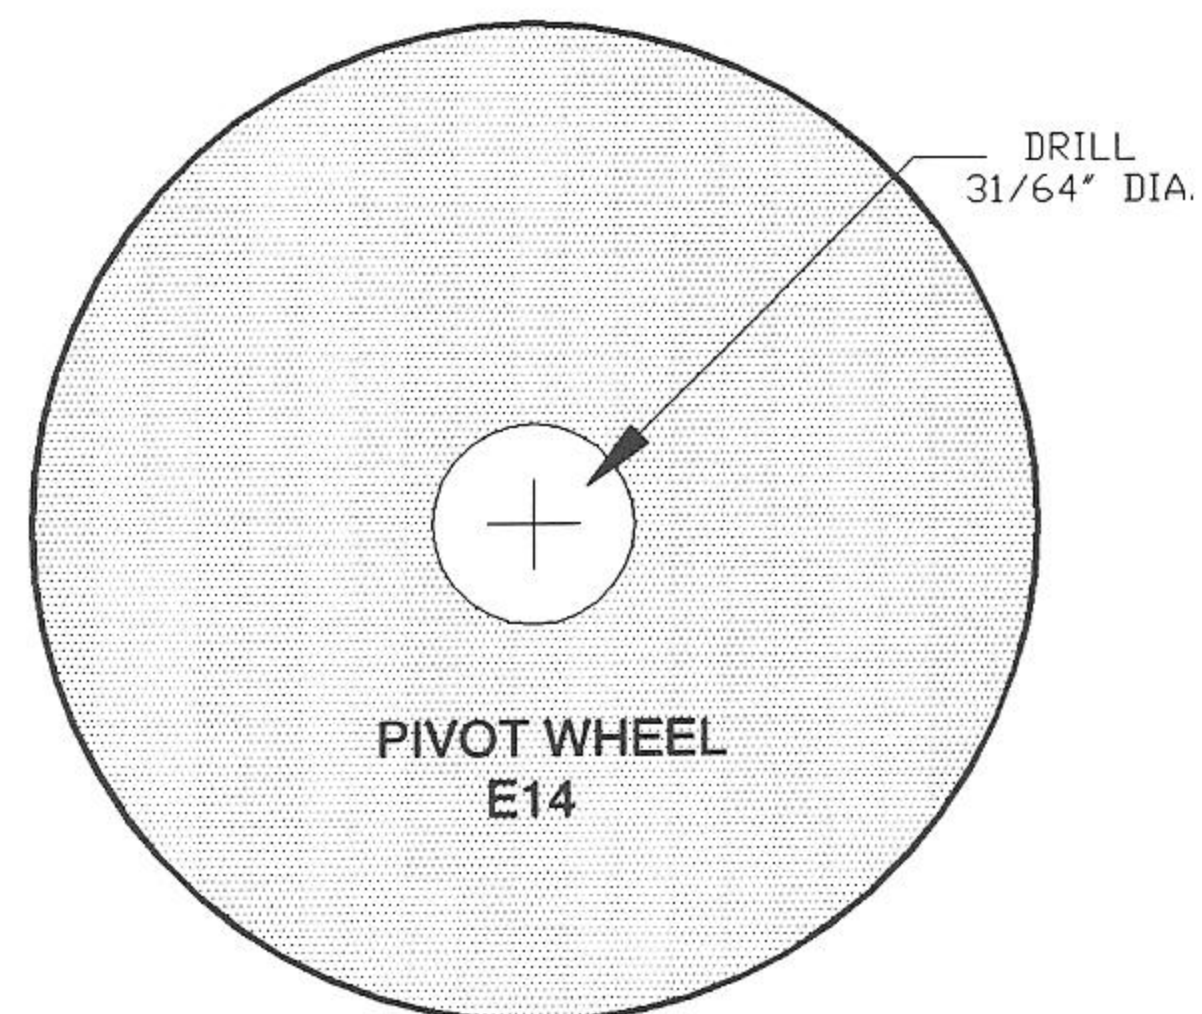







DRILL 7/8" DIA.
1/2" DEEP

DRILL
1/2" DIA.

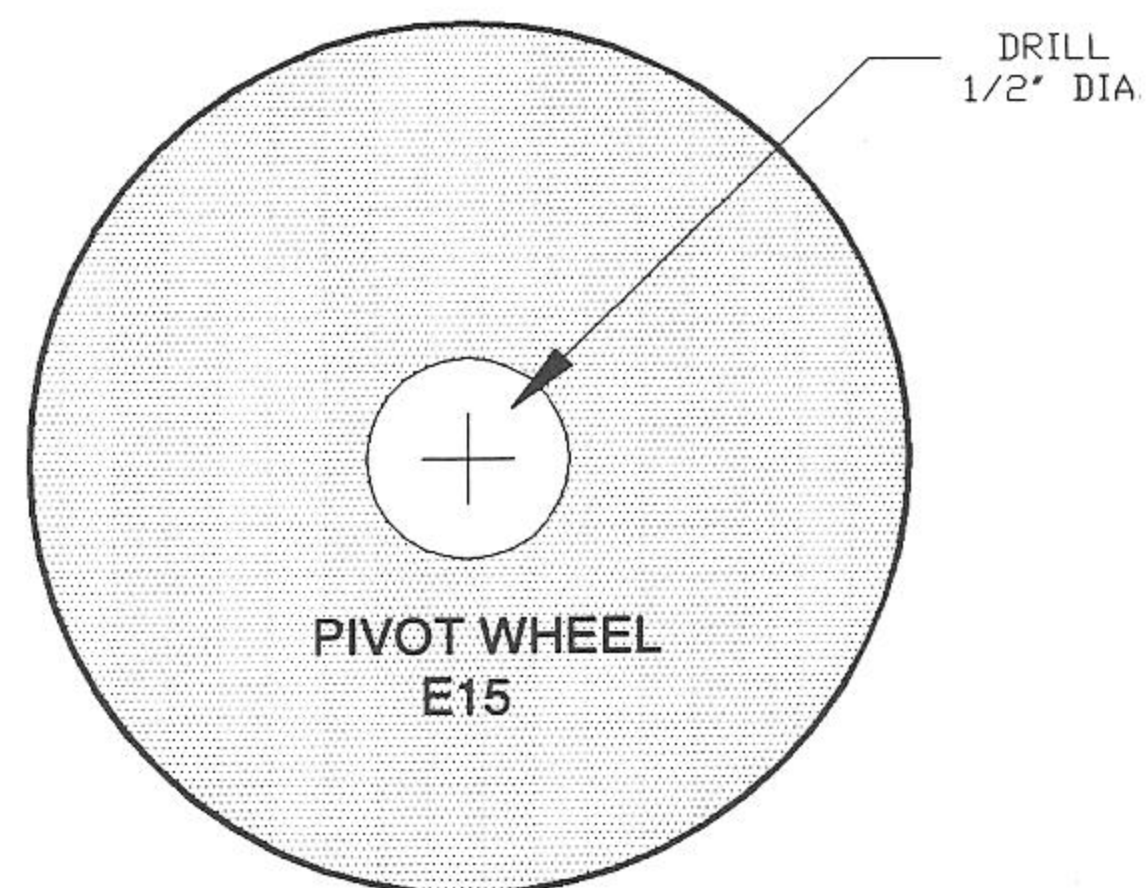


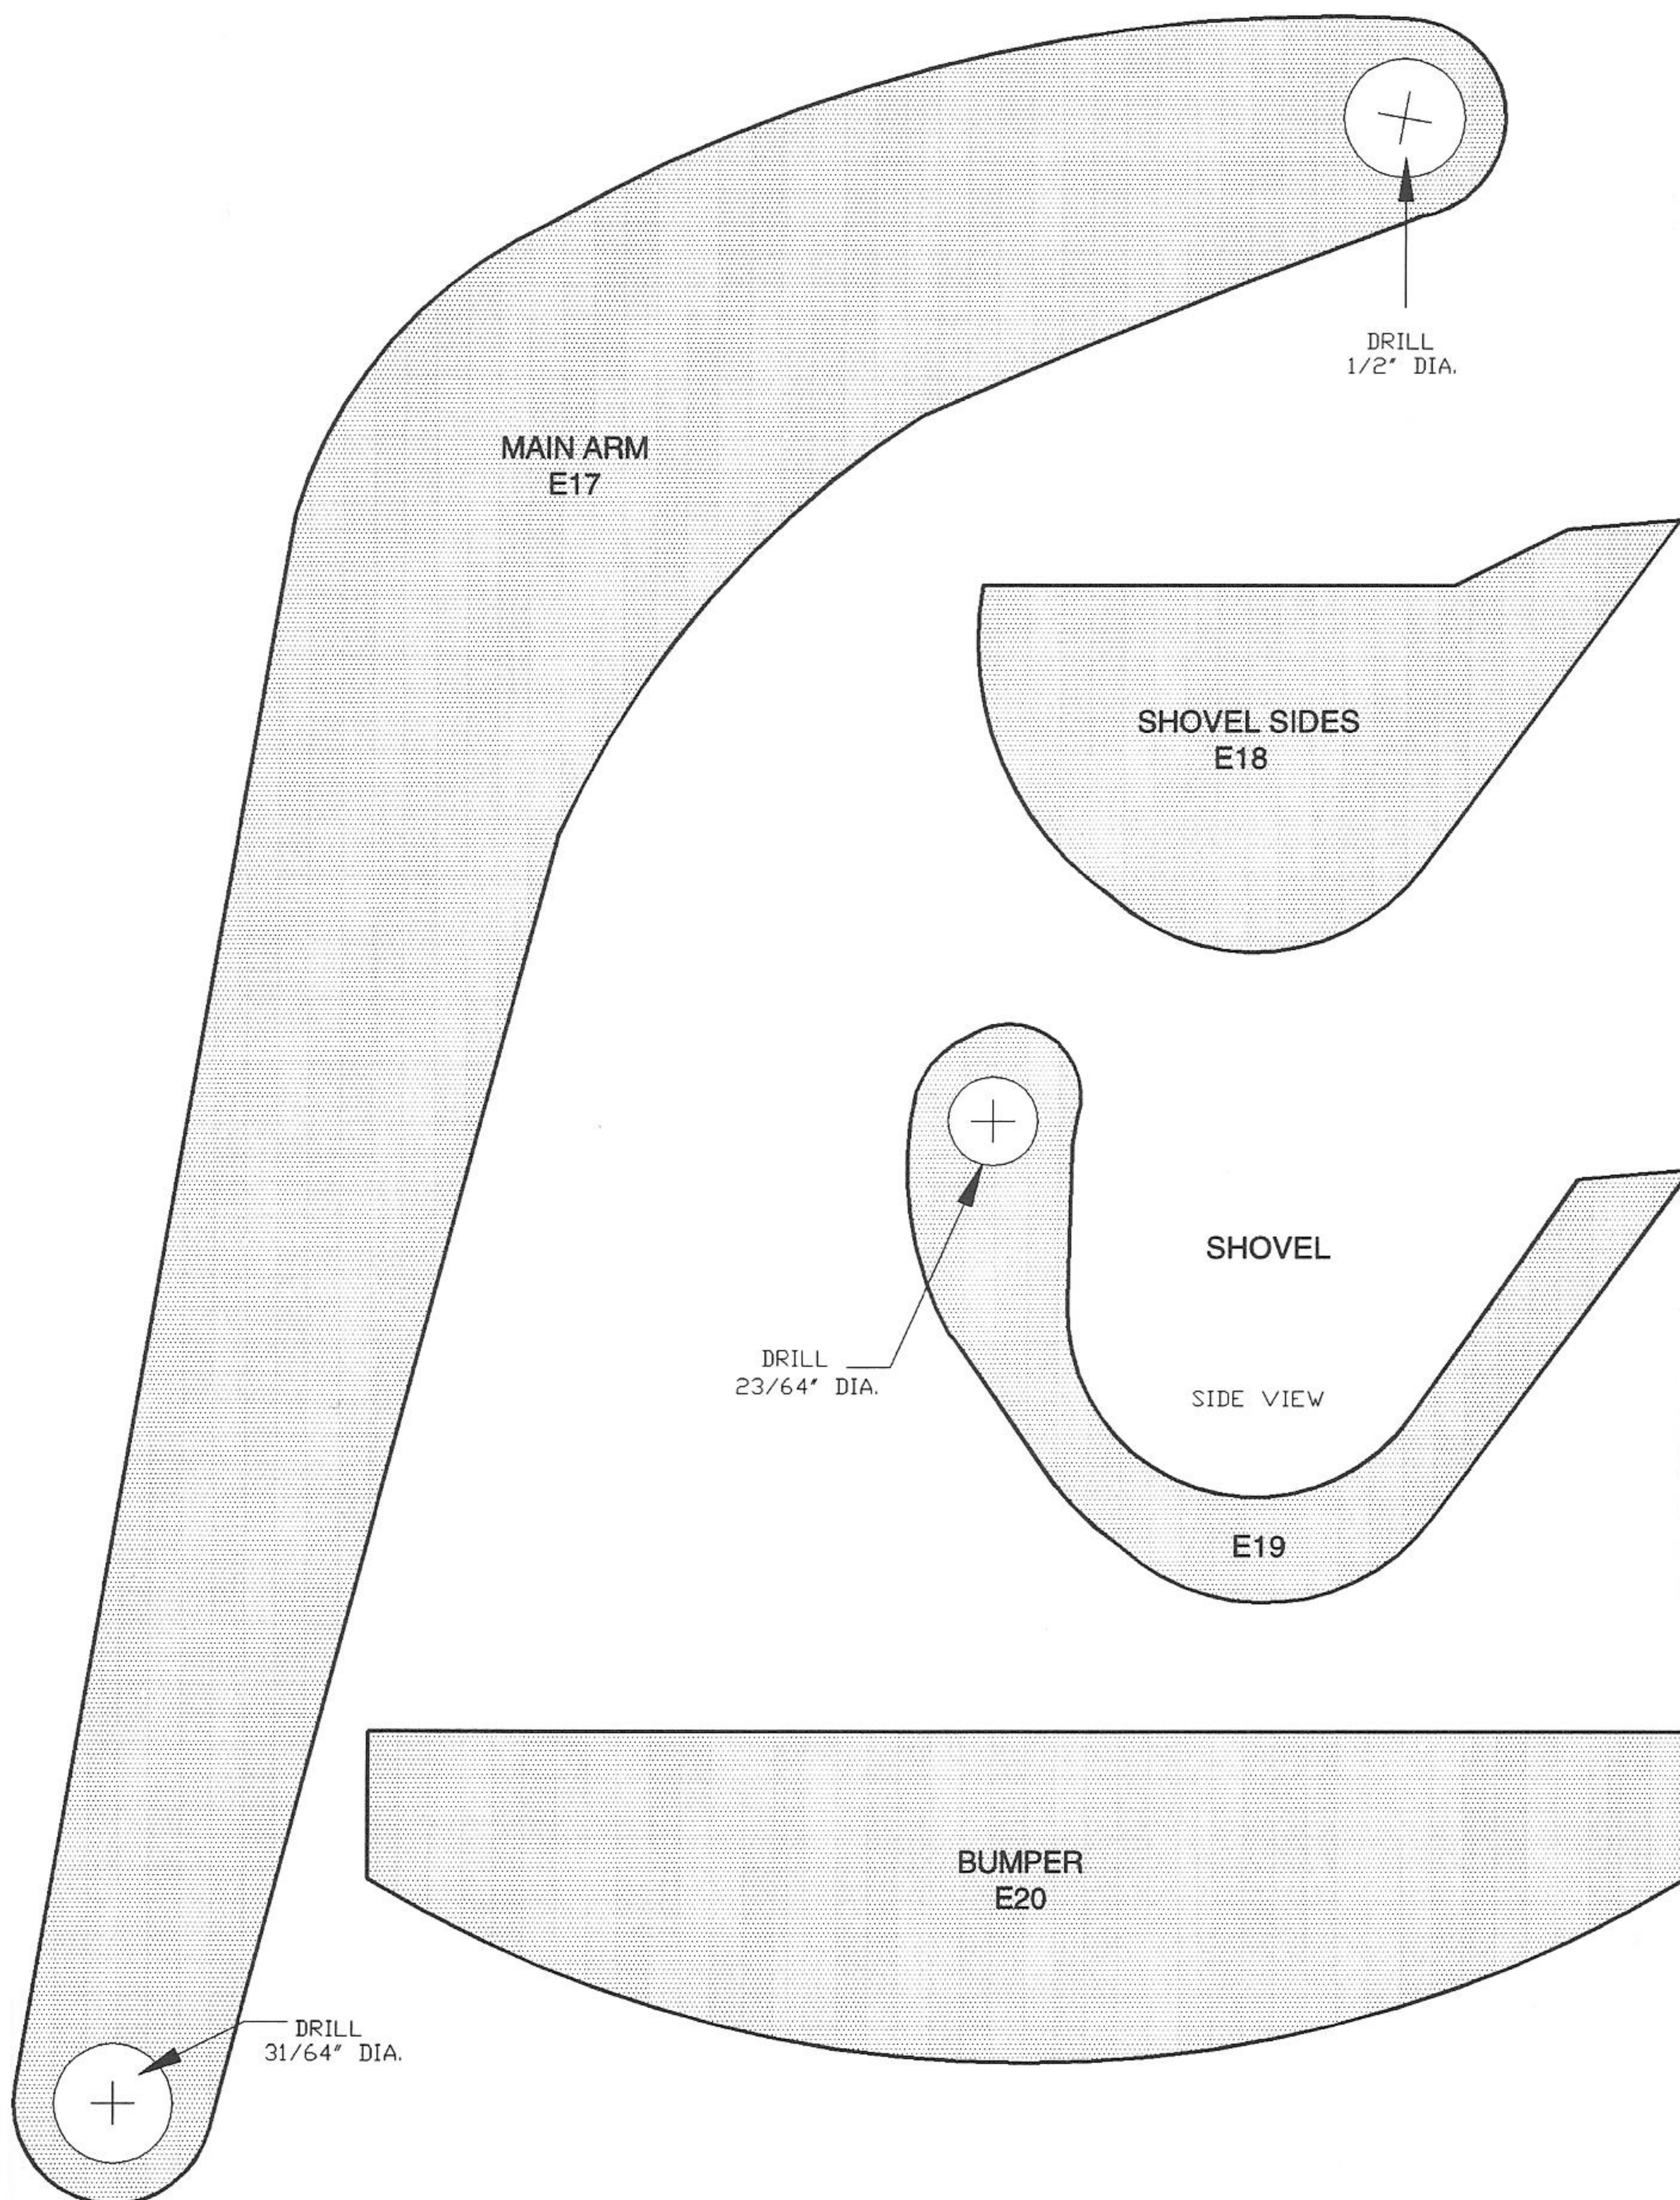

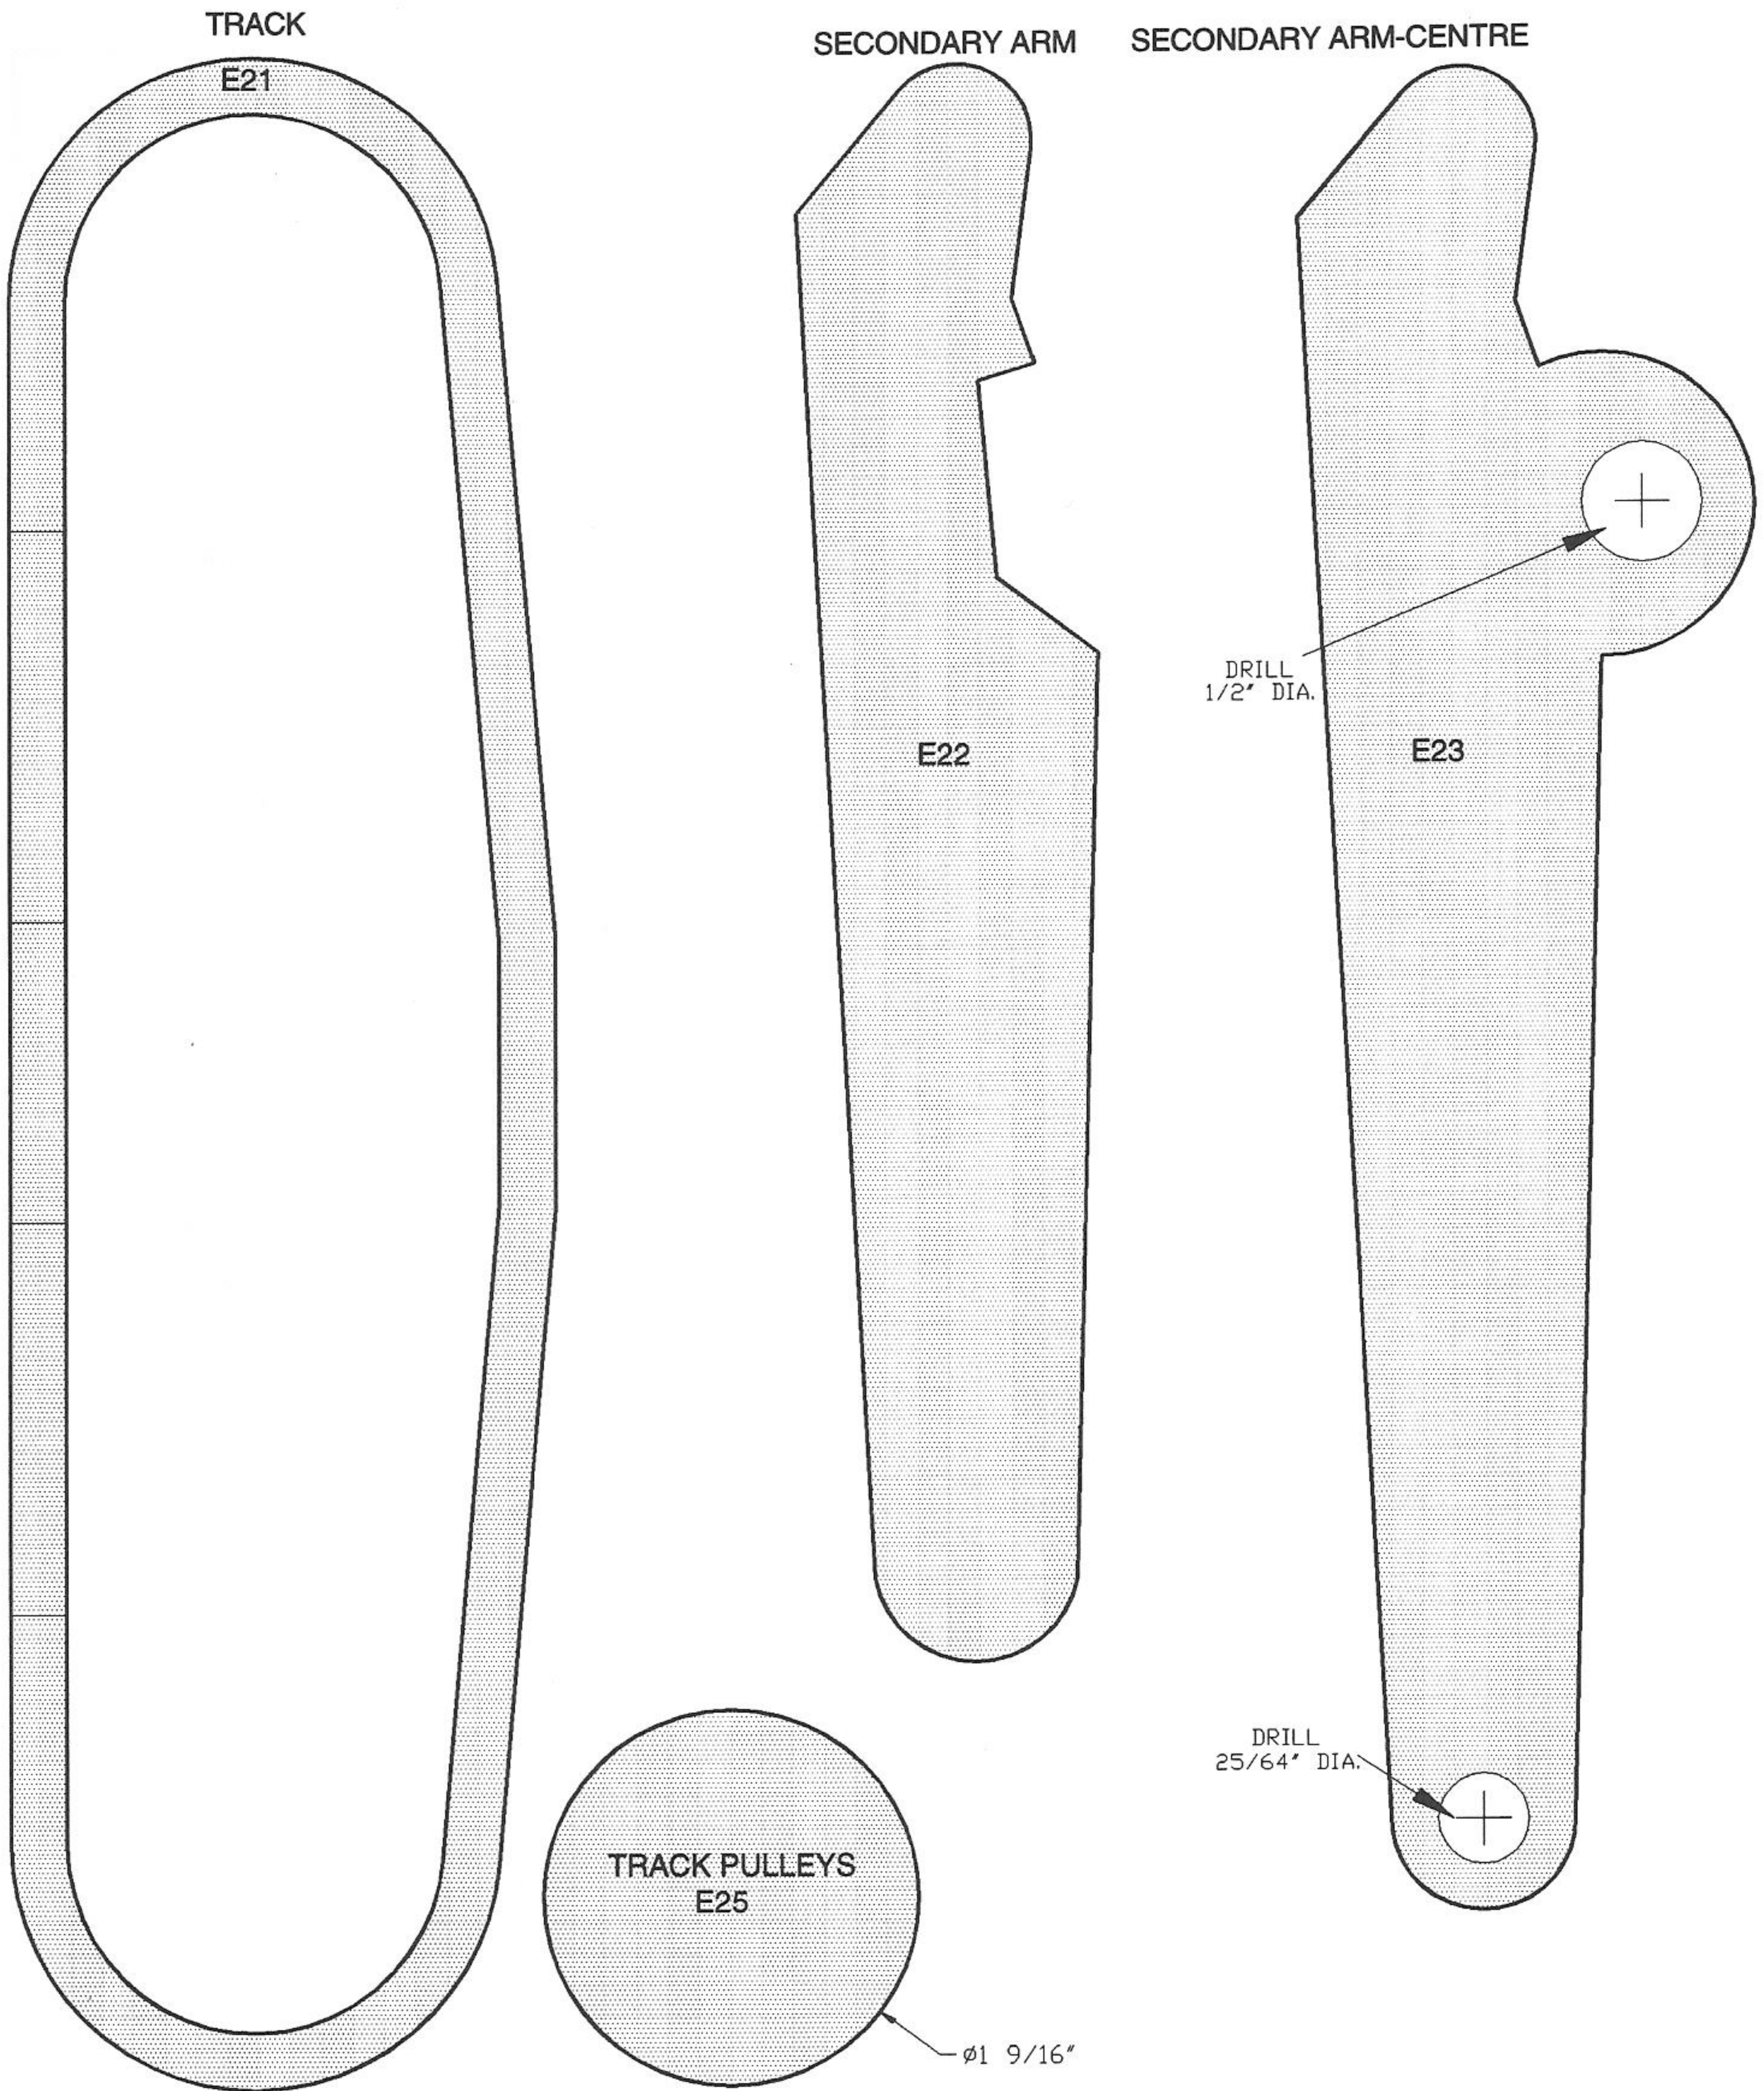


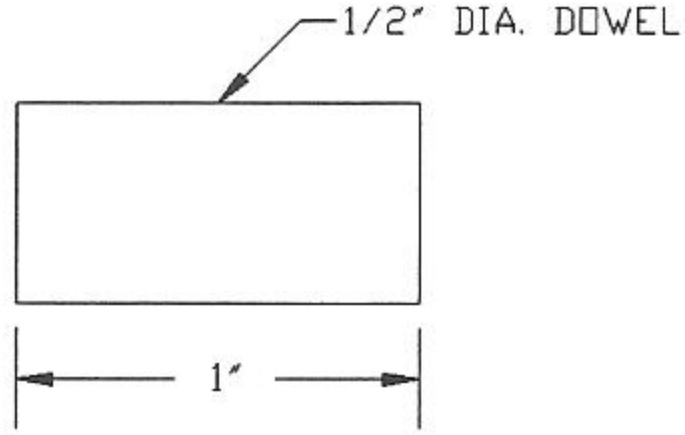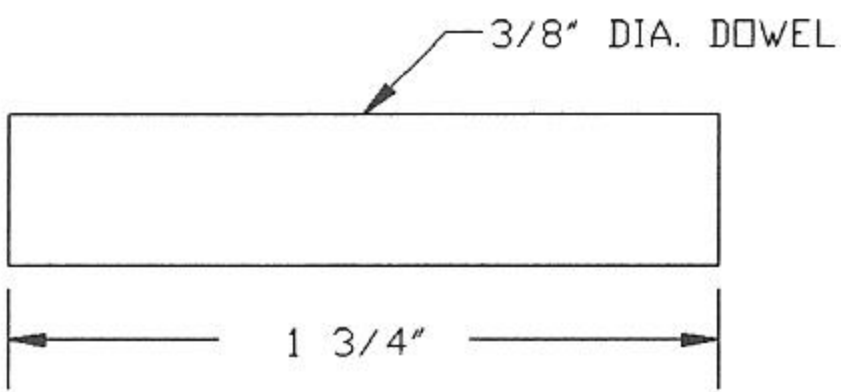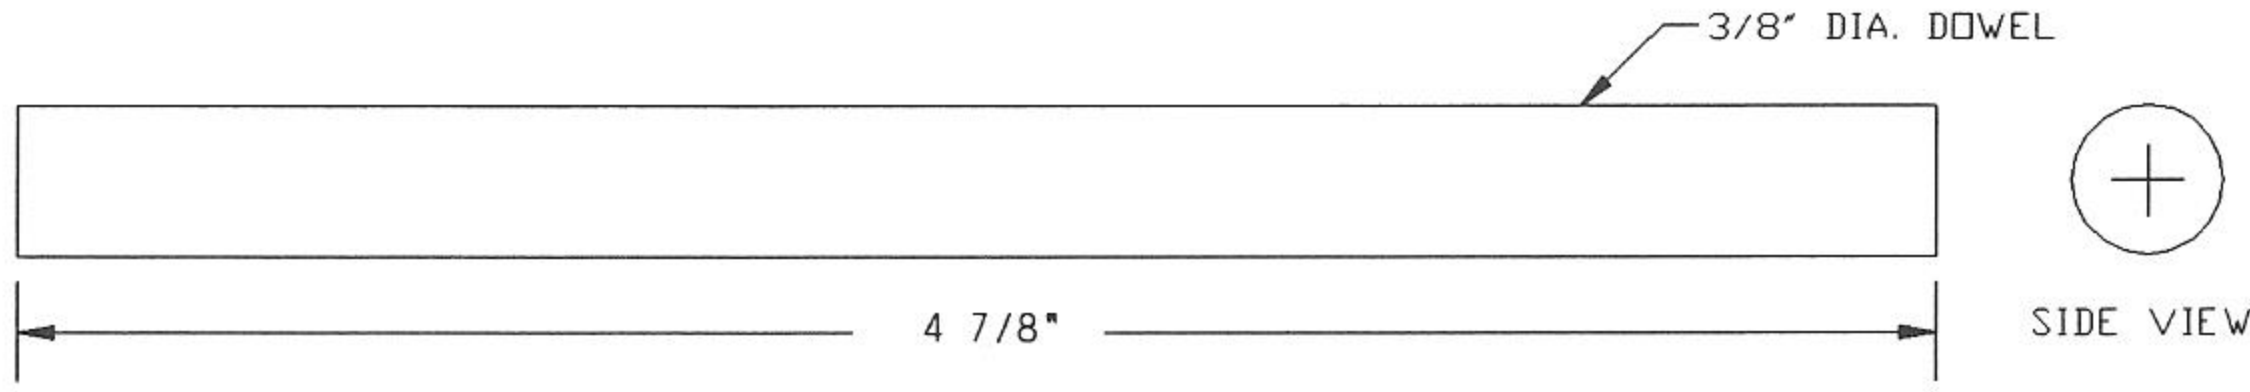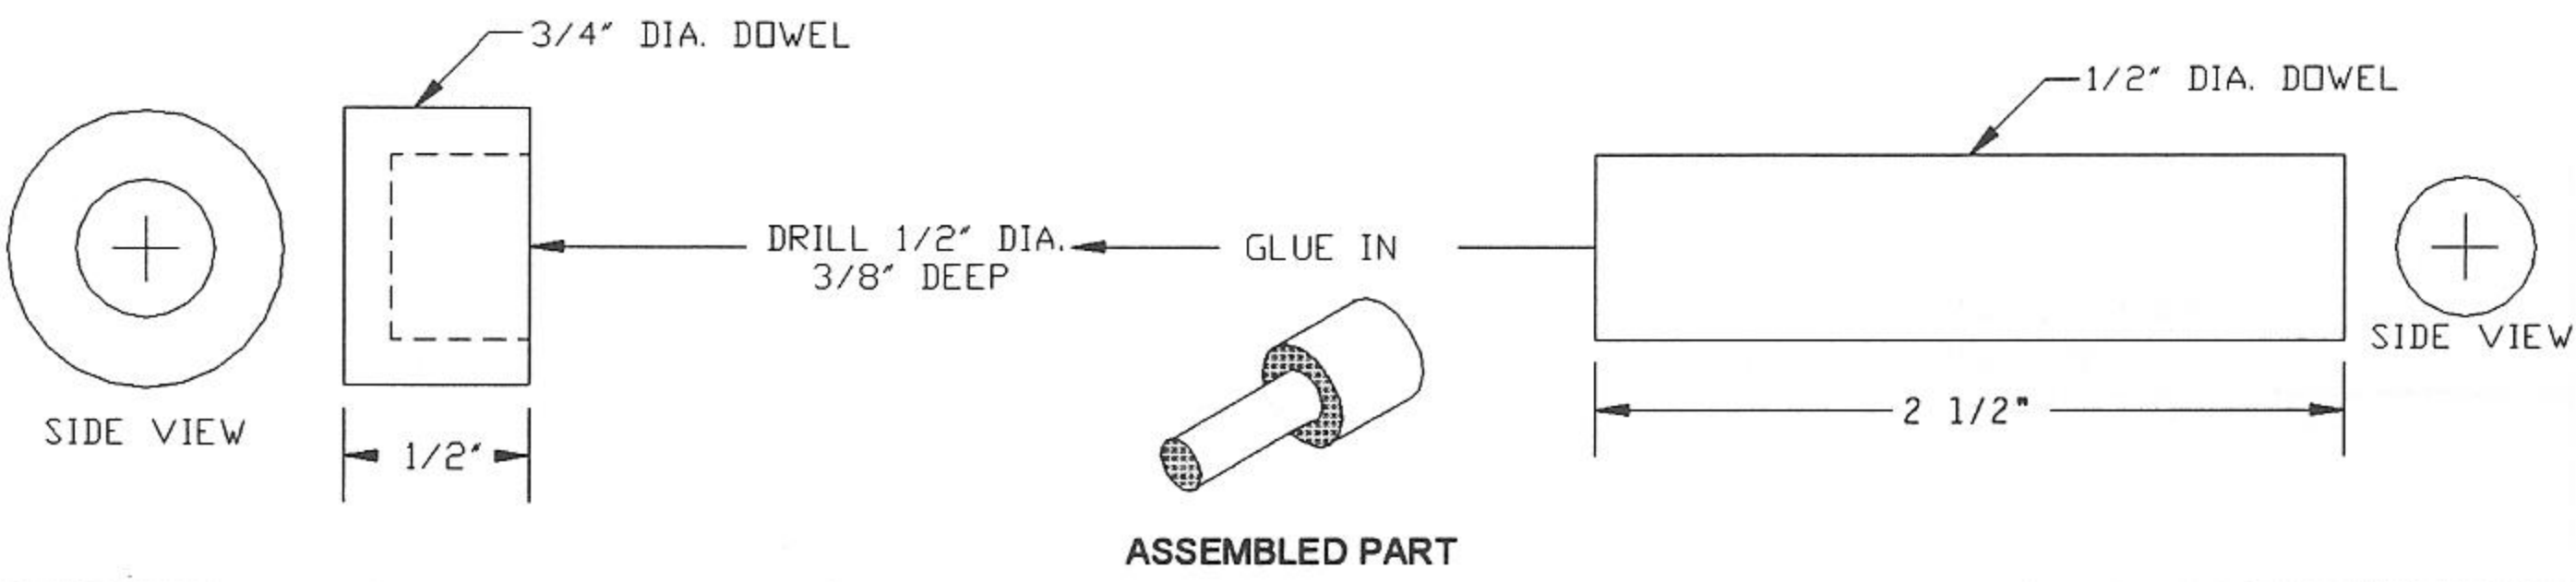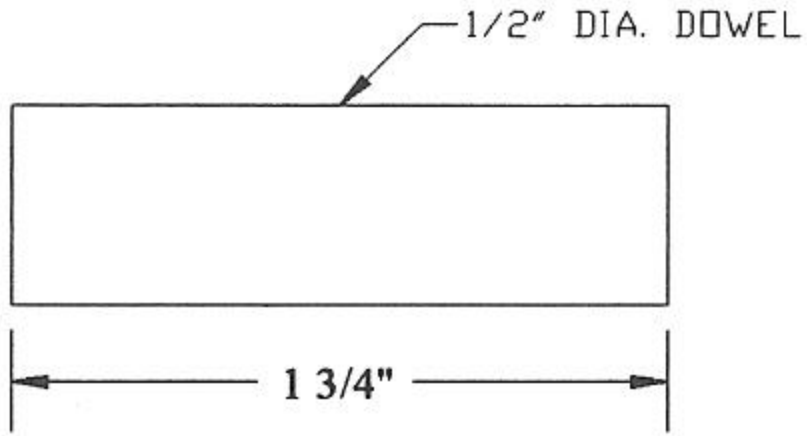PIN (1 REQUIRED) E26 	PIN (1 REQUIRED) E27 
WHEEL SHAFTS (2 REQUIRED) E28 	
MAIN PIN (1 REQUIRED) E29 	
PIN (1 REQUIRED) E31 	


Additional Information - Excavator

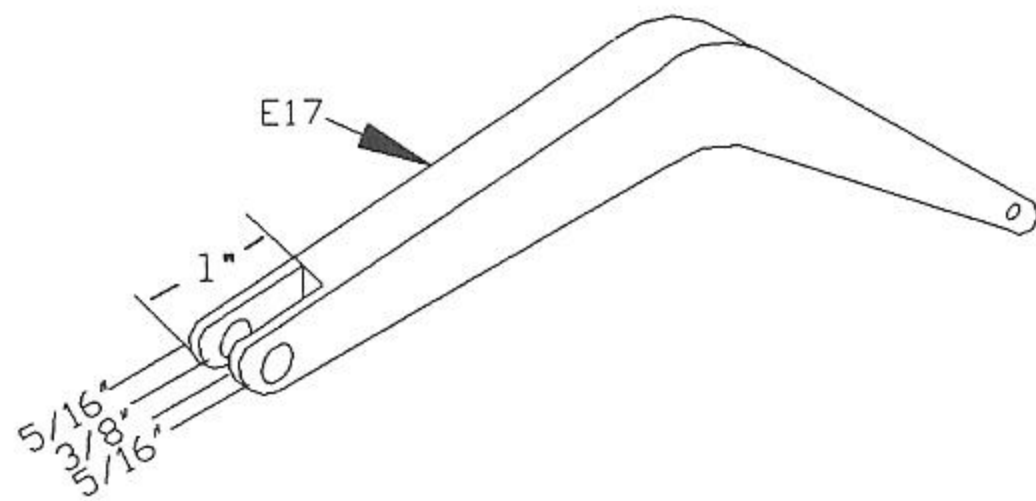


Using your Scroll Saw, cut groove in part E17, as shown.

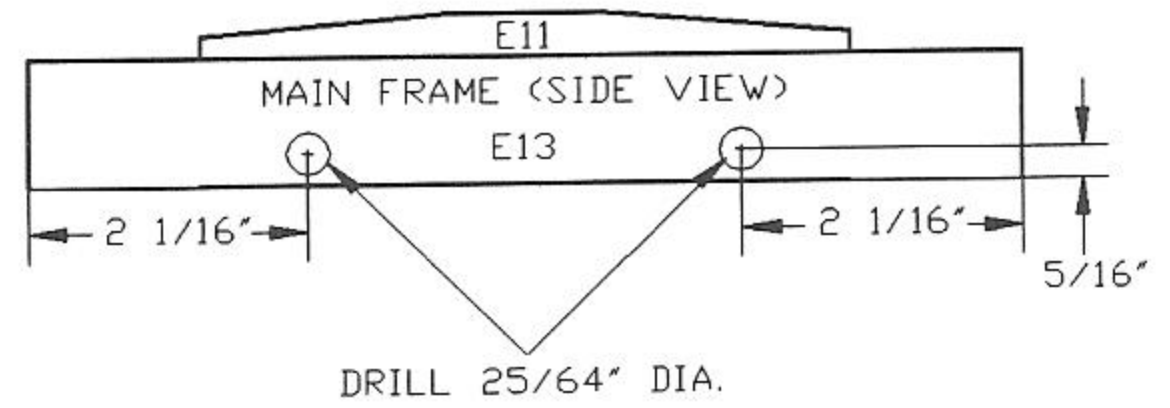


Drill holes into main frame E13, as shown.

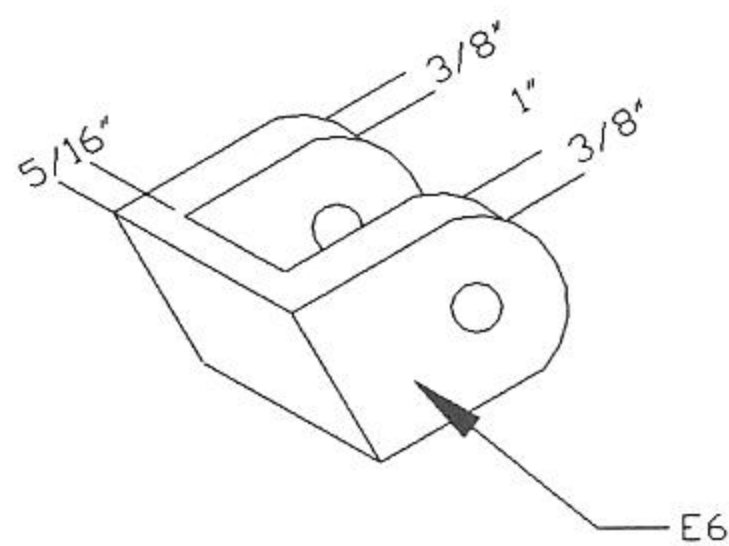


Using your Scroll Saw, cut groove in part E6, as shown.

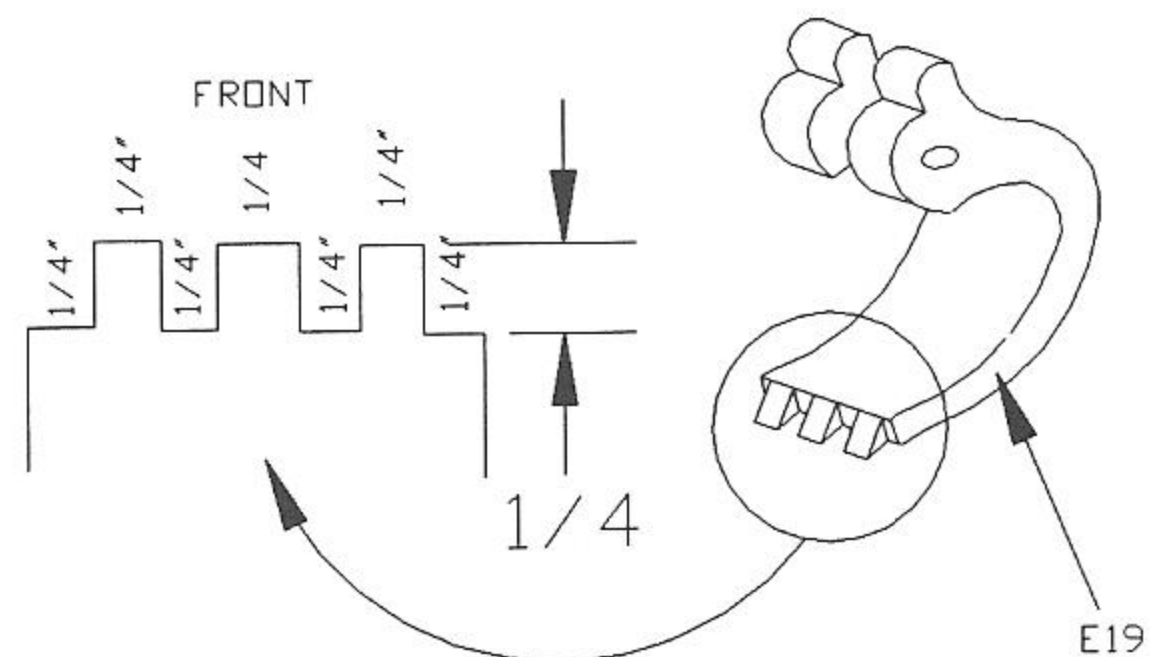

Using your Scroll Saw, cut grooves in part E19, as shown.









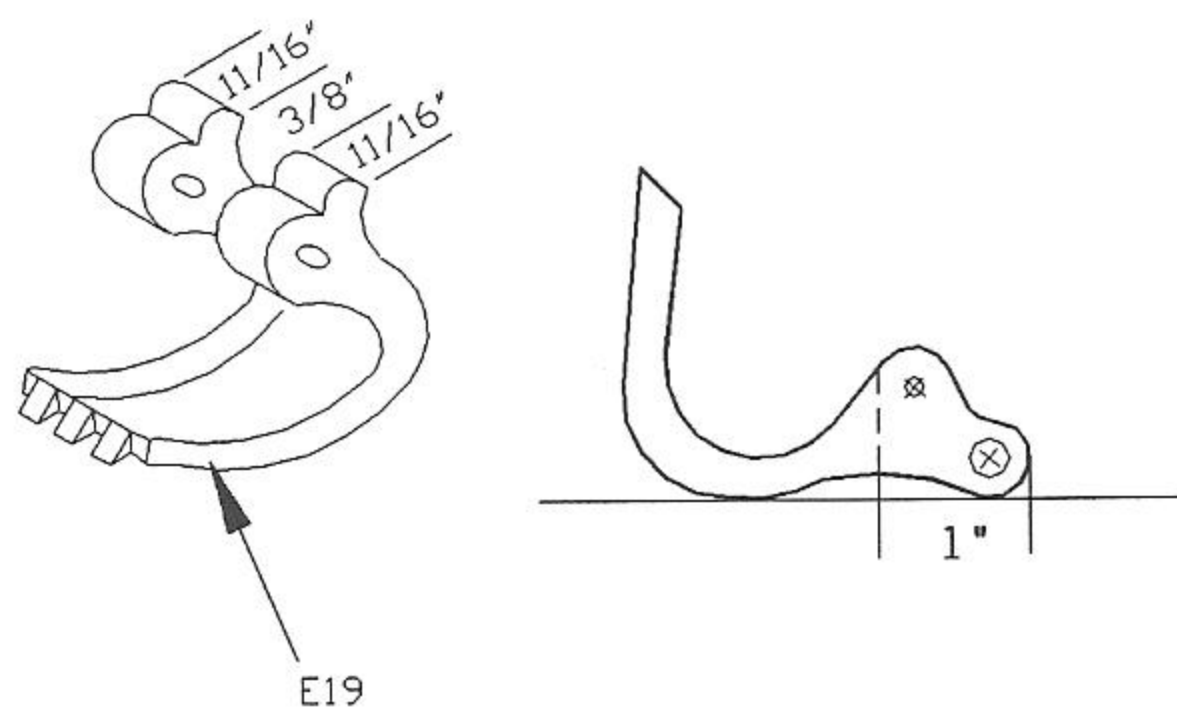









Using your Scroll Saw, cut groove in part E19, as shown.

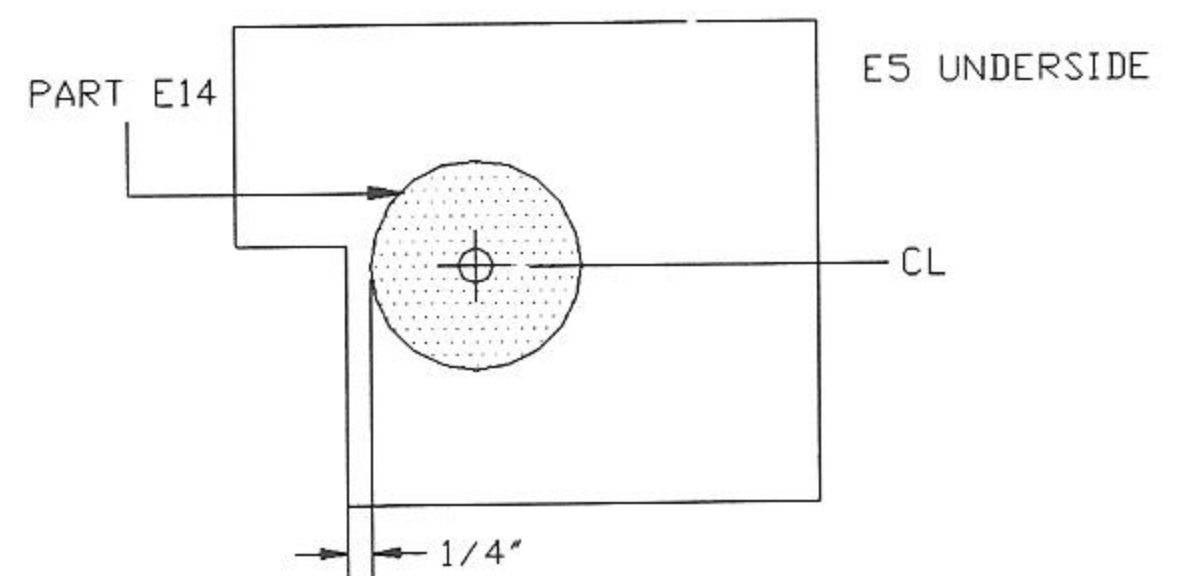


Drawing showing where to glue pivot wheel E14 onto base E5.

Excavator - Assembly Drawings

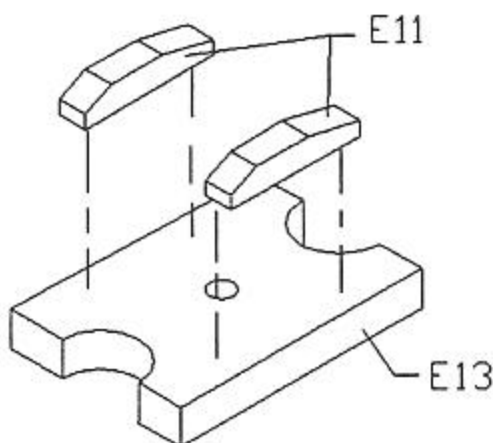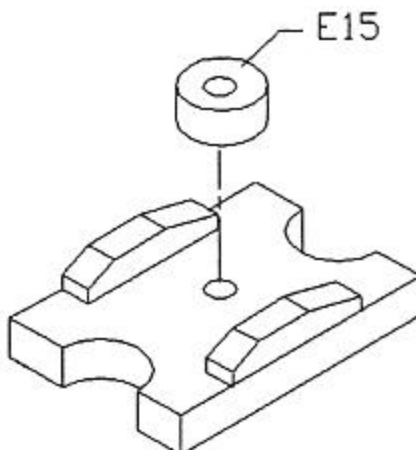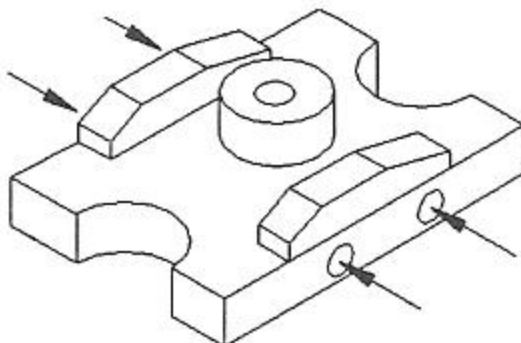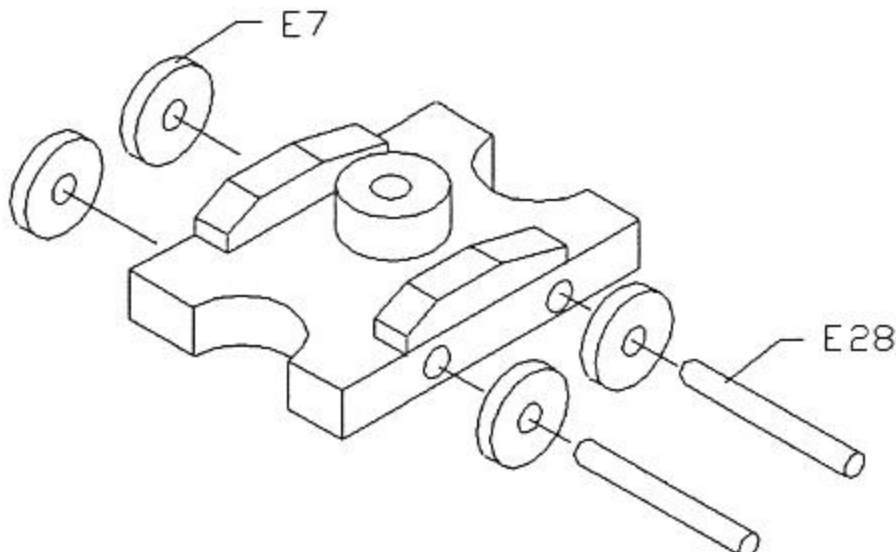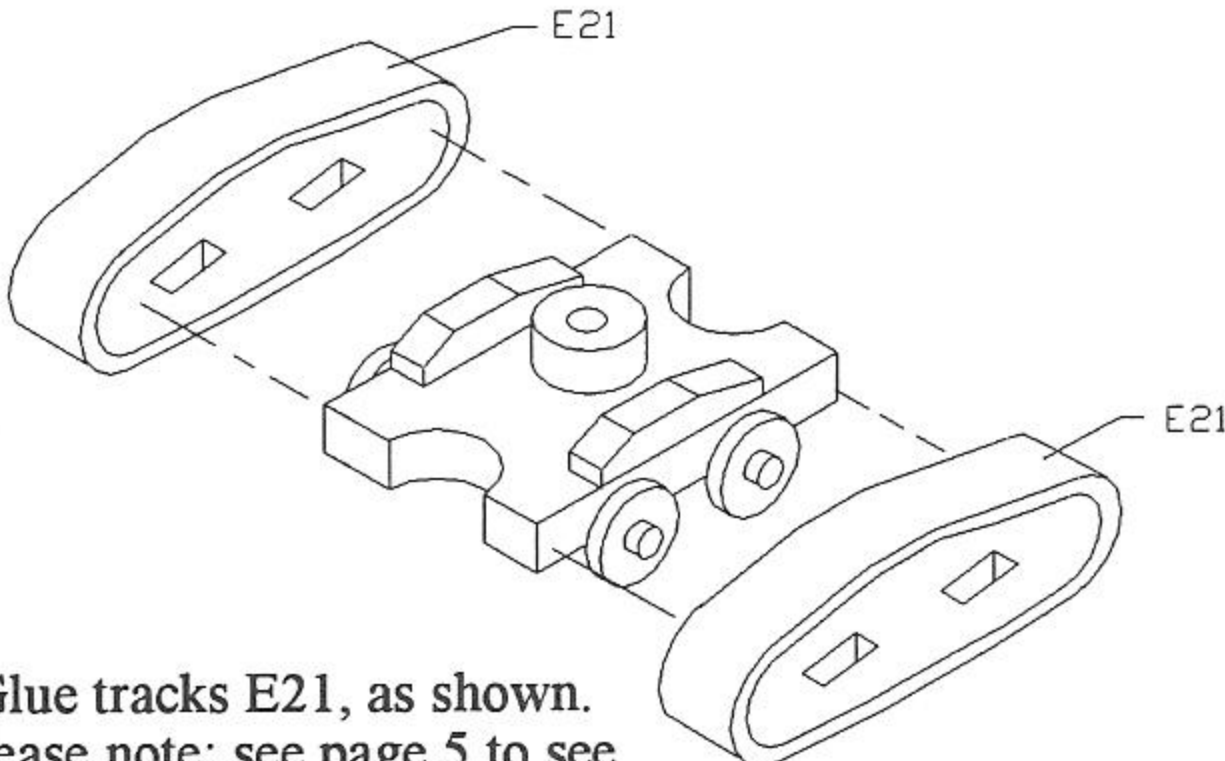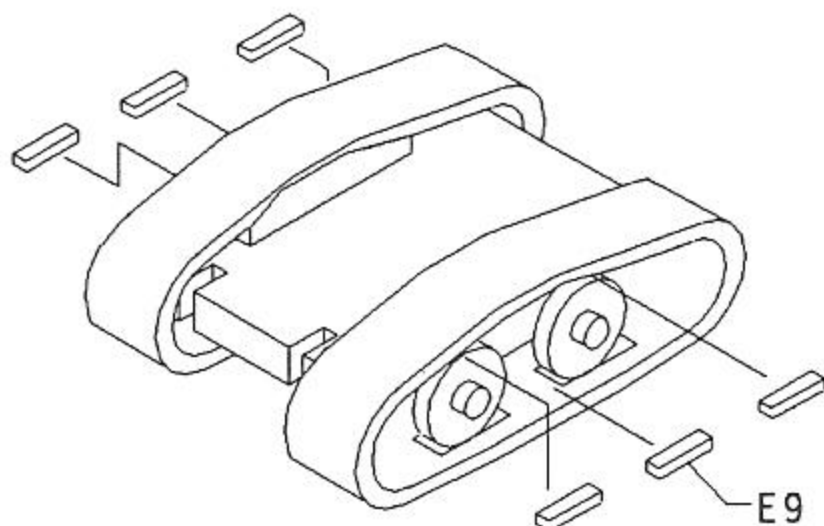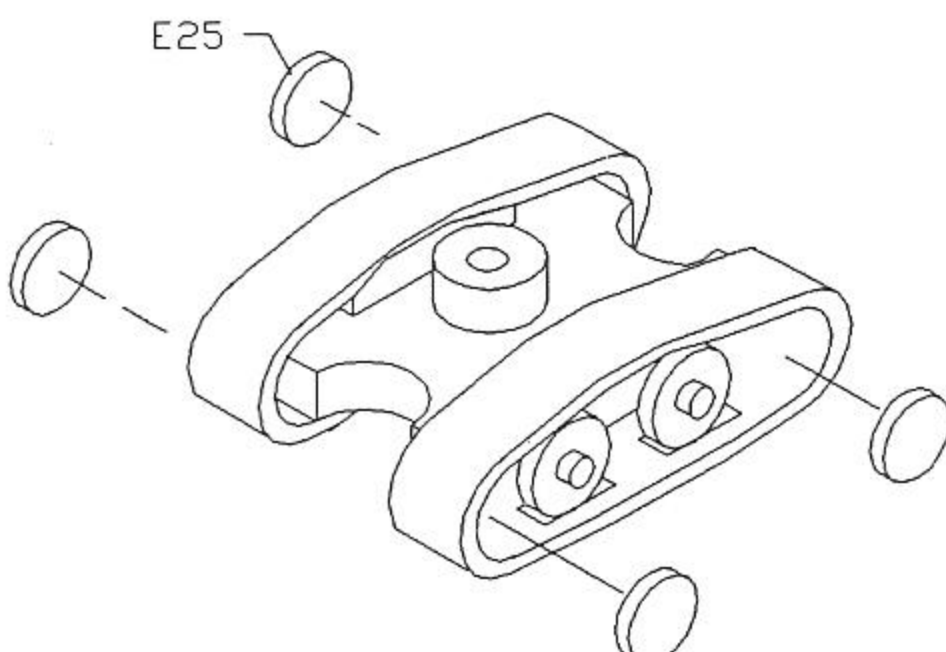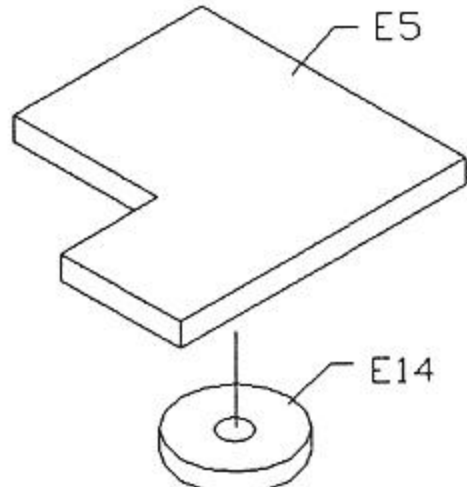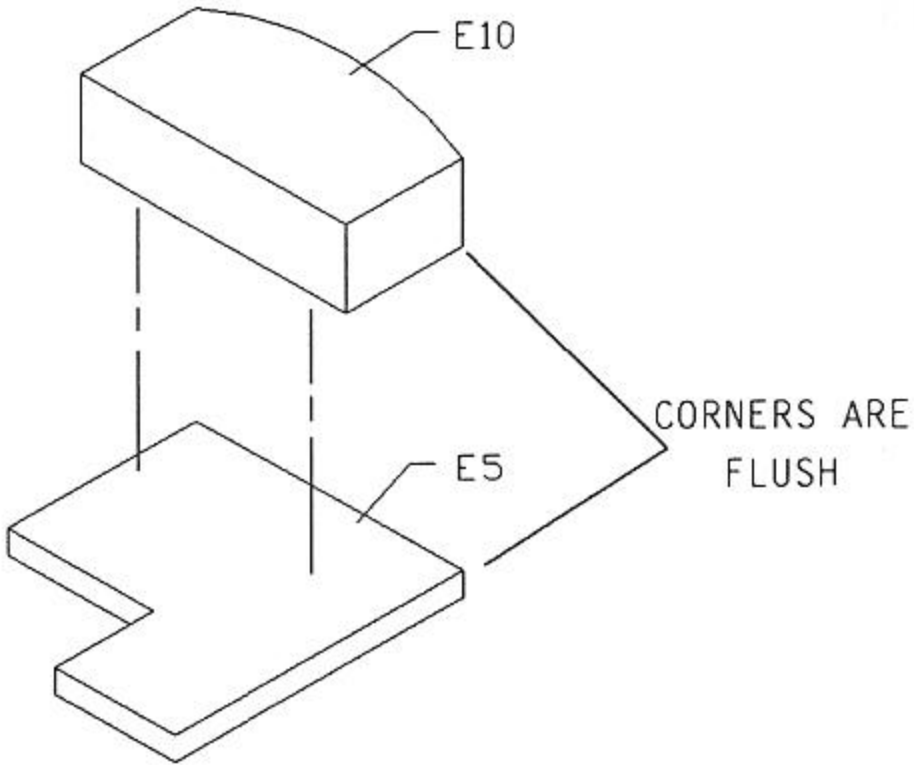1  Glue track supports E11 onto base E13.	2  Glue pivot wheel E15 making sure holes are in line.	3  Drill 4 holes using method shown on page 56.
4  Insert wheel shaft E28 through wheels E7 and body.	5  Glue tracks E21, as shown. Please note: see page 5 to see how track openings are made.	
6  Glue track support blocks E9.	7  Glue track pulleys E25.	
8  Glue pivot wheel E14 to base E5. See page 56 for exact location.	9  Glue rear hood E10 to base E5. CORNERS ARE FLUSH	

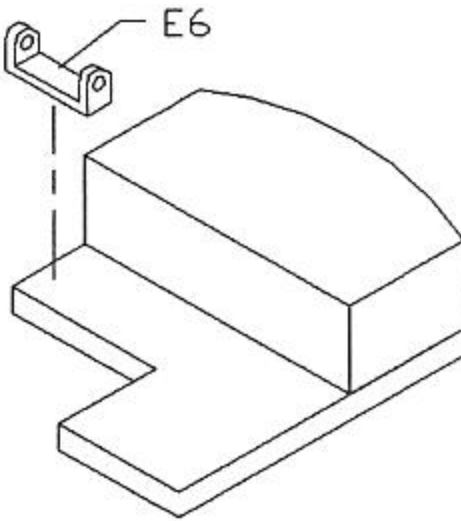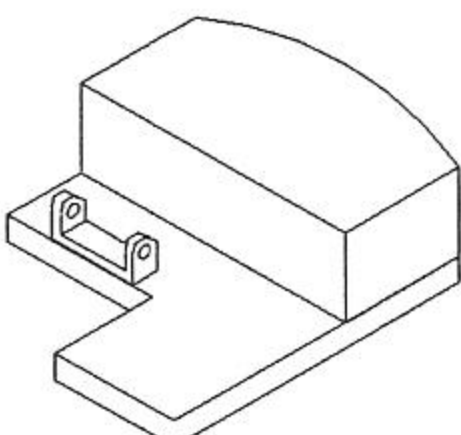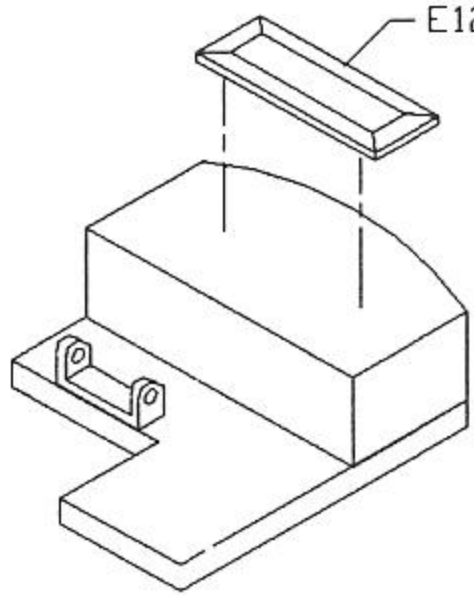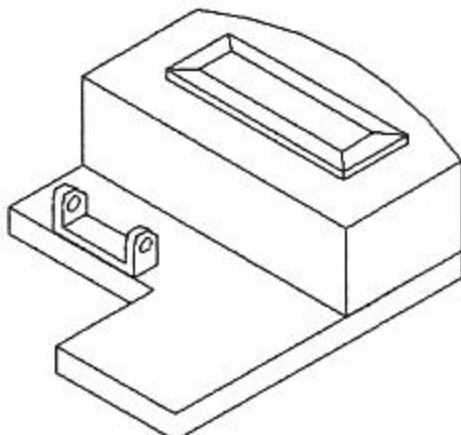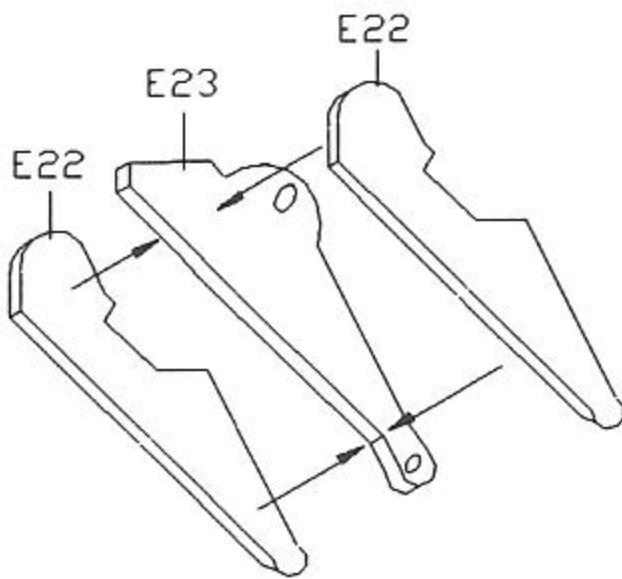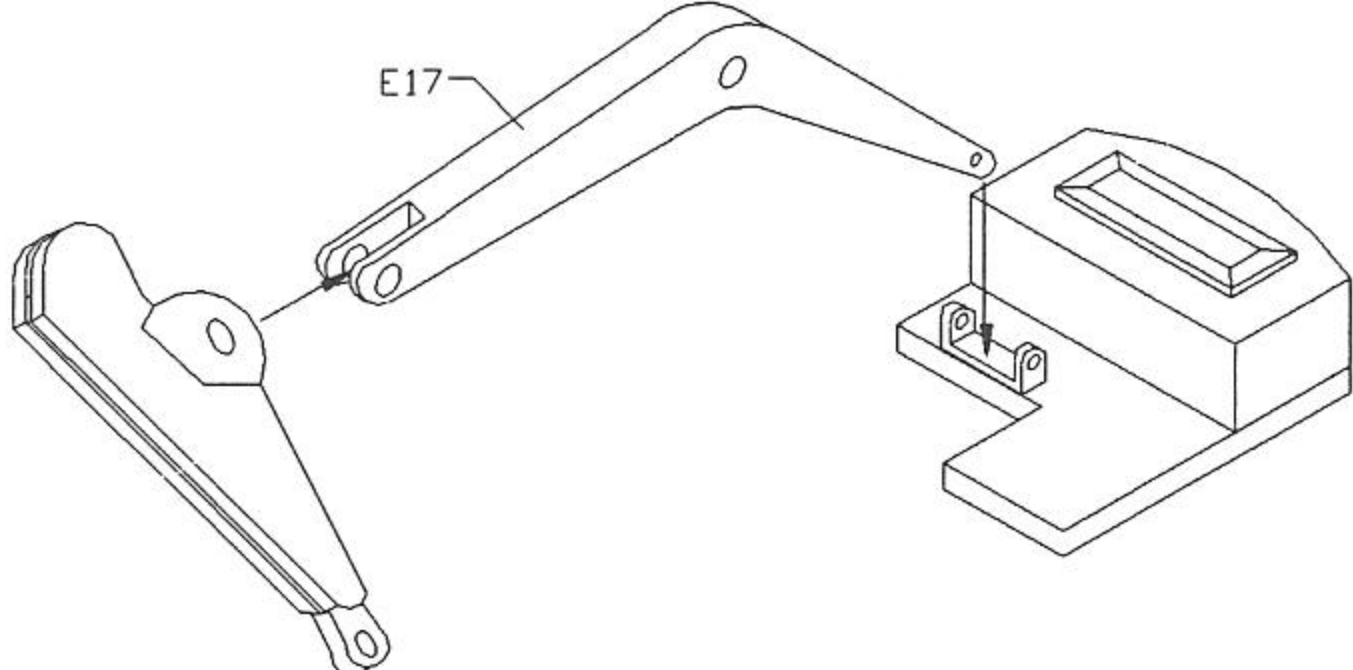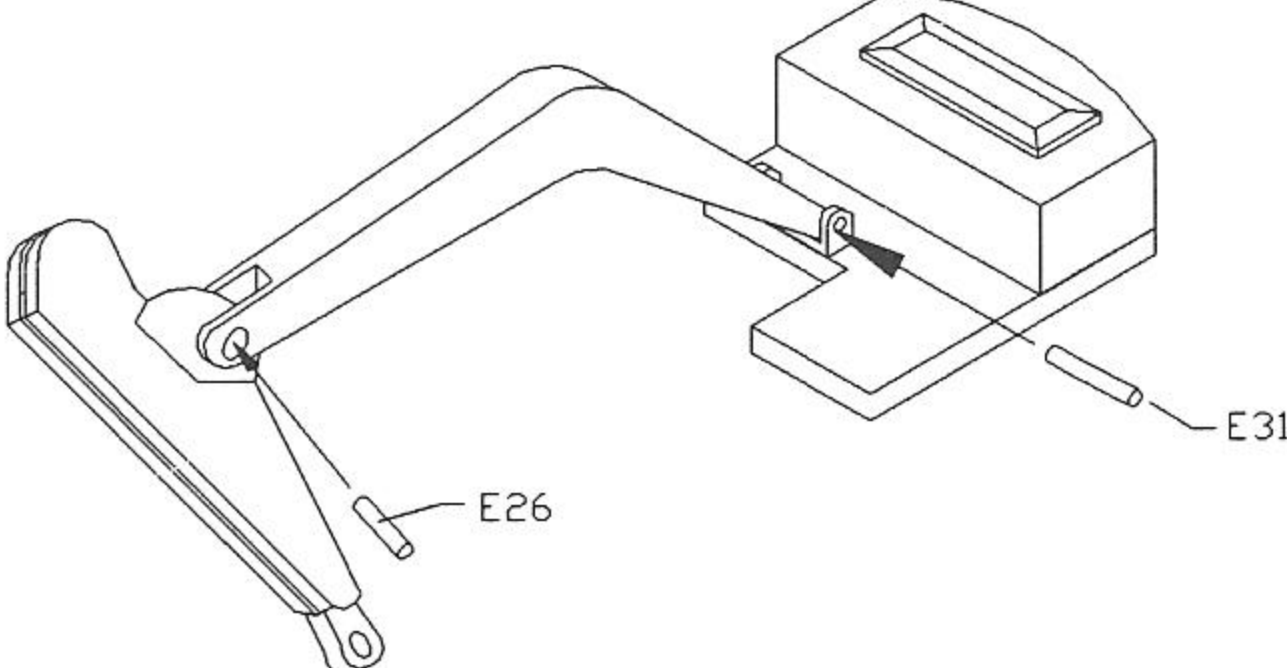
10		11		12		
Glue main arm support E6.		Use this drawing as a guide for part E6.		Glue upper hood E12.		
13					14	
Start working on arm assembly.				Glue secondary arm assembly, as shown.		
15						
Slide secondary arm into main arm E17.						
16						
Insert pins E26 and E31.						

17

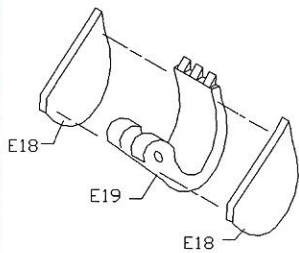


Glue shovel sides E18
onto shovel E19.

18

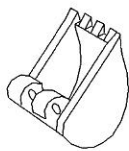


See page 56 for details
on shovel assembly.

19

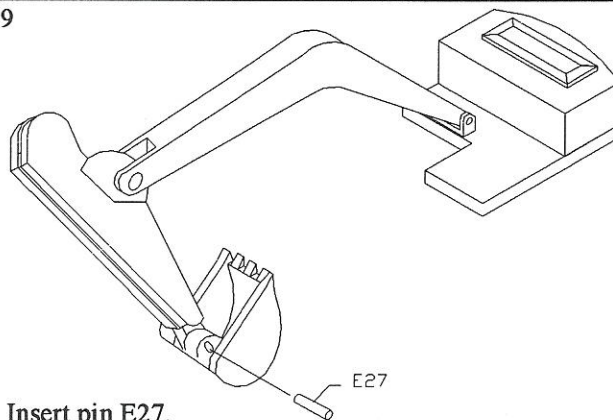


Insert pin E27.

20

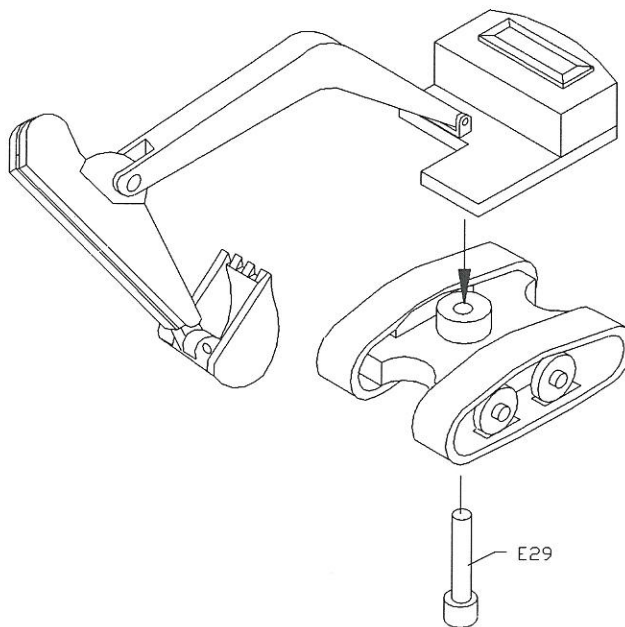


Insert main pin E29.

21

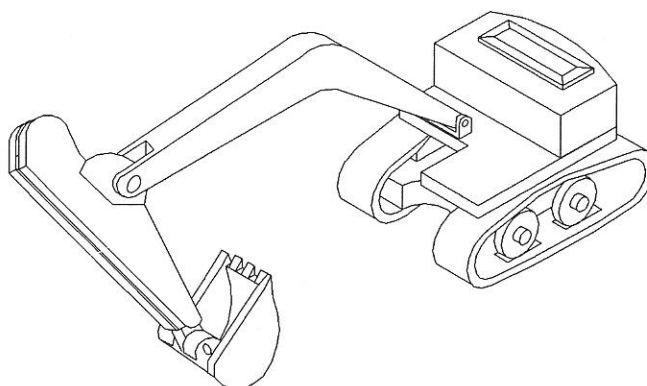


Start cabin assembly.

22

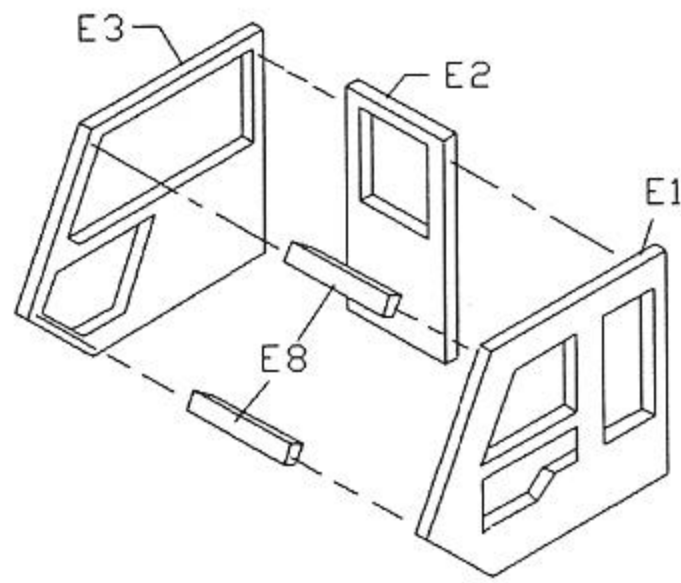


Assemble cabin, as shown.

23

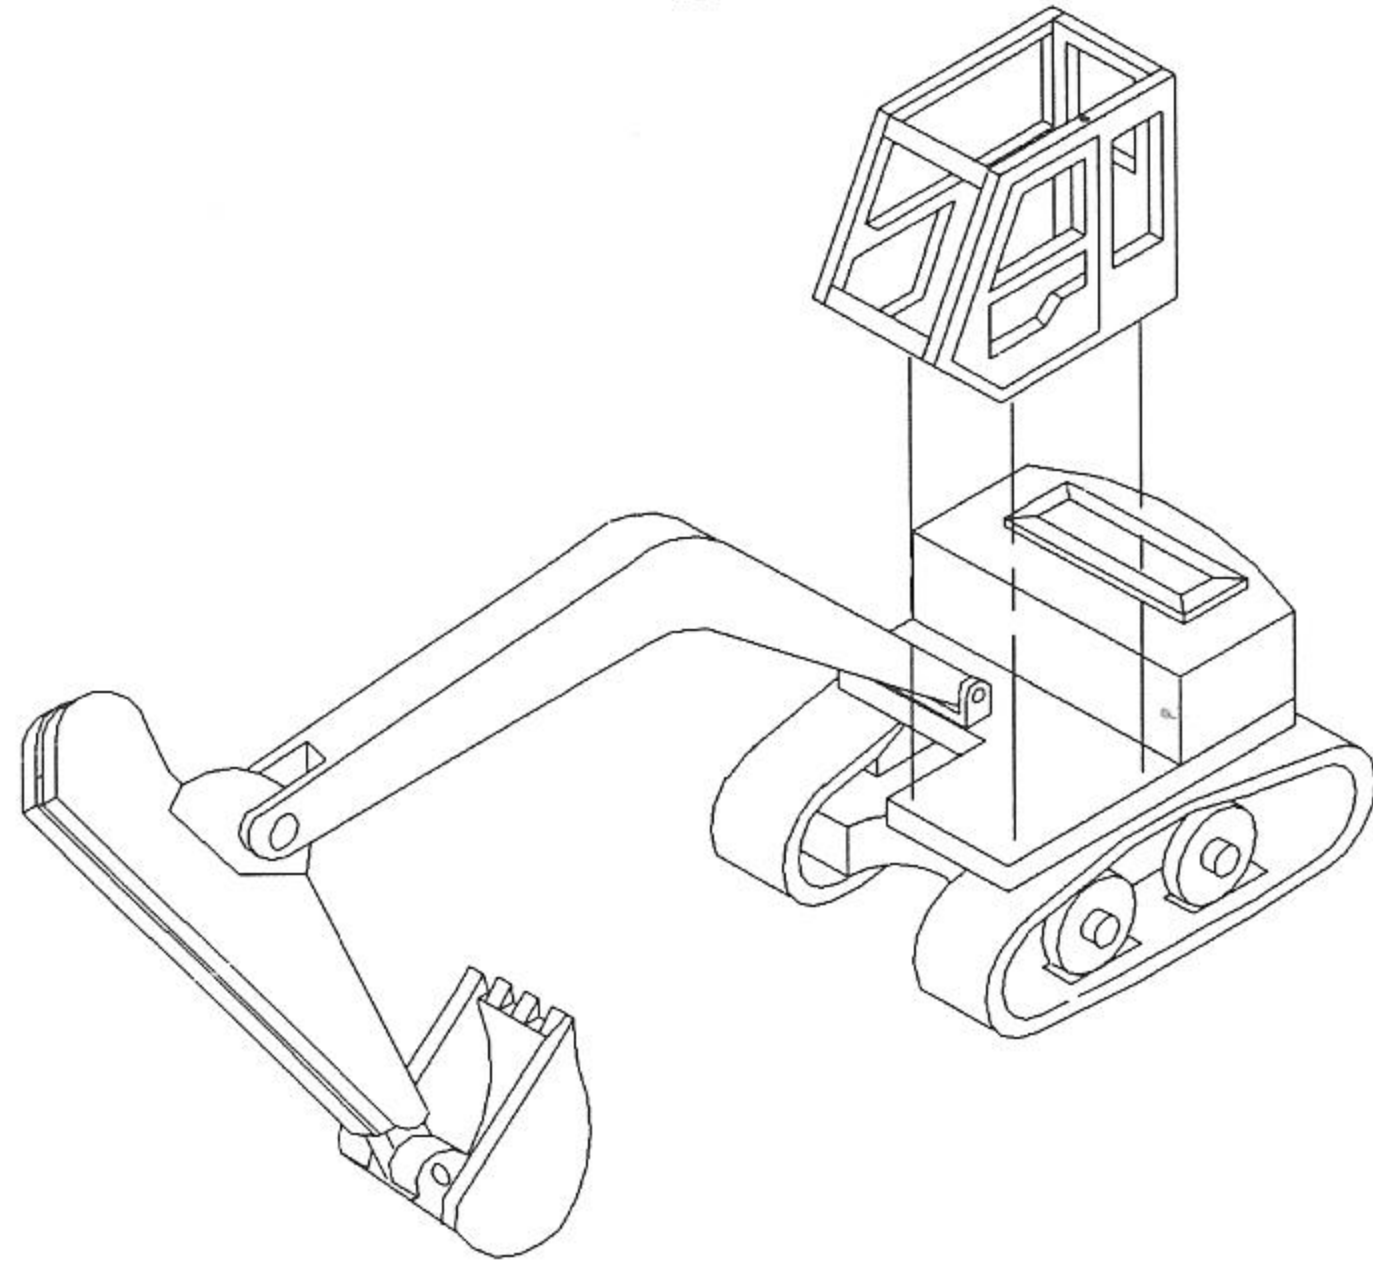


Glue cabin onto base.

24

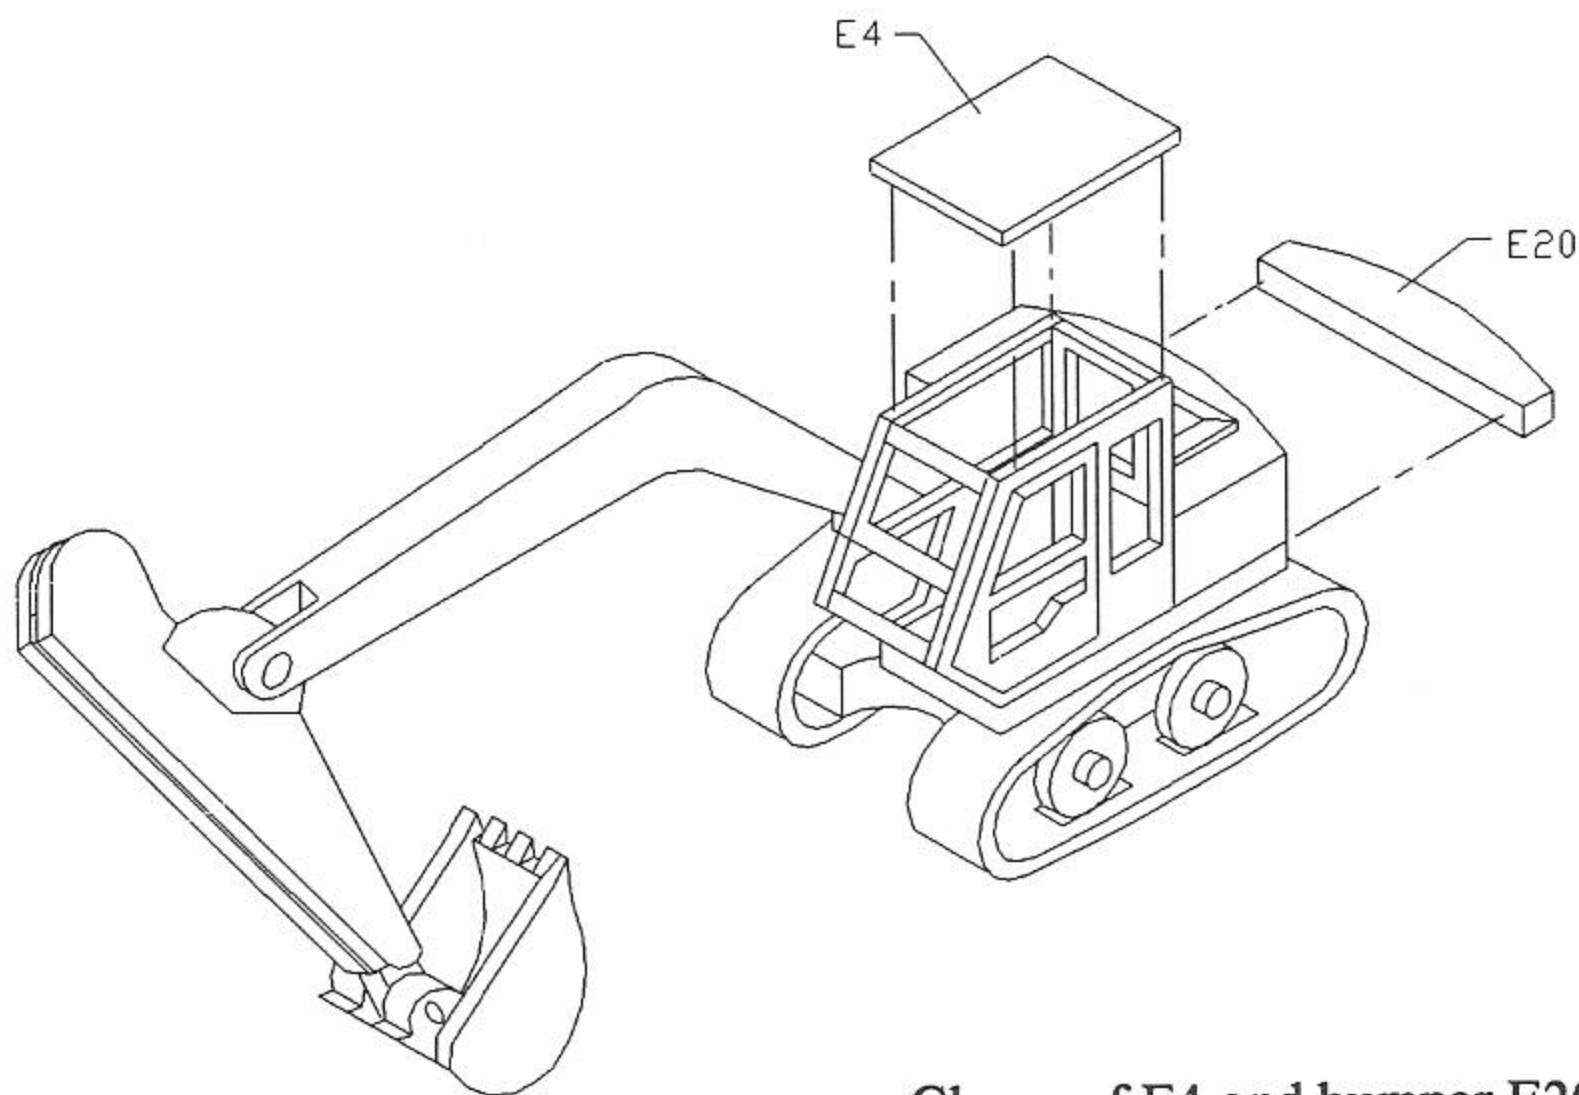


Glue roof E4 and bumper E20.

25

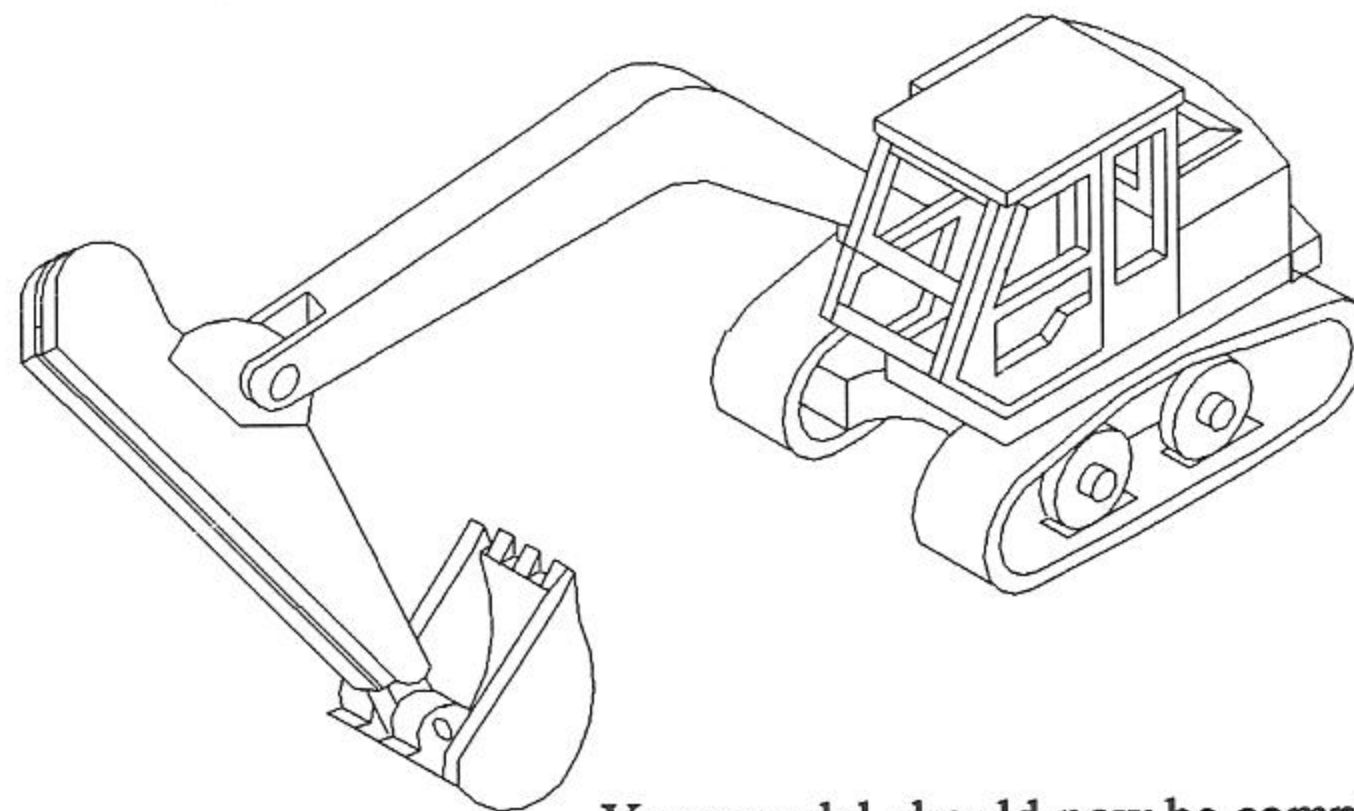

Your model should now be complete.

GRADER

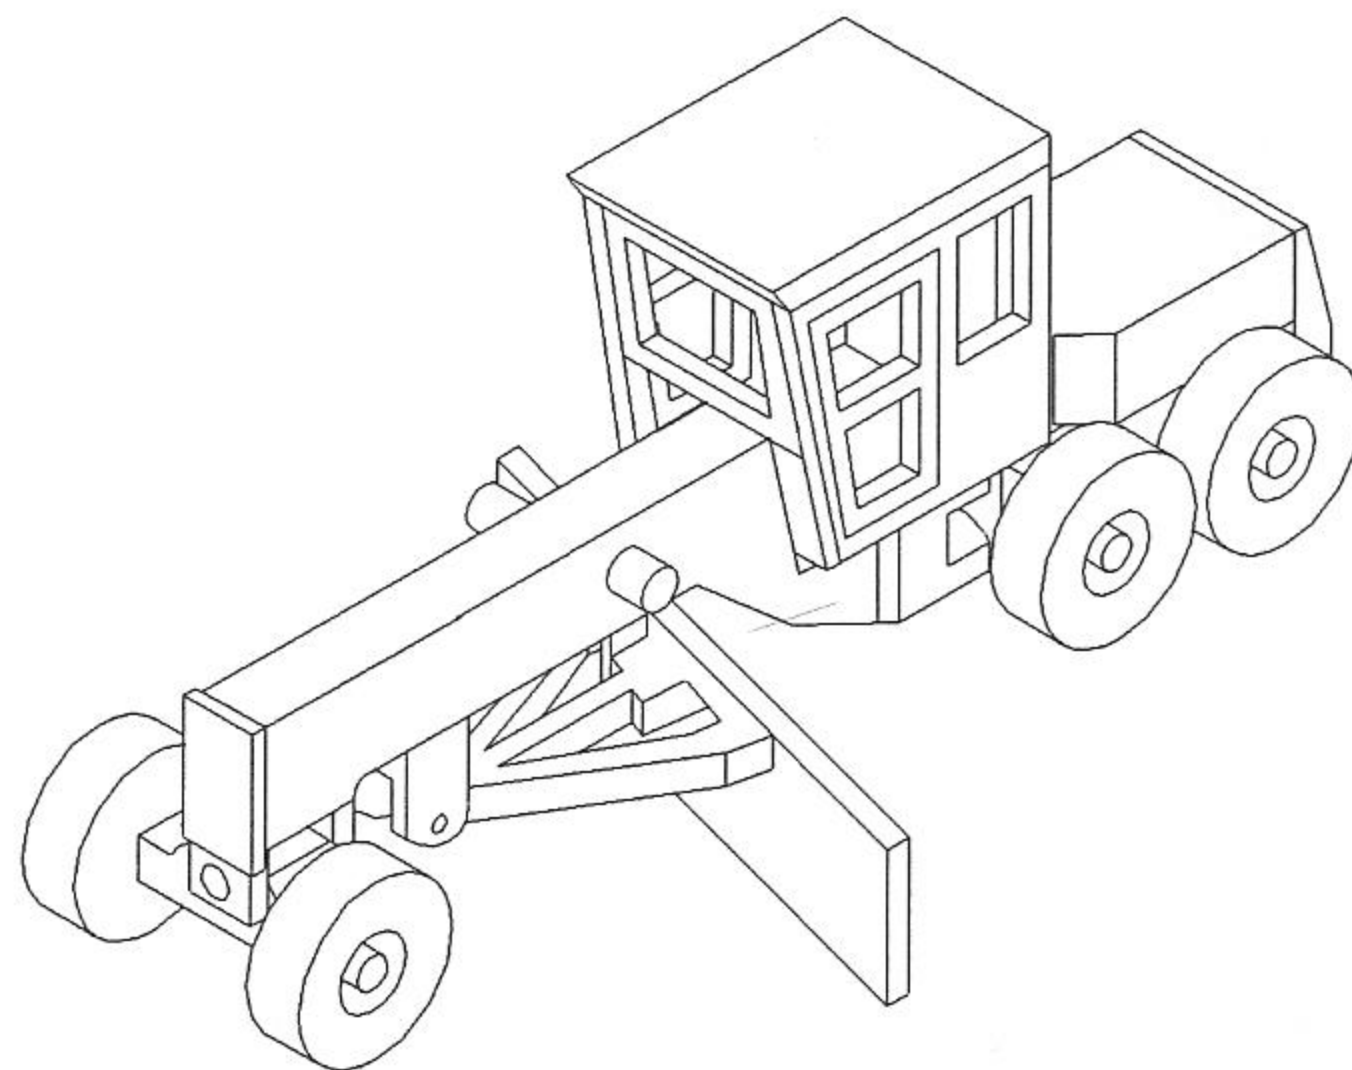


General Instructions - Grader

- 1- Start by cutting materials needed by following the list of materials, paying attention to the rough and finished size. **Identify the parts as they are cut.**

Please note: Different types of wood can be used for the various parts. It is suggested, however, that hard wood be used, since many of the parts would be much too fragile if using soft wood. We have used a combination of pine, maple and oak to give the models a nice contrast!

- 2- Remove the full-size patterns found in the appendix. Cut them out, leaving approximately 1/16" all around, and place on the proper piece of wood. Patterns can be secured to wood using either spray adhesive or rubber cement. If using the latter, cut and sand the part first to finished size. If drilling is required, mark the hole by inserting a scribe or nail through the pattern into the wood. Remove the pattern before drilling.

You should have no trouble determining which surface to attach most of the patterns. Some parts, however, can be confusing since the pattern could fit on more than one surface. The drawings below indicate exactly which surface to attach the patterns for these parts.

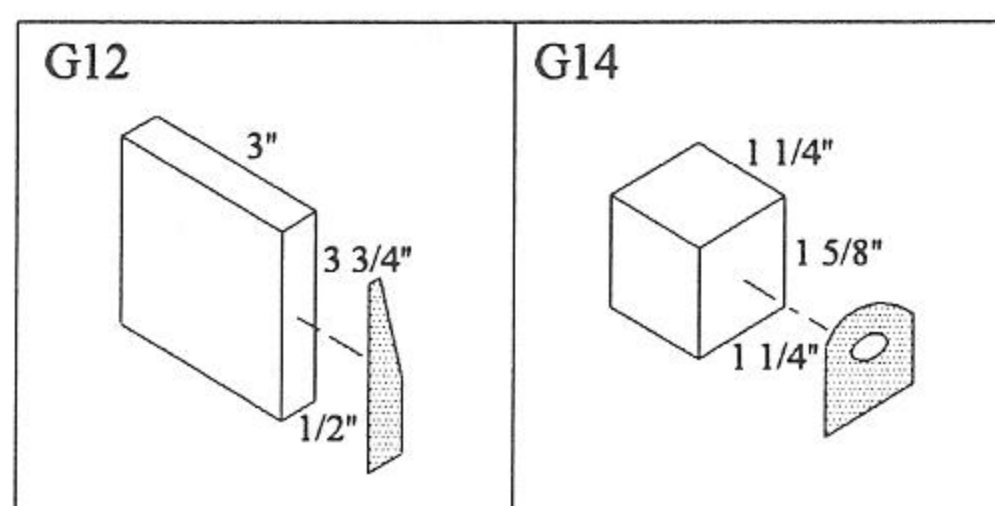

- 3- Look at the full-size drawing sheets to finish parts G3, G8, G9, G10 and G13.
- 4- Parts G6, G14, G15 and G16 will need additional cuts and details, please refer to the additional information pages, to complete these parts.
- 5- Using maple dowels, make all pins, shafts, etc.
- 6- Follow the assembly drawings to complete your model.

List of Materials - Grader

Part	T	W	L	Material	Qty.	*	Part	T	W	L	Material	Qty.	*
G1	3/8"	3 5/8"	3 7/8"	oak	2	R	G9	1 1/8"	3"	5 3/4"	pine	1	F
G2	3/8"	2 3/8"	3 7/8"	oak	1	R	G10	1/2"	3"	5 3/4"	pine	2	F
G3	3/8"	3 1/4"	3 7/8"	pine	1	F	G11	1/4"	2"	6"	maple	1	F
G4	3/8"	2 3/8"	3"	oak	1	R	G12	1/2"	3"	3 3/4"	pine	1	F
G5	3/8"	3"	2 13/16"	pine	1	F	G13	1 1/4"	3 1/8" DIA.		oak	4	F
G6	3/4"	3 1/8"	5 3/8"	pine	1	R	G14	1 1/4"	1 1/4"	1 5/8"	maple	1	R
G7	1/4"	1 1/8"	4 7/8"	maple	1	R	G15	1"	3 1/4"	2 3/8"	pine	1	R
G8	1 1/2"	3"	4 3/4"	pine	1	F	G16	1 1/4"	4"	12 1/2"	pine	1	R

R = Rough size
F = Finished size

T = Thickness

W = Width





L = Length


Instructions:

R= Rough sizes, the material is cut oversized so you have ample room to apply the pattern on the surface. Sanding is not required at this point.


F = Finished Size: Cut and sand parts to finished size.

Full-Sized Patterns: Set One

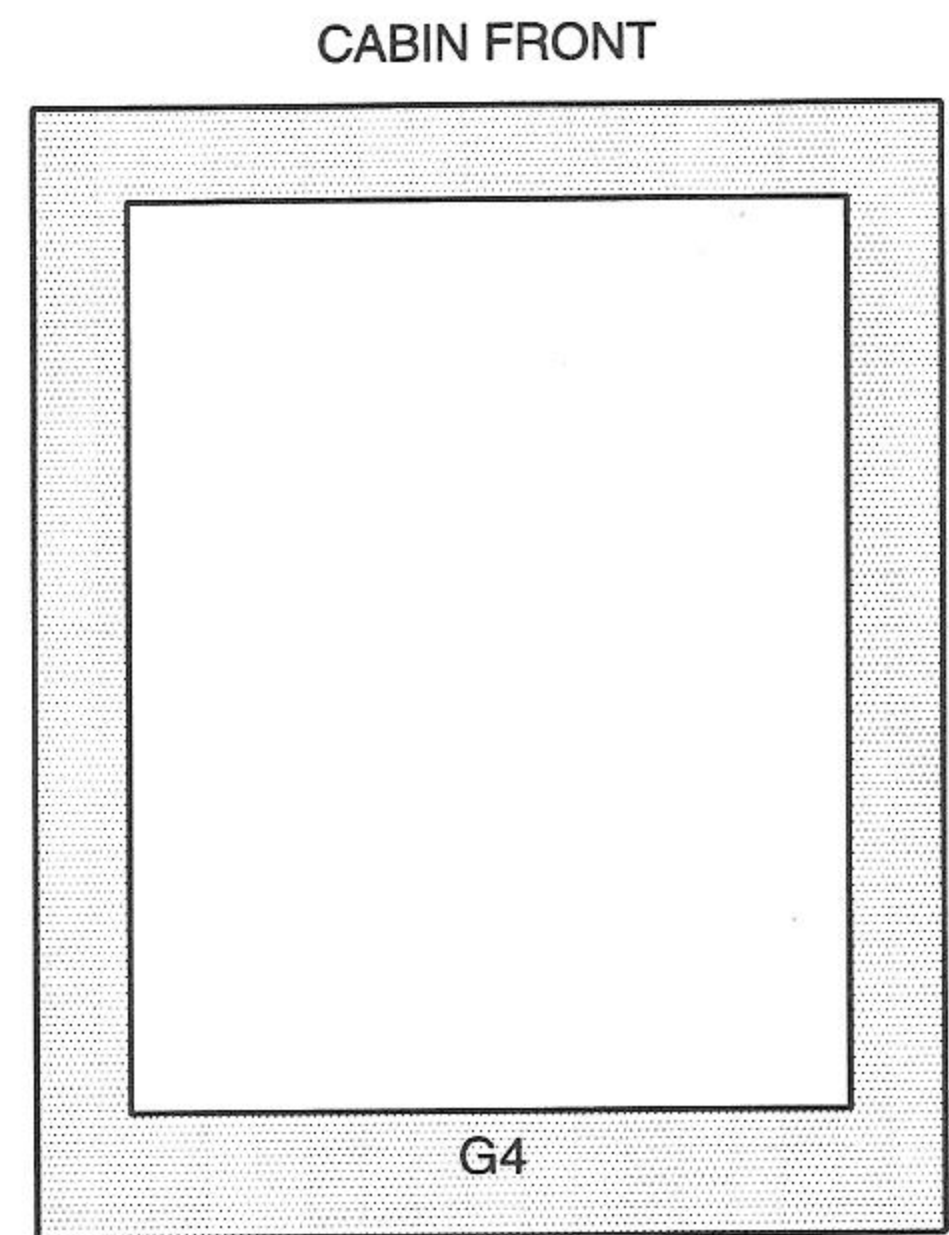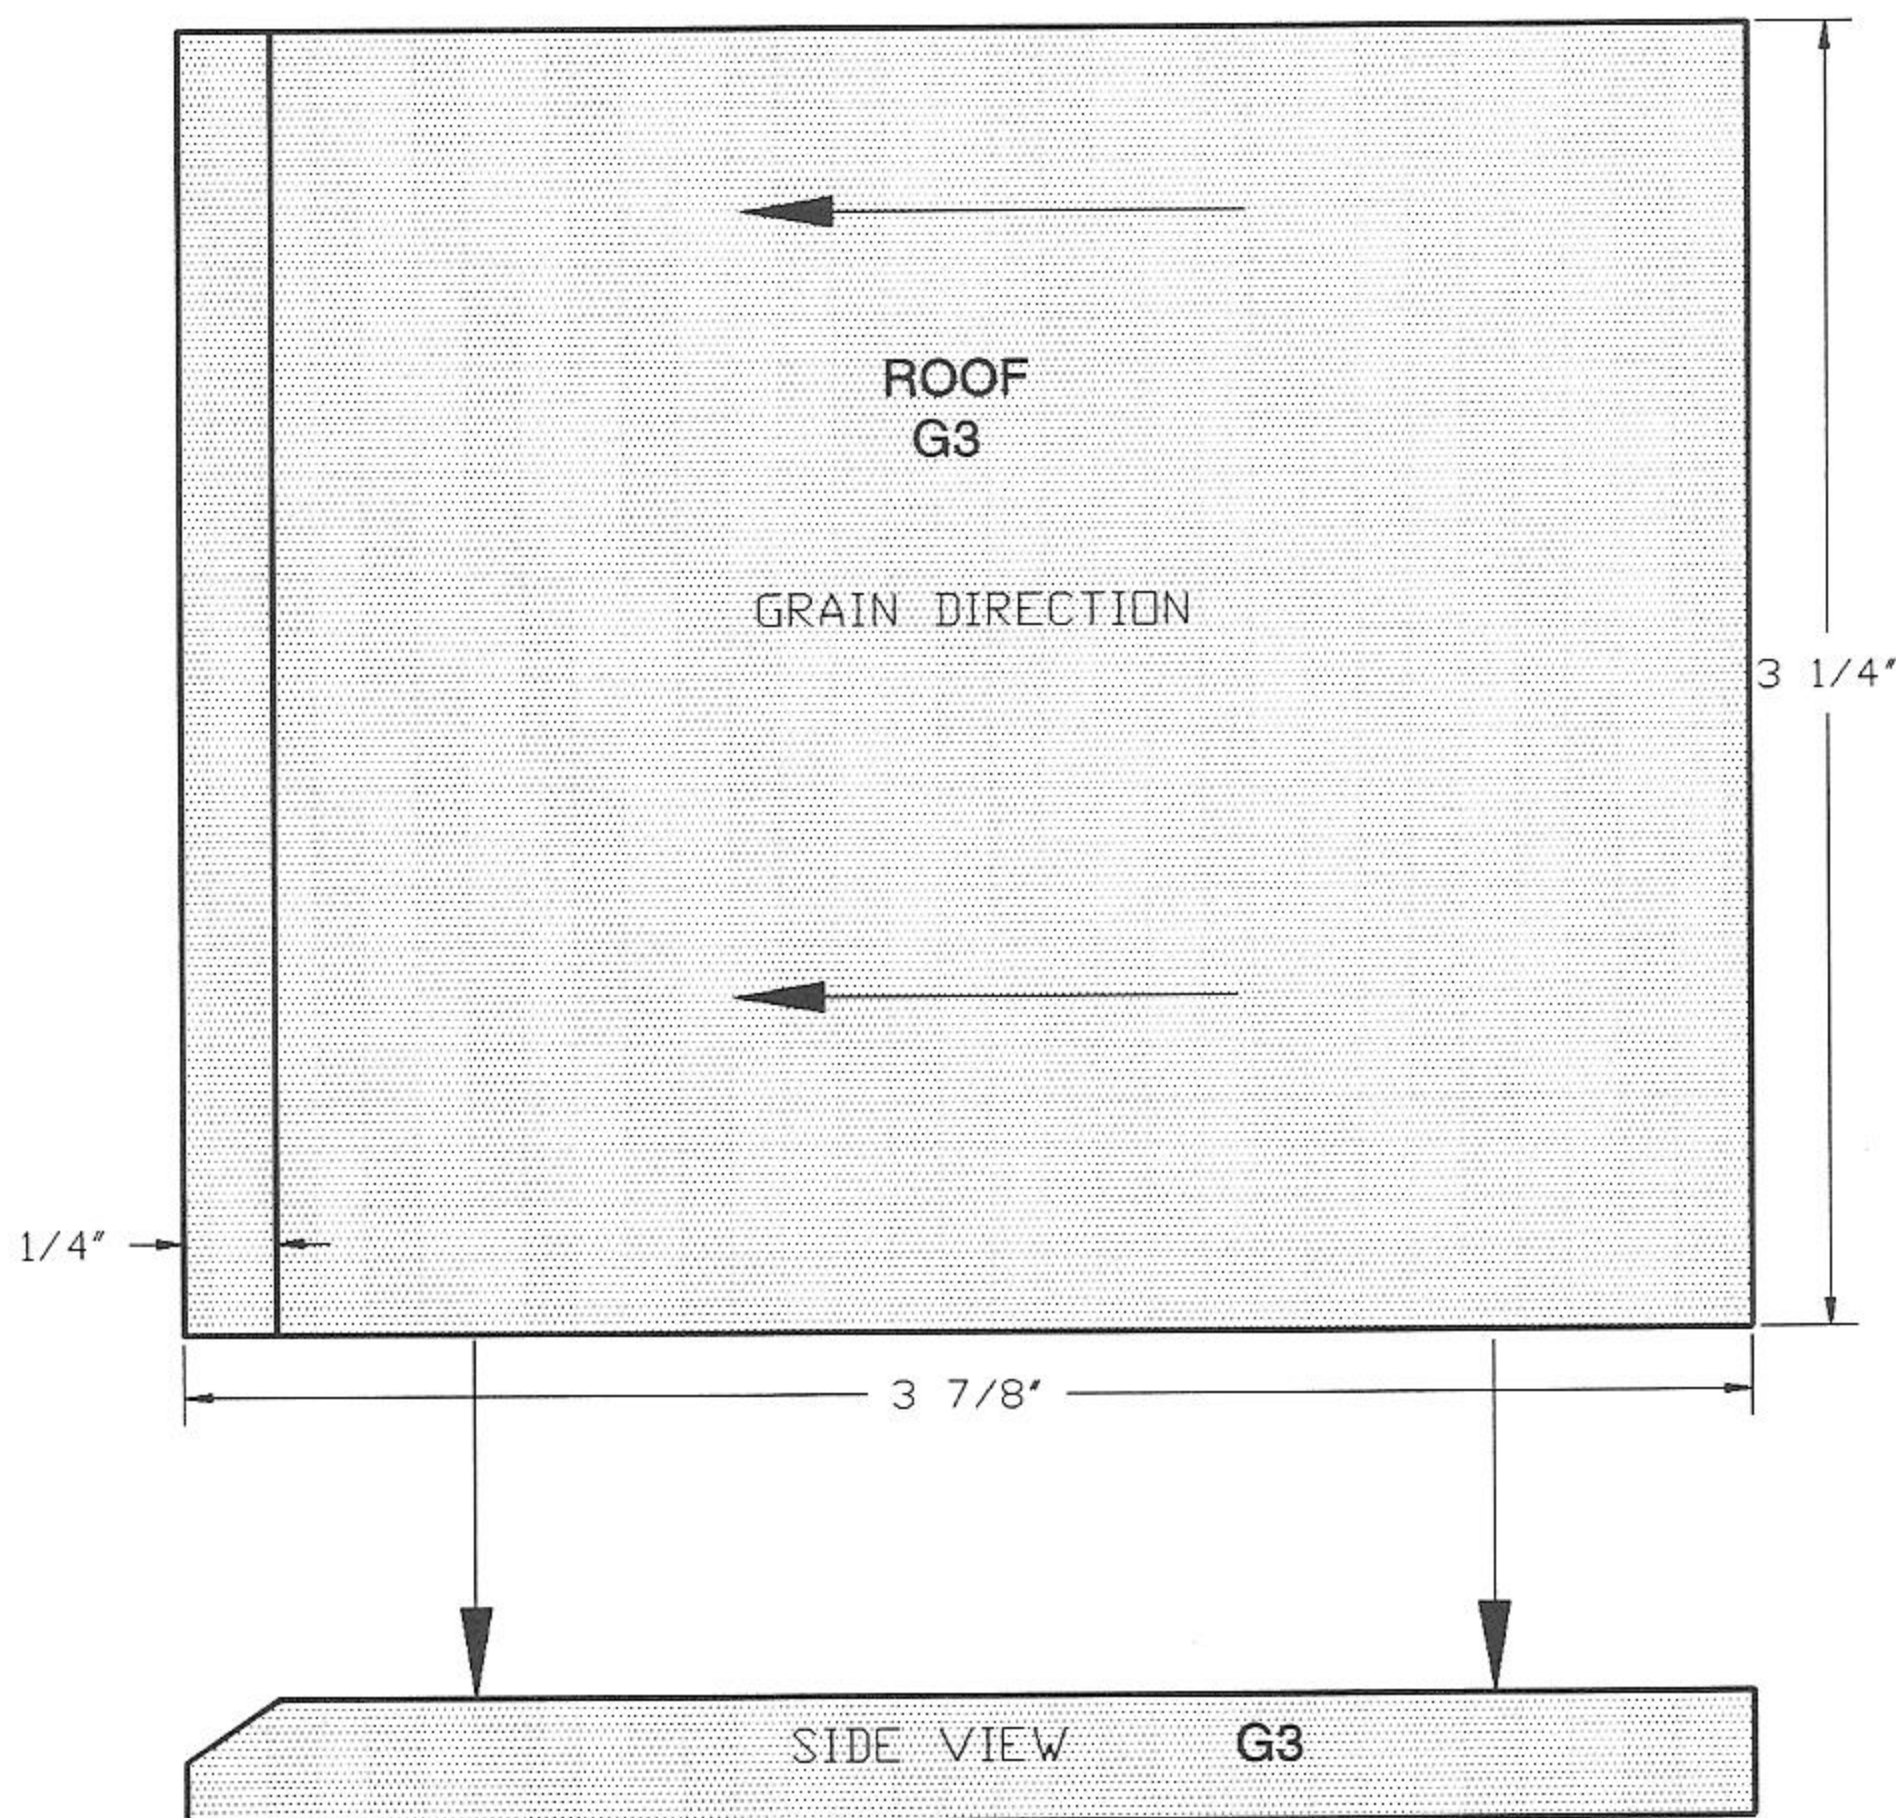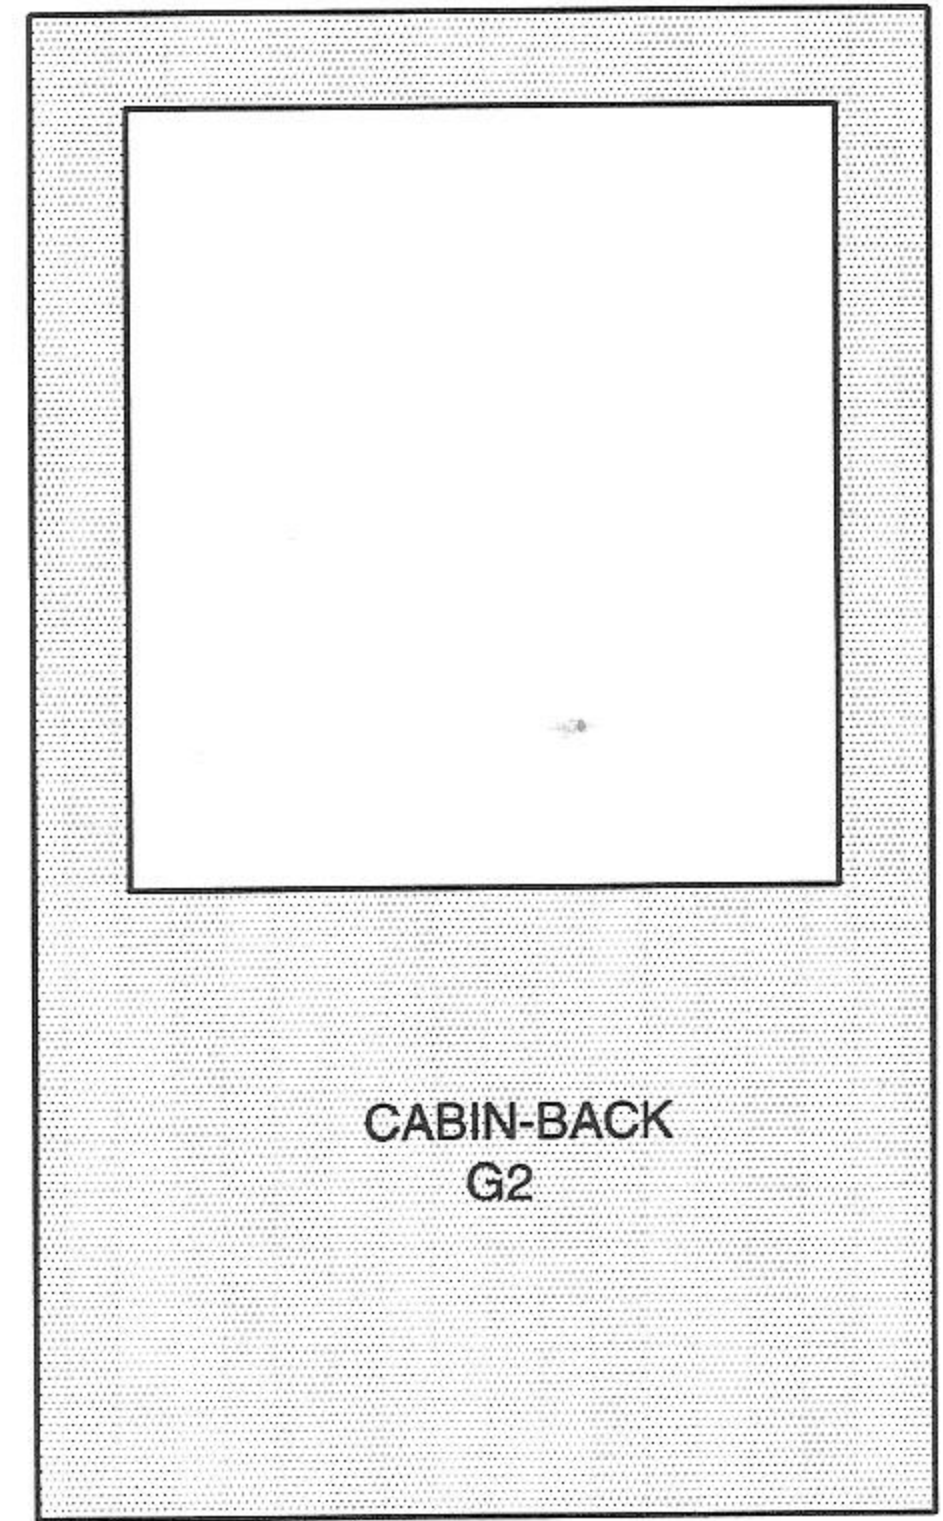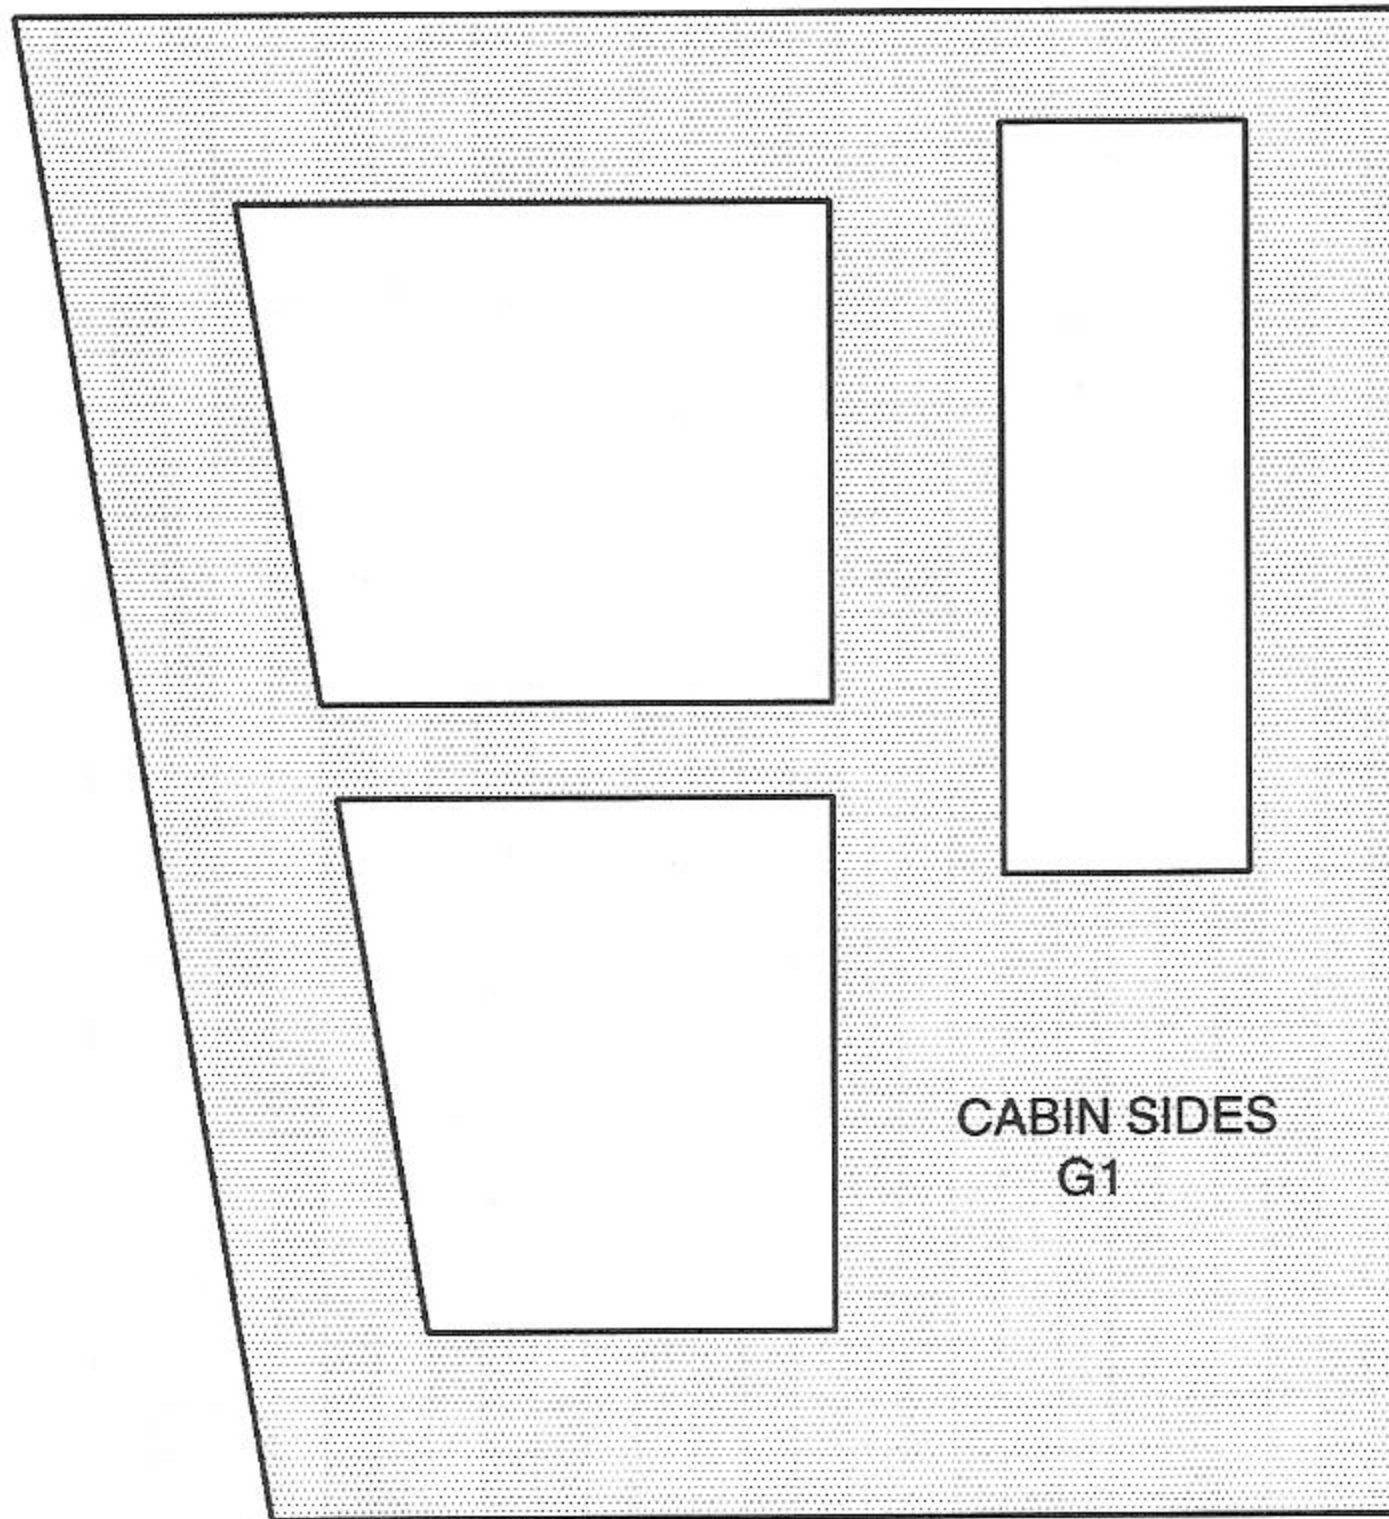


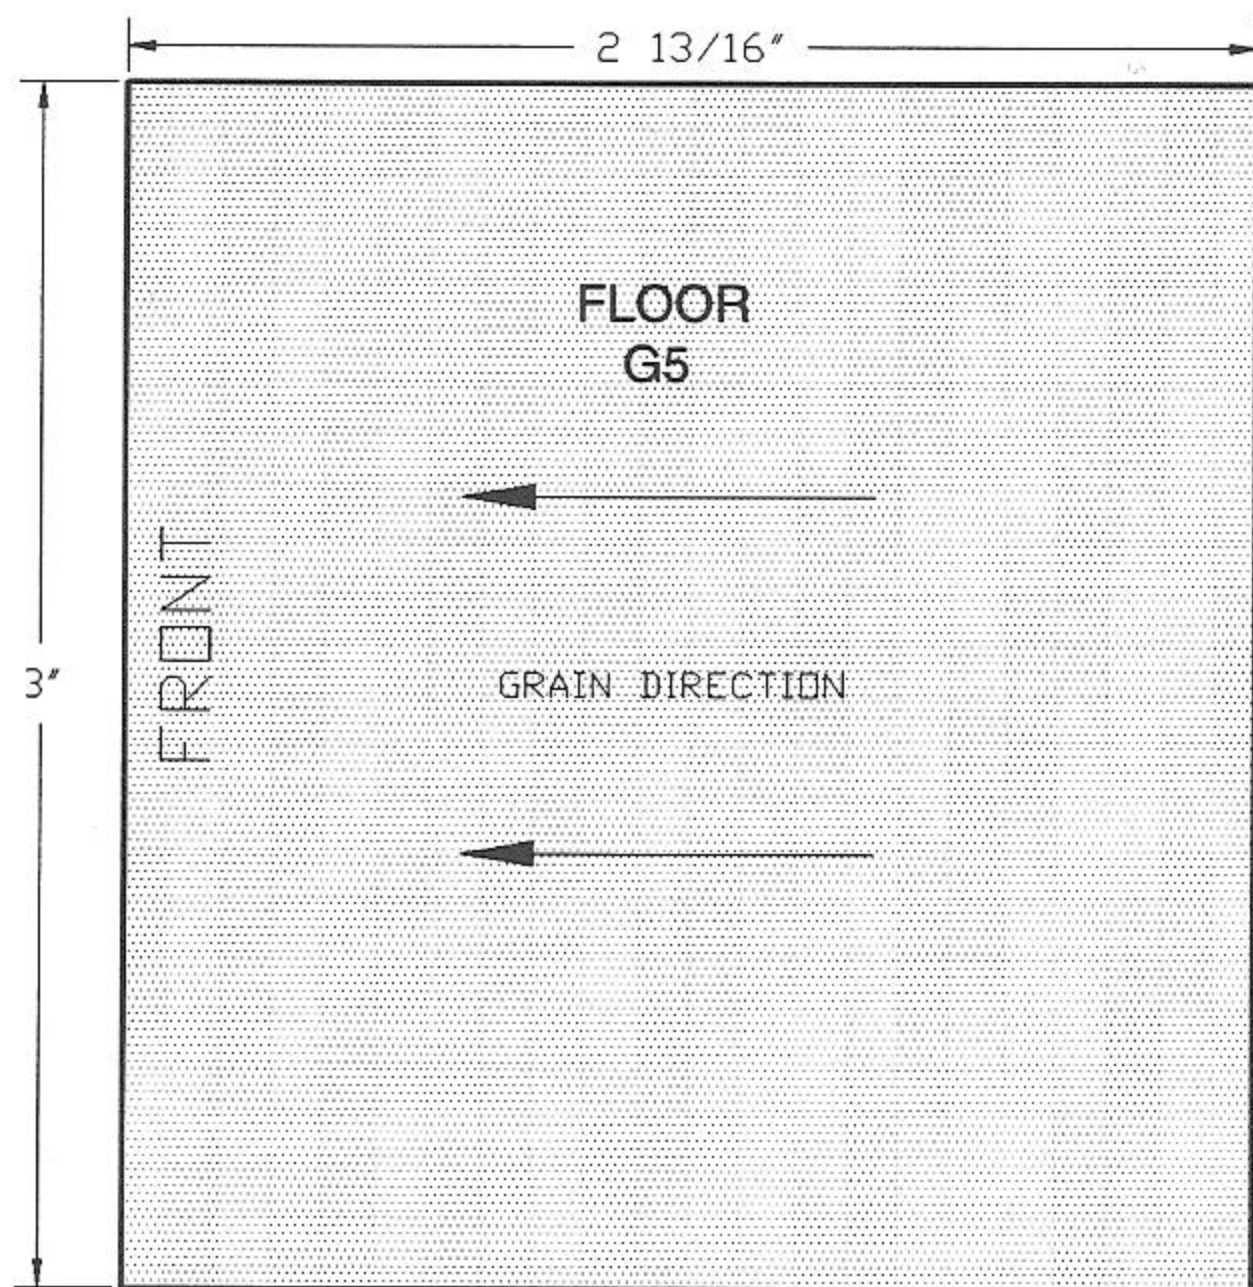

SHOVEL FRAME ASSEMBLY

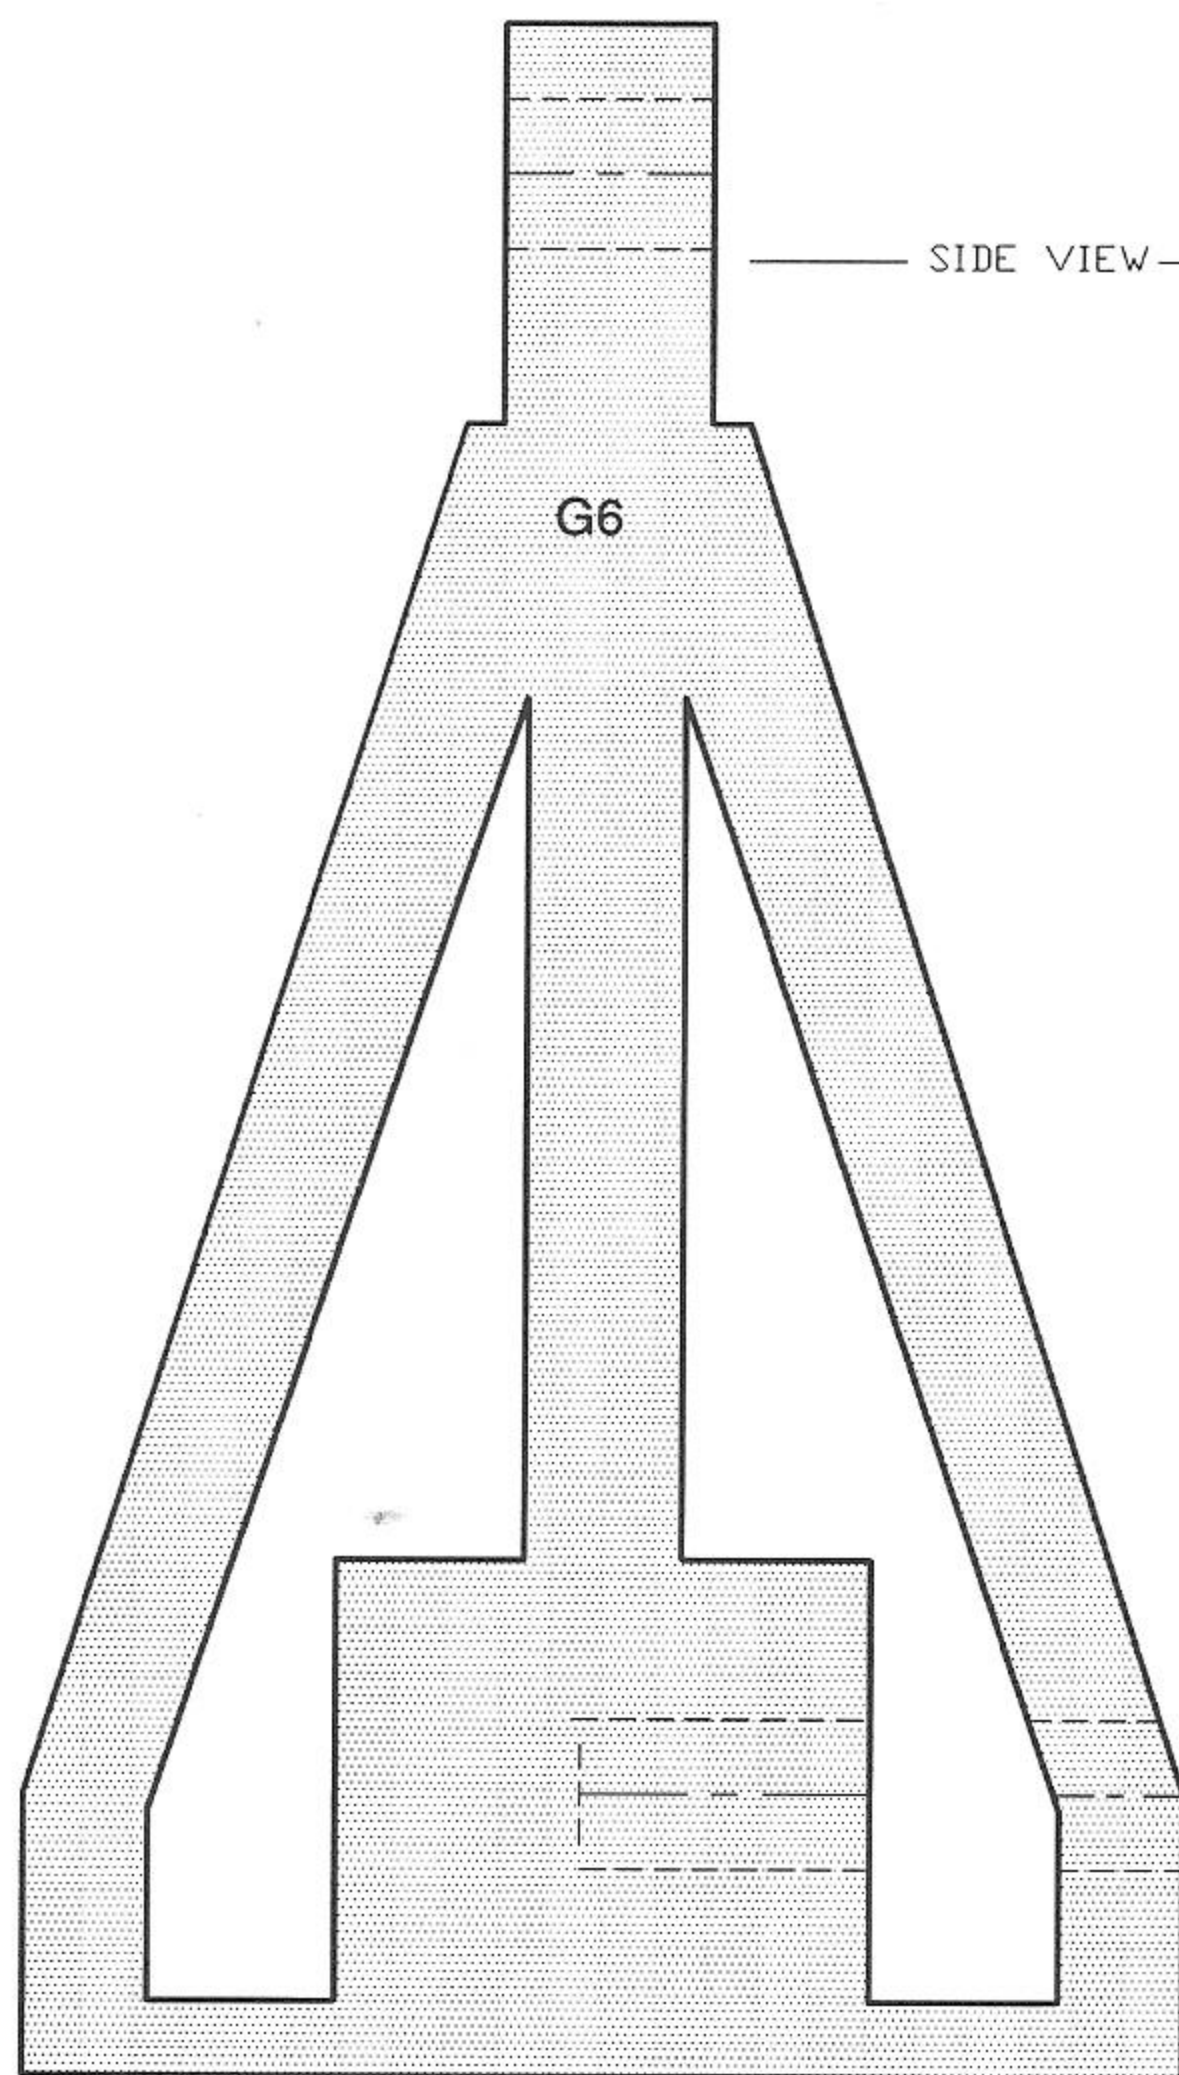


SIDE VIEW

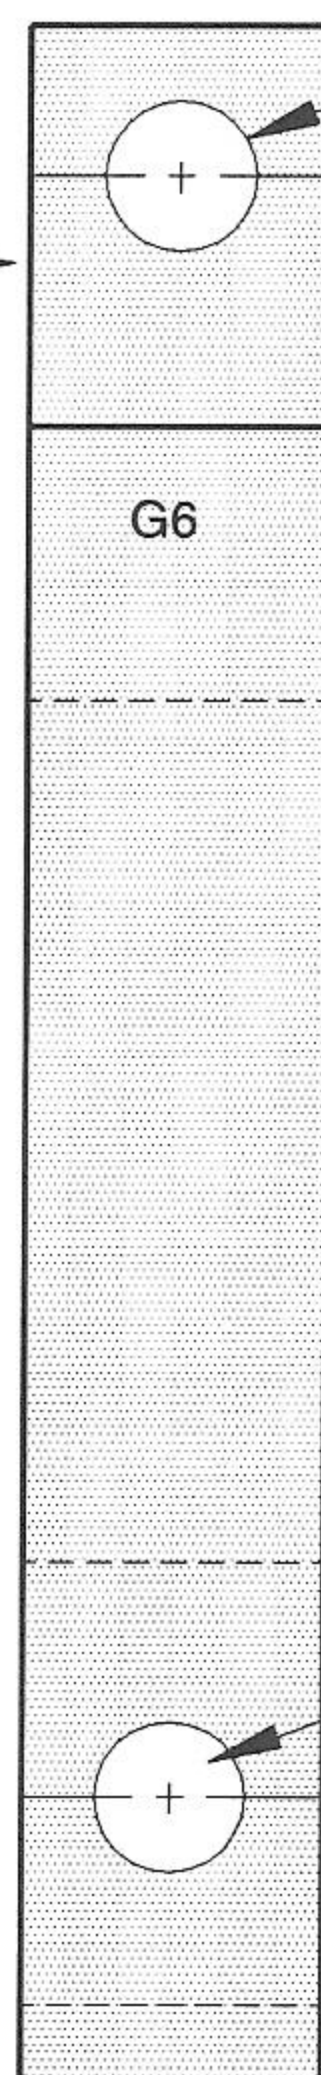




DRILL
3/8" DIA.


DRILL
23/64" DIA.
1 1/2" DEEP


CONTROL ARM LEVER

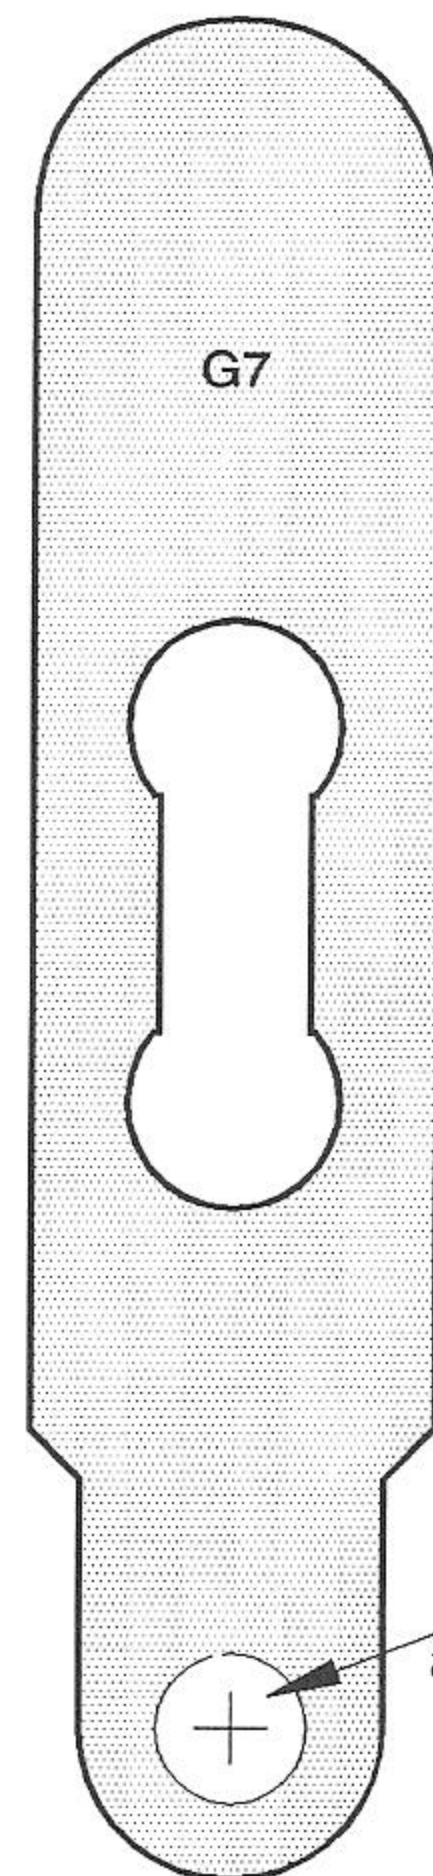

DRILL
25/64" DIA.

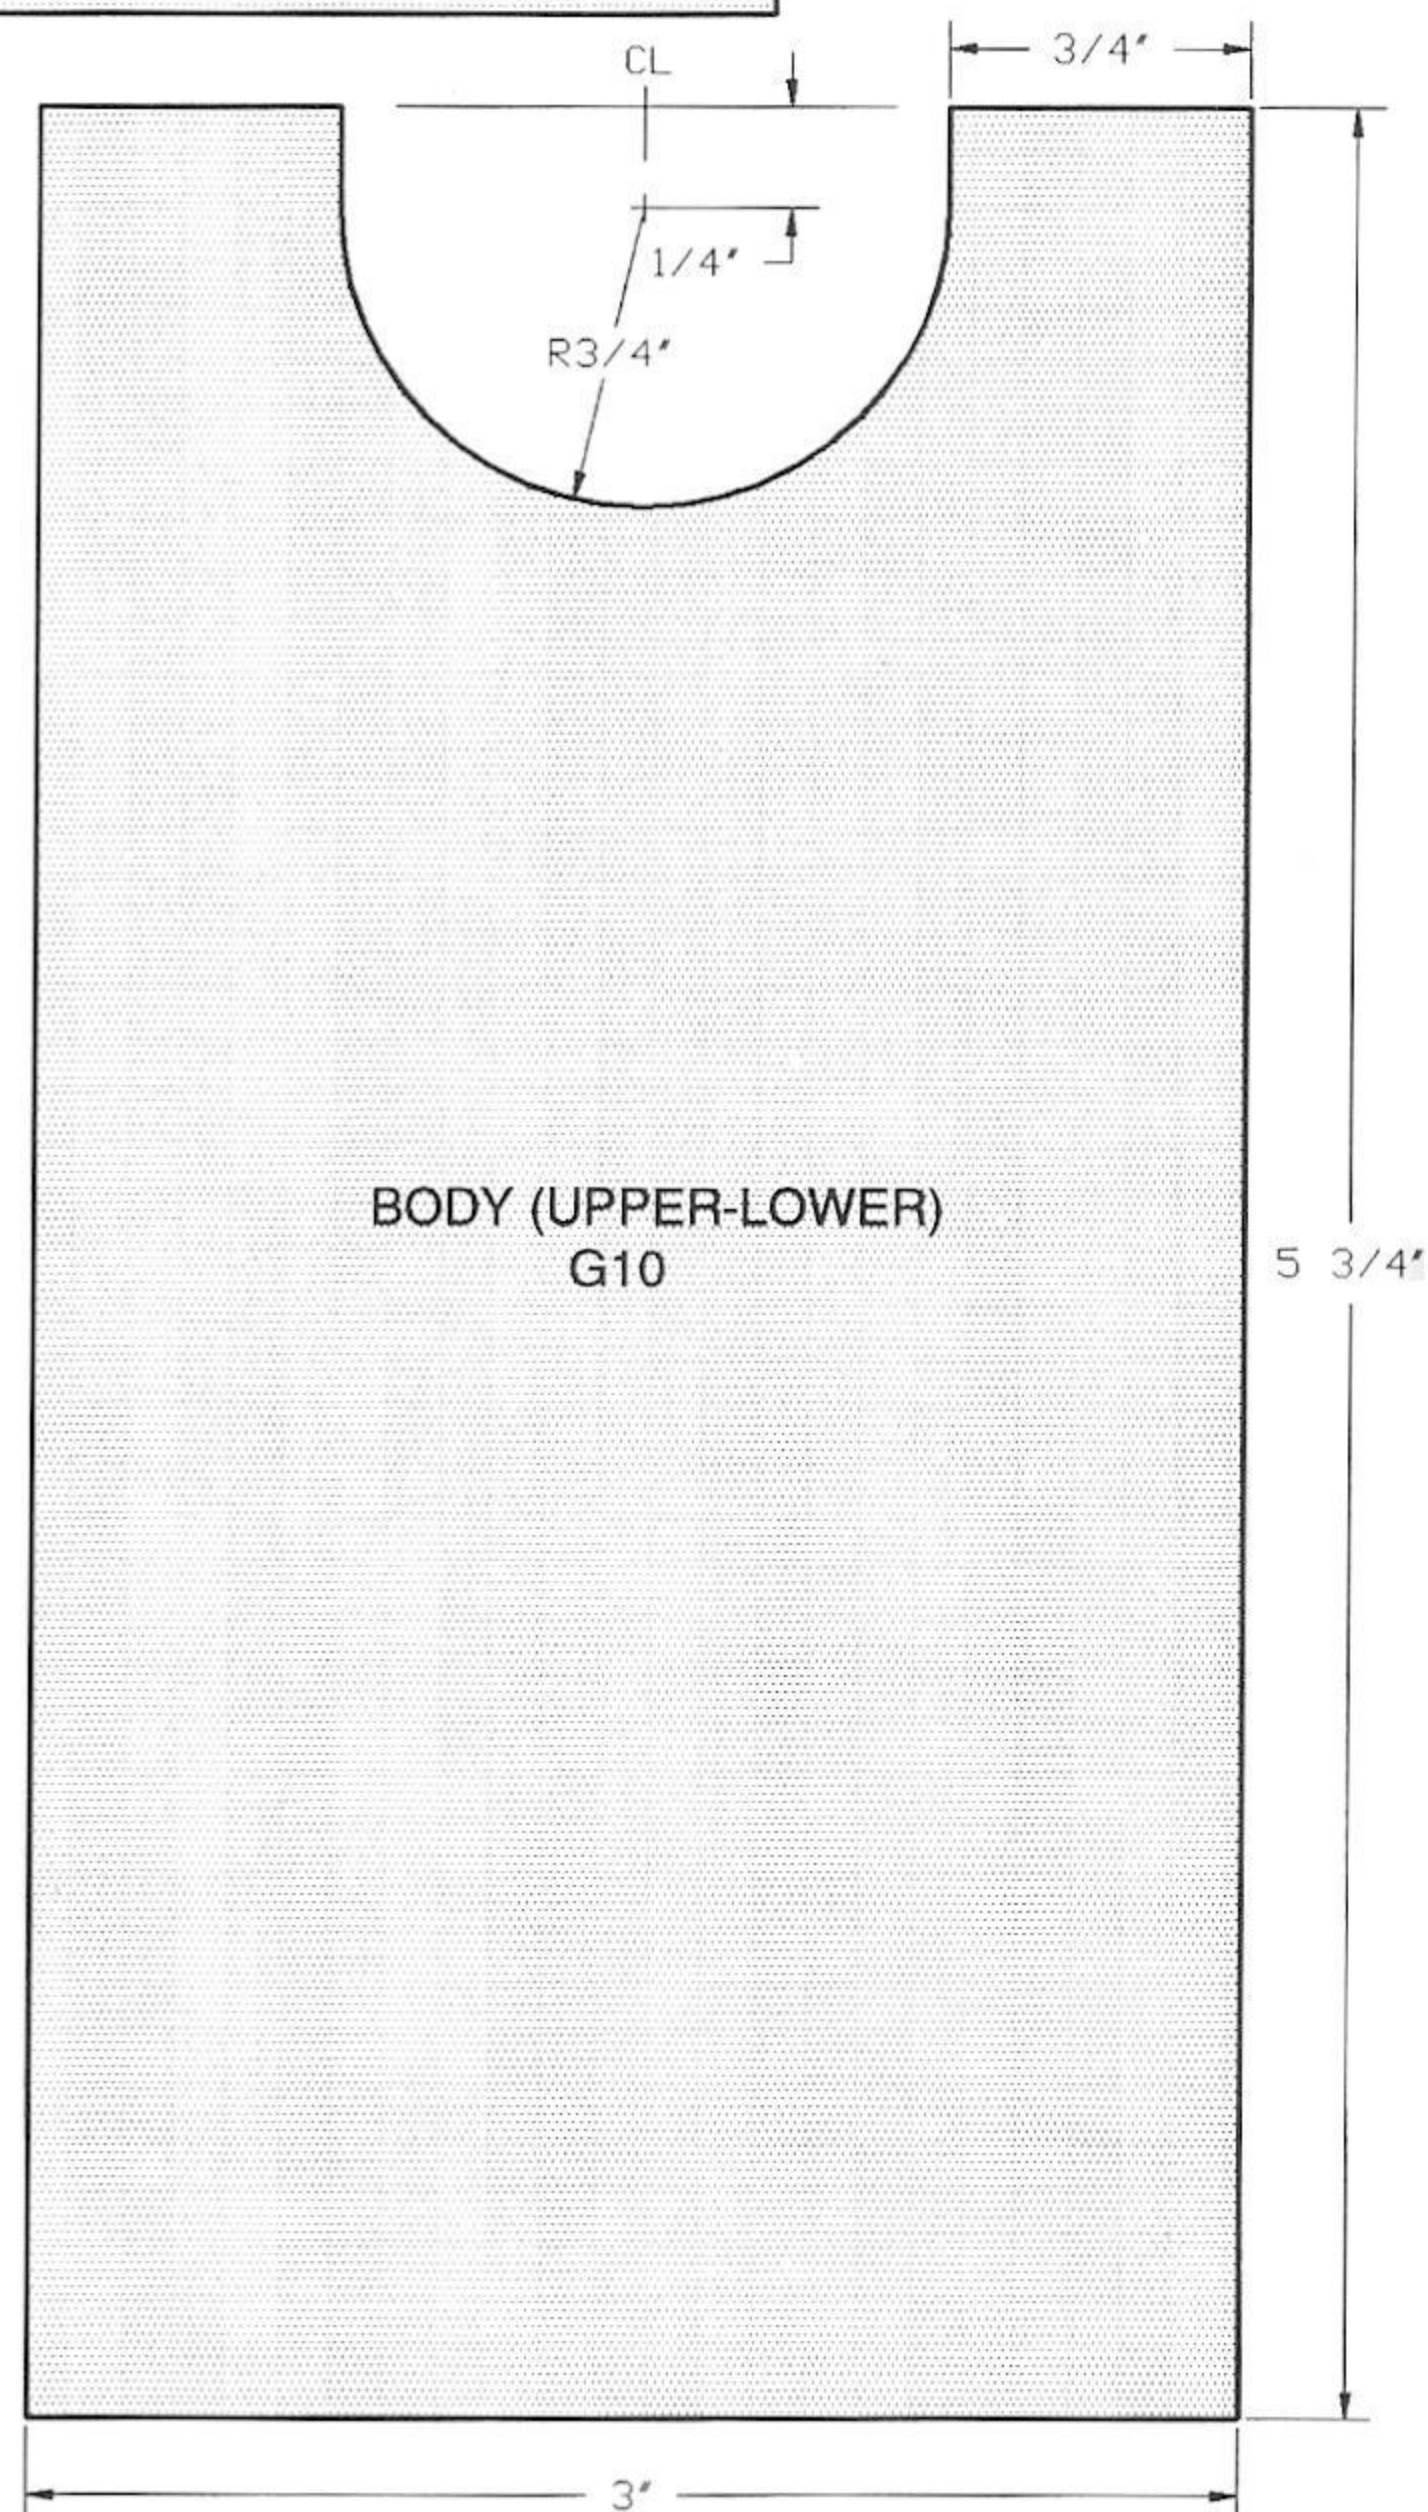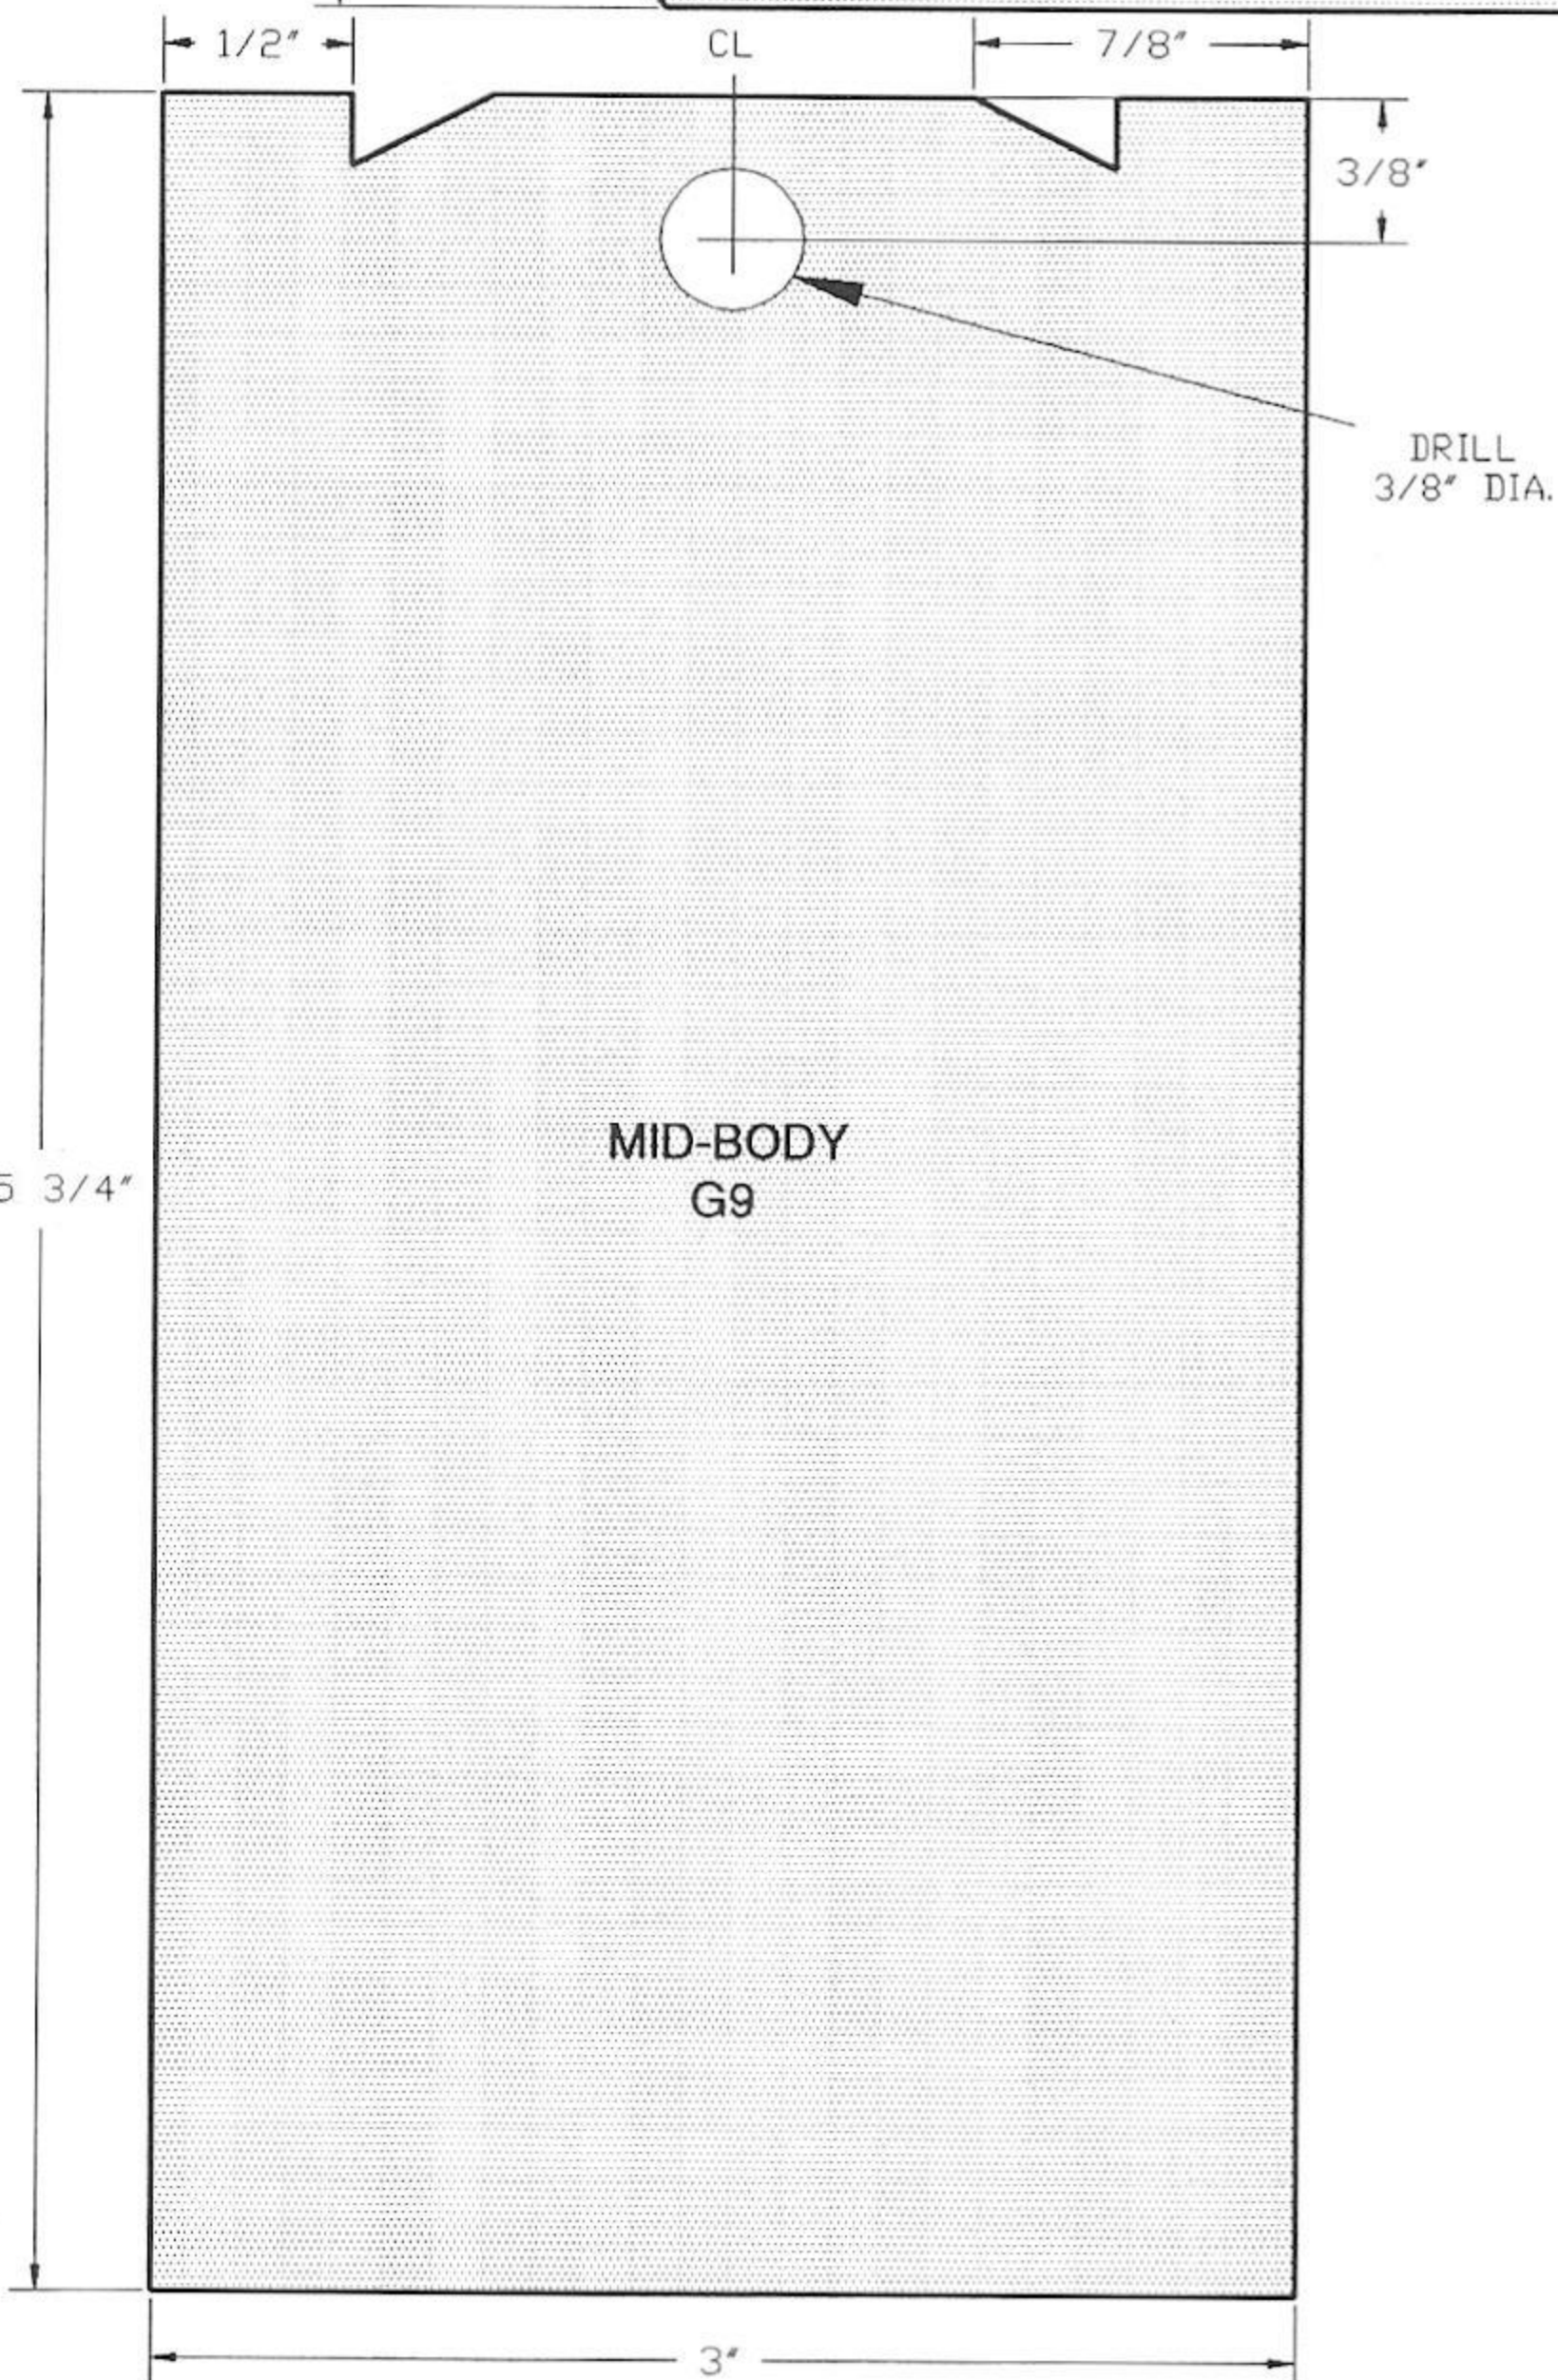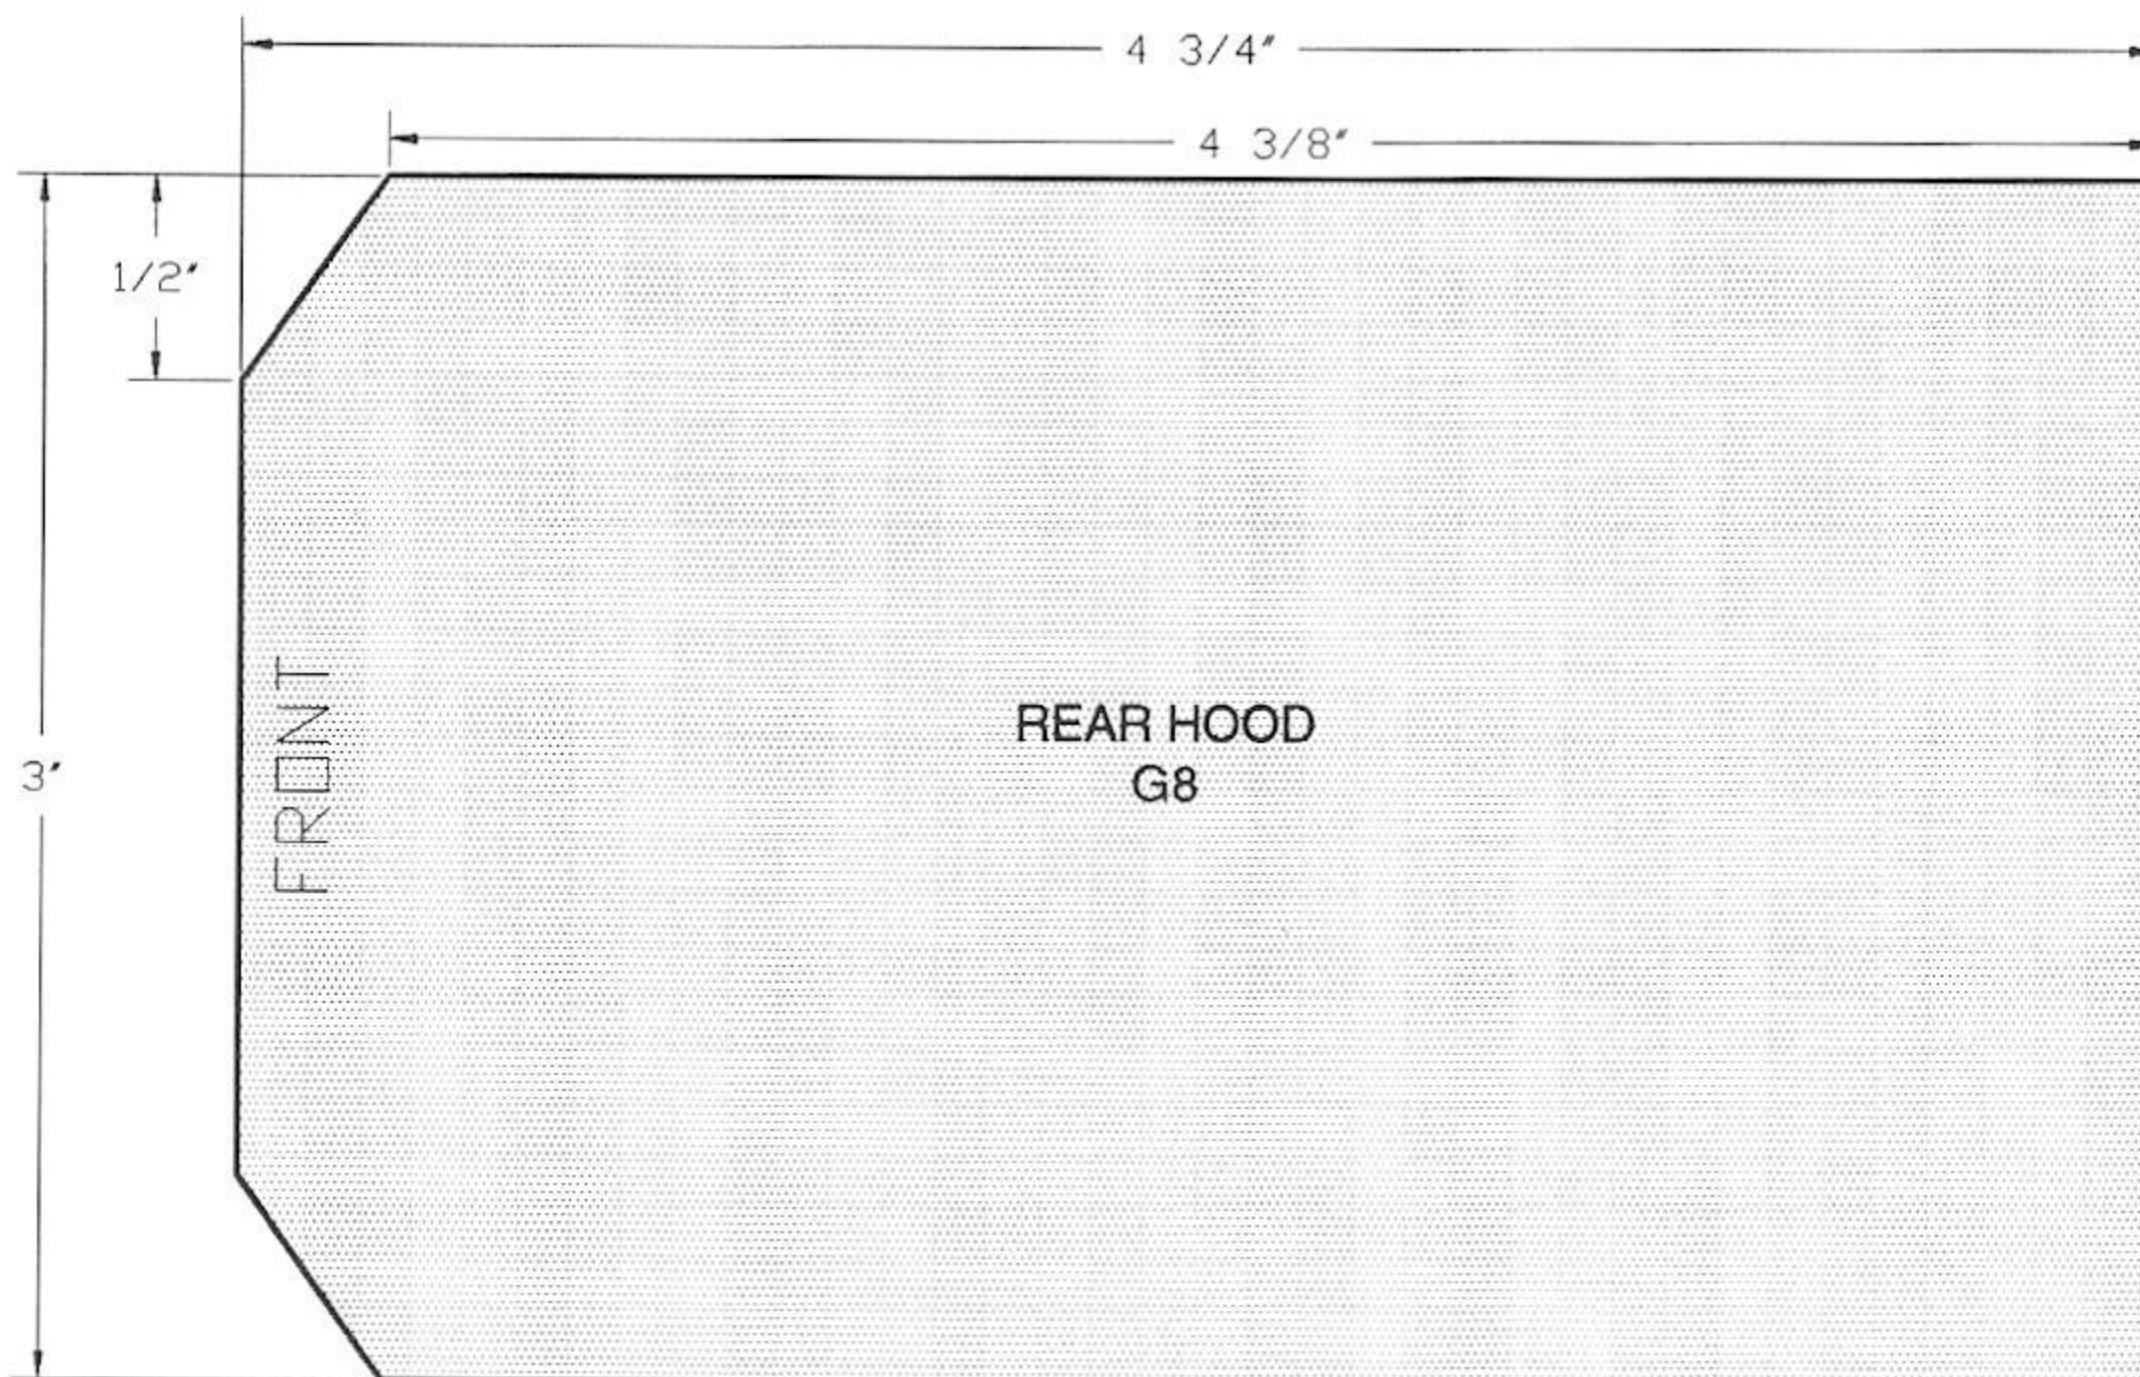

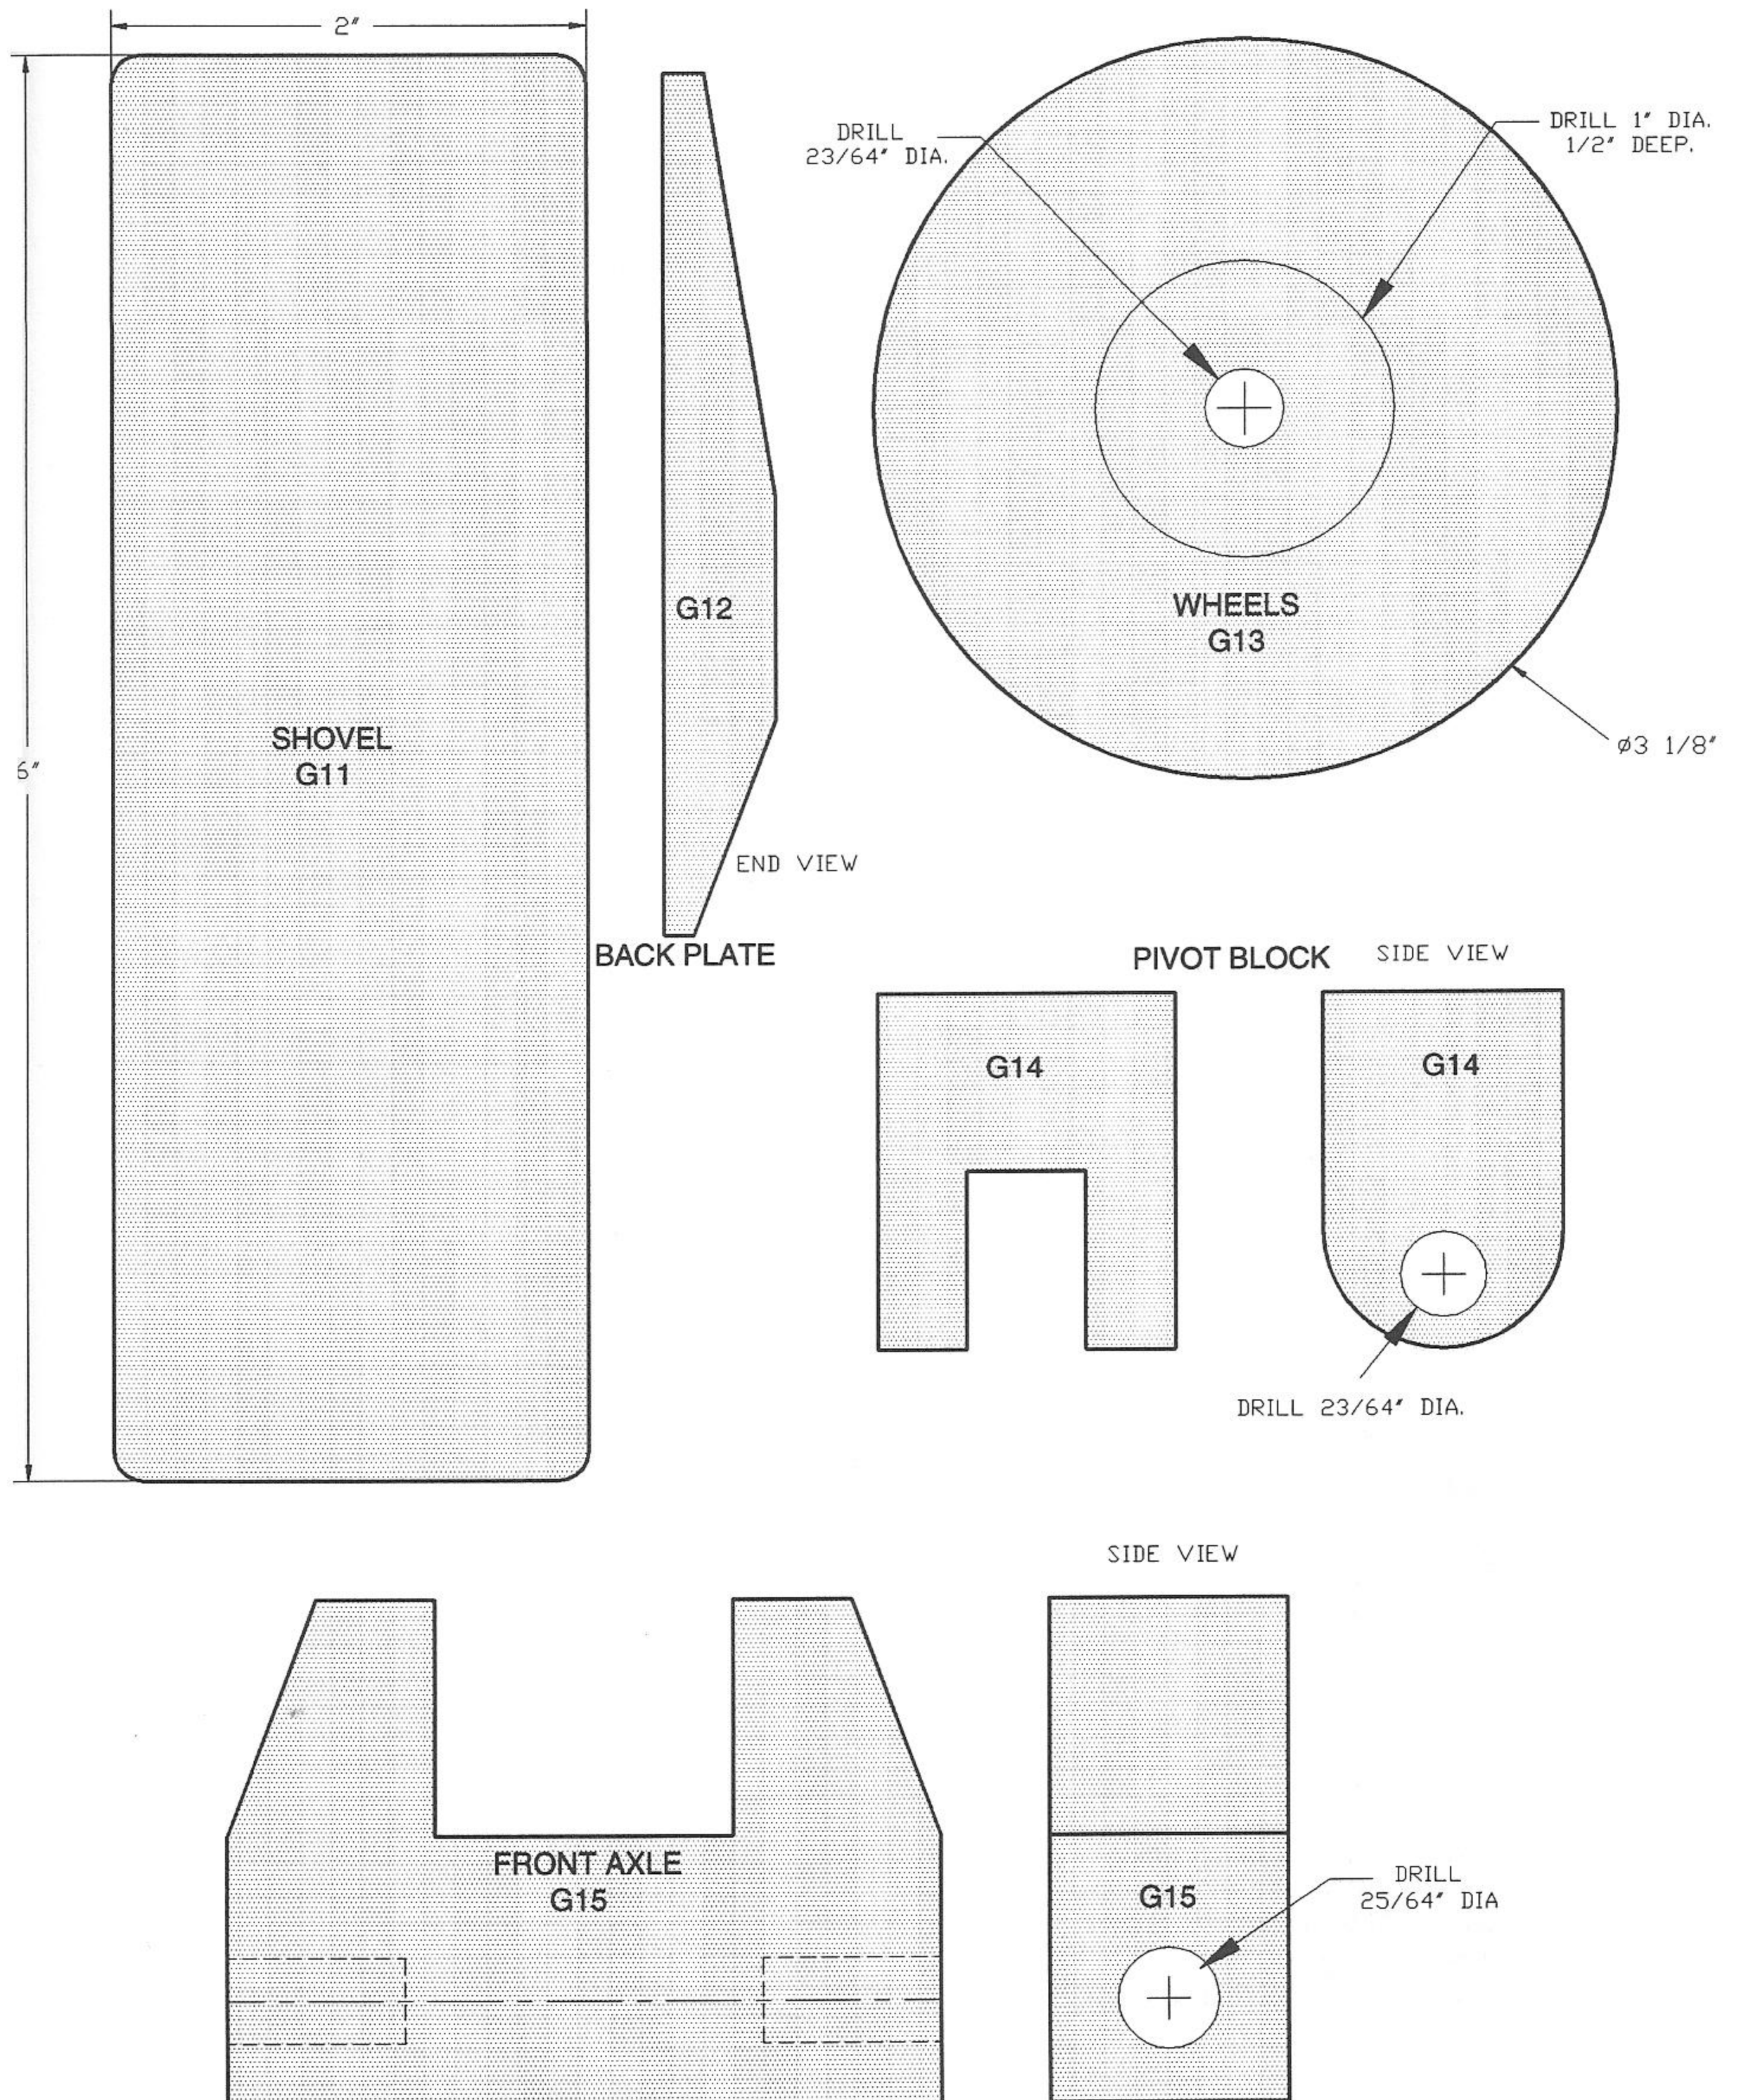


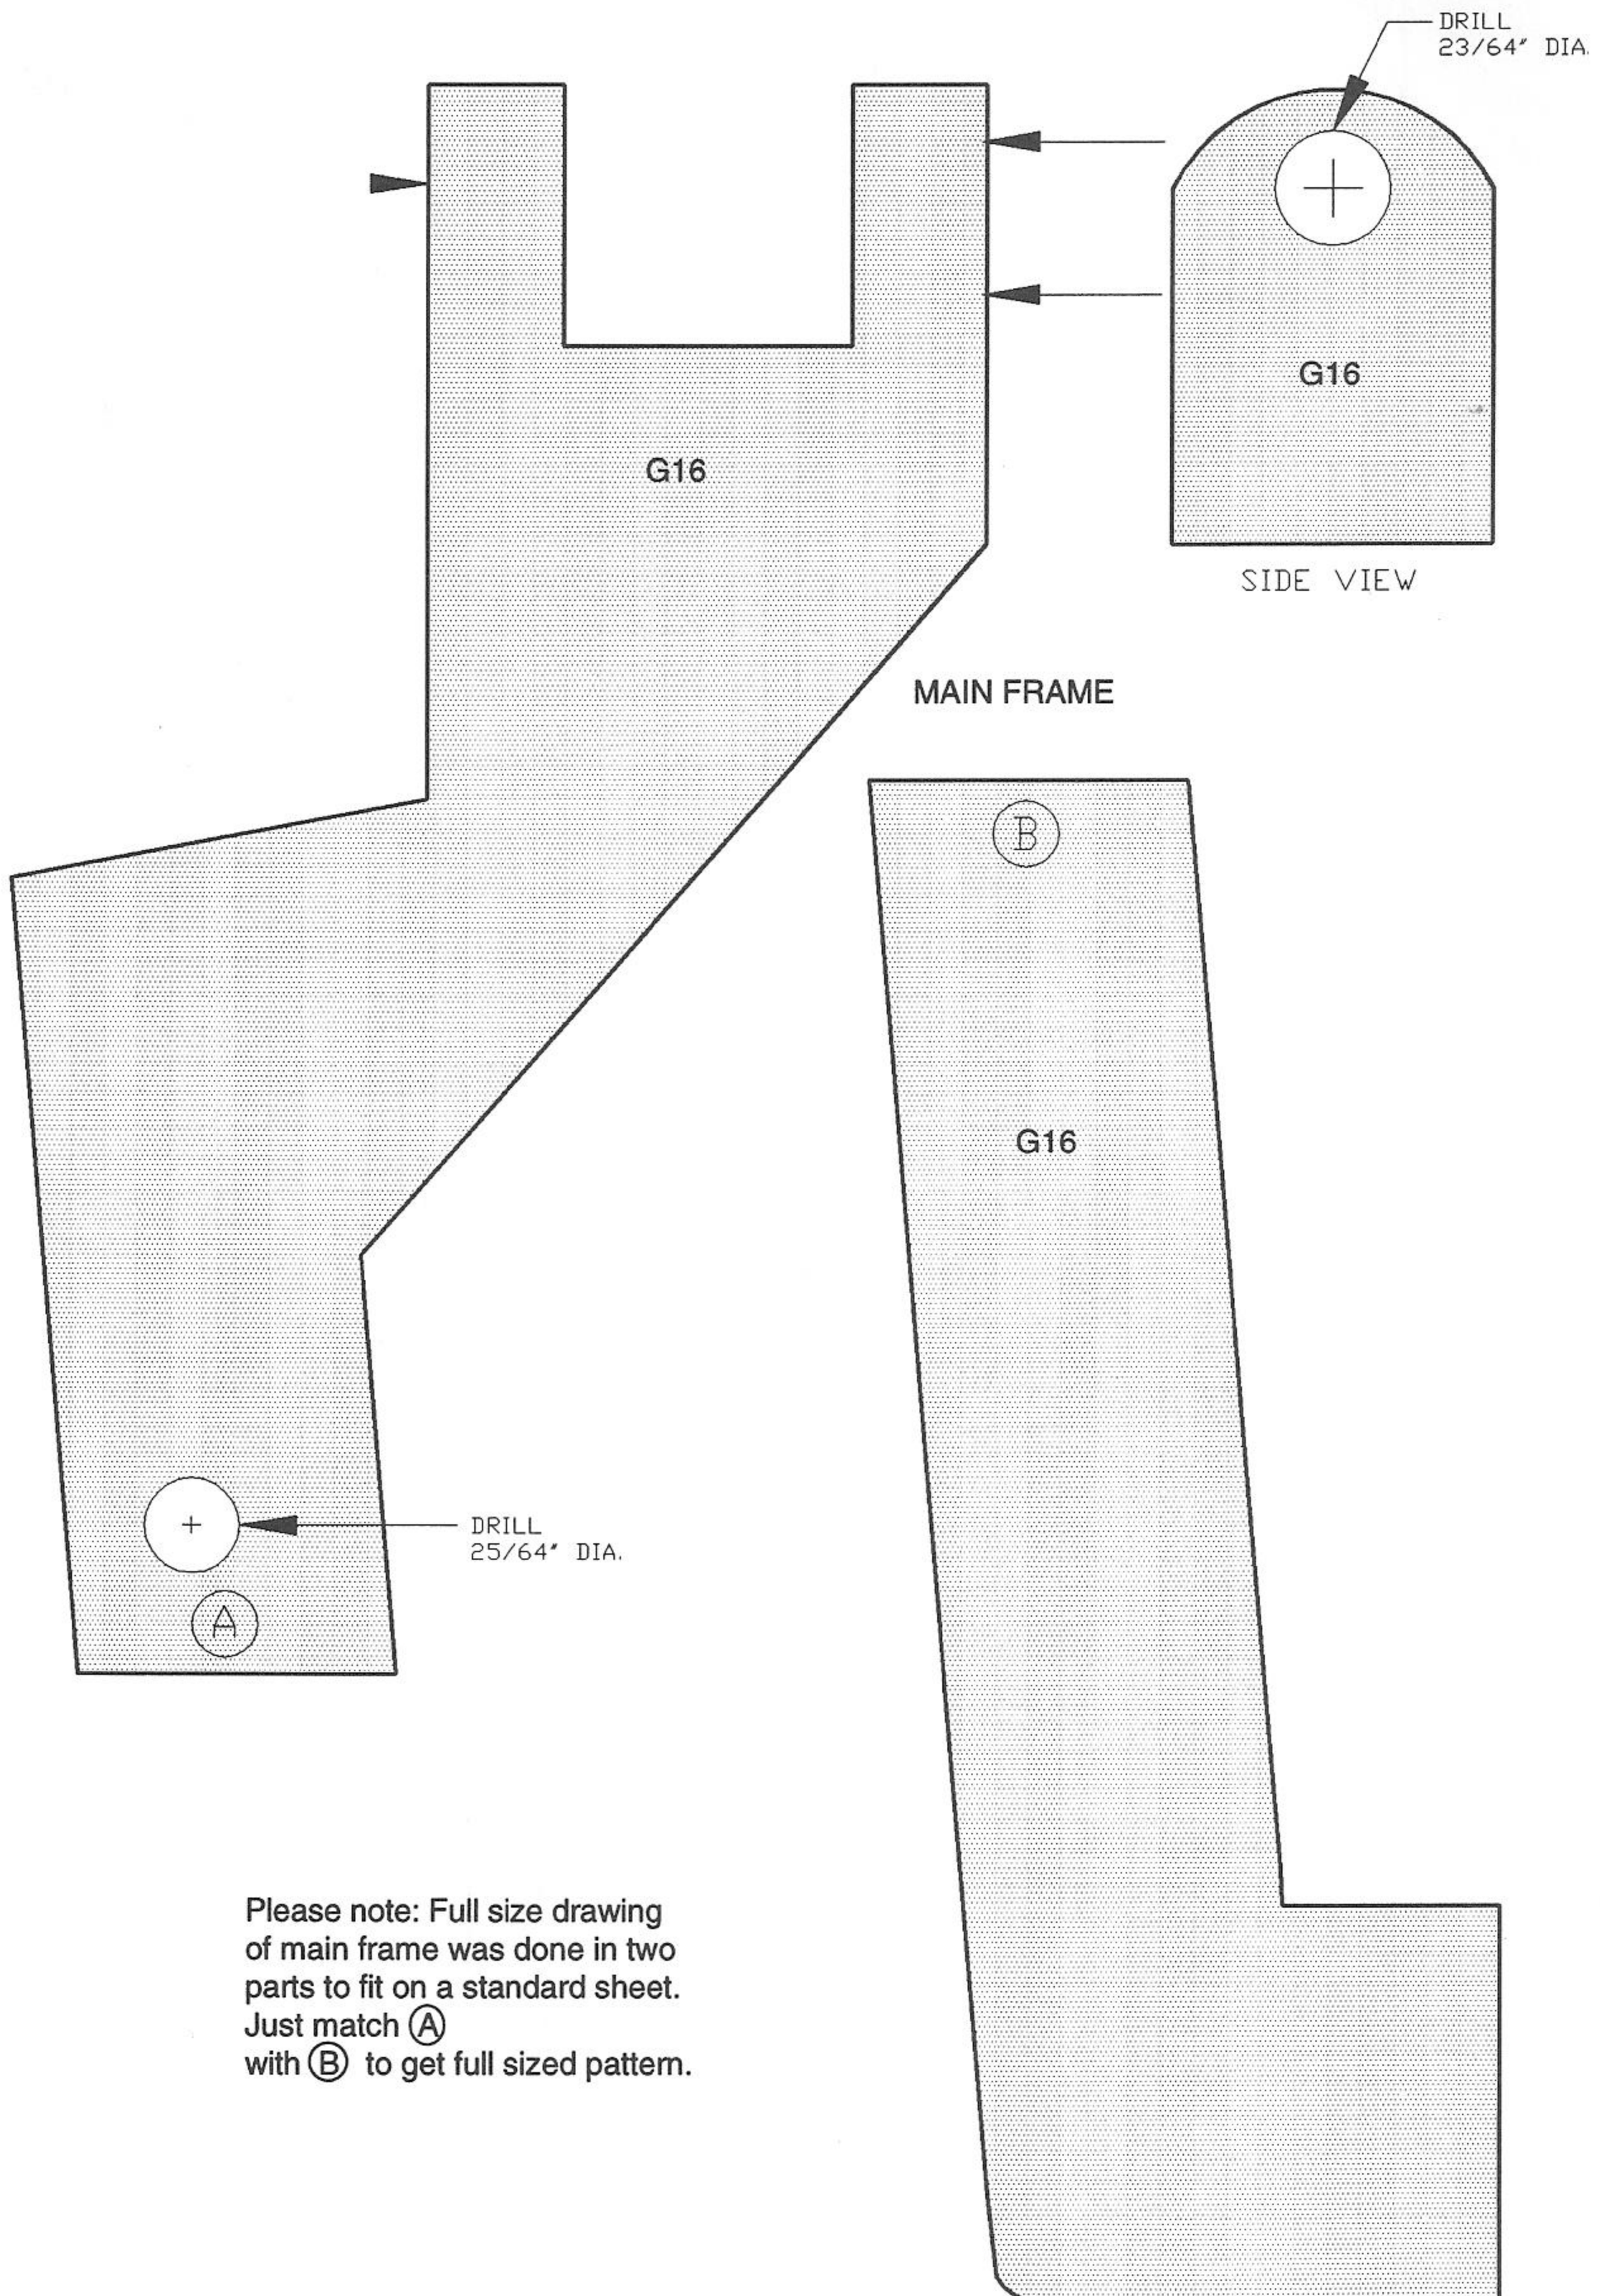

Please note: Full size drawing
of main frame was done in two
parts to fit on a standard sheet.
Just match (A)
with (B) to get full sized pattern.


WHEEL SHAFTS
(3 REQUIRED)

G17

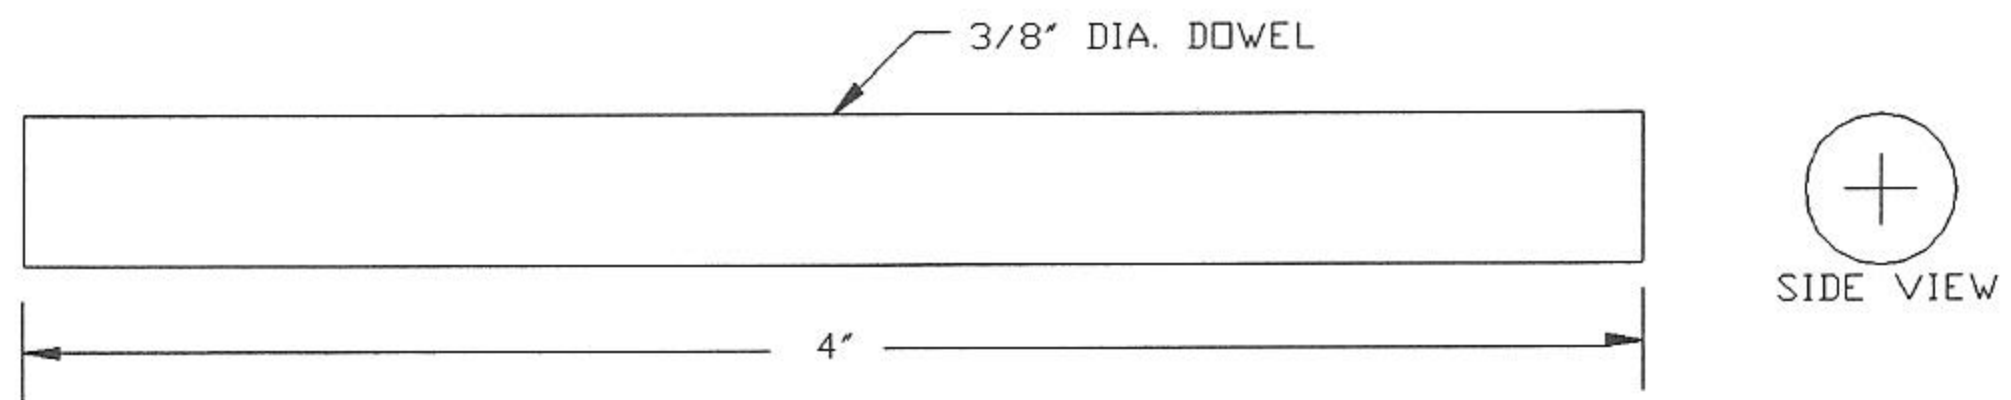


PINS
(2 REQUIRED)

G19

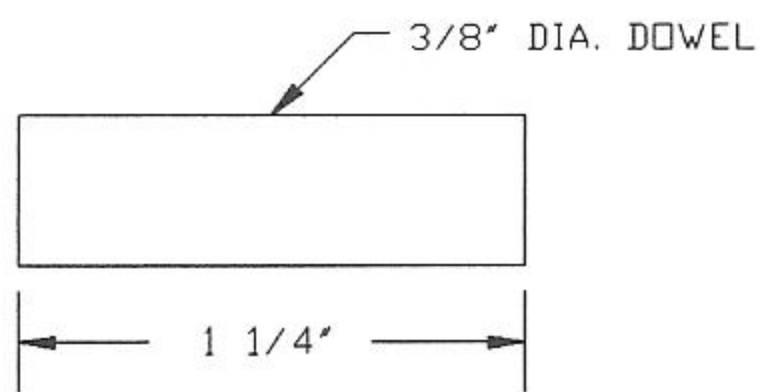


END CAPS
(2 REQUIRED)

G22

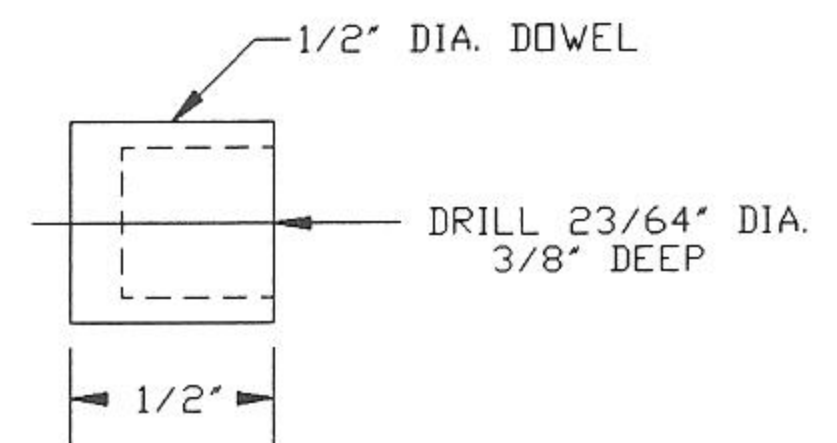


PIN
(1 REQUIRED)

G21

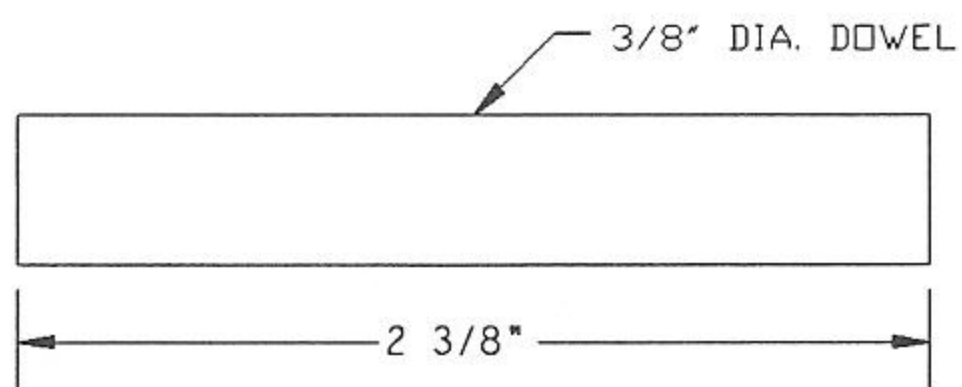


MAIN PIN
(1 REQUIRED)


G23

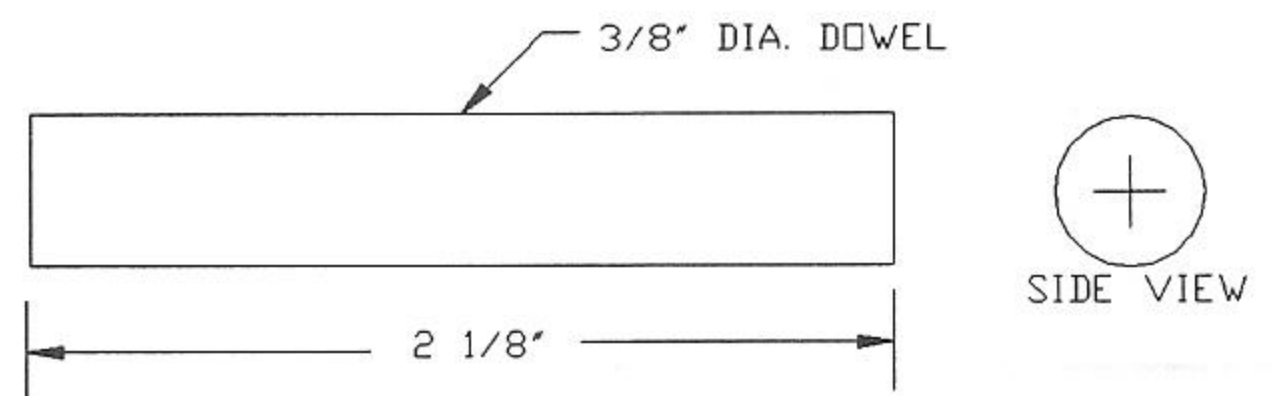


Additional Information - Grader

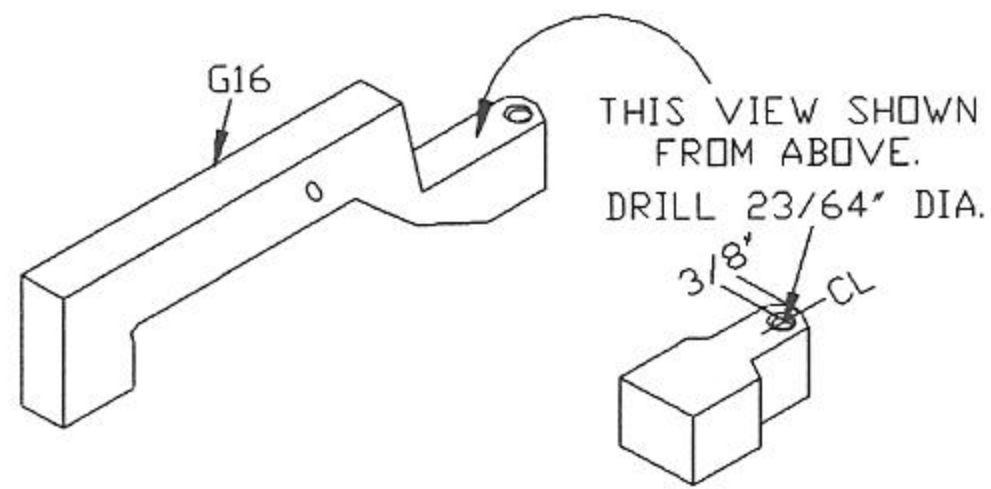


Drill $\frac{23}{64}$ " diameter hole in part G16.

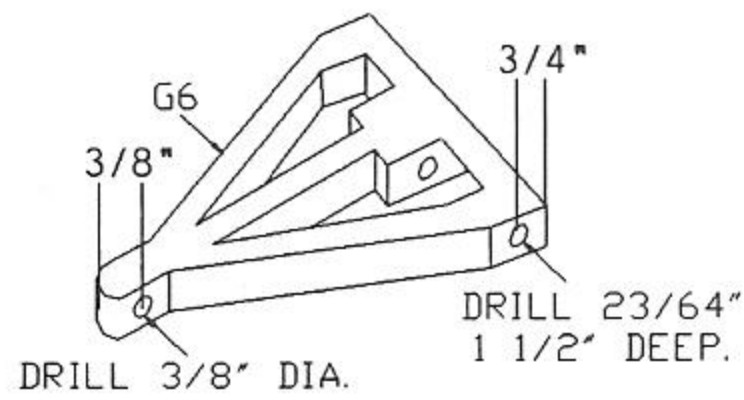

Drill holes in part G6, as shown.












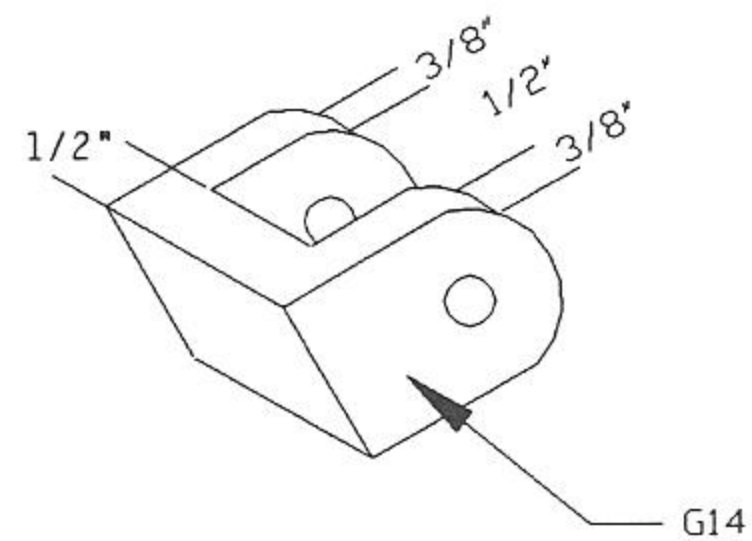











Cut groove in part G14, as shown.

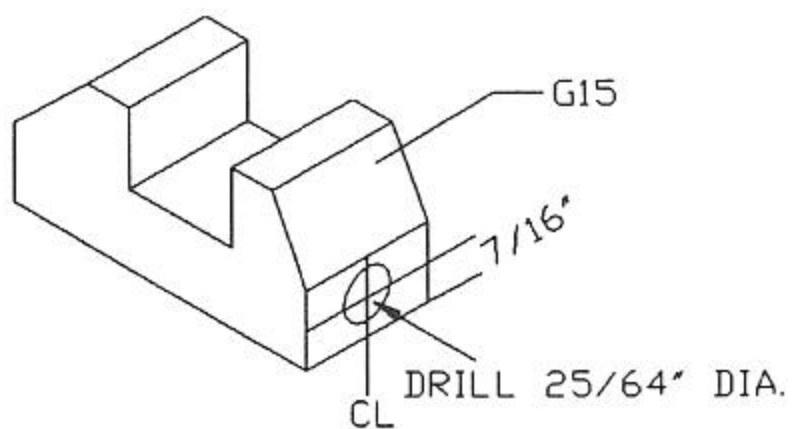


Drill $\frac{25}{64}$ " diameter hole in part G15.

Grader - Assembly Drawings

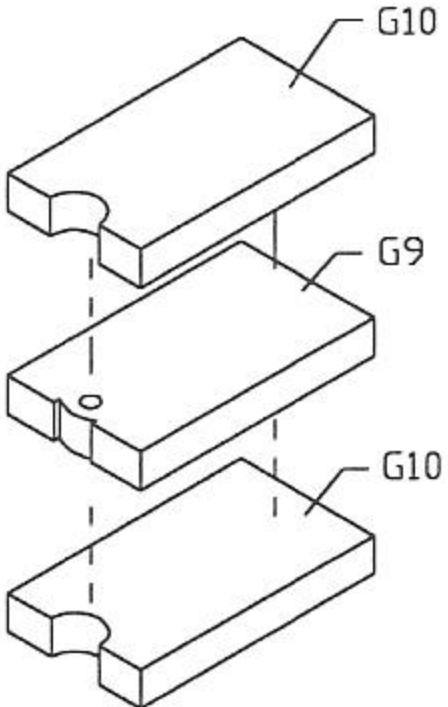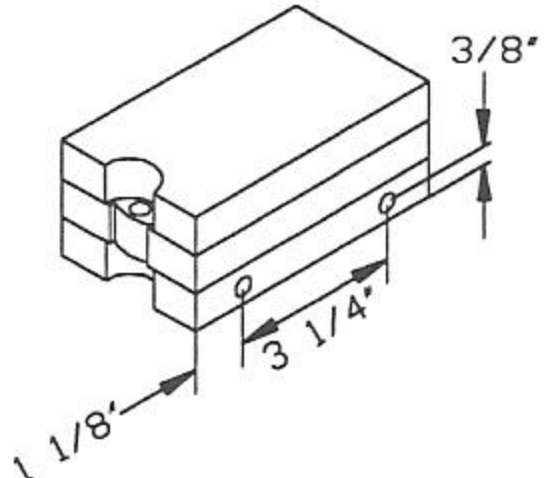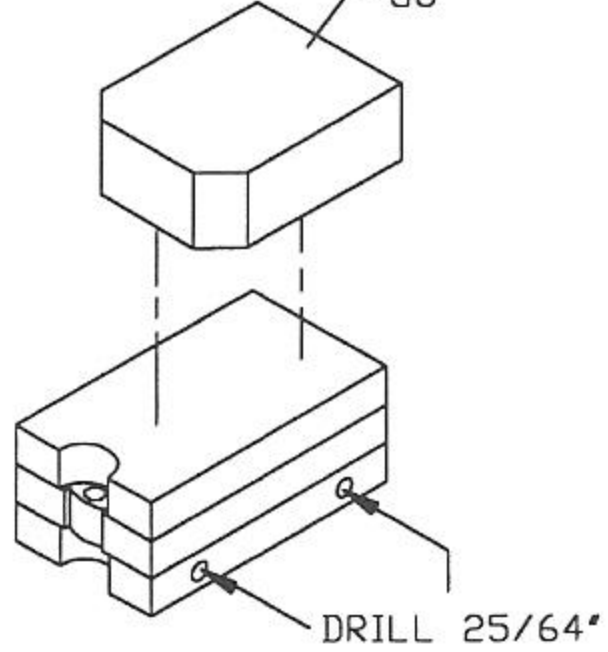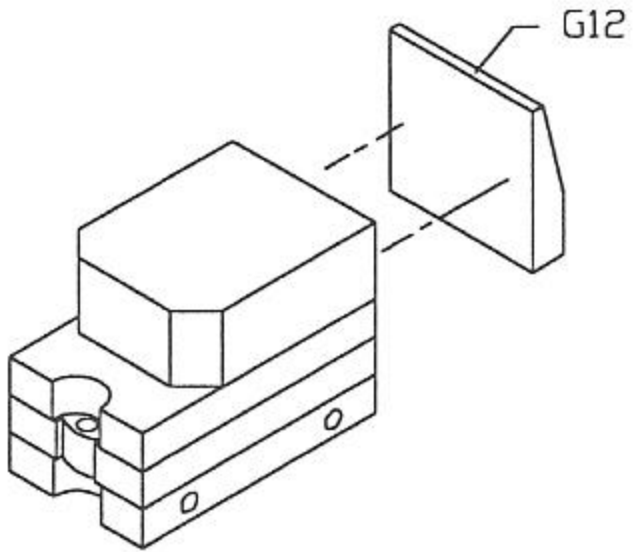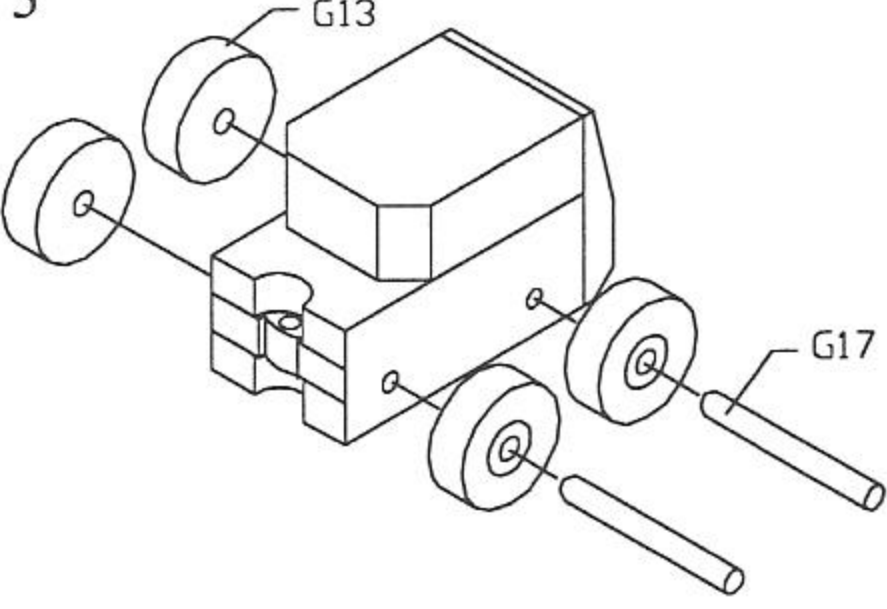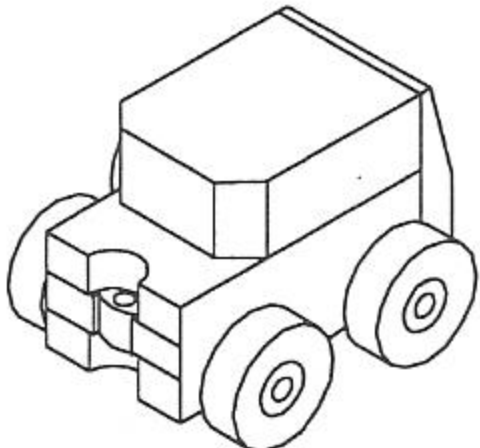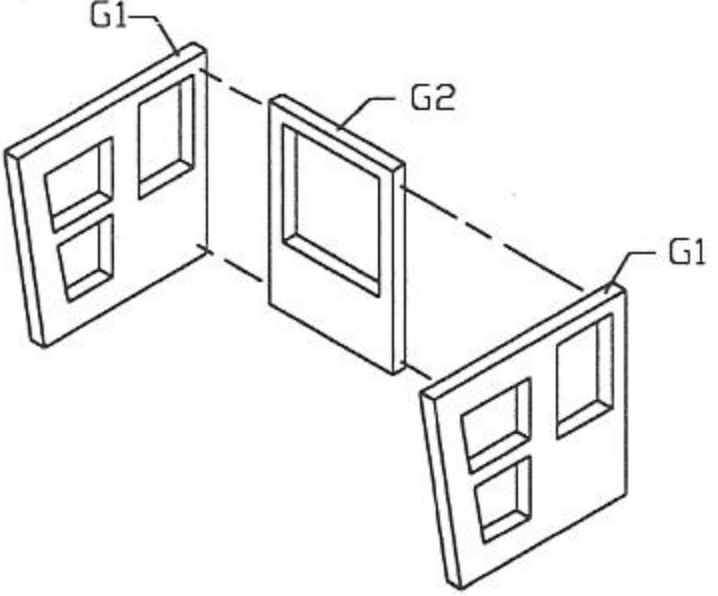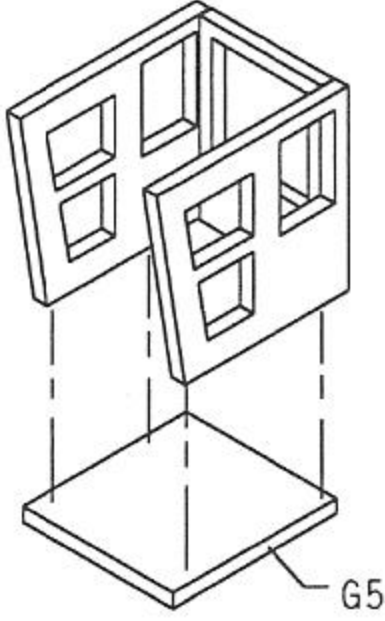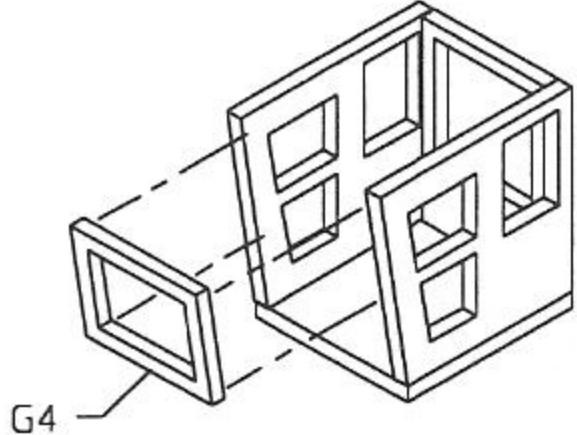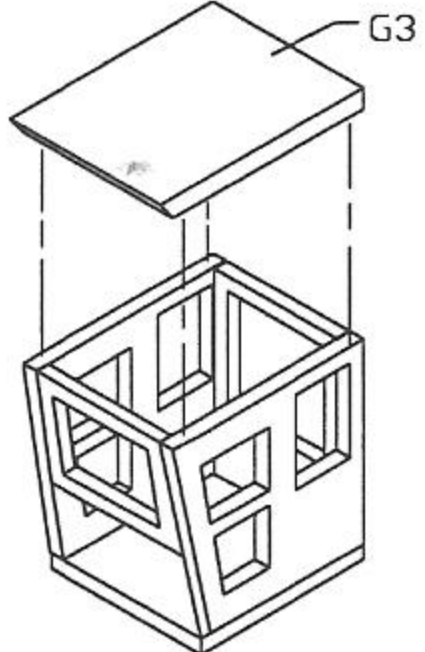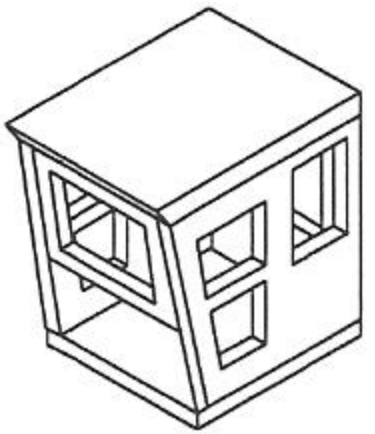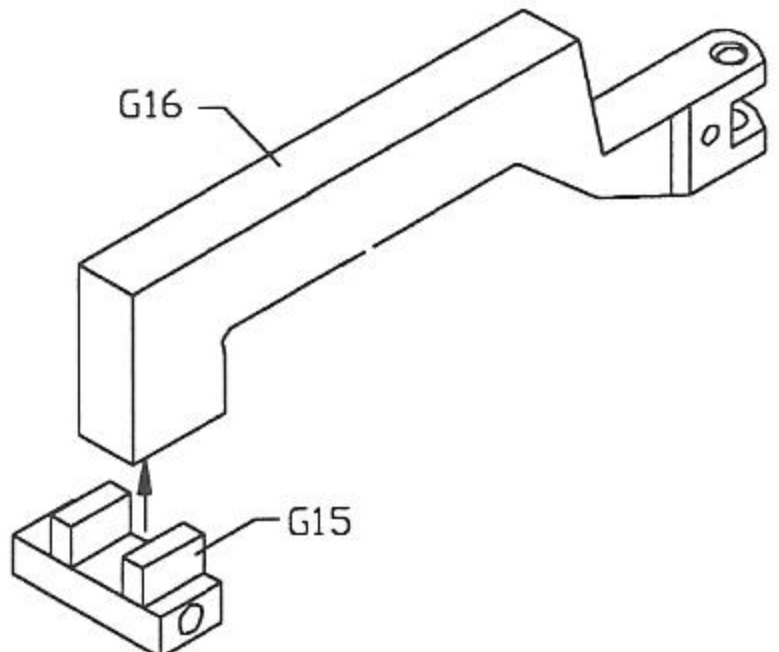1  Glue mid-body G9 between upper and lower body G10.	2  Trace hole location, as shown.	3  Drill 25/64" Dia. holes. Glue rear hood G8.
4  Glue rear plate G12.	5  Insert wheel shafts G17 through wheels G13 and body.	6  Start cabin assembly.
7  Glue cabin sides G1 to cabin back G2.	8  Glue cabin assembly onto floor G5.	9  Glue cabin front G4.
10  Glue roof G3 onto cabin.	11  Your cabin should now be complete.	12  Glue part G15 onto G16.

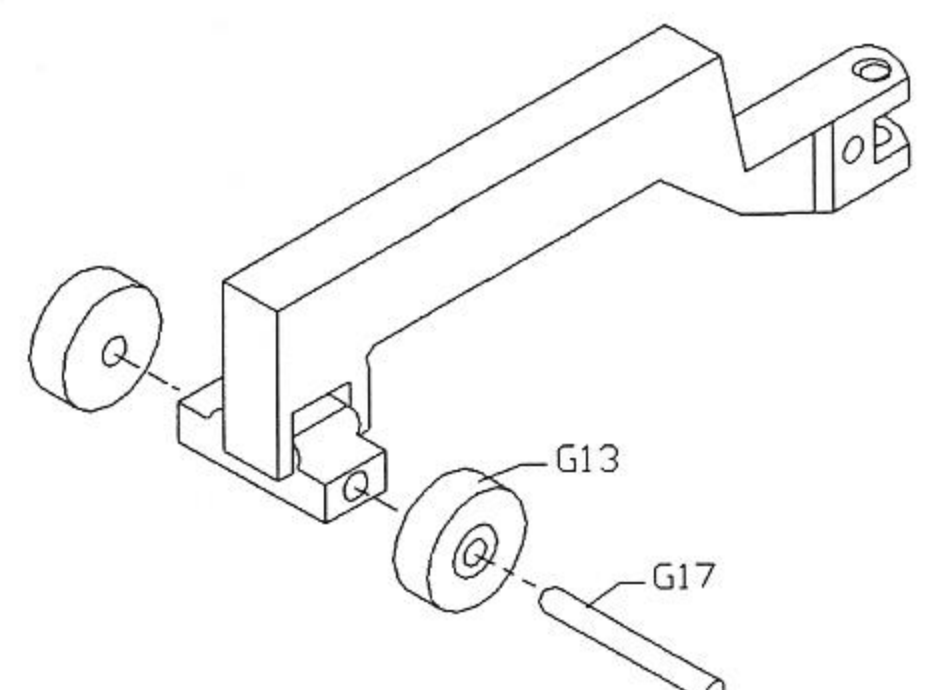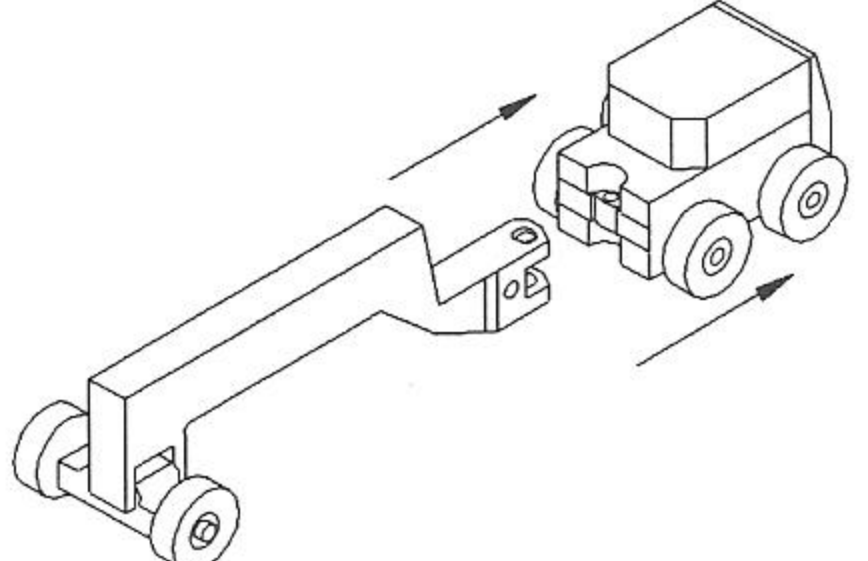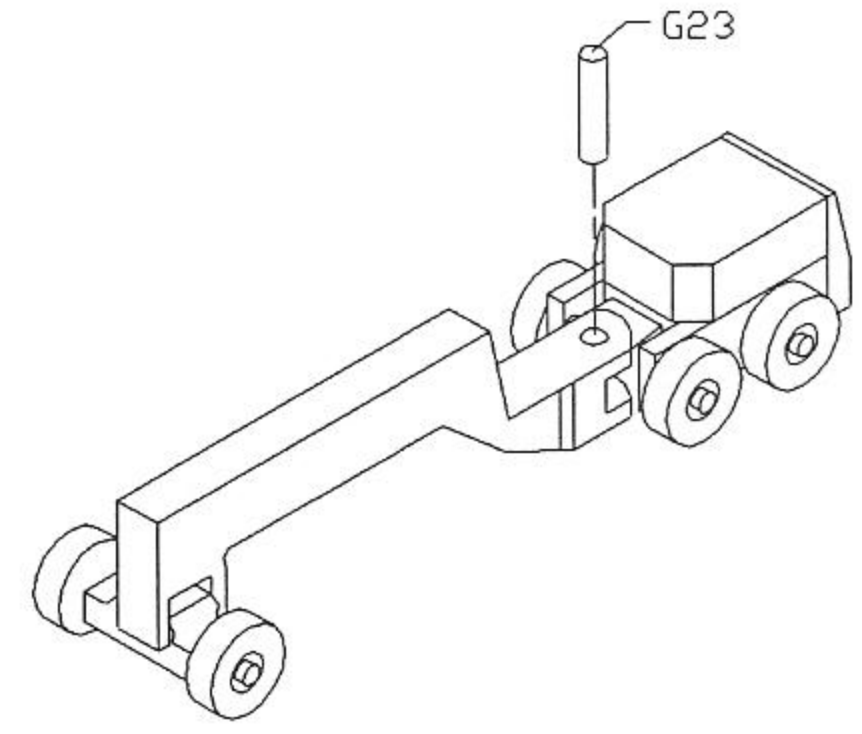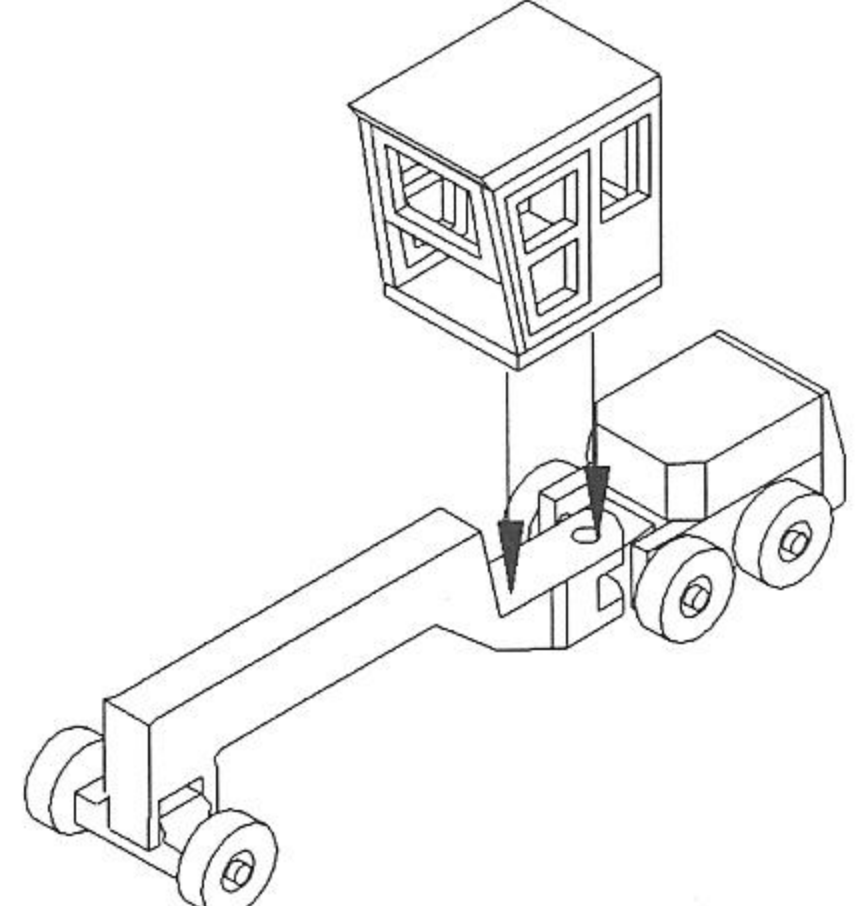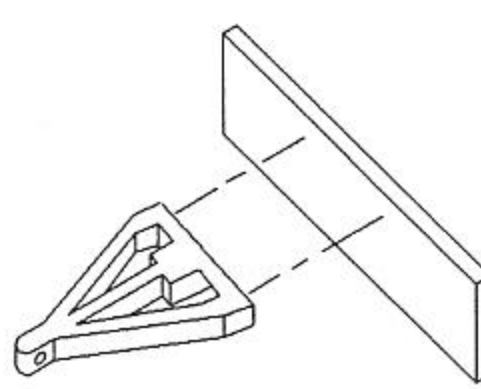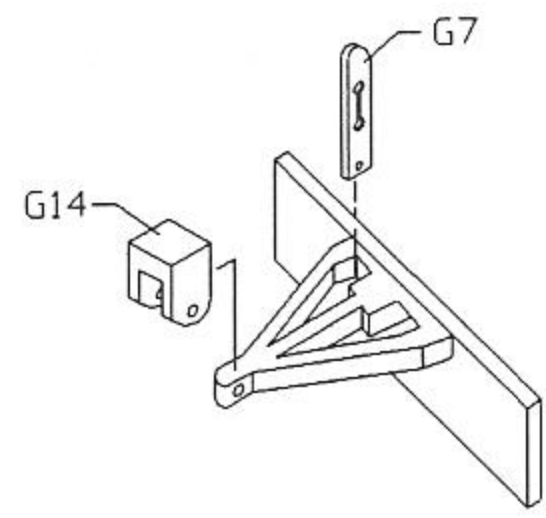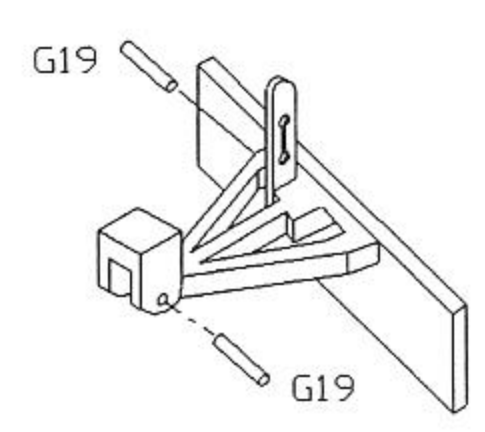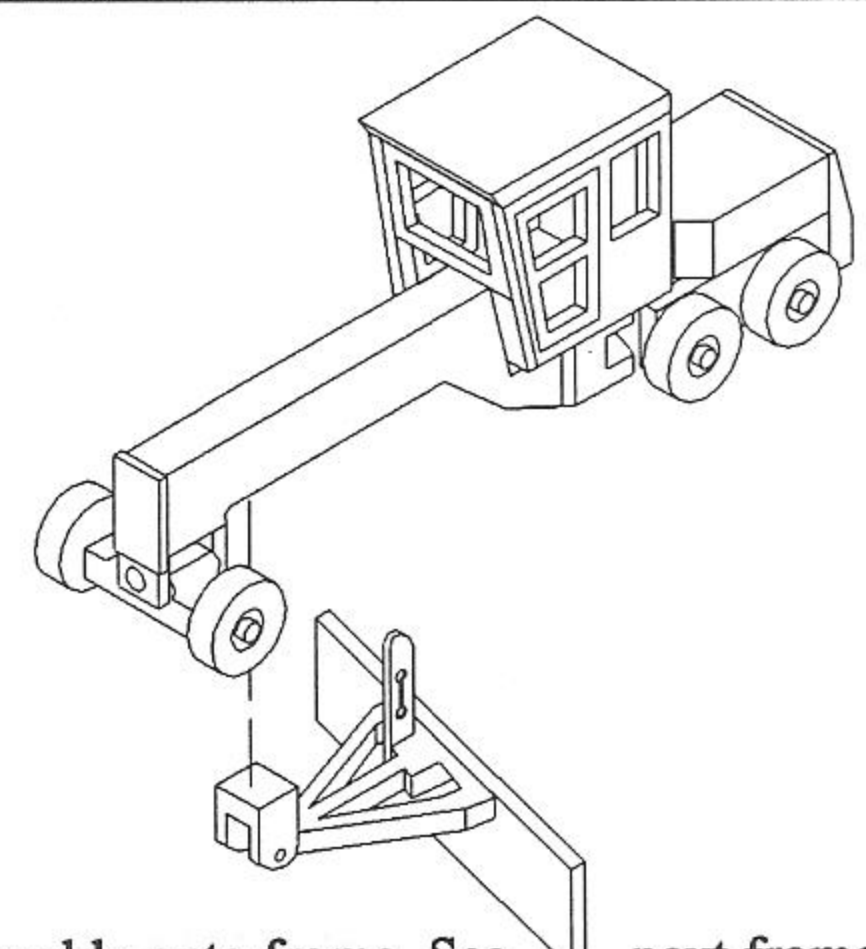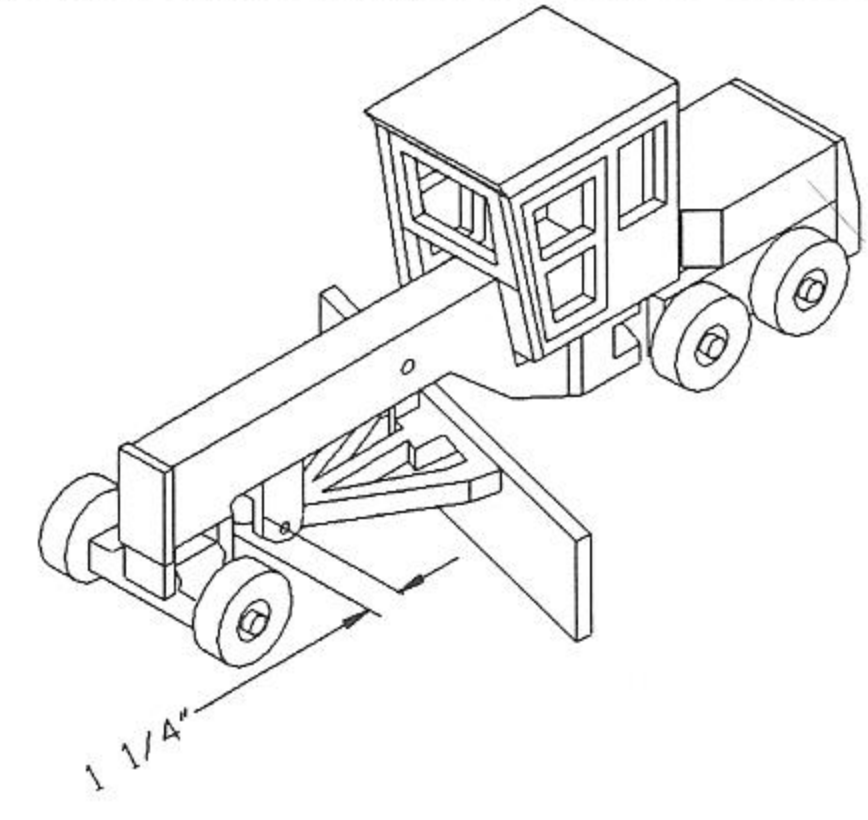
13  Insert wheel shaft G17 through Wheels G13 and into body.	14  Slide front assembly into rear body.	
15  Insert main pin G23.	16  Glue cabin onto main frame.	
17  Glue shovel frame assembly G6 onto shovel, as shown.	18  Insert control arm lever G7 and pivot block G14.	19  Insert pins G19.
20  Glue assembly onto frame. See next frame for location.	21  Shovel assembly shown installed.	

22

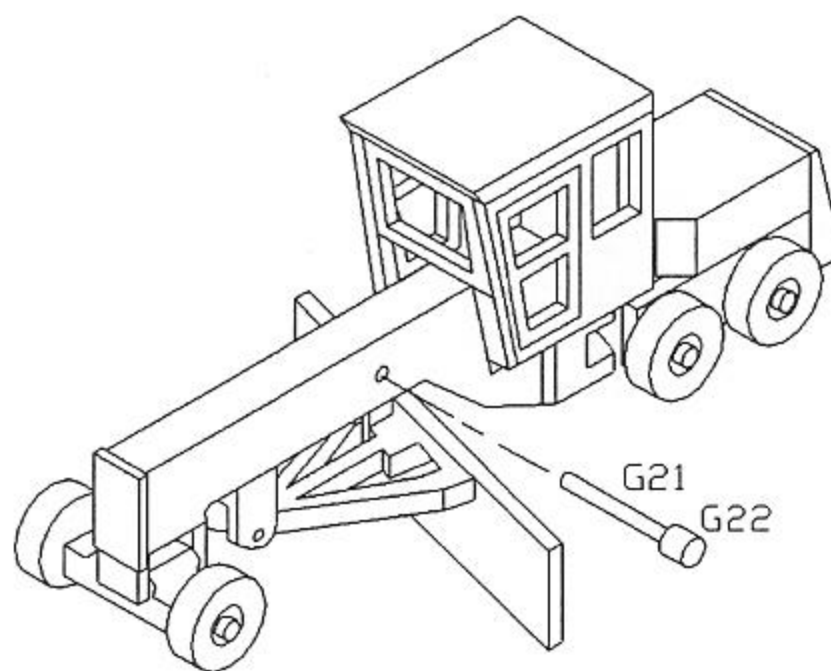


Glue together pin G21 and end cap G22.
Slide assembly into body. Do not glue.

23

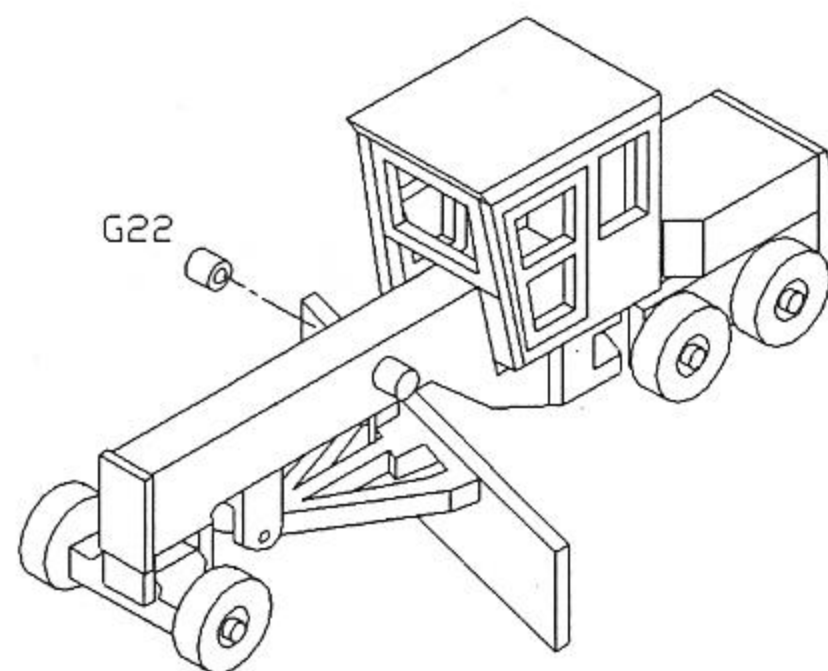


Glue other end cap G22.

24

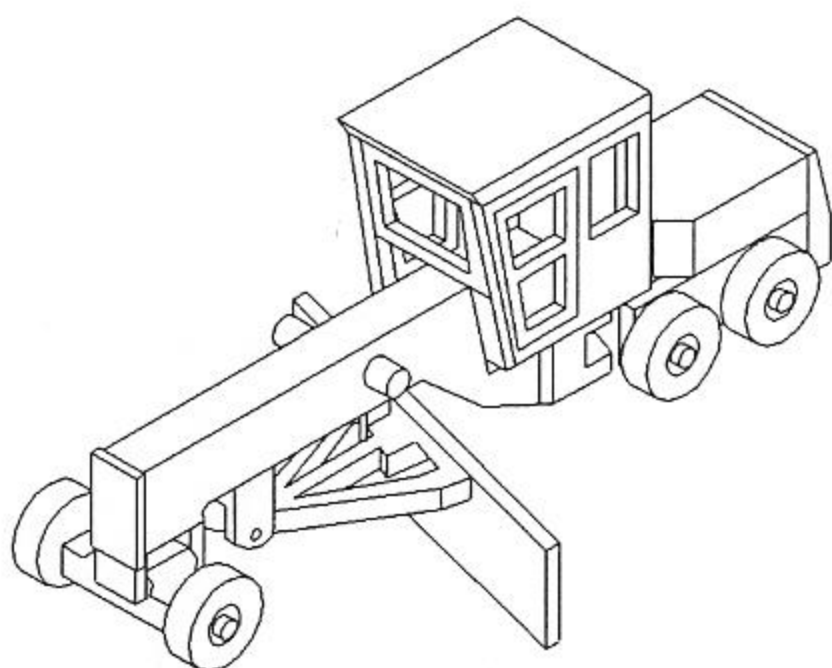


Slide the control pin from side to side to
hold shovel in the up or down position.

25

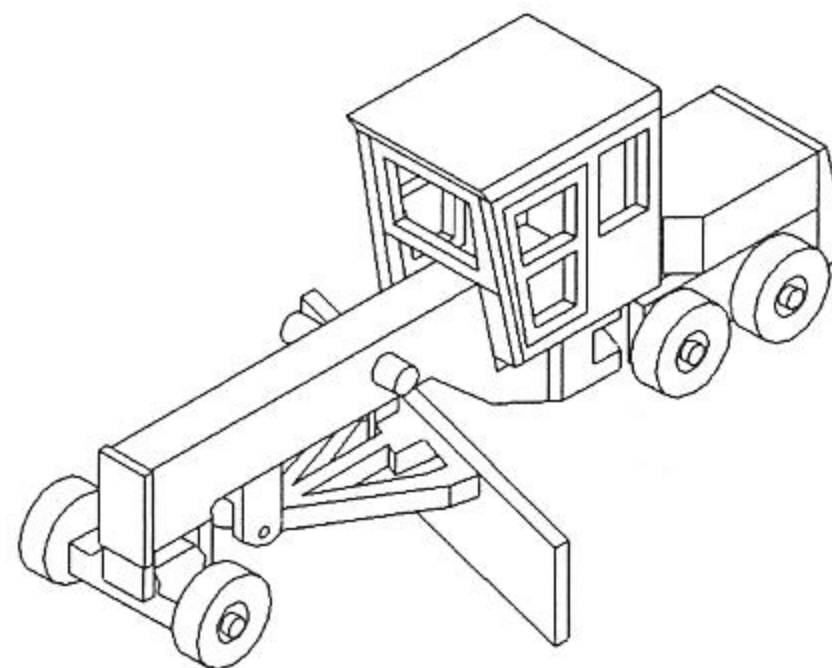

Your model should now be complete.

SKIDDER

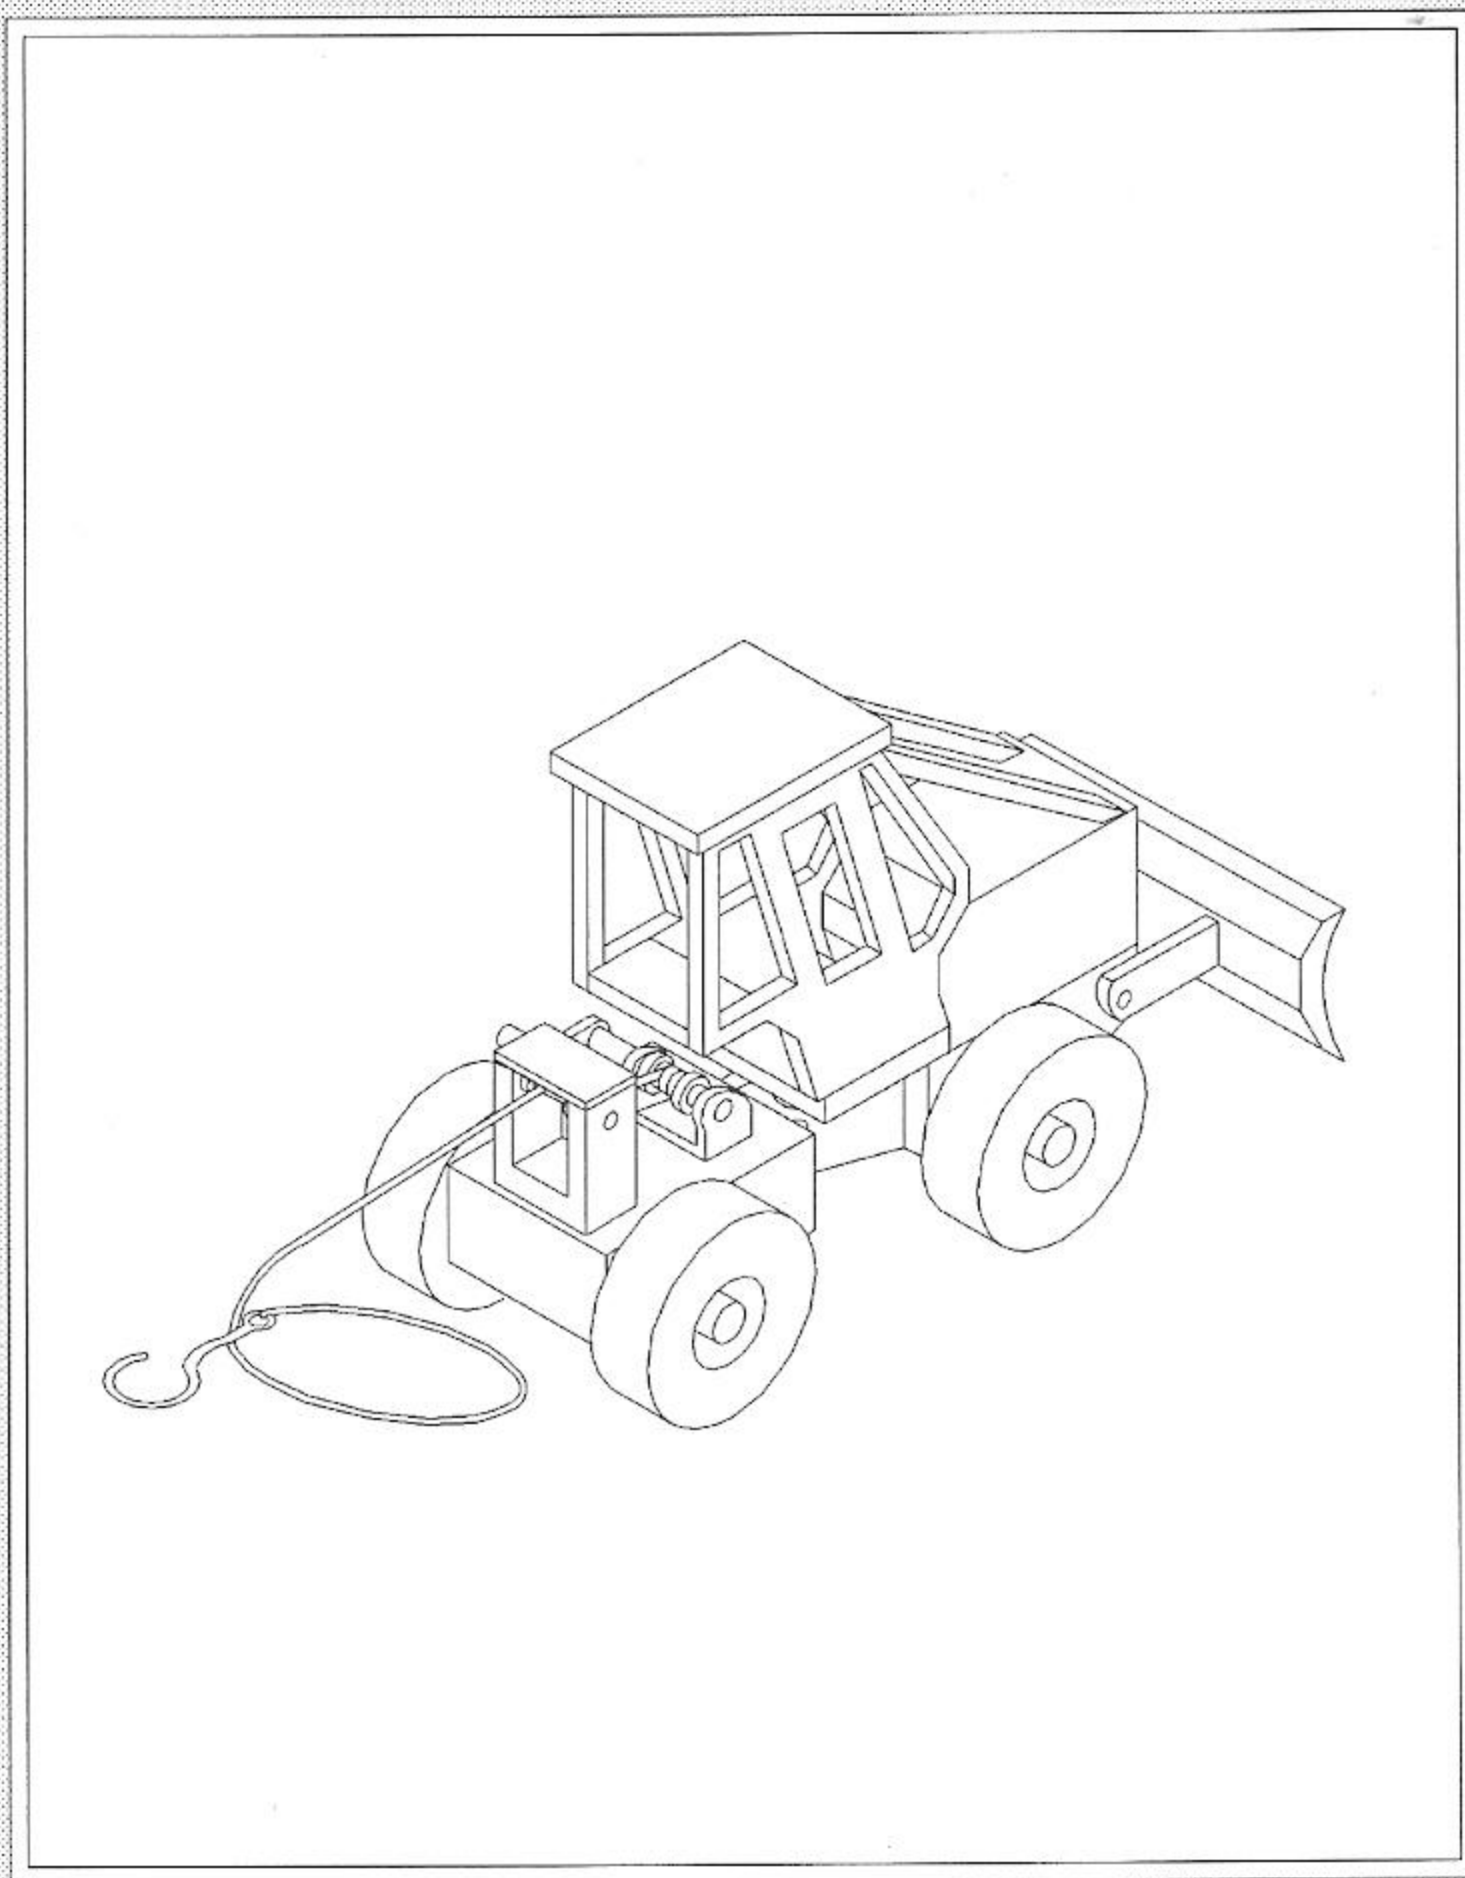


General Instructions - Skidder

- 1- Start by cutting materials needed by following the list of materials, paying attention to the rough and finished size. **Identify the parts as they are cut.**

Please note: Different types of wood can be used for the various parts. It is suggested, however, that hard wood be used, since many of the parts would be much too fragile if using soft wood. We have used a combination of pine, maple and oak to give the models a nice contrast!

- 2- Remove the full-size patterns found in the appendix. Cut them out, leaving approximately 1/16" all around, and place on the proper piece of wood. Patterns can be secured to wood using either spray adhesive or rubber cement. If using the latter, cut and sand the part first to finished size. If drilling is required, mark the hole by inserting a scribe or nail through the pattern into the wood. Remove the pattern before drilling.

You should have no trouble determining which surface to attach most of the patterns. Some parts, however, can be confusing since the pattern could fit on more than one surface. The drawings below indicate exactly which surface to attach the patterns for these parts.

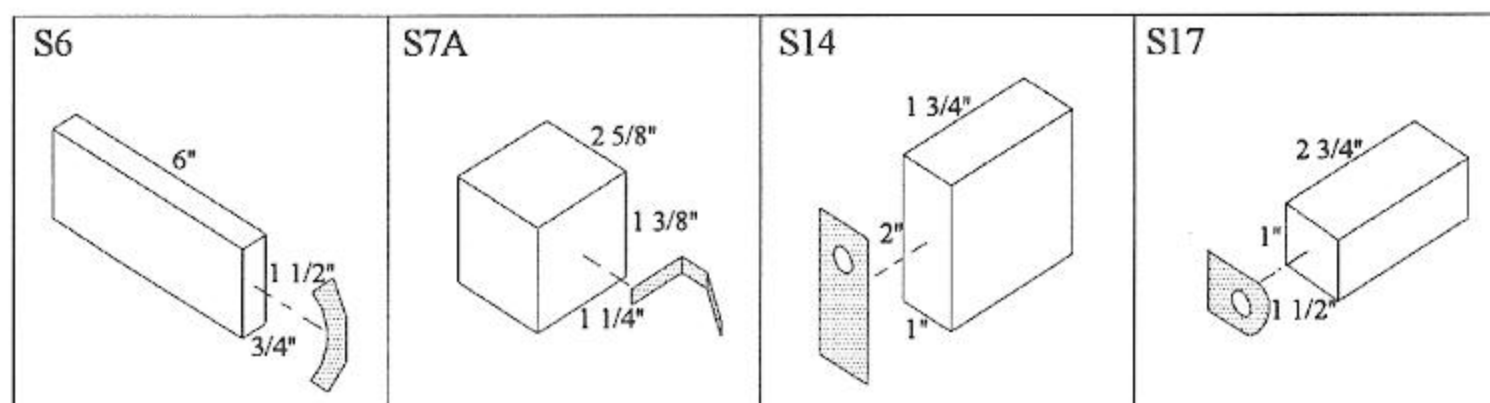

- 3- Look at the full-size drawing sheets to finish parts S2 and S16.
- 4- Parts S14 and S17 will need additional cuts and details, please refer to the additional information pages, to complete these parts.
- 5- Using maple dowels, make all pins, shafts, etc.
- 6- Follow the assembly drawings to complete your model.

List of Materials - Skidder

Part	T	W	L	Material	Qty.	*	Part	T	W	L	Material	Qty.	*
S1	3/8"	3"	6 7/8"	pine	2	R	S10	3/8"	1/2"	4 5/8"	oak	2	R
S2	3/4"	2 5/8"	5 1/2"	pine	1	F	S11	1 3/4"	3 3/8"	3 15/16"	pine	1	F
S3	3/8"	1"	3"	maple	2	R	S12	3/8"	3 3/4"	3 1/8"	pine	1	F
S4	1/2"	5/8"	3 3/8"	maple	2	F	S13	3/8"	4"	4"	oak	2	R
S5	3/8"	1 1/2"	5 1/4"	pine	2	F	S14	1"	2"	1 3/4"	maple	1	F
S6	3/4"	1 1/2"	6"	pine	1	F	S15	1/4"	1"	1 3/4"	maple	1	F
S7	1 1/2"	3 3/8"	3 3/4"	pine	1	F	S16	1 1/4"	3 3/4" DIA.		oak	4	F
S7A	1 1/4"	1 3/8"	2 5/8"	pine	1	F	S17	1"	1 1/2"	2 3/4"	maple	1	F
S8	3/4"	1 5/8"	2 3/4"	maple	1	R	S18	1/4"	1 1/4"	2"	maple	1	R
S9	1/4"	3 3/8"	2 5/8"	pine	1	F	S19	3/8"	1 1/8"	2"	maple	1	R

R = Rough size
F = Finished size

T = Thickness

W = Width





L = Length


Instructions:





R= Rough sizes, the material is cut oversized so you have ample room to apply the pattern on the surface. Sanding is not required at this point.

F = Finished Size: Cut and sand parts to finished size.


Full-Sized Patterns: Set One

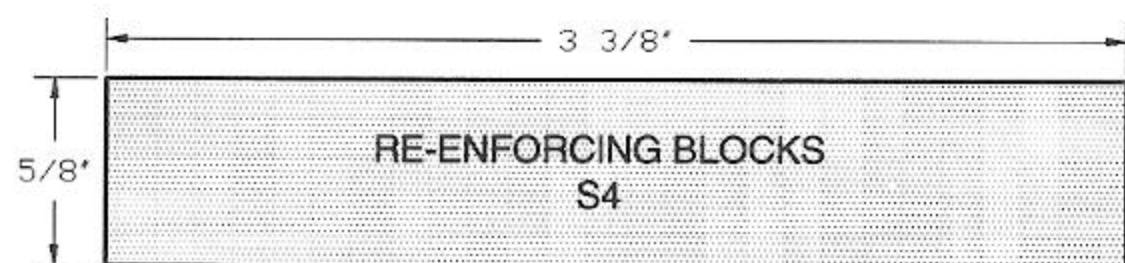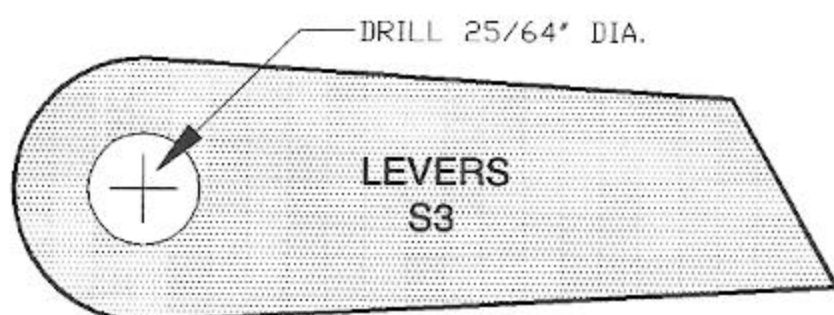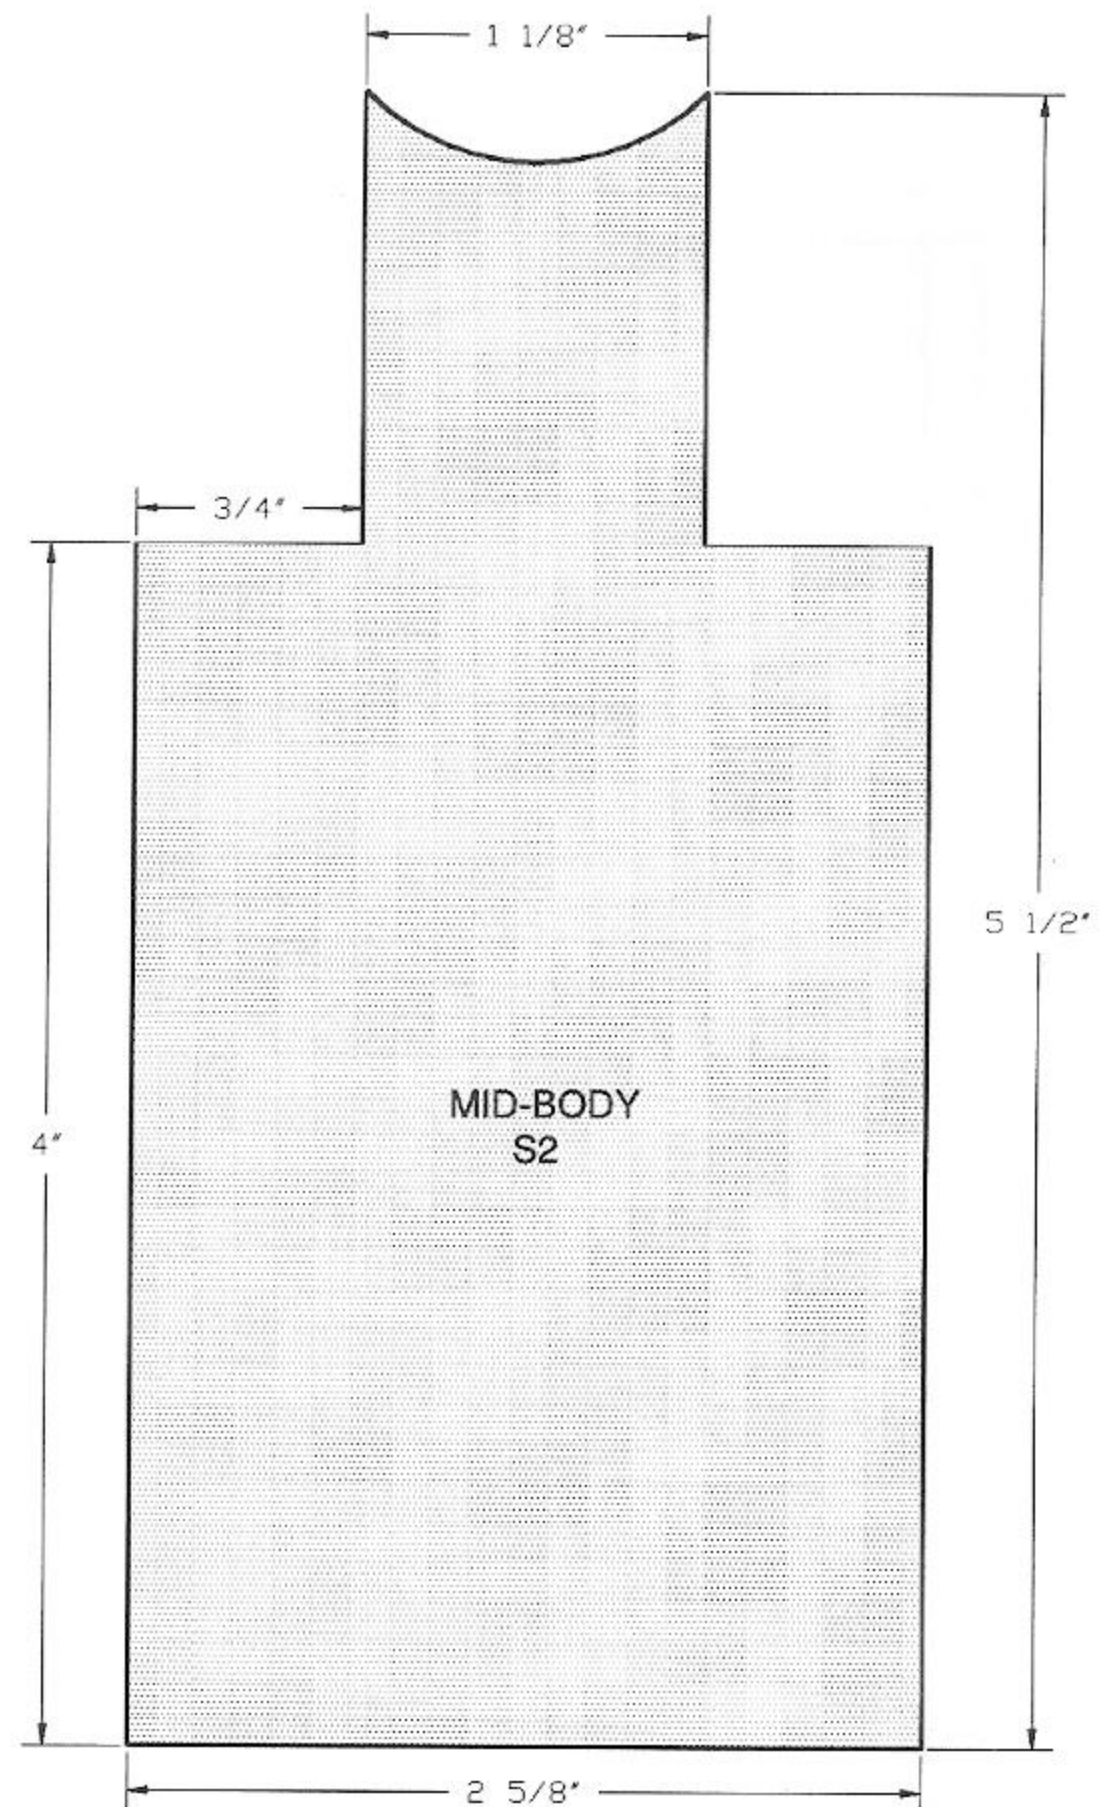
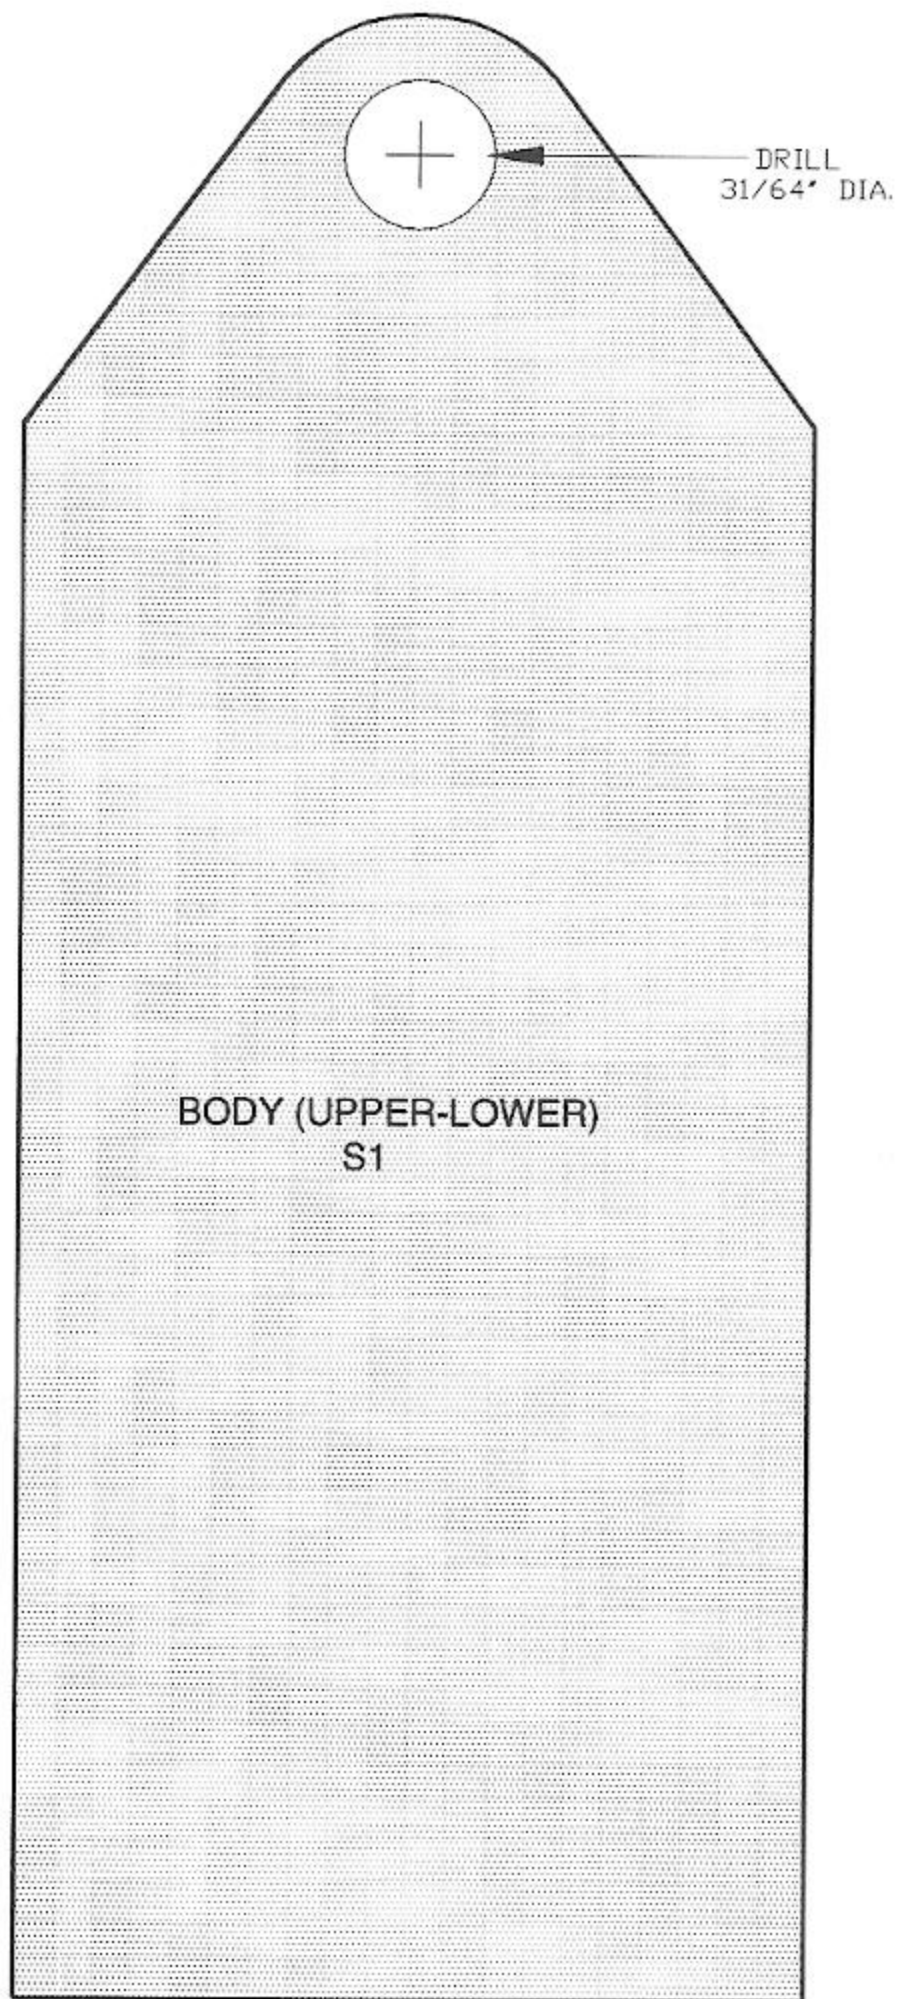


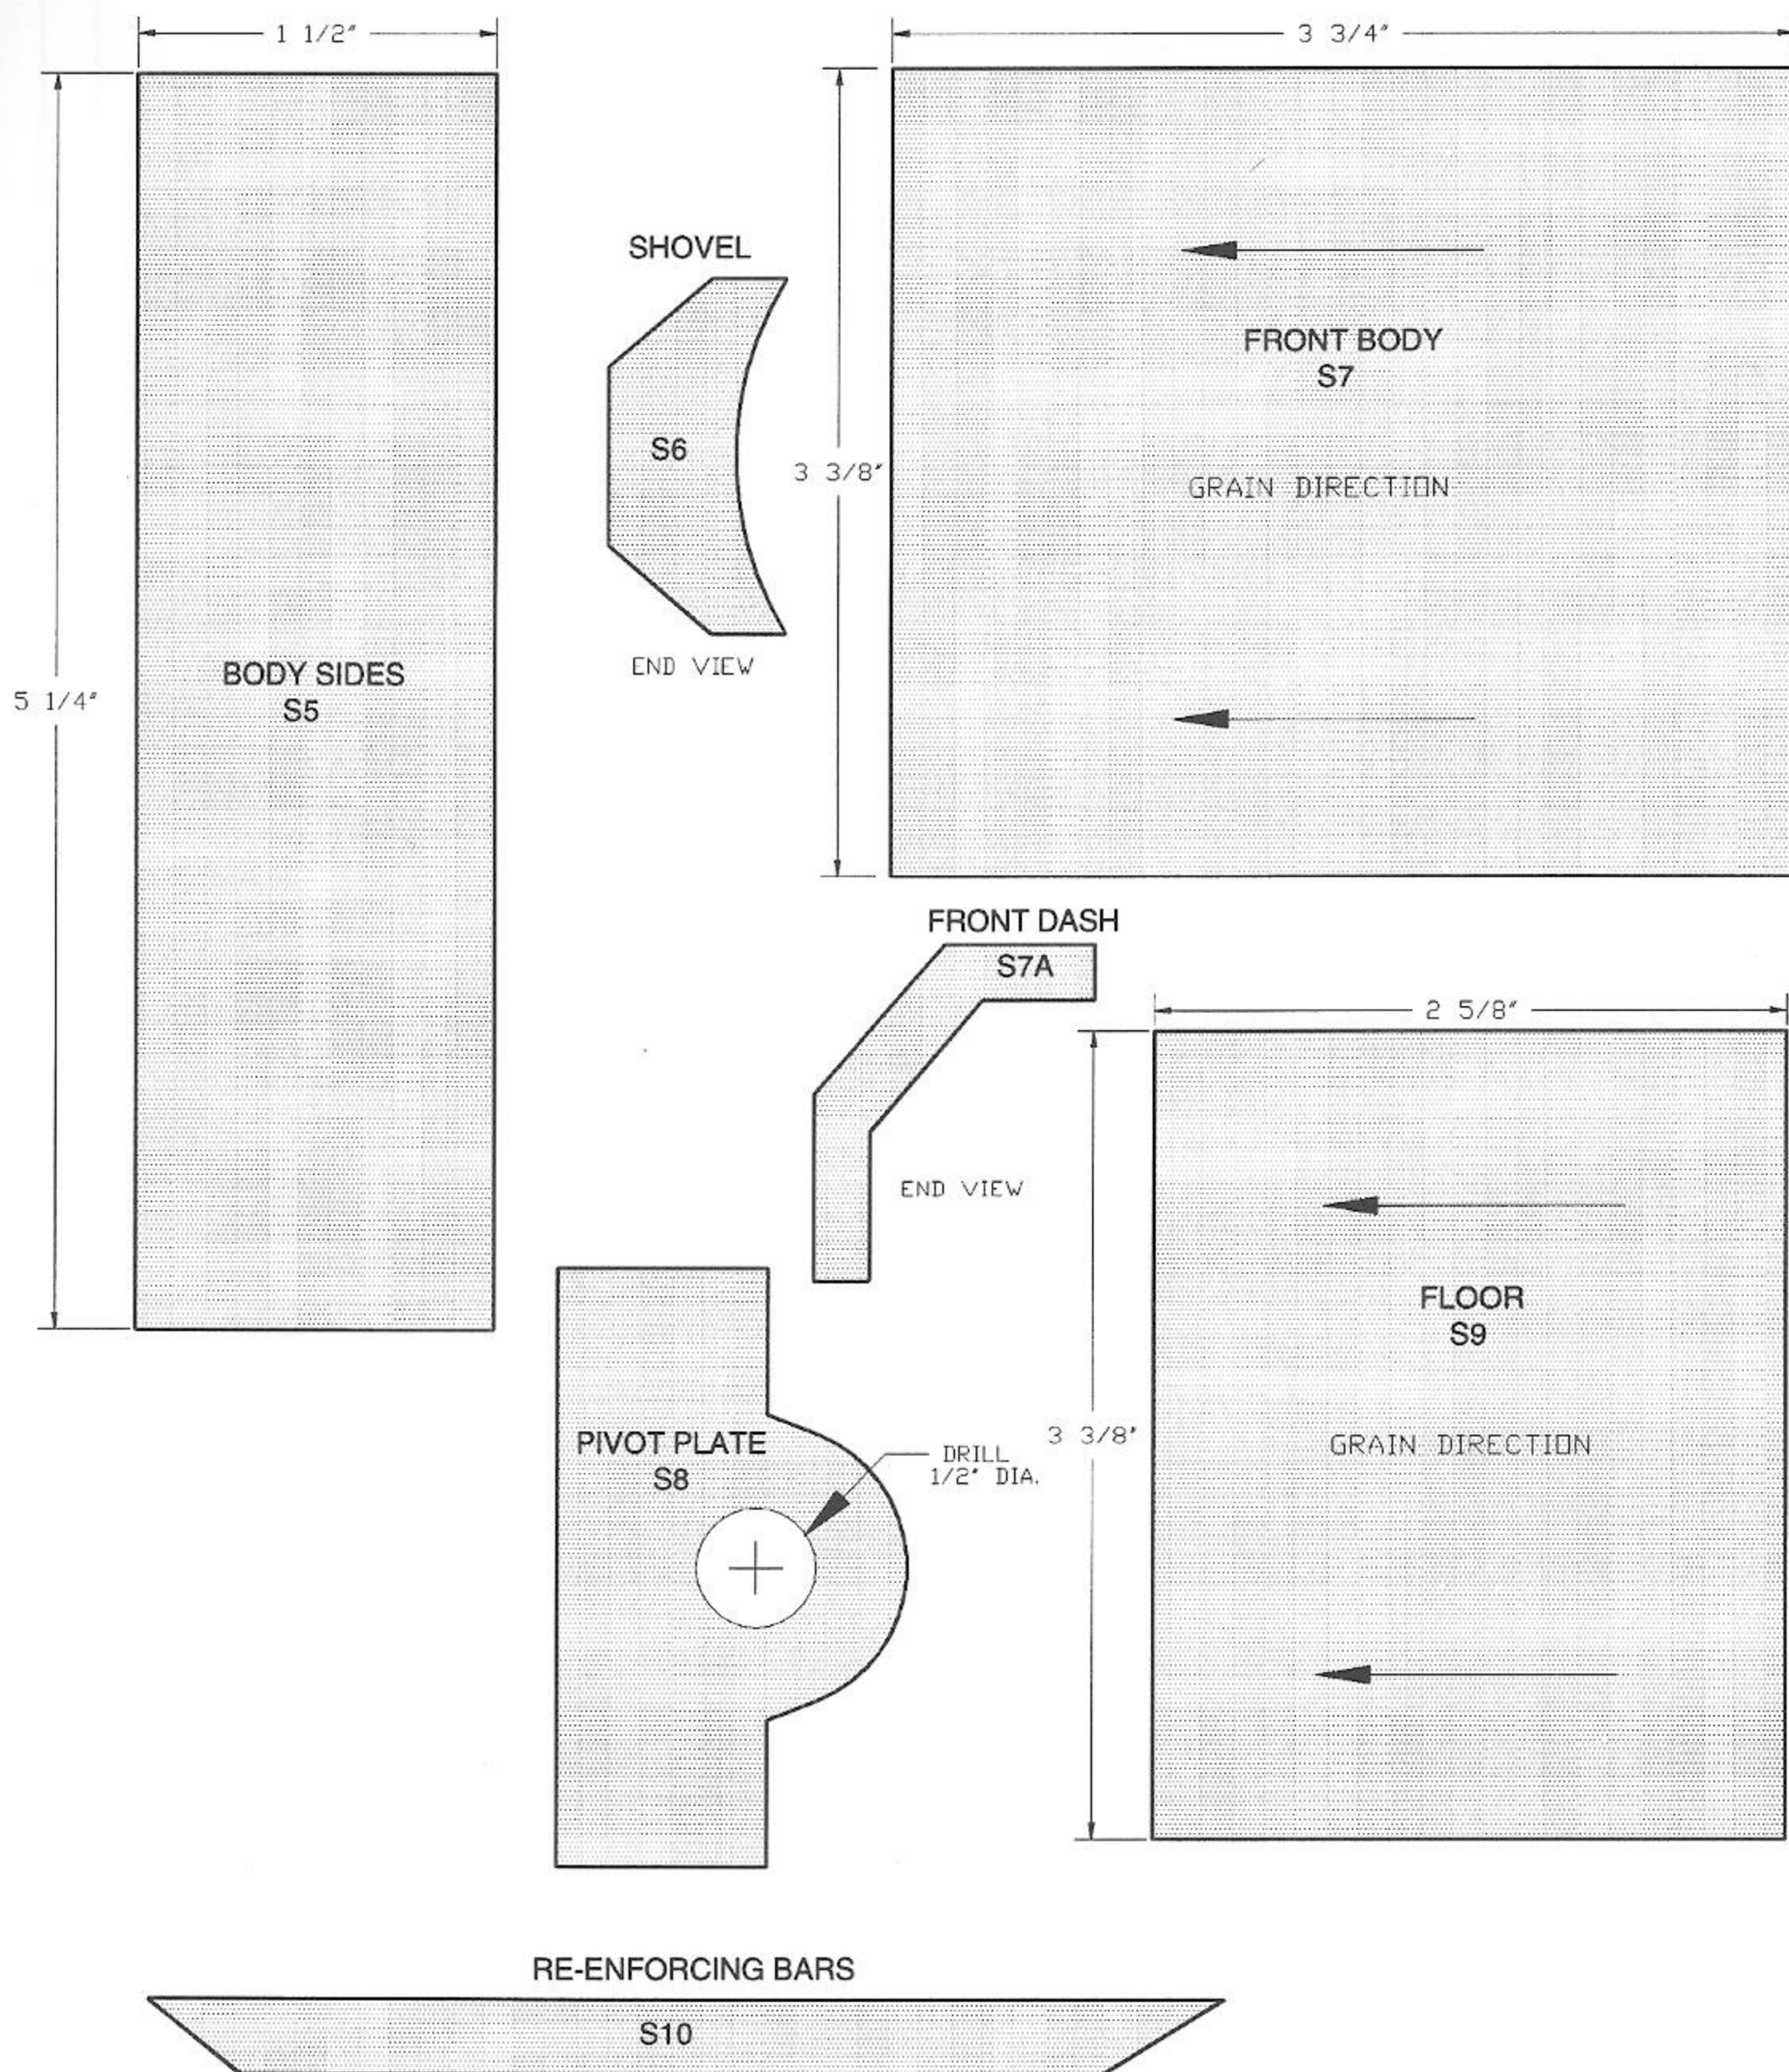

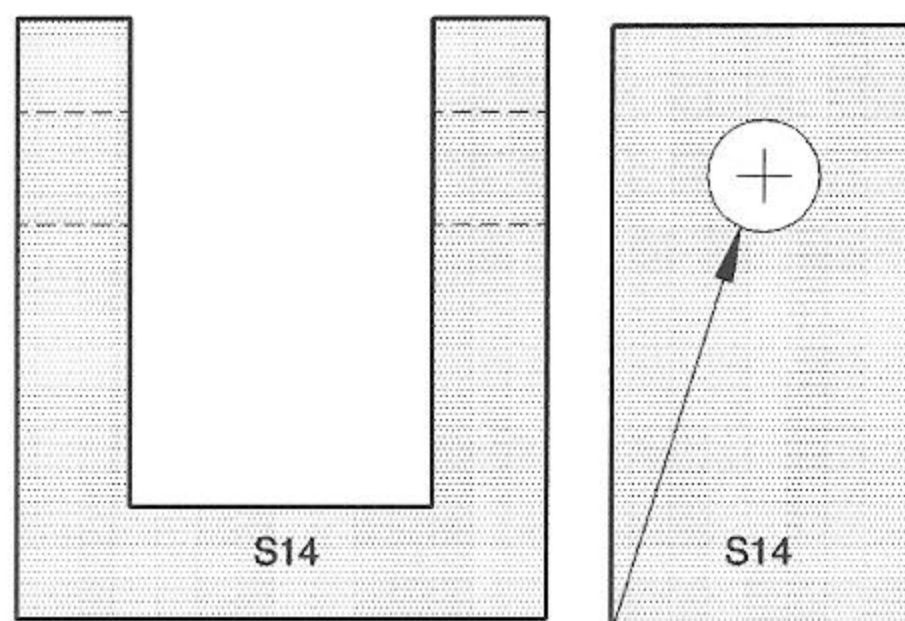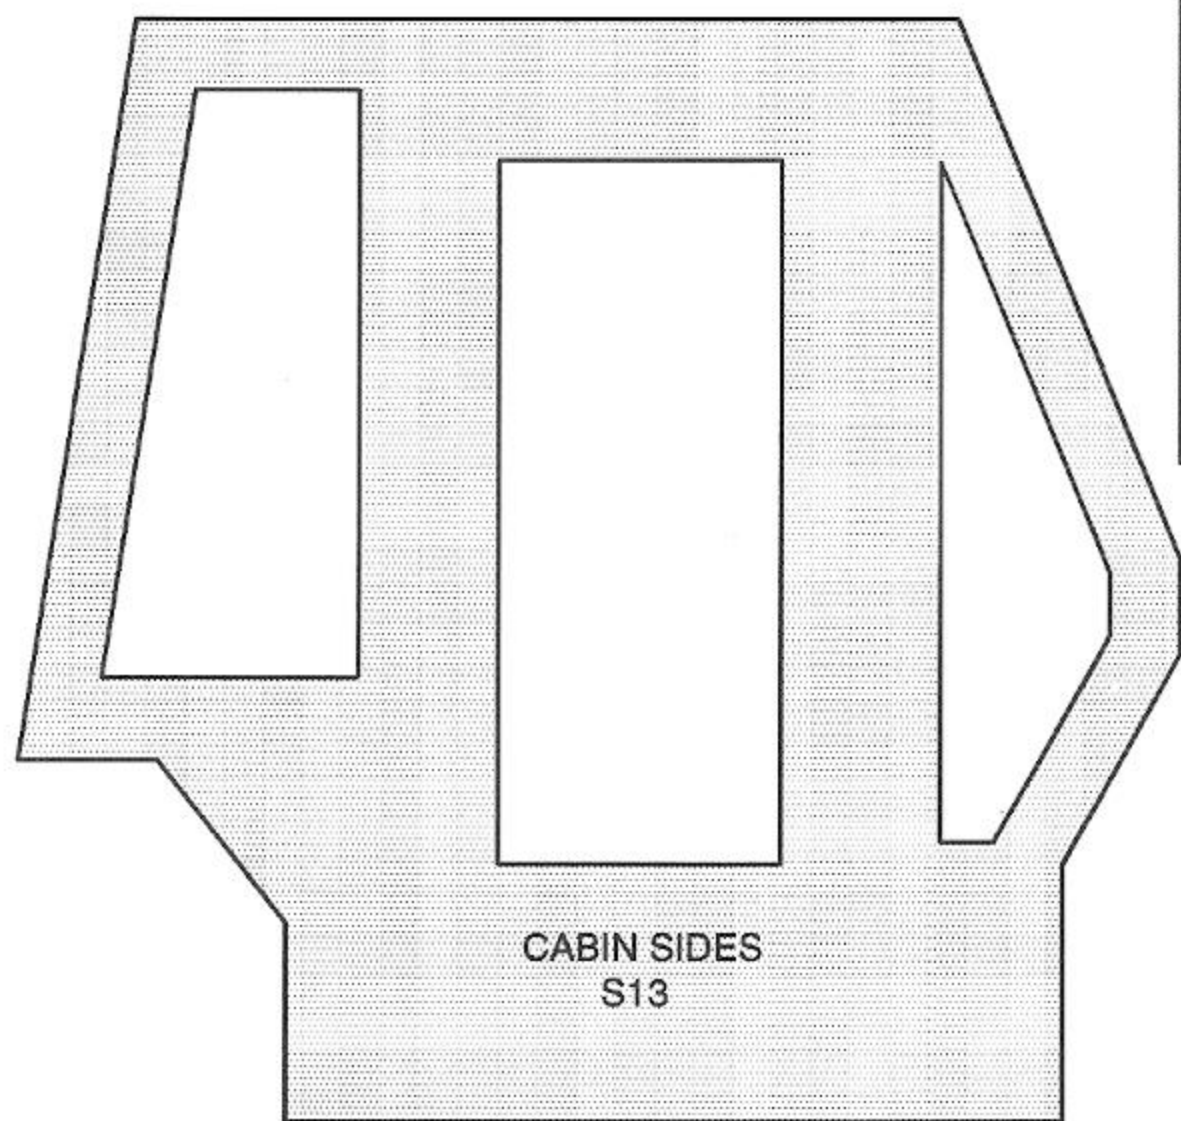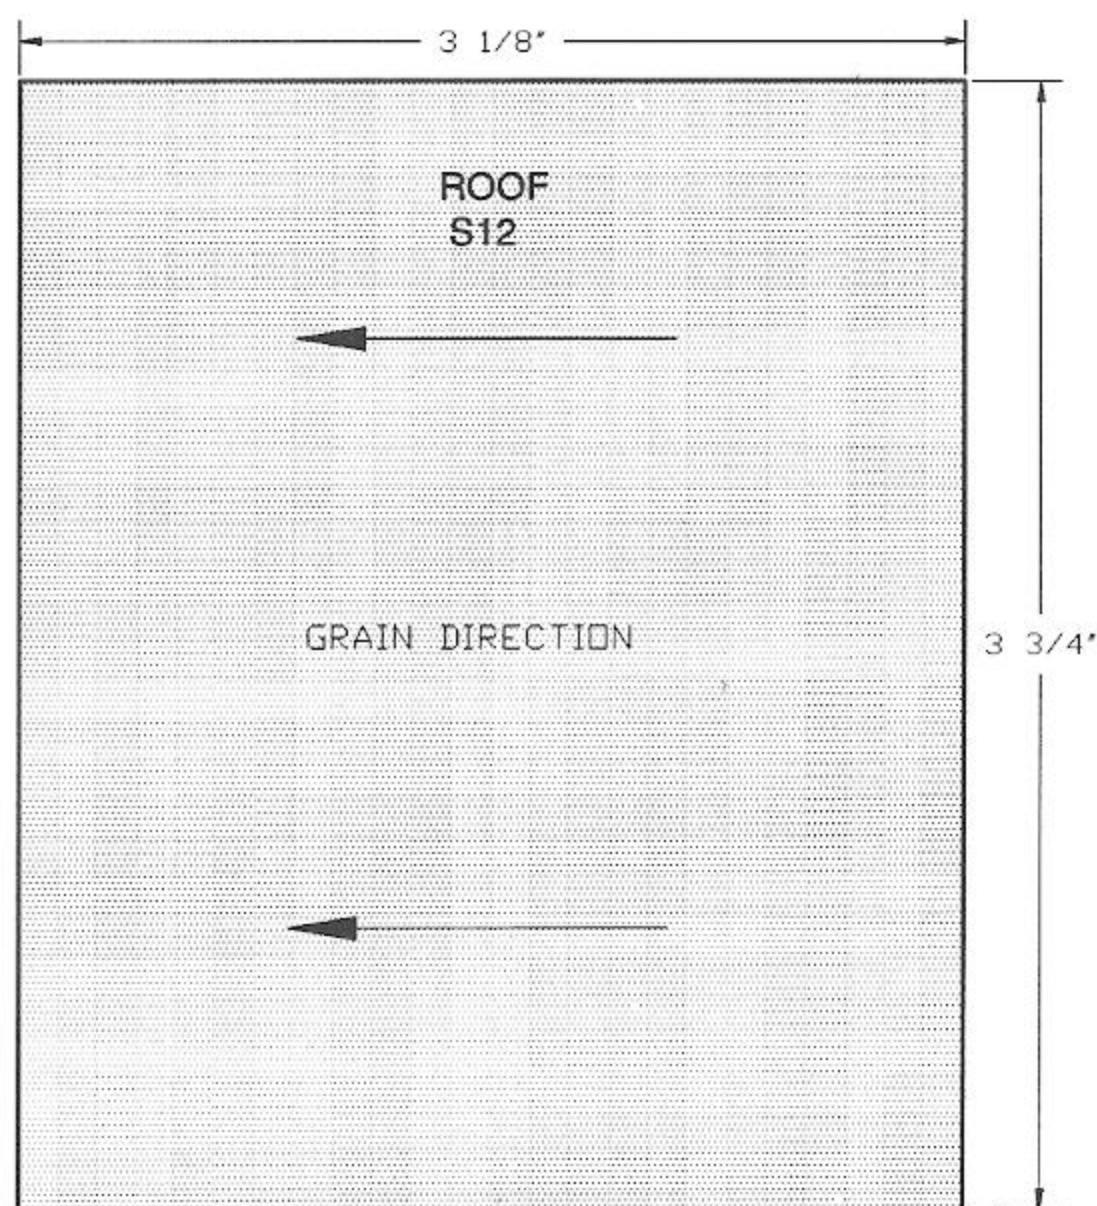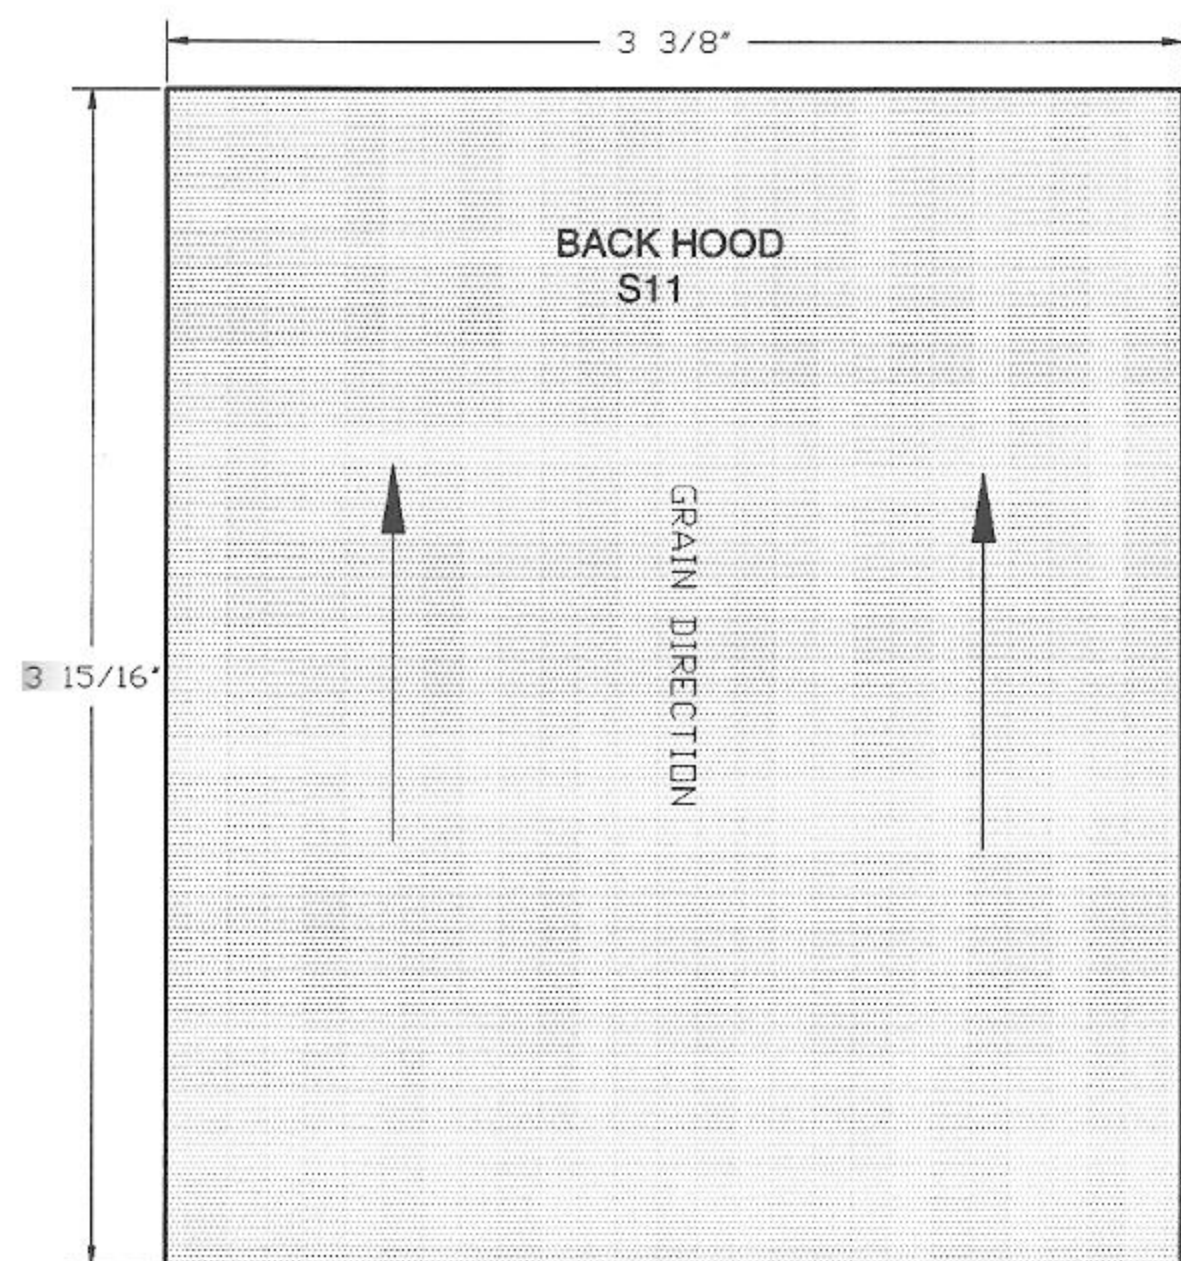


DRILL 3/8" DIA.

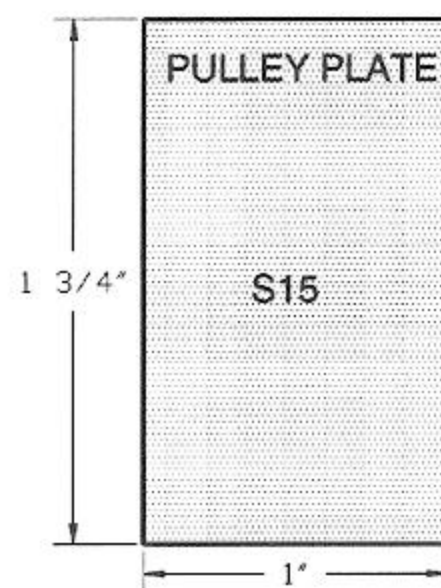

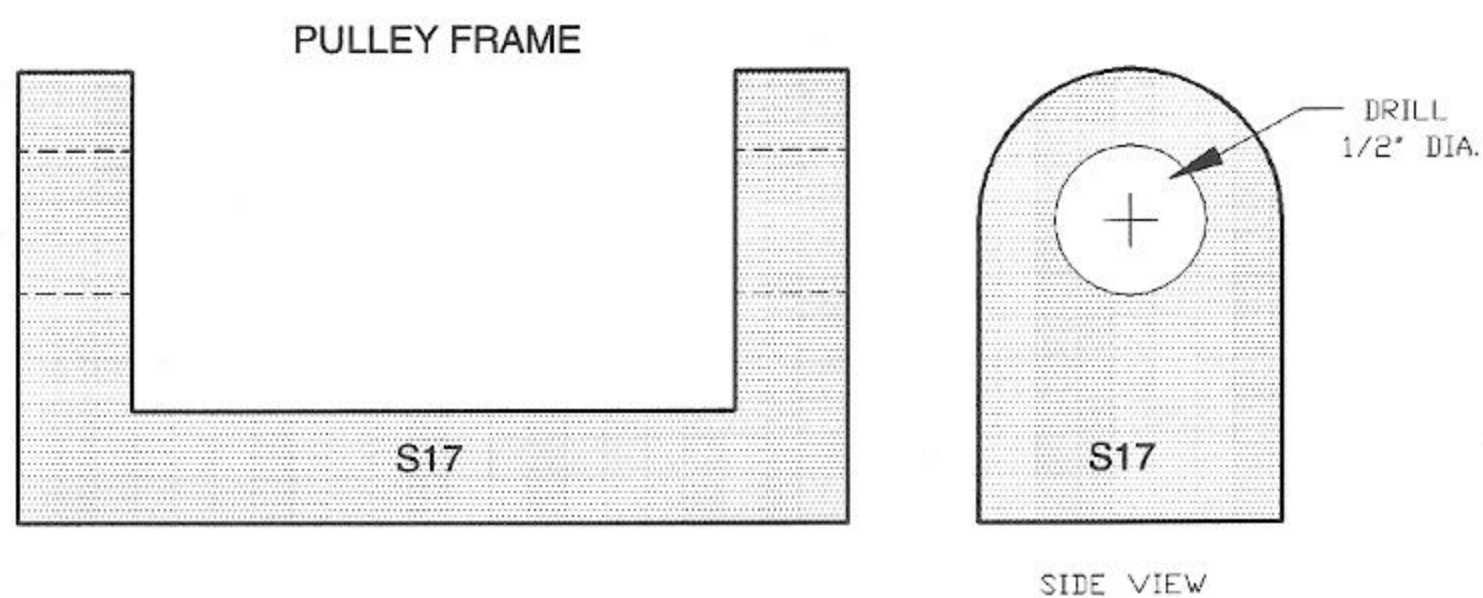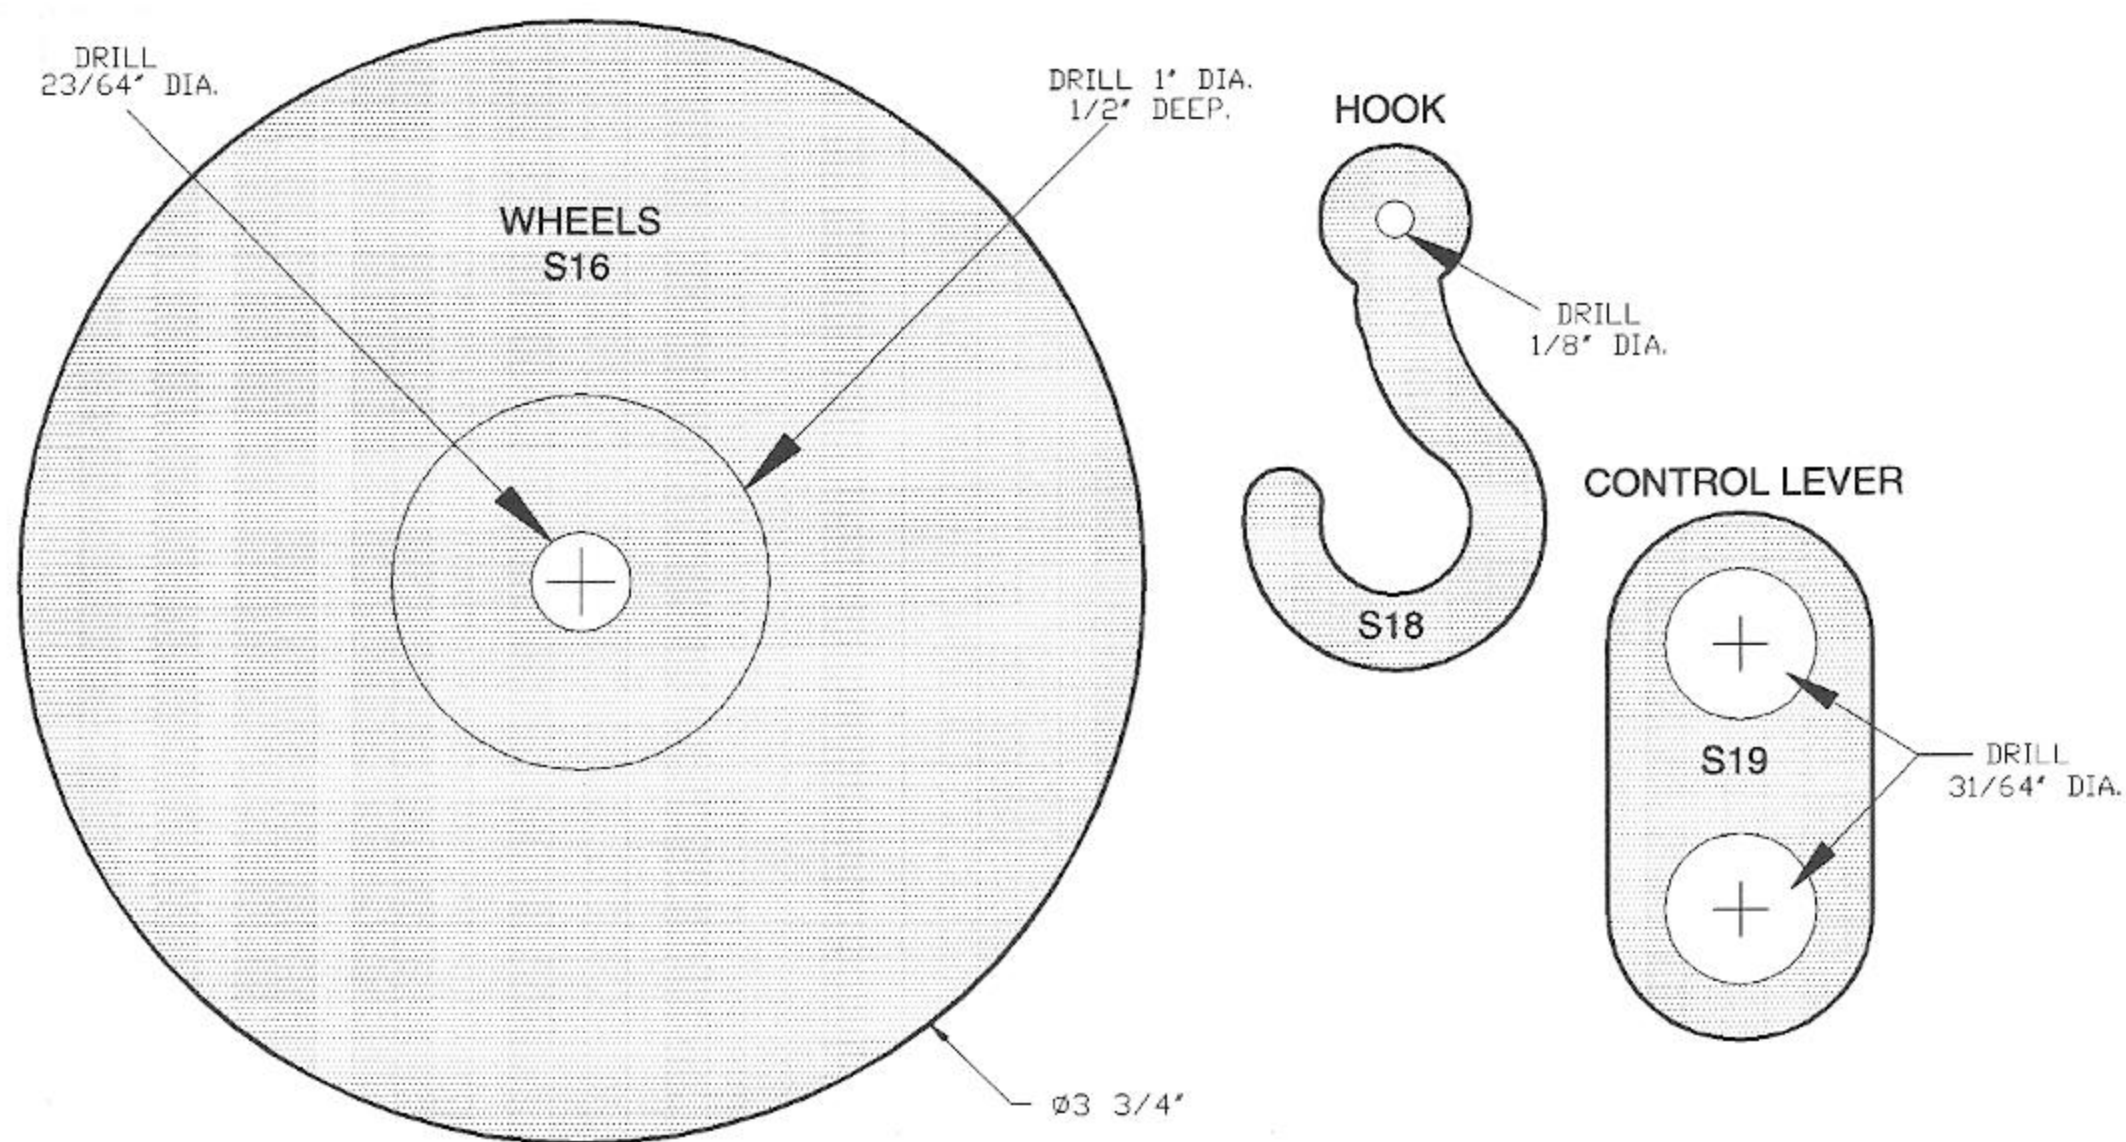


S20

WHEEL SHAFTS
(2 REQUIRED)

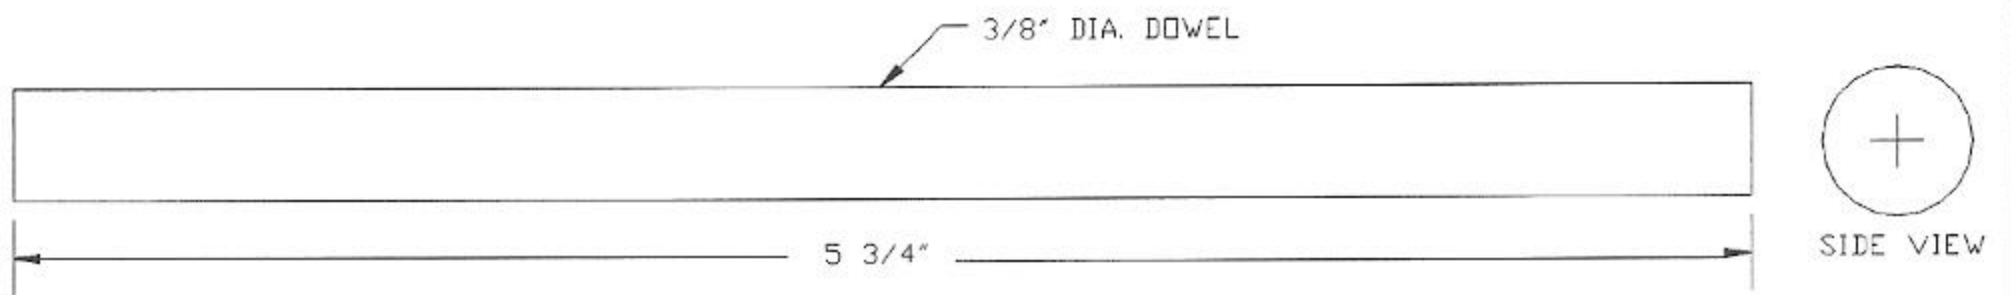


S21

PULLEY SHAFT
(1 REQUIRED)

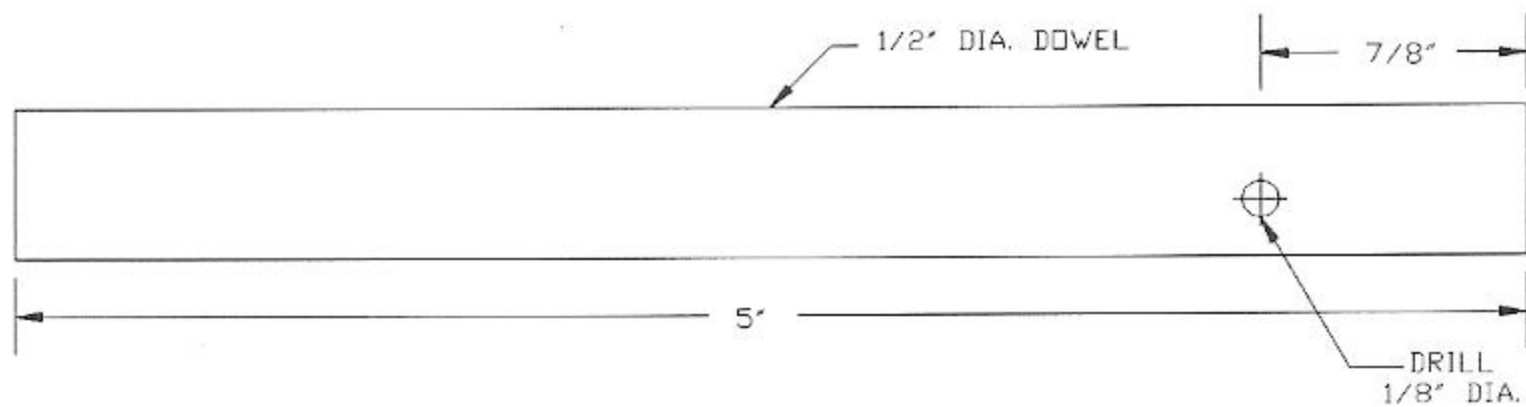


S22

PULLEY SIDES
(2 REQUIRED)

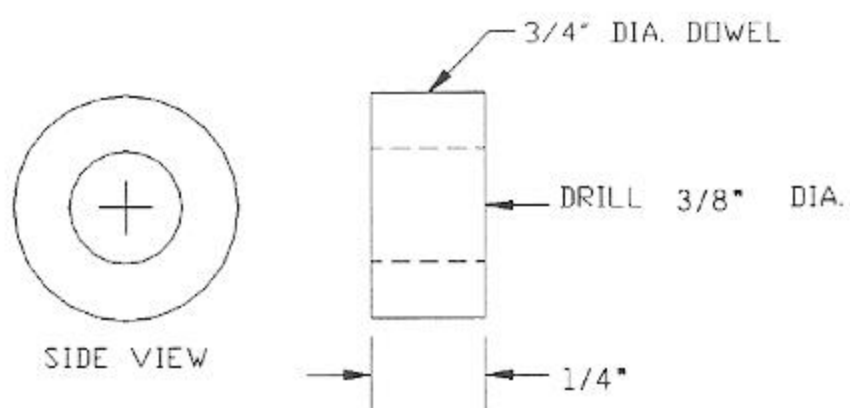


S23

MAIN PIVOT PIN
(1 REQUIRED)

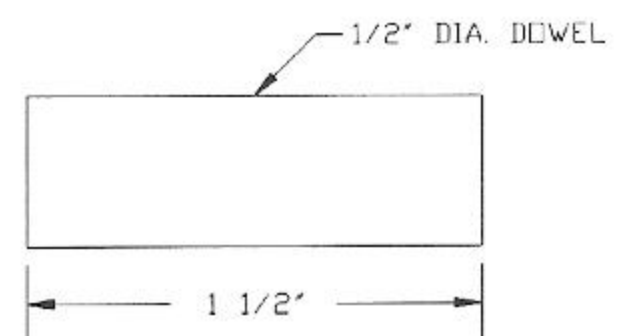


S24

PULLEY SIDES
(2 REQUIRED)

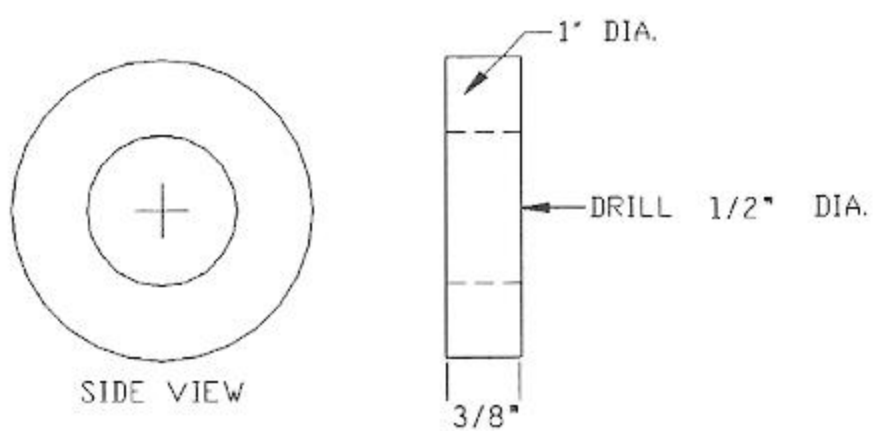


S25

FRONT PULLEY SHAFT
(1 REQUIRED)

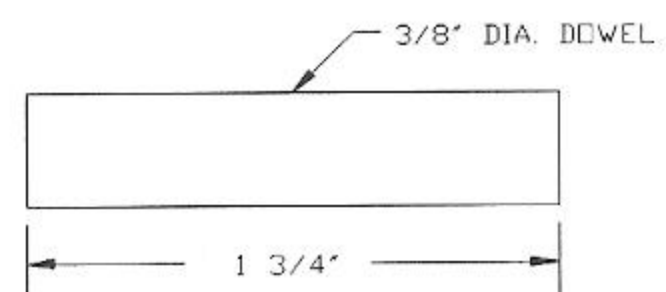


S26

PINS
(2 REQUIRED)

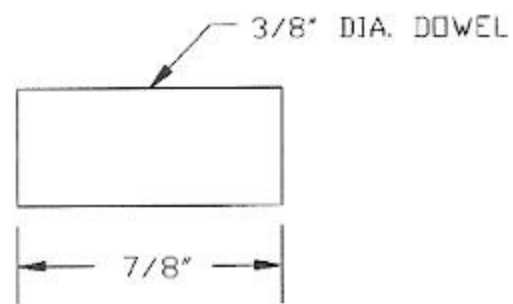


S29


HANDLE
(1 REQUIRED)

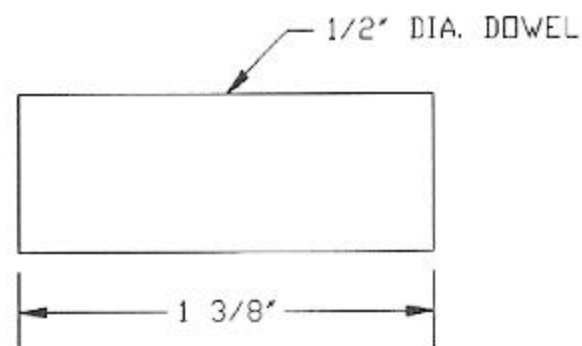

Additional Information - Skidder











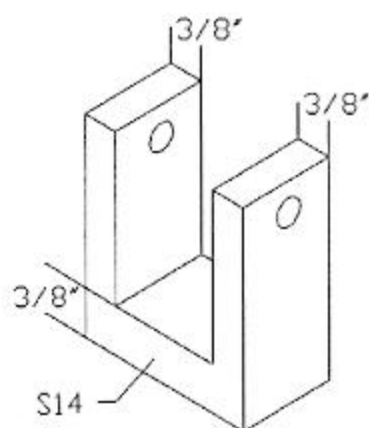


Using your Scroll Saw, cut out part S14, as shown.

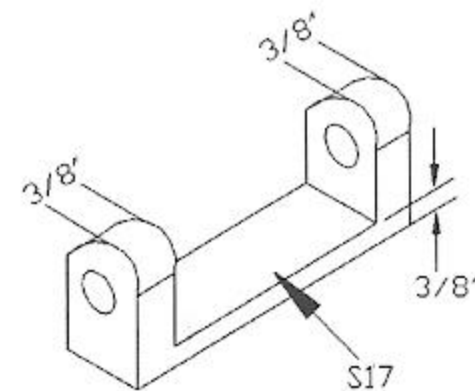


Using your Scroll Saw, cut out part S17, as shown.

Skidder - Assembly Drawings

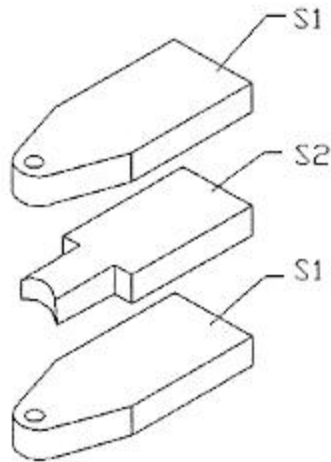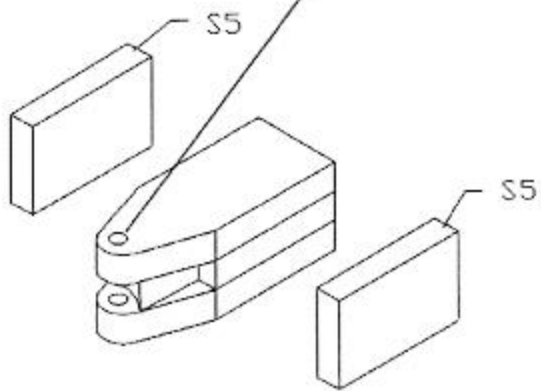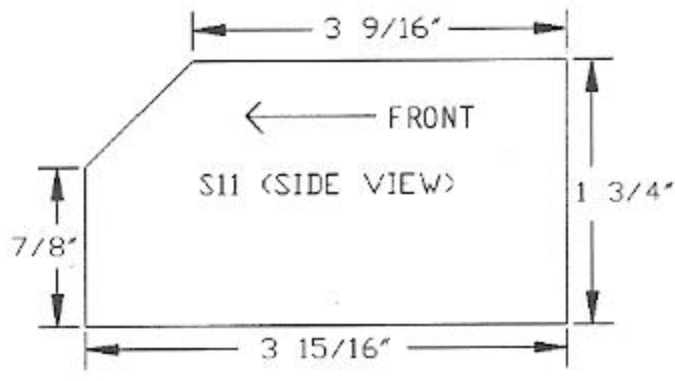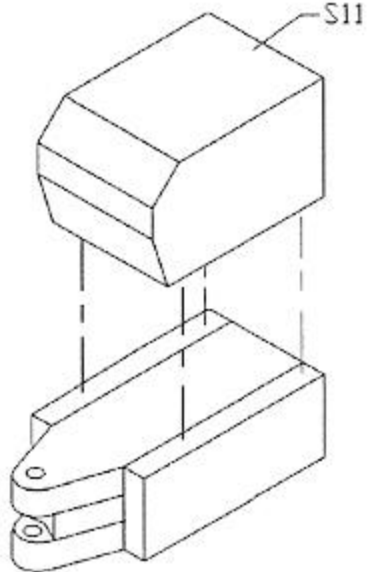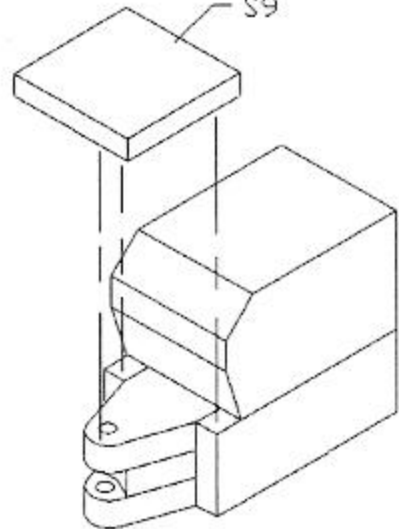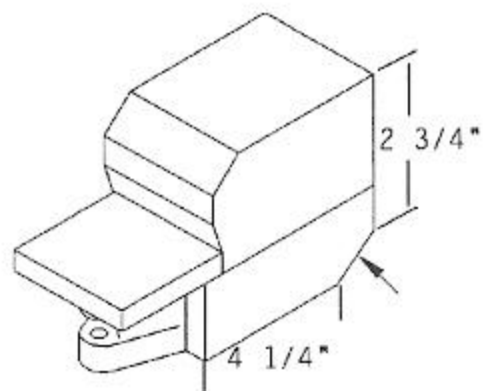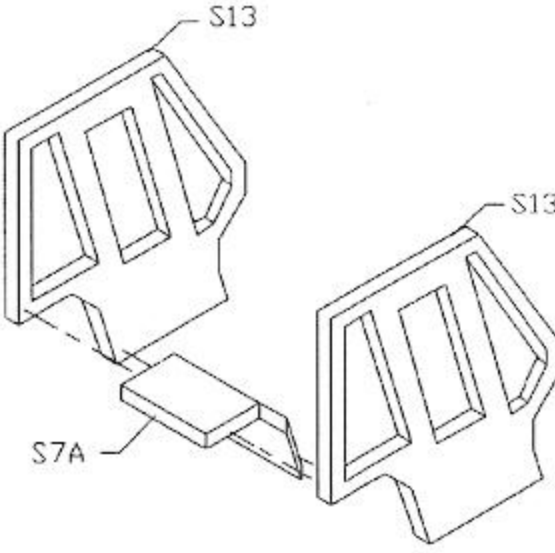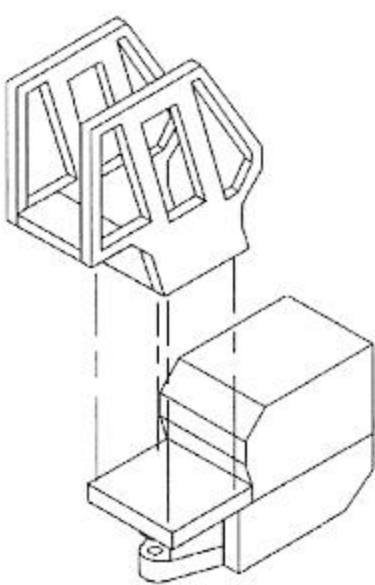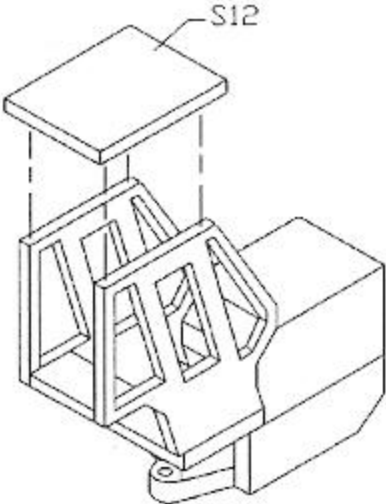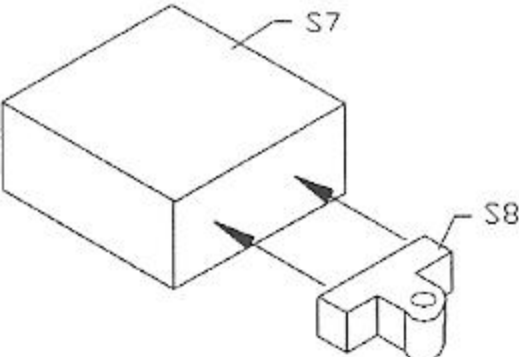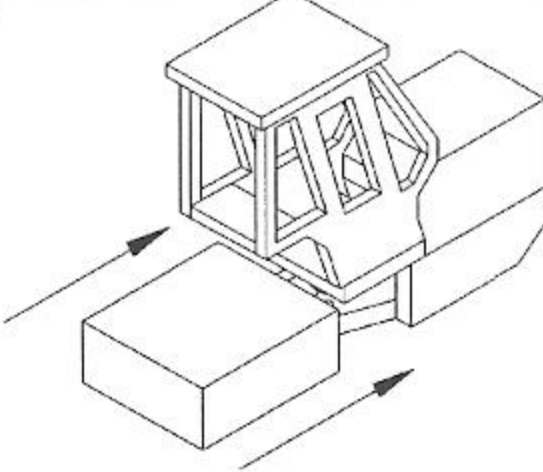
1  Glue mid-body S2 between upper and lower body S1.	2 Re-drill 31/64" dia. hole through top and bottom piece.  Re-drill hole, as shown. Glue sides S5.	 Sand angle on rear hood S11, as shown.
3  Glue rear hood S11 onto body.	4  Glue cabin floor S9.	5  Sand angle (from side to side).
6  Glue front dash S7A, as shown.	7  Glue cabin onto floor.	8  Glue roof S12 onto cabin.
9  Glue pivot plate S8 onto body S7. See next frame for exact location.	10  Where to glue pivot plate S8 onto body S7.	11  Slide front assembly into rear body.

12

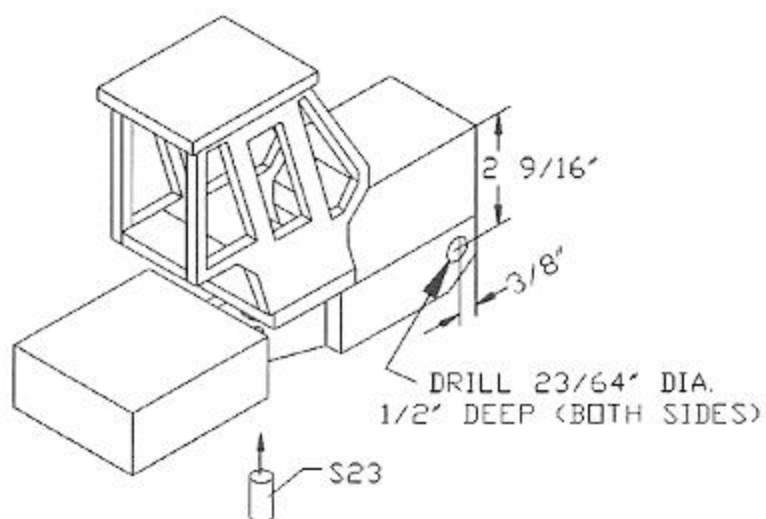


Insert main pivot pin S23. Drill holes into body, as shown.

13

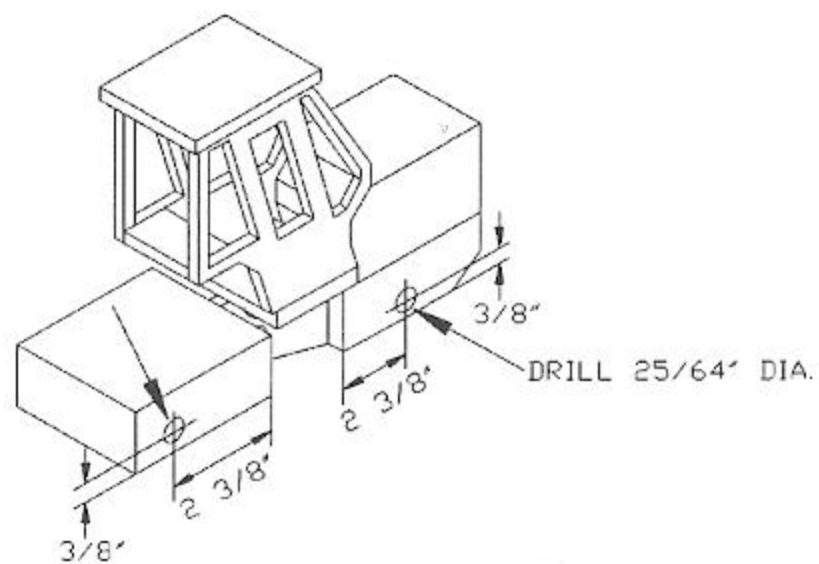


Drill holes into body, as shown.

14

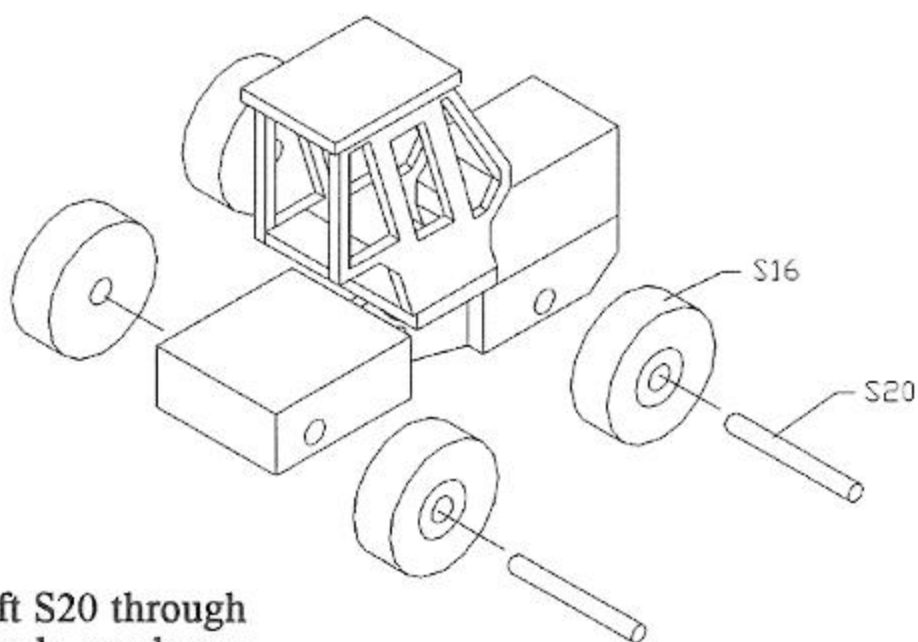


Insert wheel shaft S20 through wheels S16 and body, as shown.

15

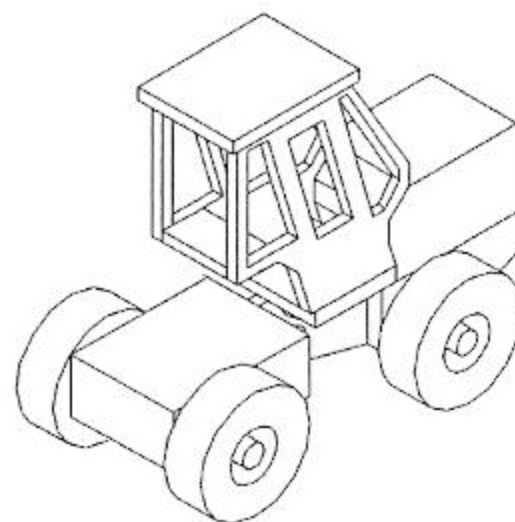


Start shovel.

16

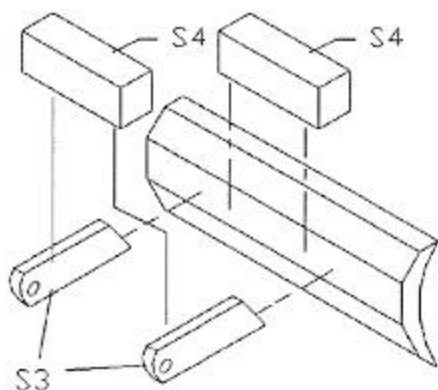


Glue levers S3 and re-enforcing blocks S4.

17

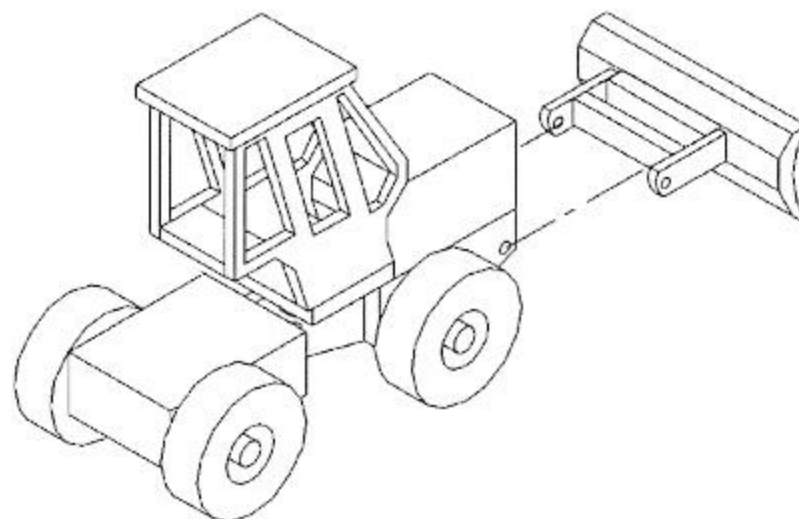


Slide shovel assembly, as shown.

18

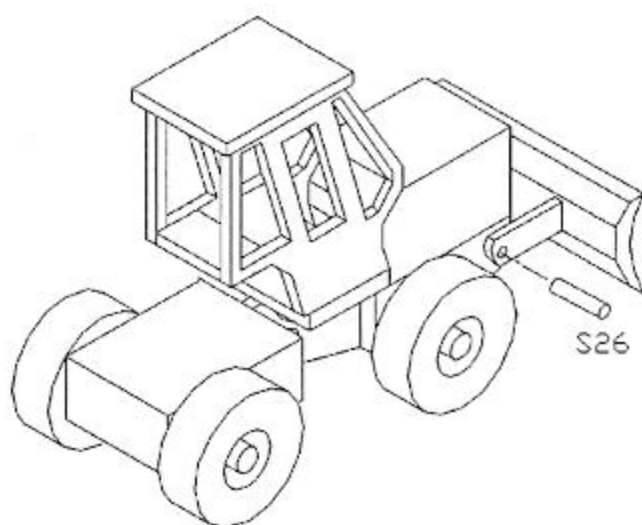


Insert pins S26.

19

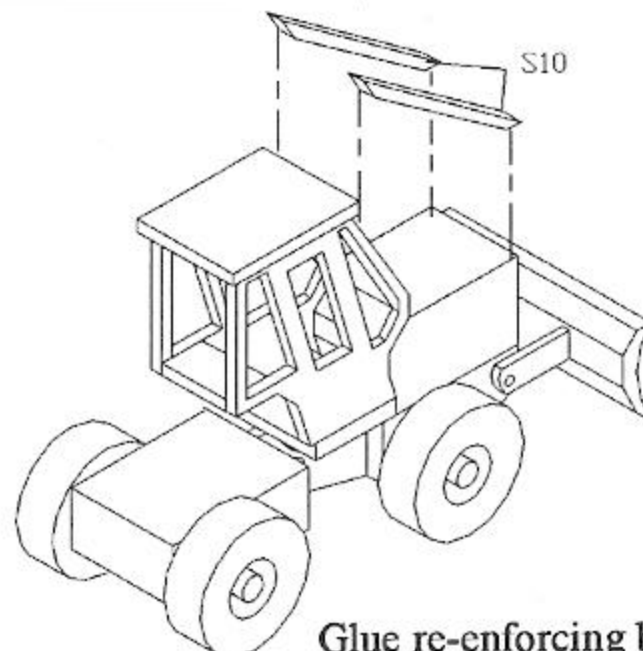


Glue re-enforcing bars S10.

20

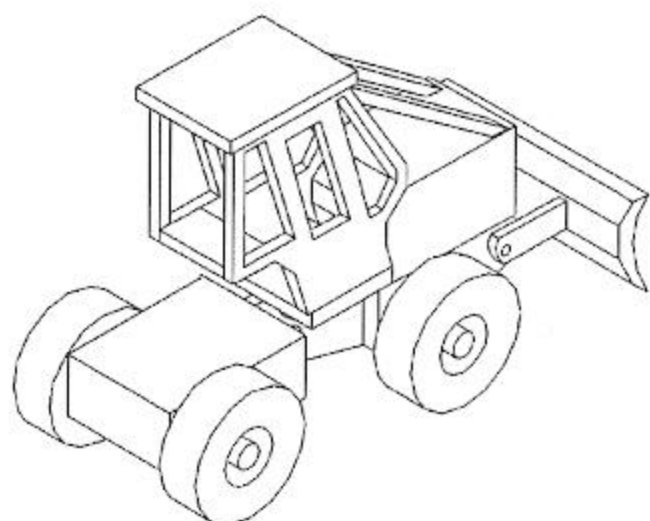


Start pulley assembly.

21

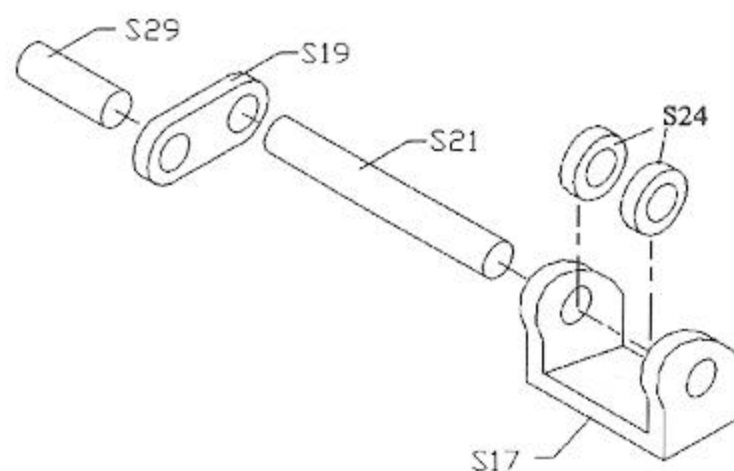


Assemble rear pulley assembly, as shown.

22

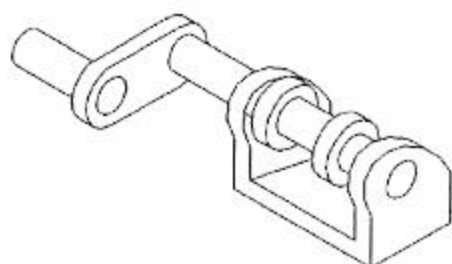


Rear pulley shown assembled.

23

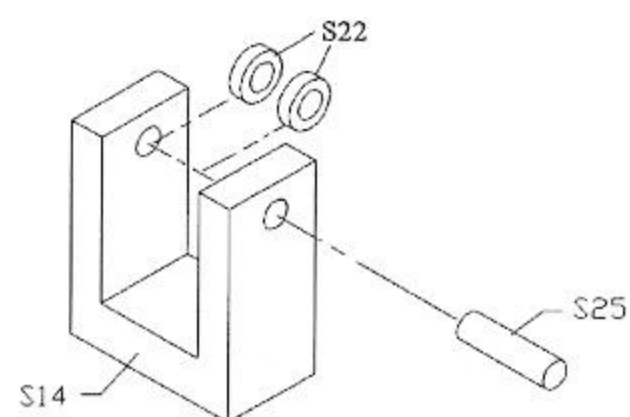


Assemble pulley parts, as shown.

24

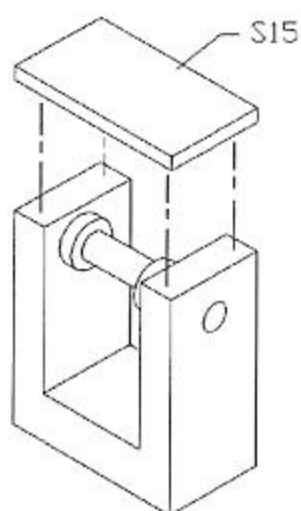


Glue pulley plate S15.

25

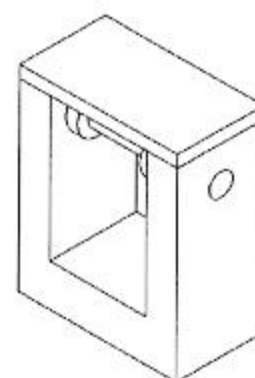


Front pulley assembly shown assembled.

26

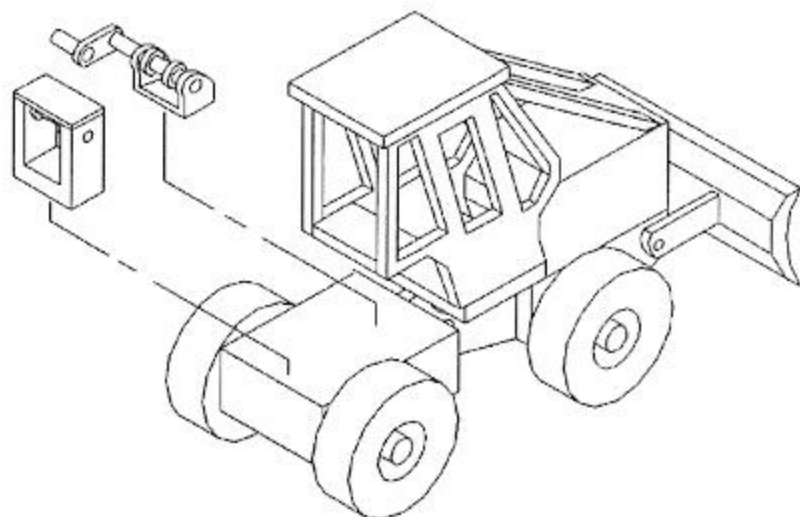


Glue parts, as shown.

27

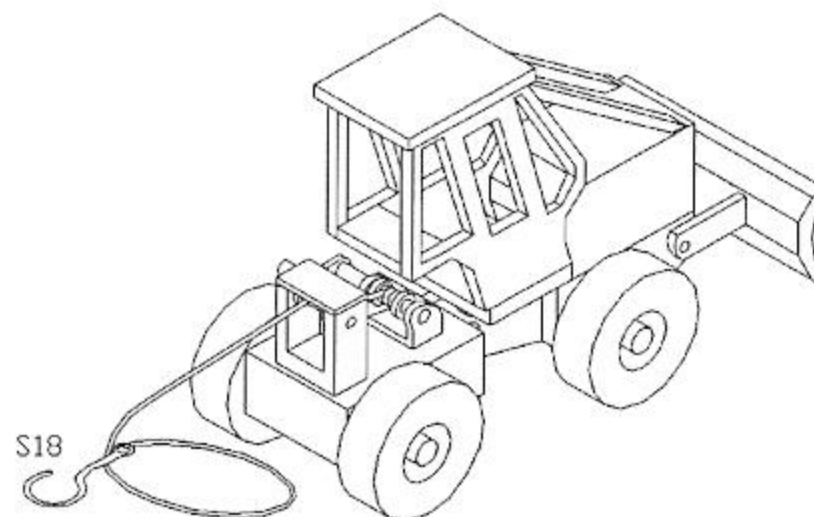

Install string and hook S18.
Your model should now be complete.

GRAPPLE SKIDDER

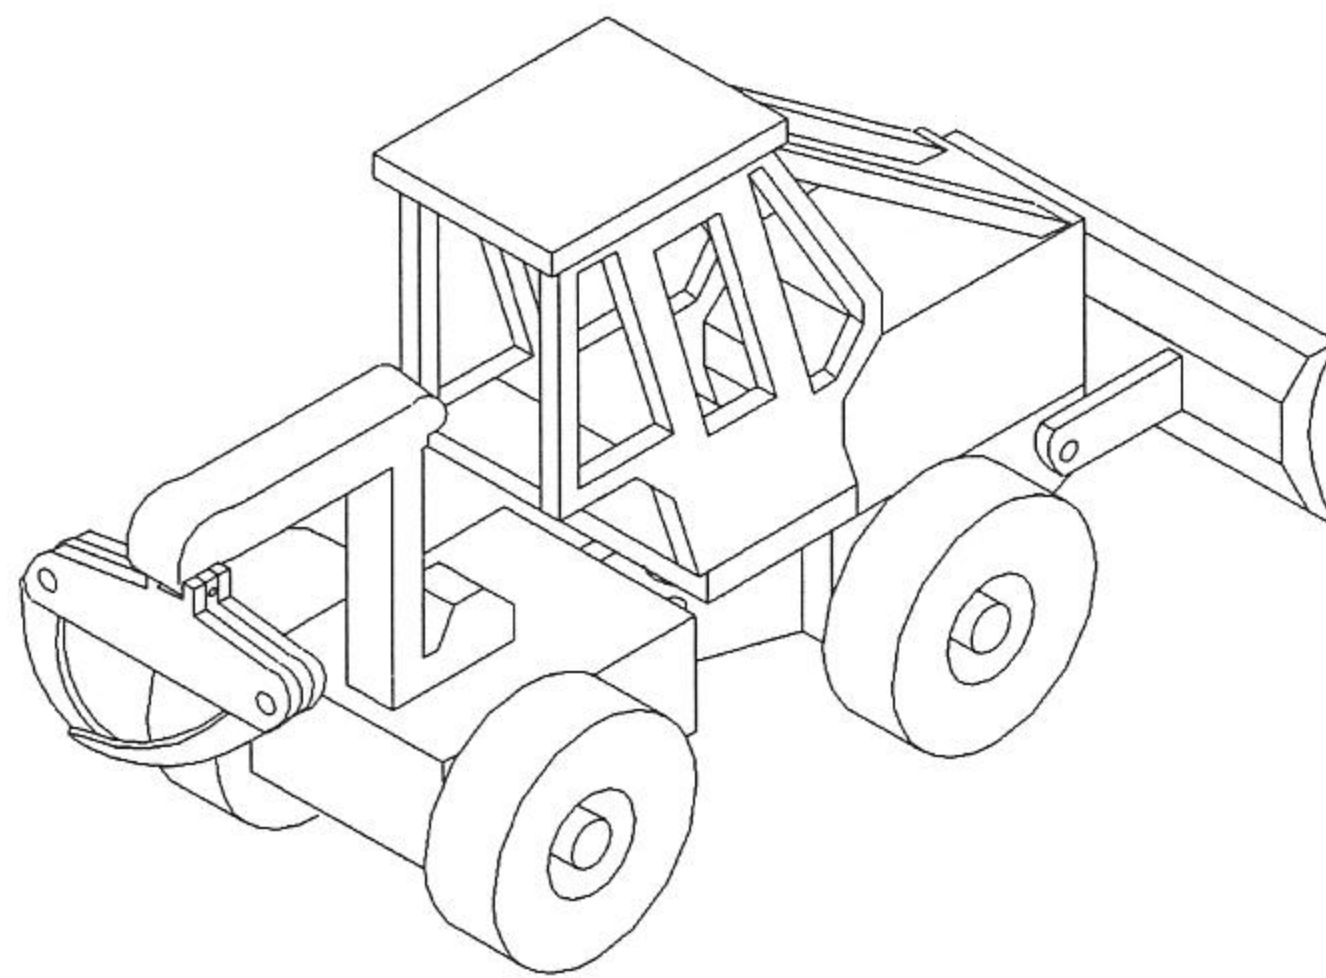


General Instructions - Grapple Skidder

- 1- Start by cutting materials needed by following the list of materials, paying attention to the rough and finished size. **Identify the parts as they are cut.**

Please note: Different types of wood can be used for the various parts. It is suggested, however, that hard wood be used, since many of the parts would be much too fragile if using soft wood. We have used a combination of pine, maple and oak to give the models a nice contrast!

- 2- Remove the full-size patterns found in the appendix. Cut them out, leaving approximately 1/16" all around, and place on the proper piece of wood. Patterns can be secured to wood using either spray adhesive or rubber cement. If using the latter, cut and sand the part first to finished size. If drilling is required, mark the hole by inserting a scribe or nail through the pattern into the wood. Remove the pattern before drilling.

You should have no trouble determining which surface to attach most of the patterns. Some parts, however, can be confusing since the pattern could fit on more than one surface. The drawings below indicate exactly which surface to attach the patterns for these parts.

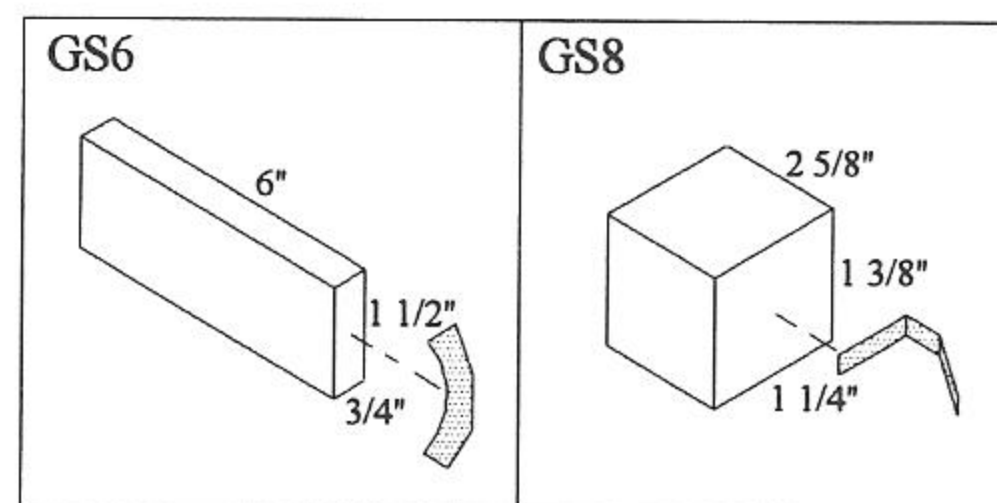

- 3- Look at the full-size drawing sheets to finish parts GS2 and GS26.
- 4- Using maple dowels, make all pins, shafts, etc.
- 5- Follow the assembly drawings to complete your model.

List of Materials - Grapple Skidder

Part	T	W	L	Material	Qty.	*
GS1	3/8"	3"	6 7/8"	pine	2	R
GS2	3/4"	2 5/8"	5 1/2"	pine	1	F
GS3	3/8"	1"	3"	maple	2	R
GS4	1/2"	5/8"	3 3/8"	maple	2	F
GS5	3/8"	1 1/2"	5 1/4"	pine	2	F
GS6	3/4"	1 1/2"	6"	pine	1	F
GS7	1 1/2"	3 3/8"	3 3/4"	pine	1	F
GS8	1 1/4"	1 3/8"	2 5/8"	pine	1	F
GS9	3/4"	1 5/8"	2 3/4"	maple	1	R
GS10	1/4"	3 3/8"	2 5/8"	pine	1	F
GS11	3/8"	1/2"	4 5/8"	oak	2	R

Part	T	W	L	Material	Qty.	*
GS12	1 3/4"	3 3/8"	3 15/16"	pine	1	F
GS13	3/8"	3 3/4"	3 1/8"	pine	1	F
GS14	3/8"	4"	4"	oak	2	R
GS15	1/4"	2 3/4"	4 1/4"	maple	2	R
GS16	1/4"	1 3/4"	1 3/4"	maple	1	R
GS17	1/4"	1 3/4"	1 3/4"	maple	1	R
GS18	1/2"	2 3/4"	4 1/4"	maple	1	R
GS20	1/4"	1 7/8"	4 7/8"	maple	2	R
GS21	3/4"	4"	5 3/8"	maple	1	R
GS26	1 1/4"	3 3/4 DIA.		oak	4	R

R = Rough size
F = Finished size

T = Thickness

W = Width





L = Length


Instructions:





R= Rough sizes, the material is cut oversized so you have ample room to apply the pattern on the surface. Sanding is not required at this point.


F = Finished Size: Cut and sand parts to finished size.

Full-Sized Patterns: Set One

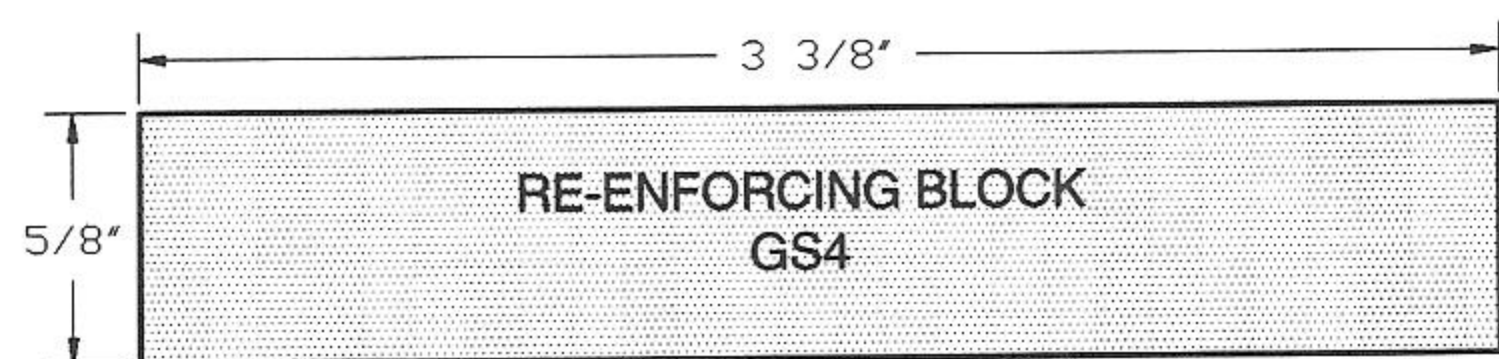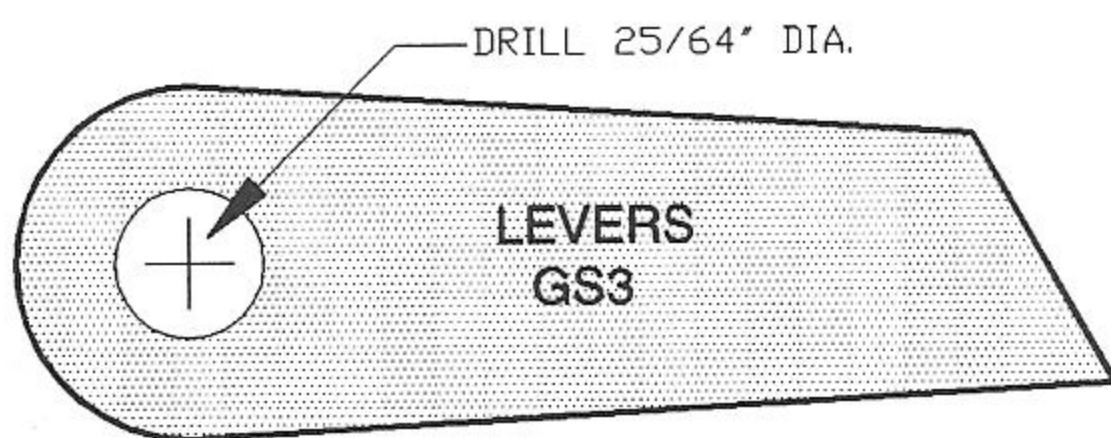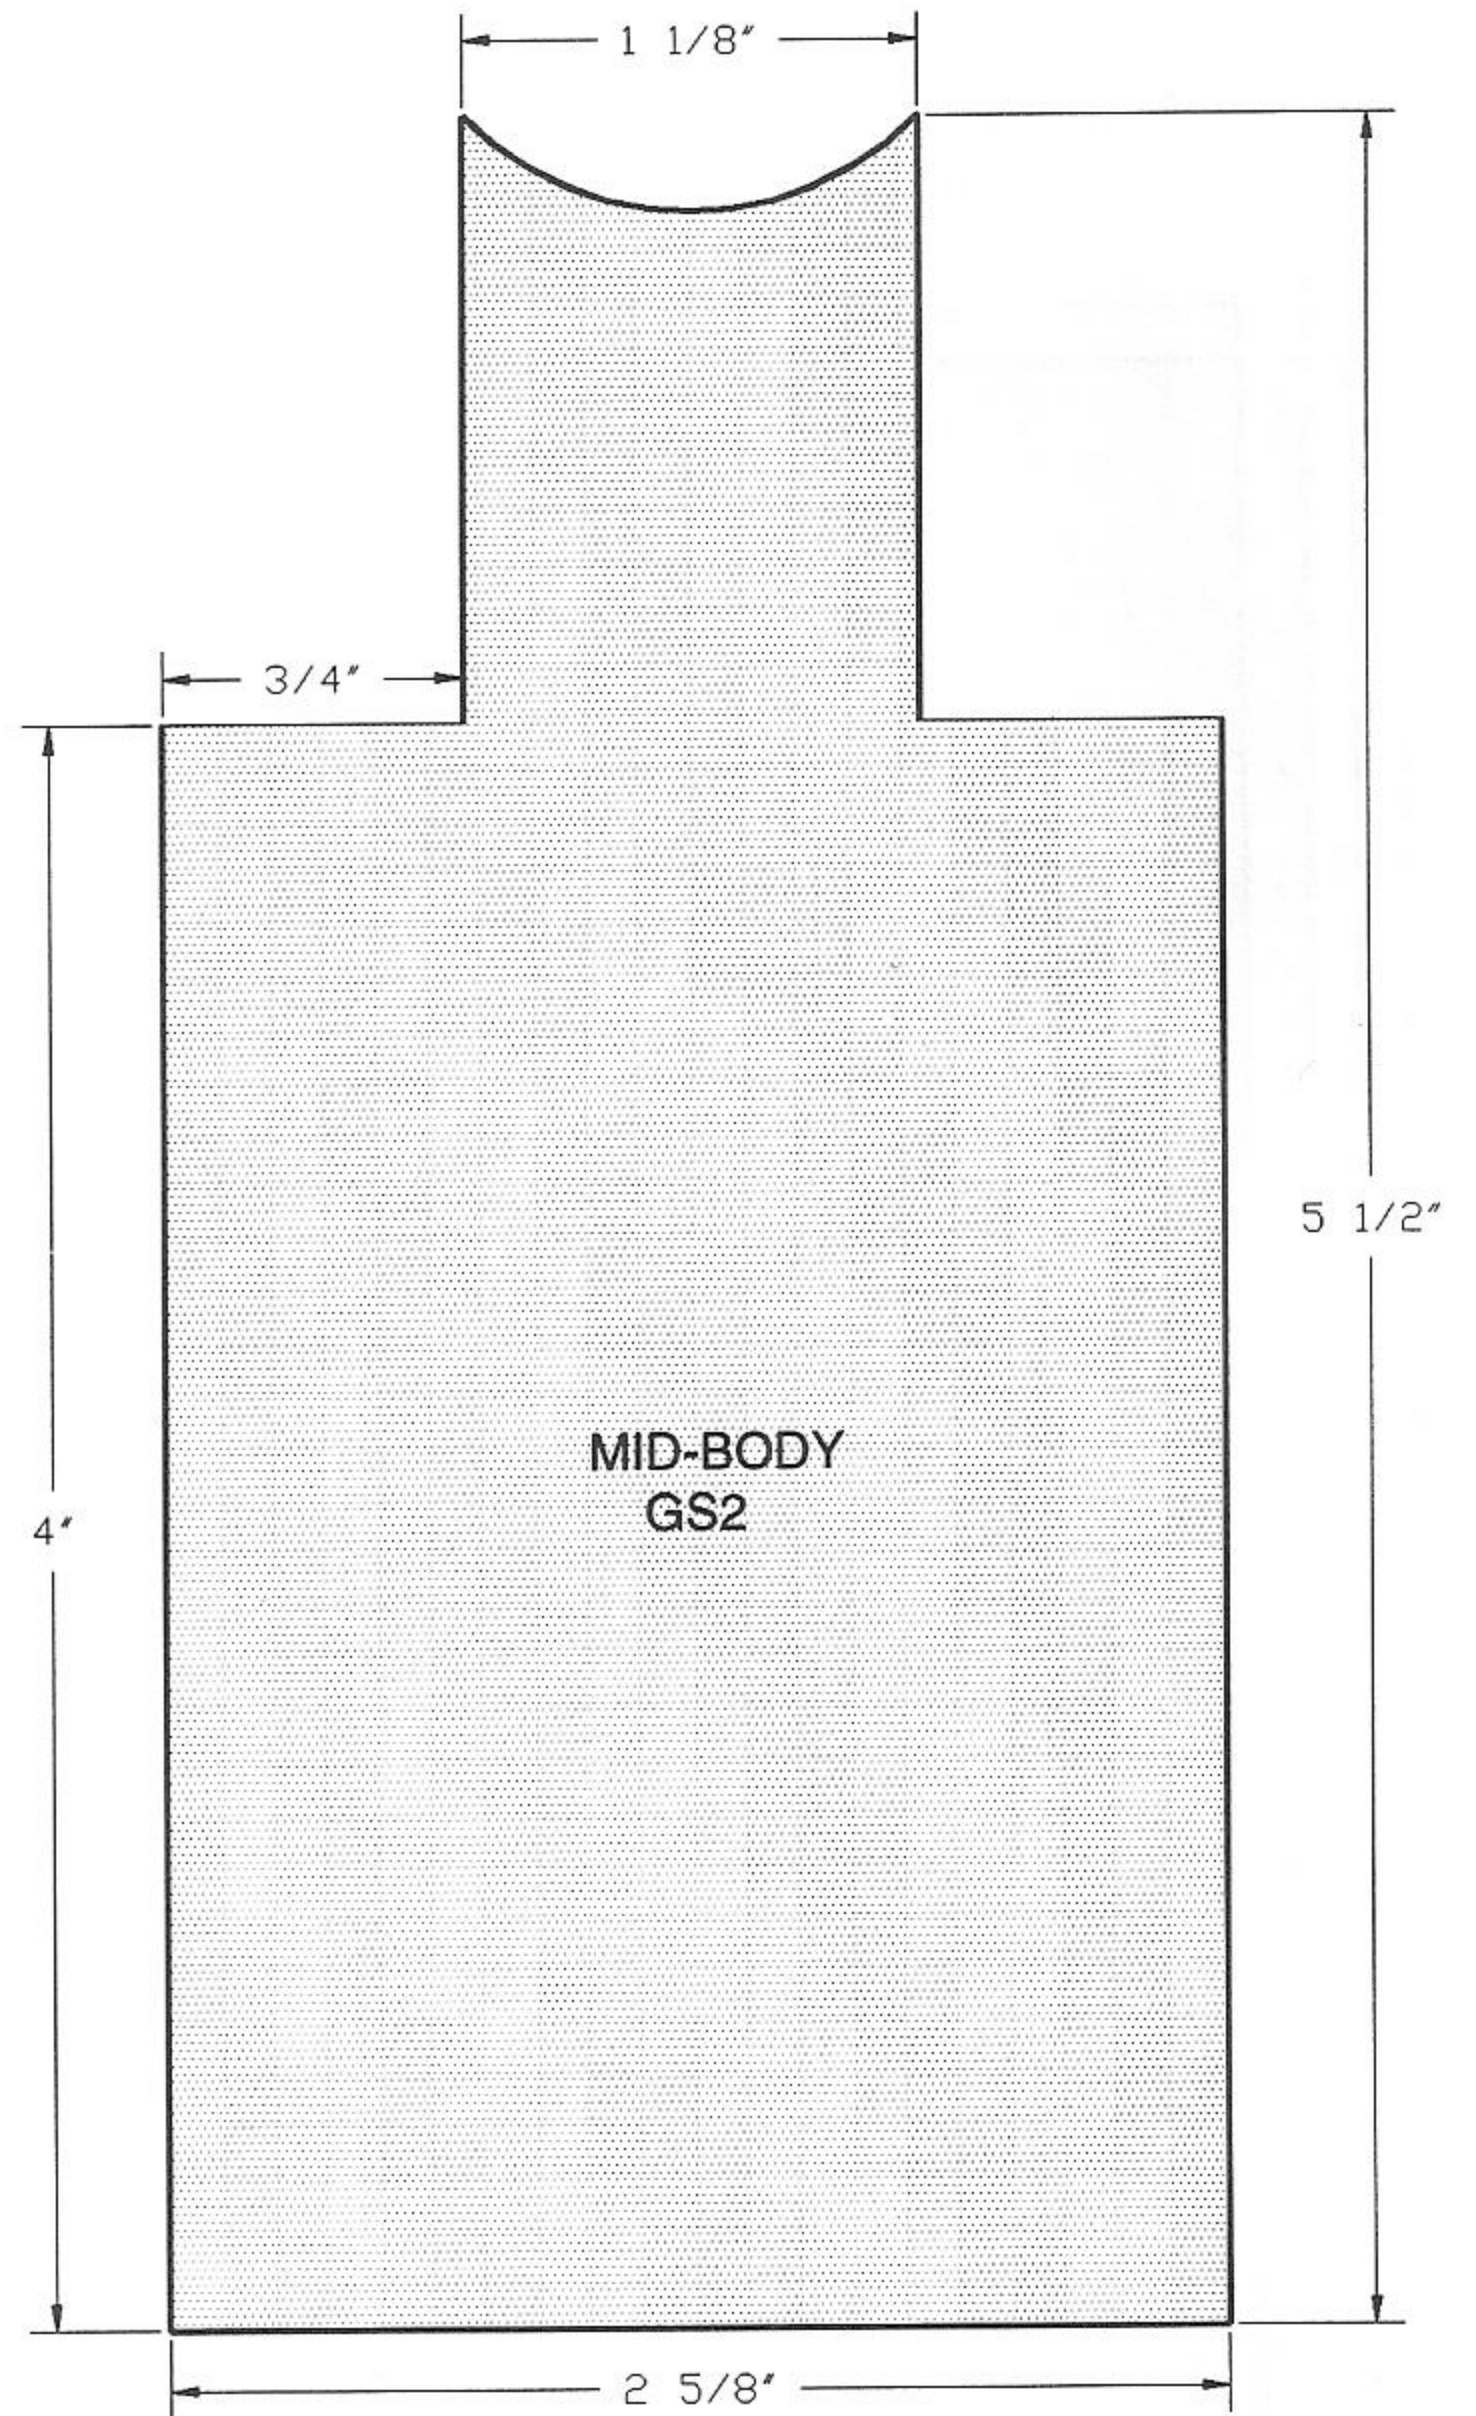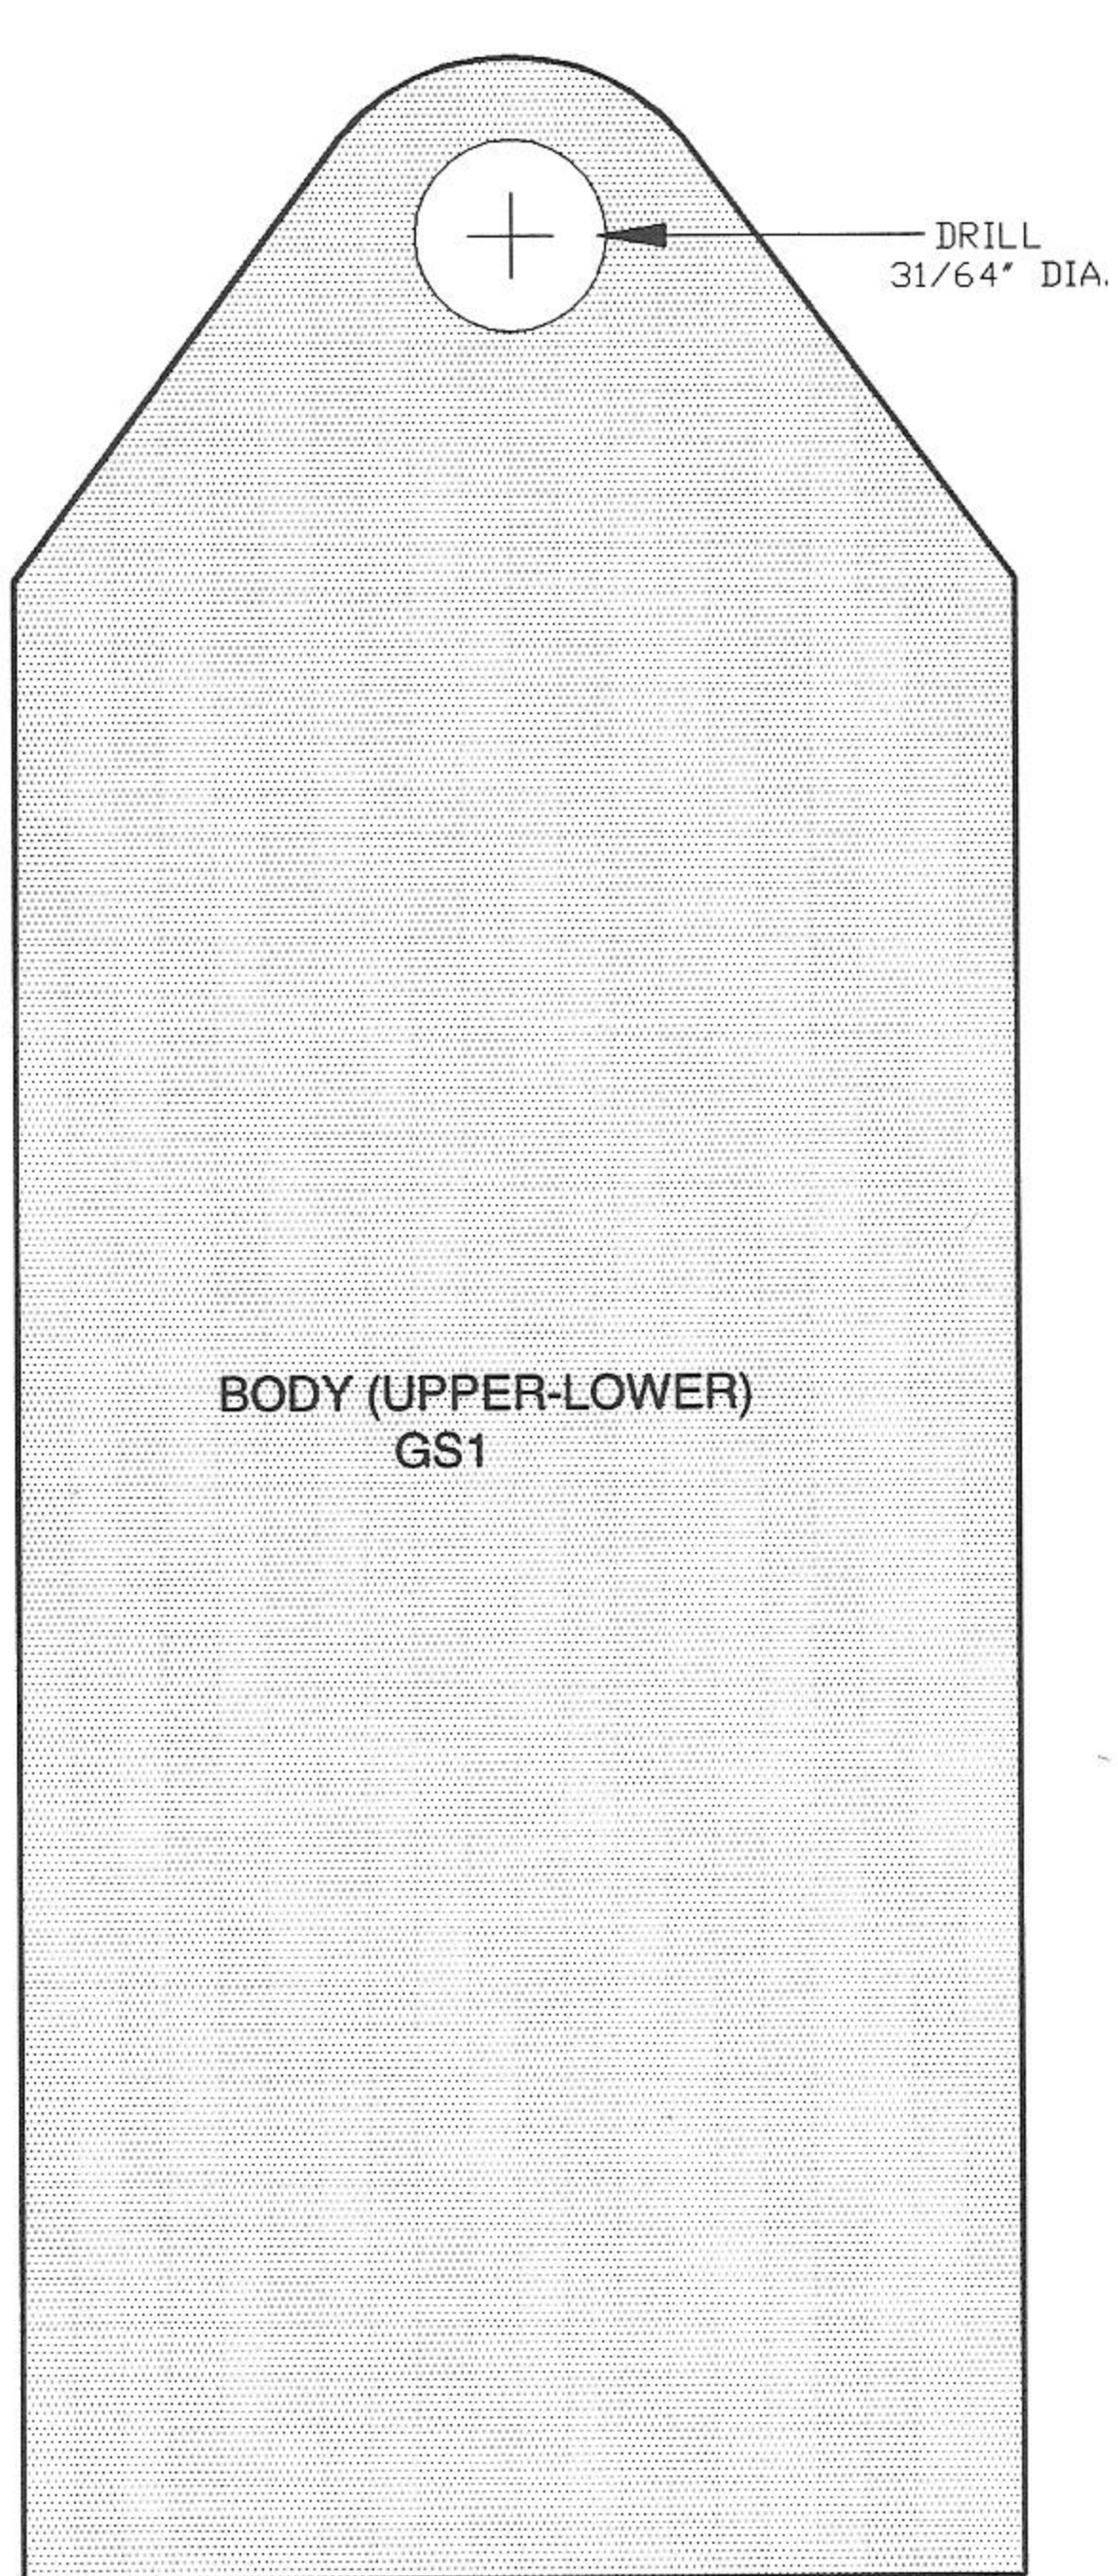

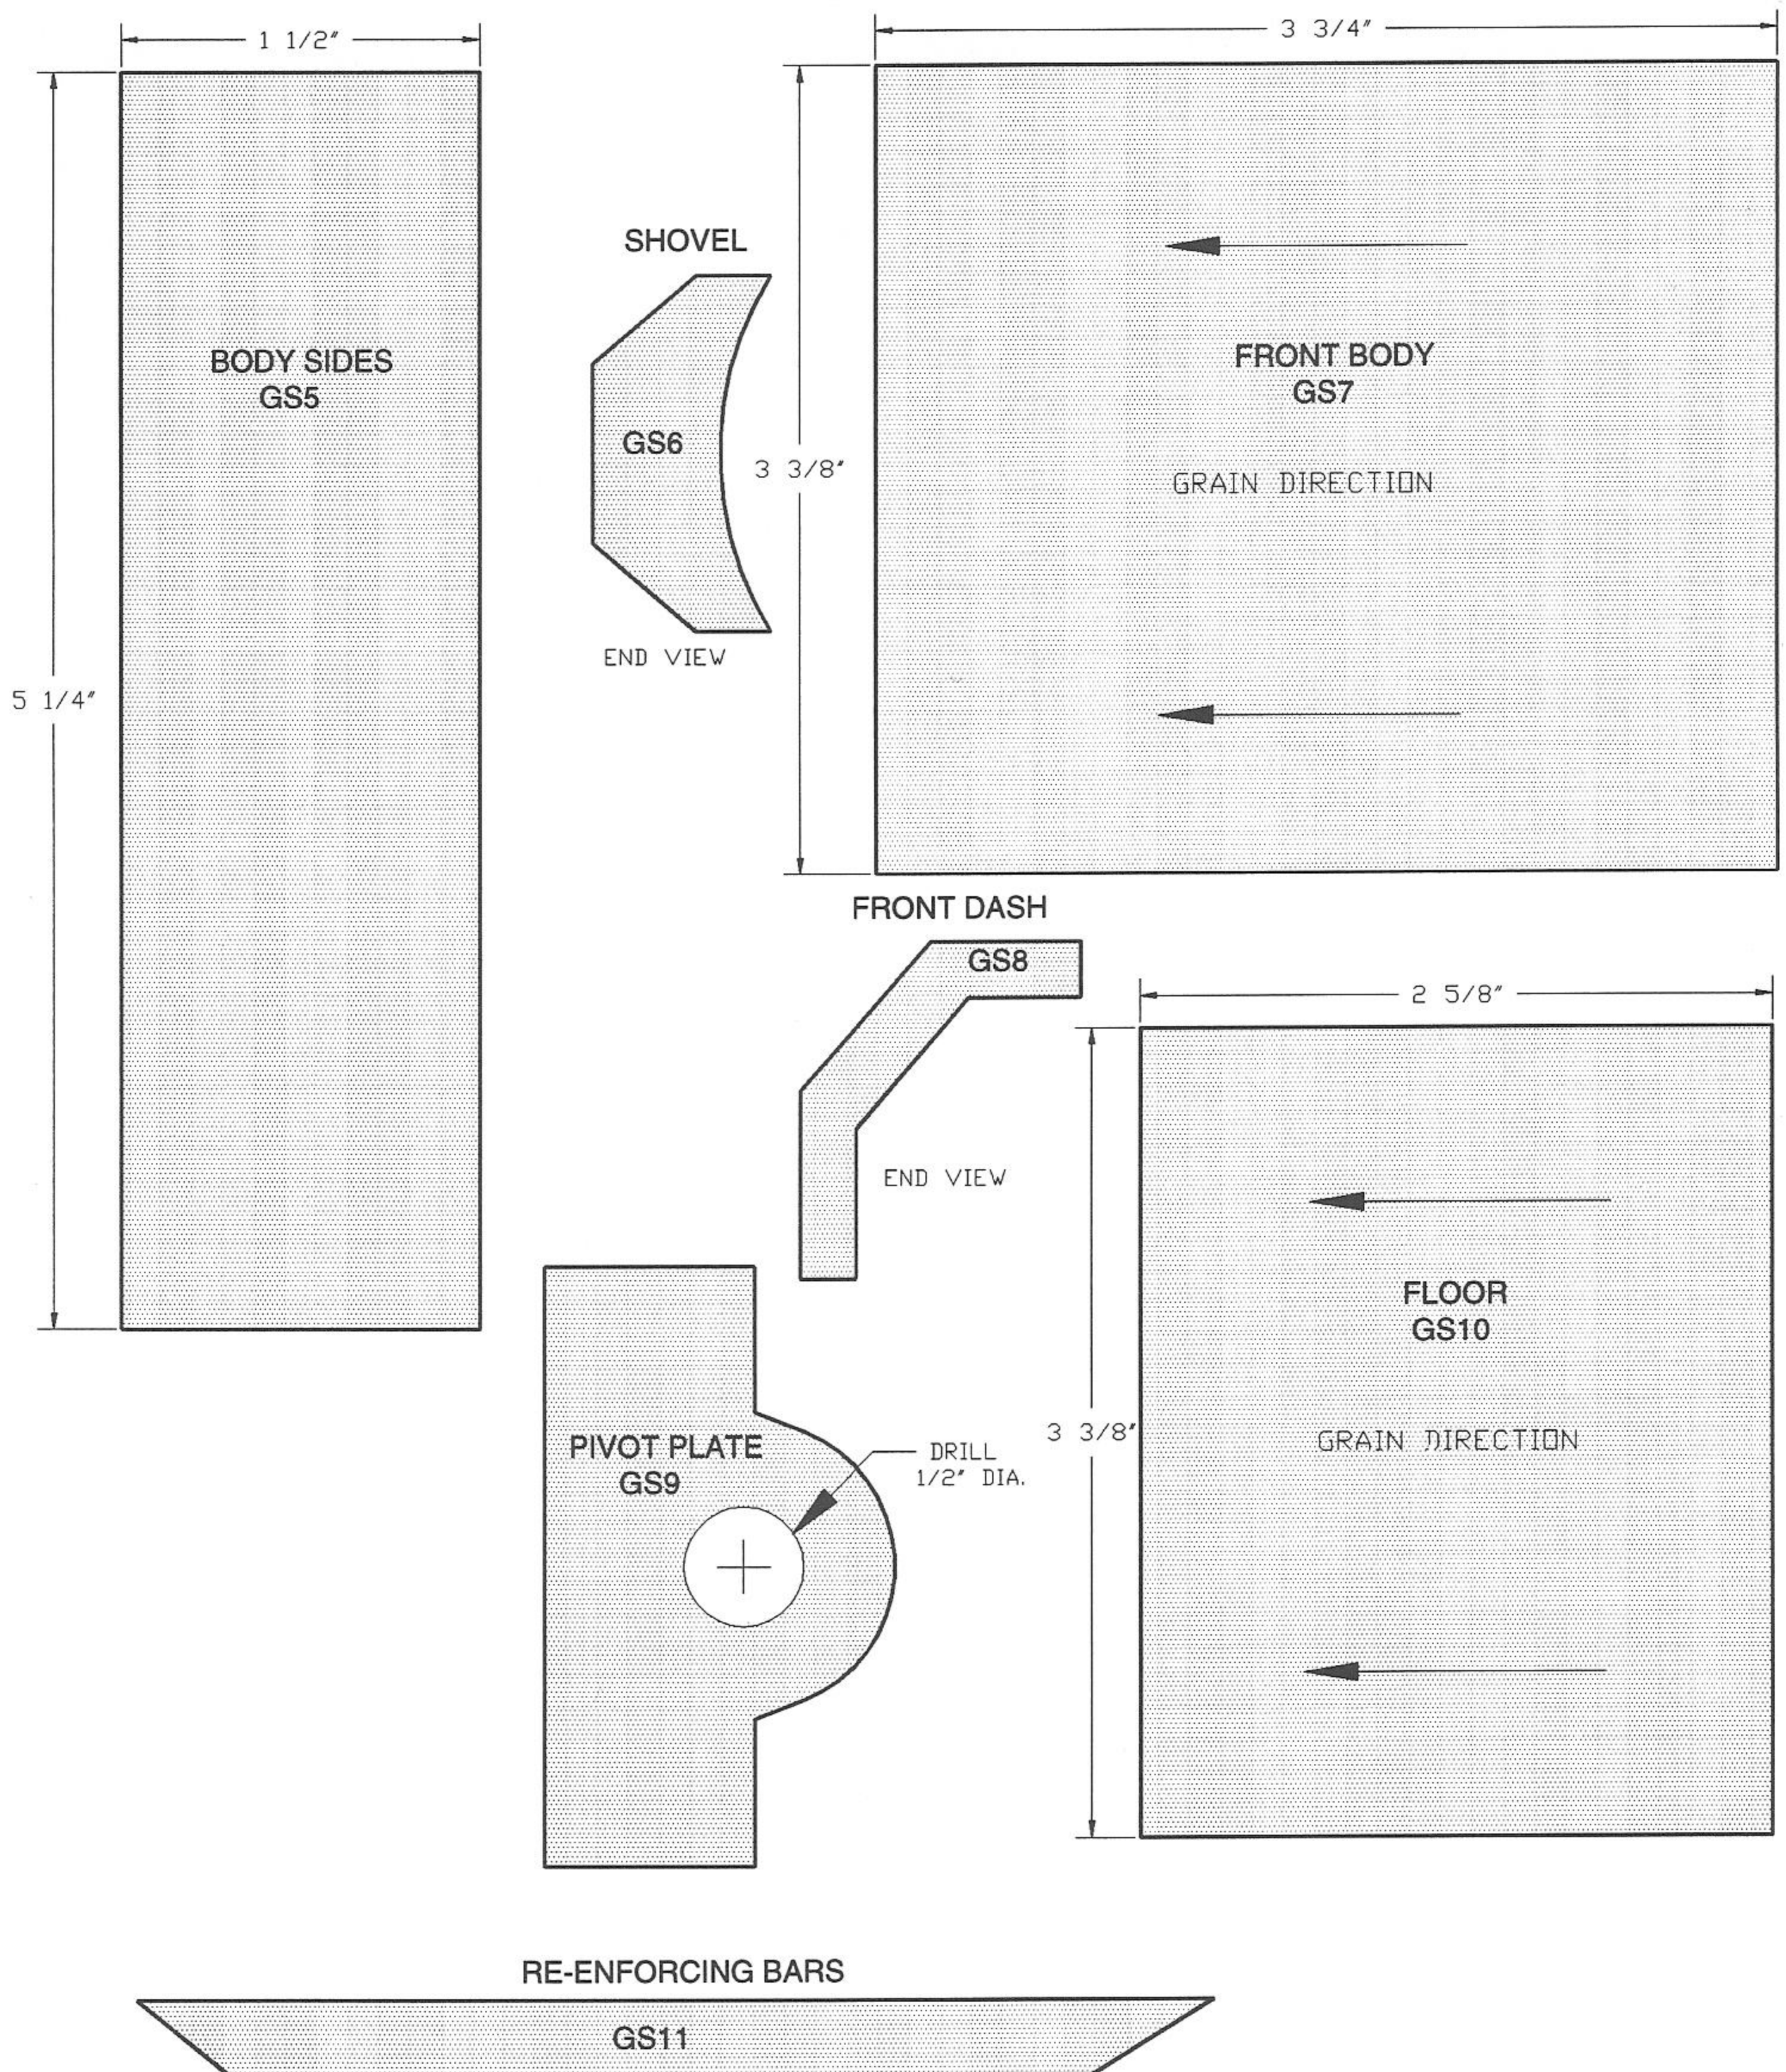


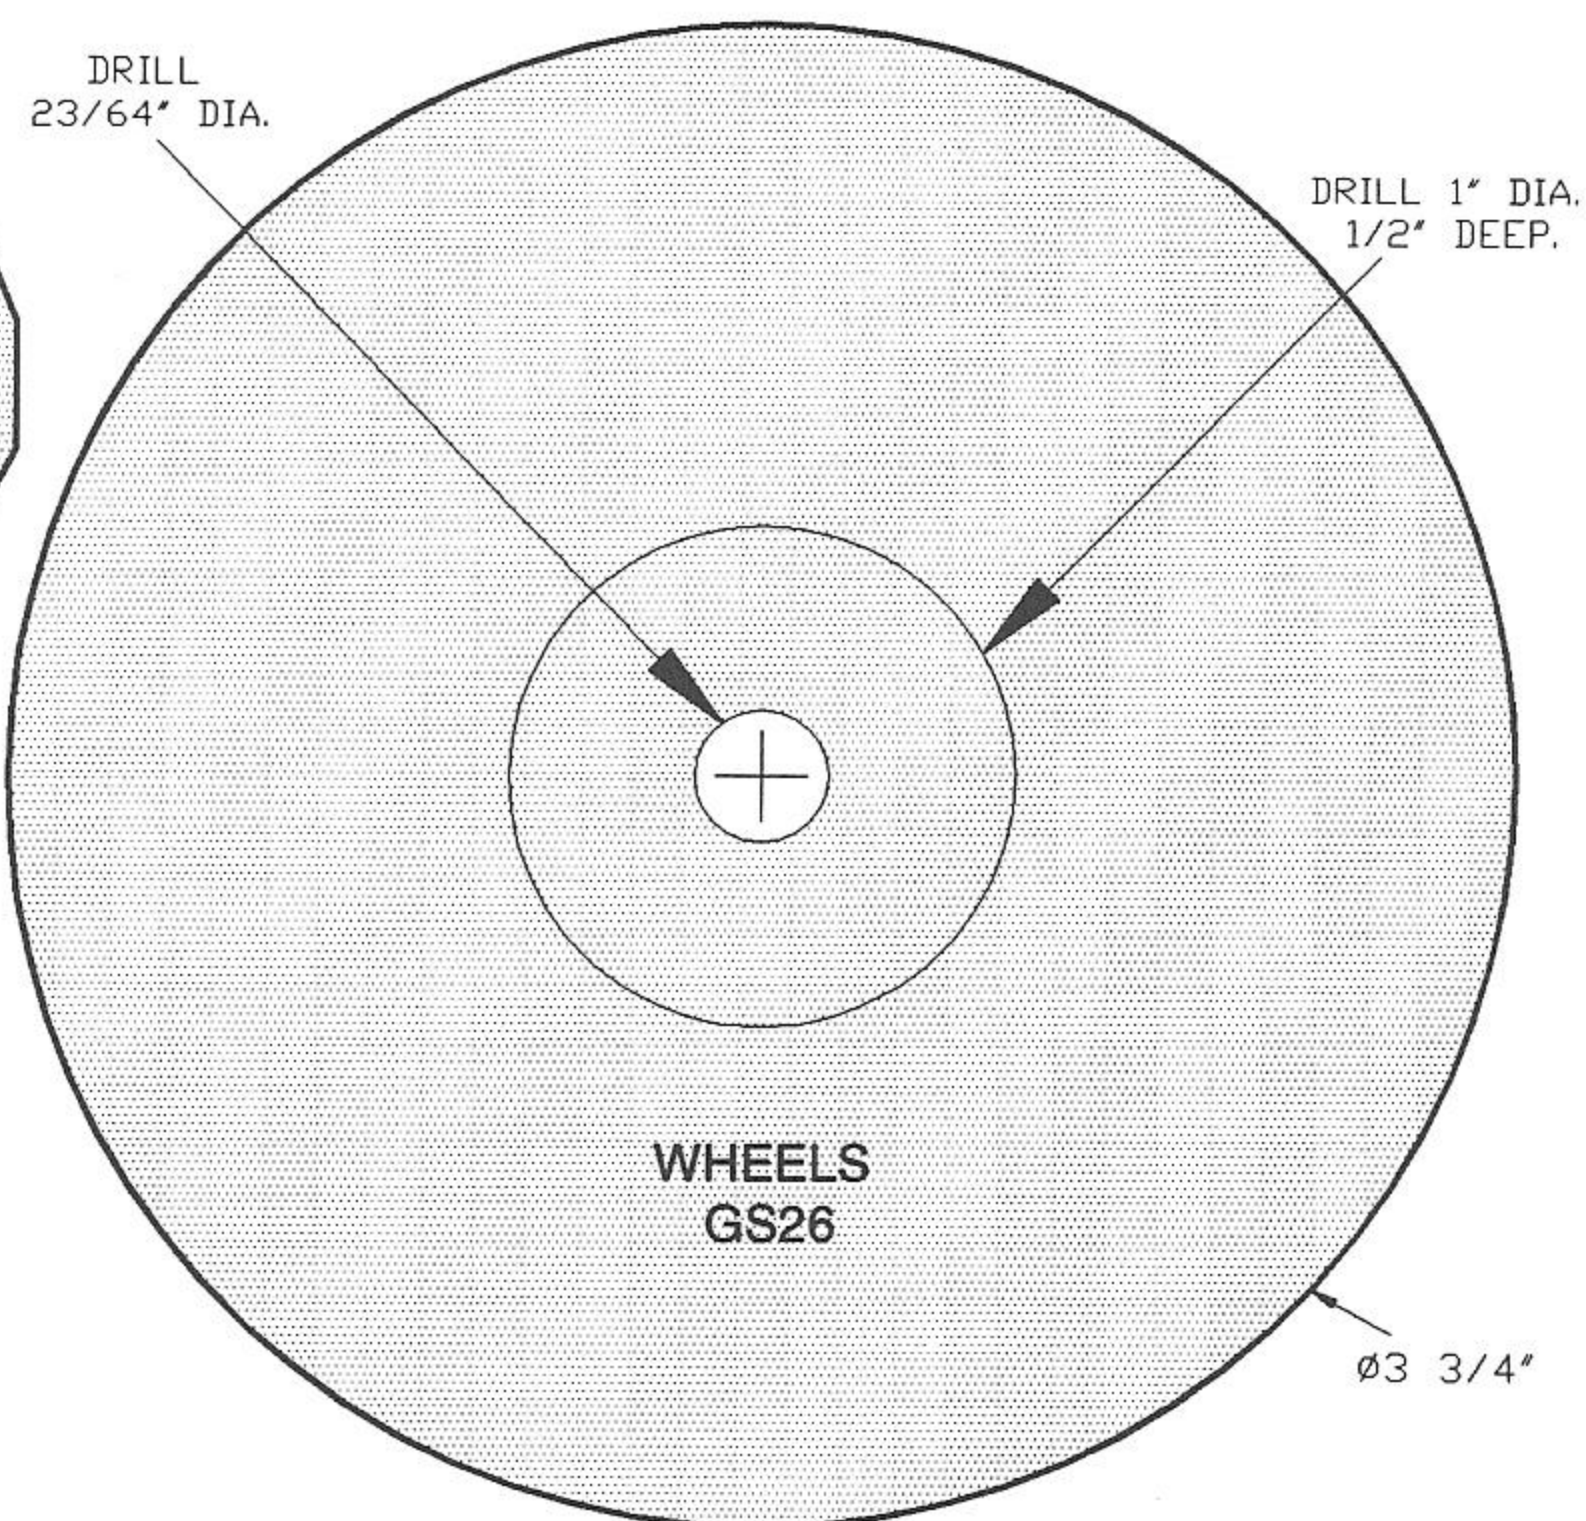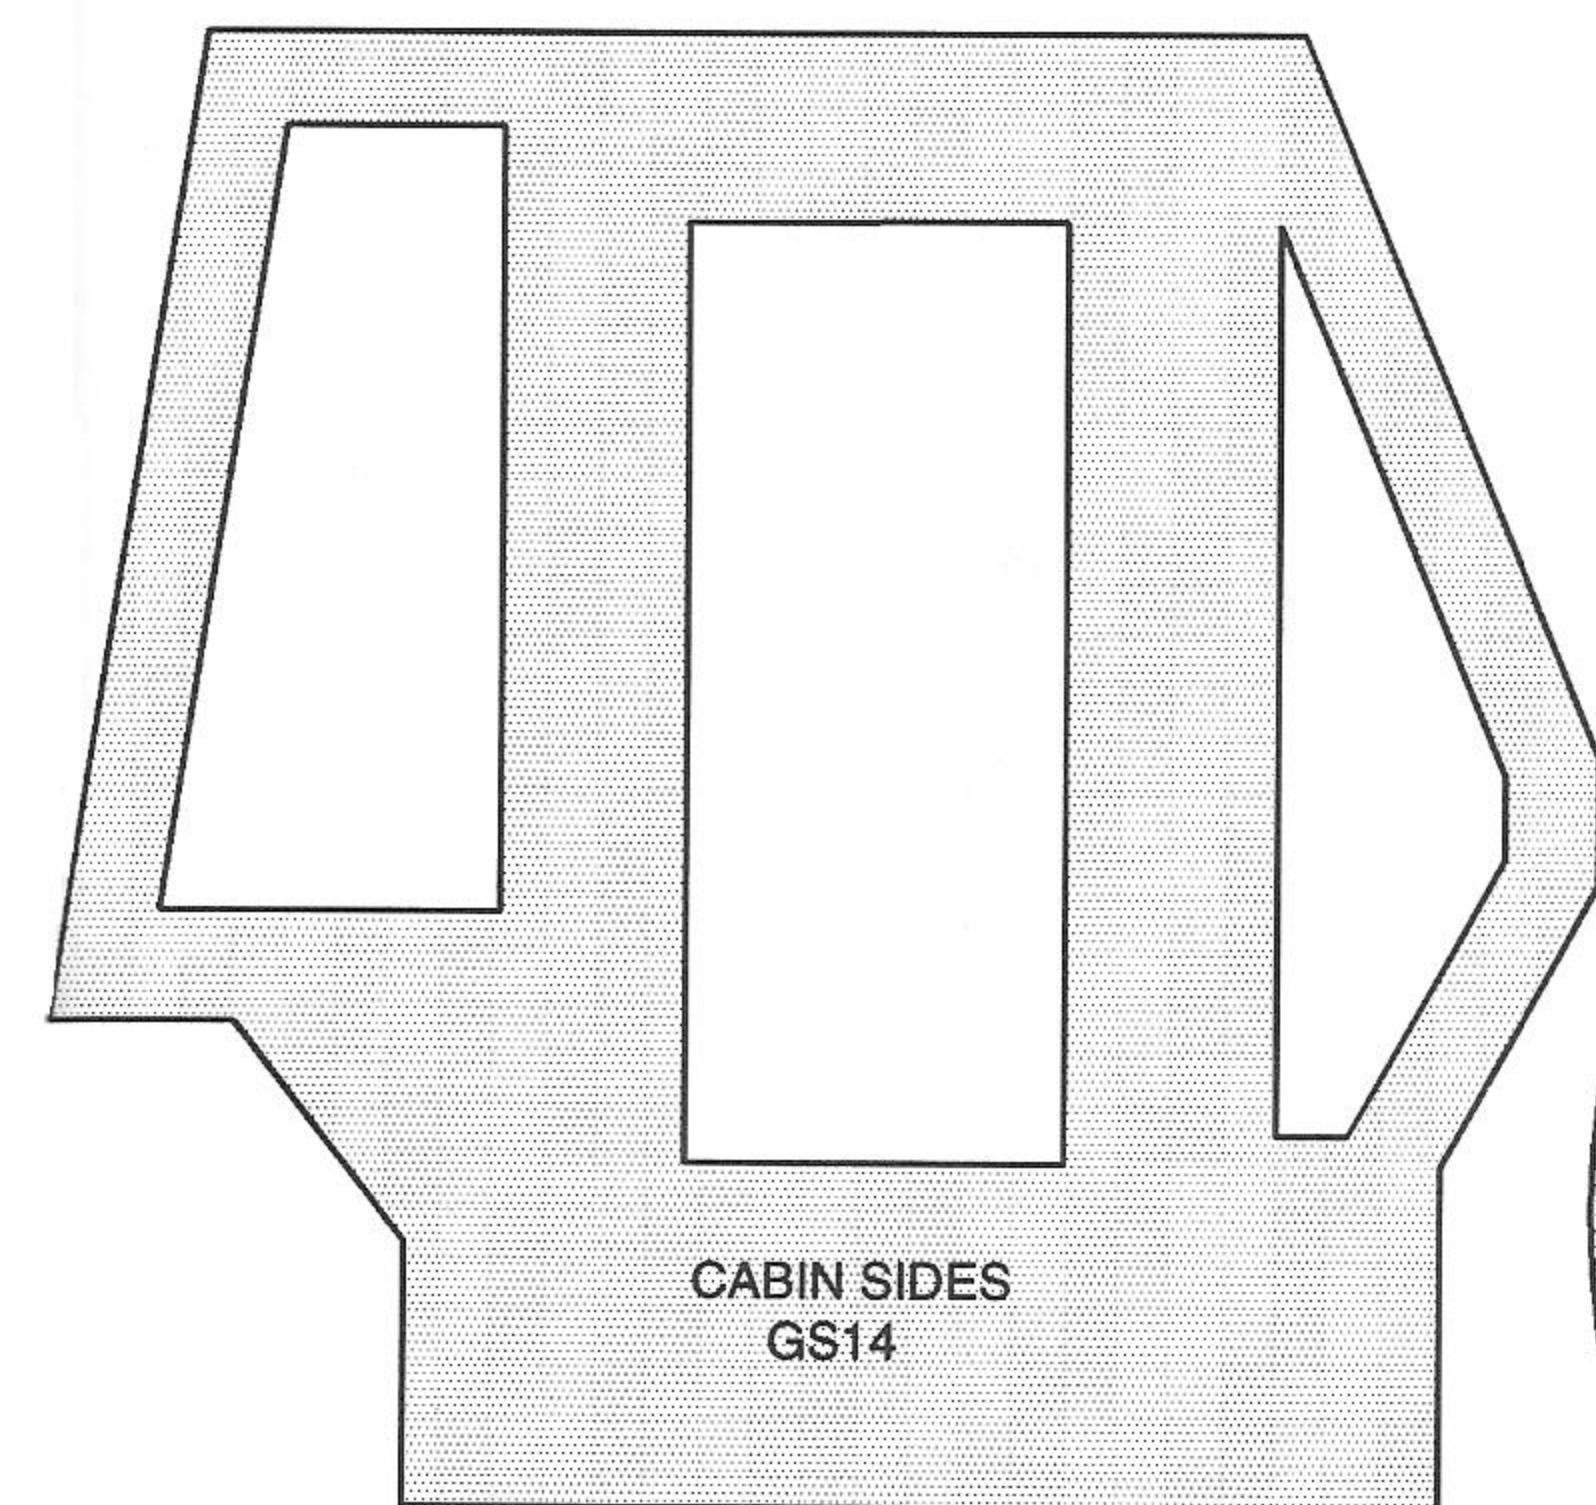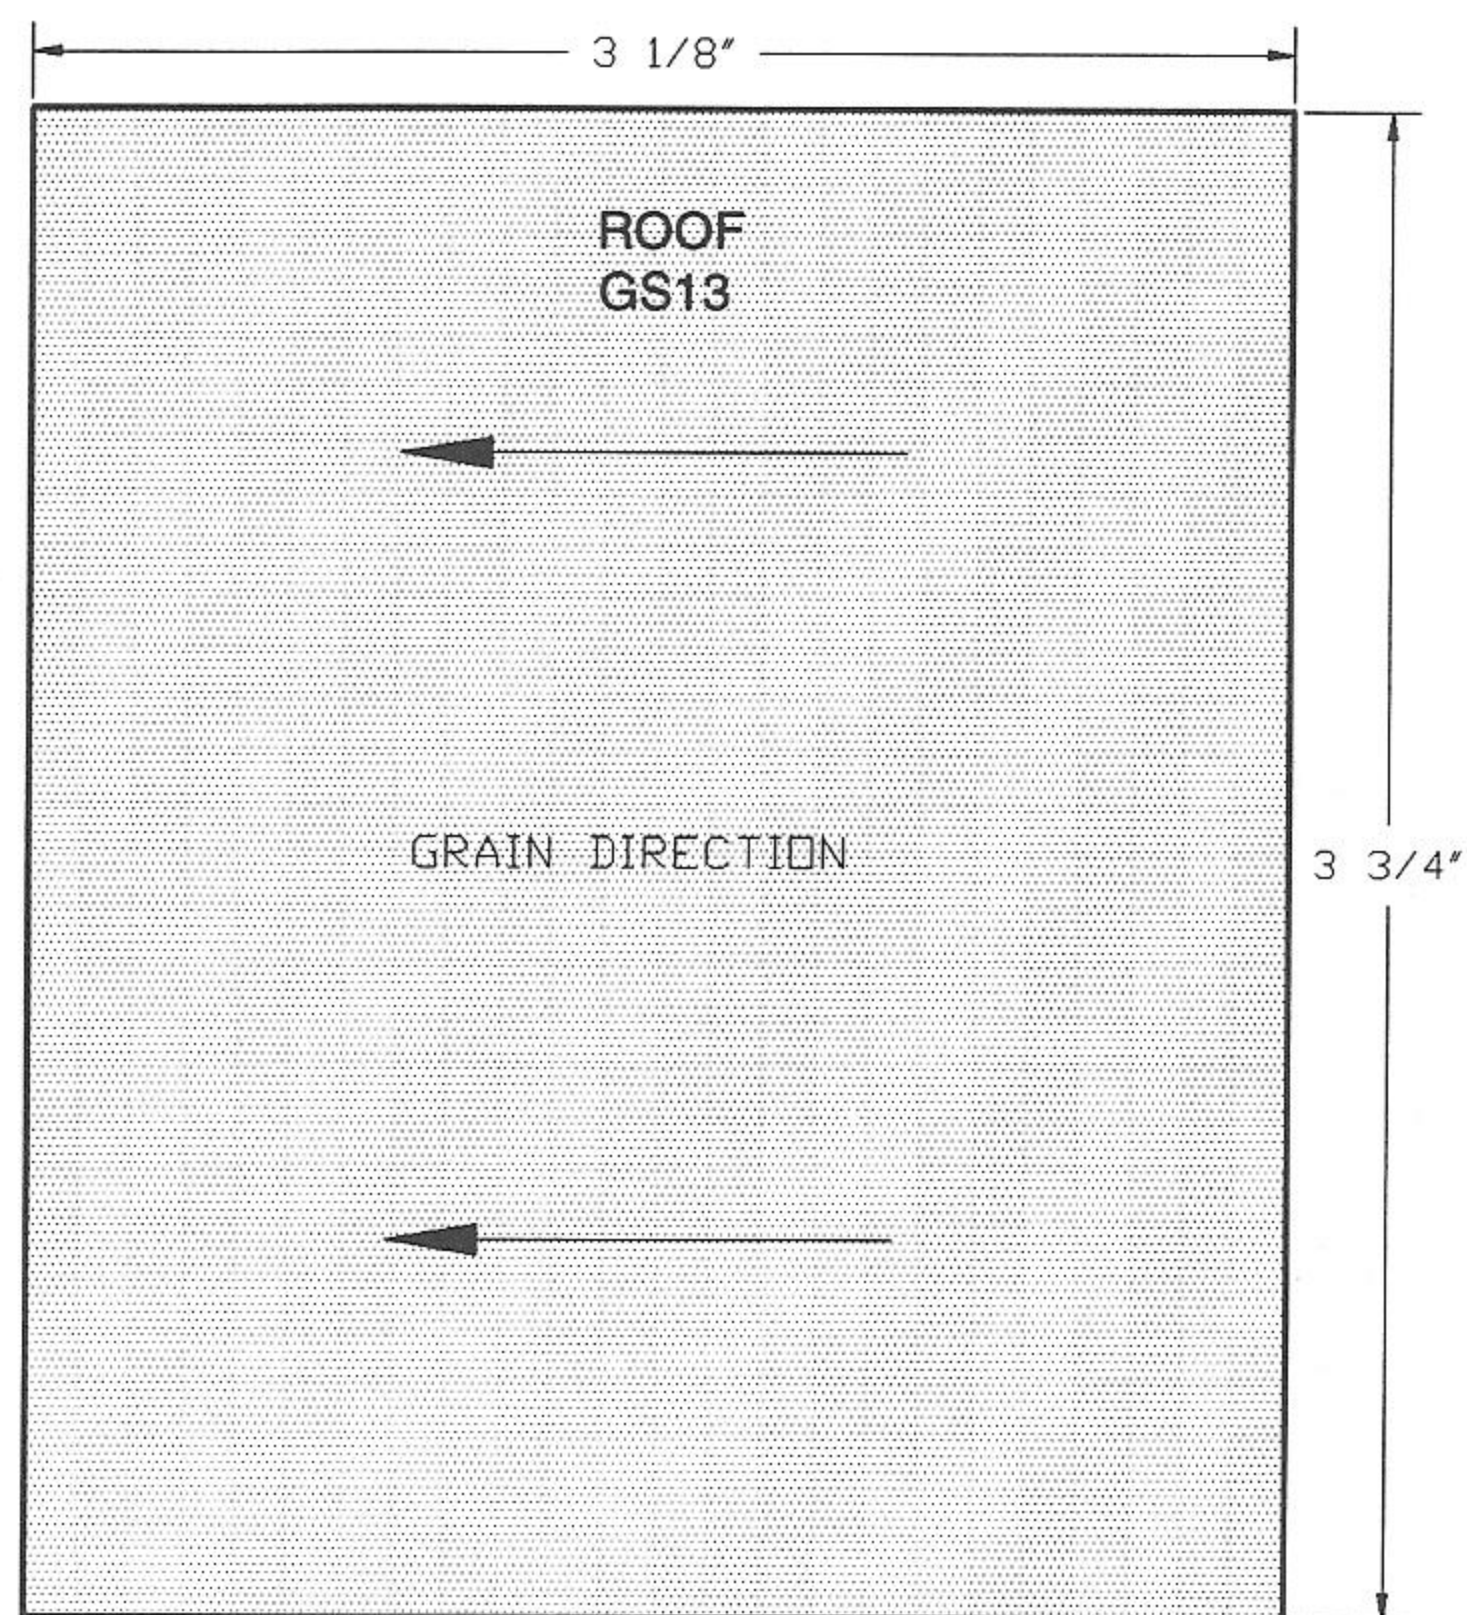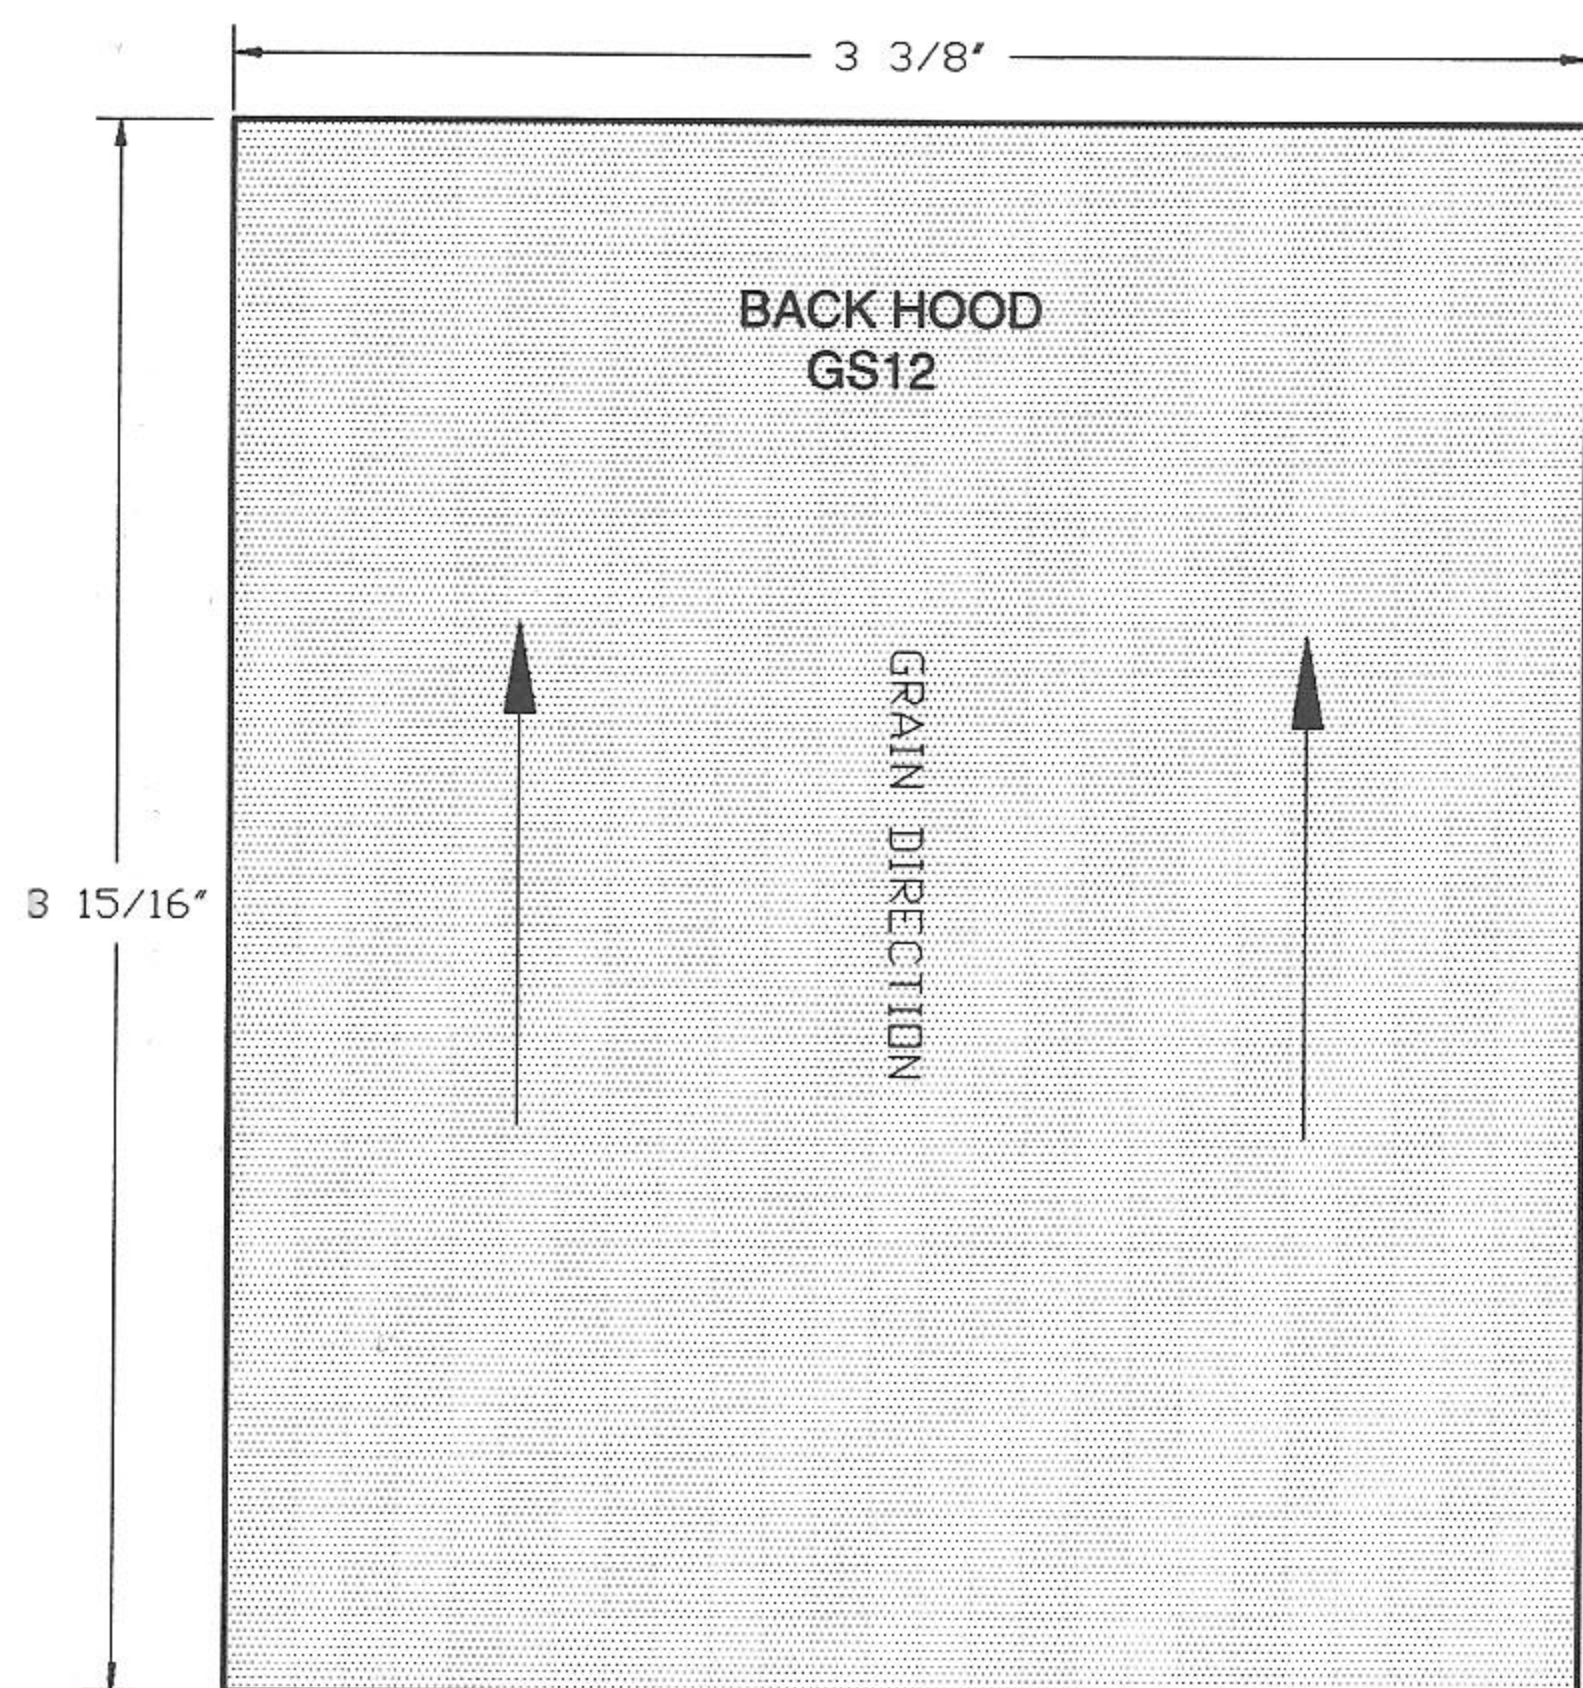

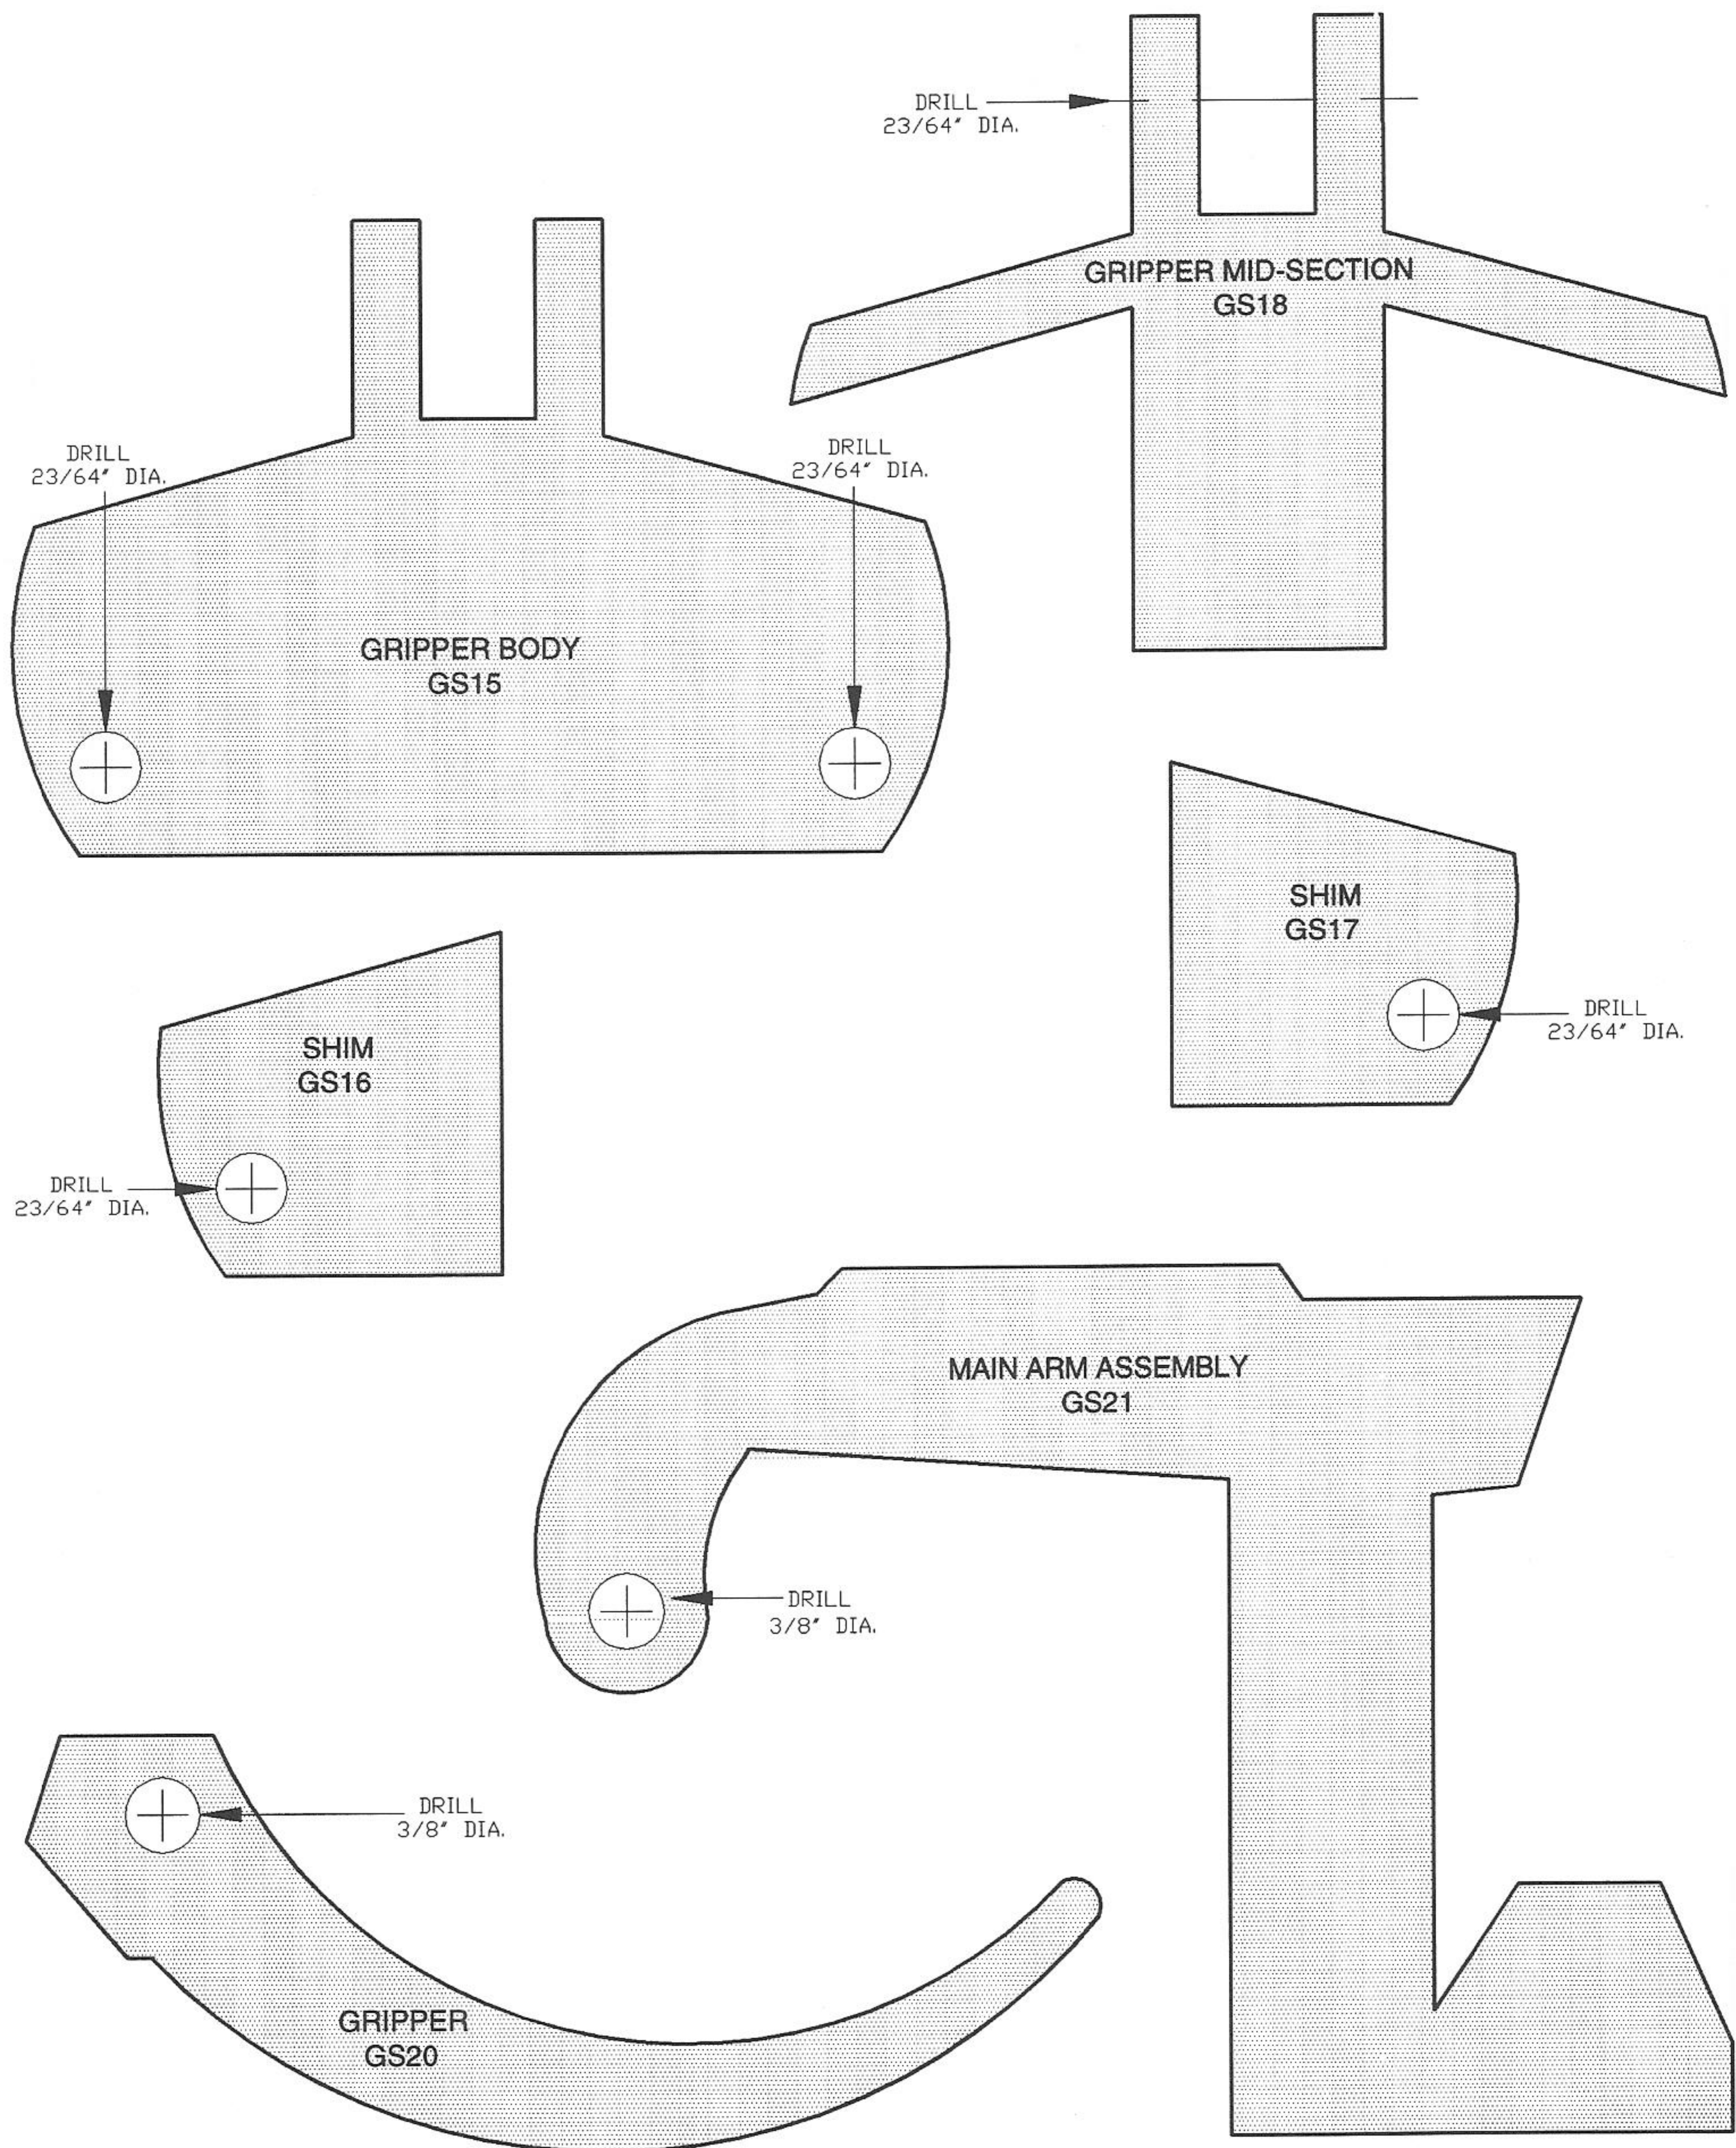


GS27

WHEEL SHAFTS
(2 REQUIRED)

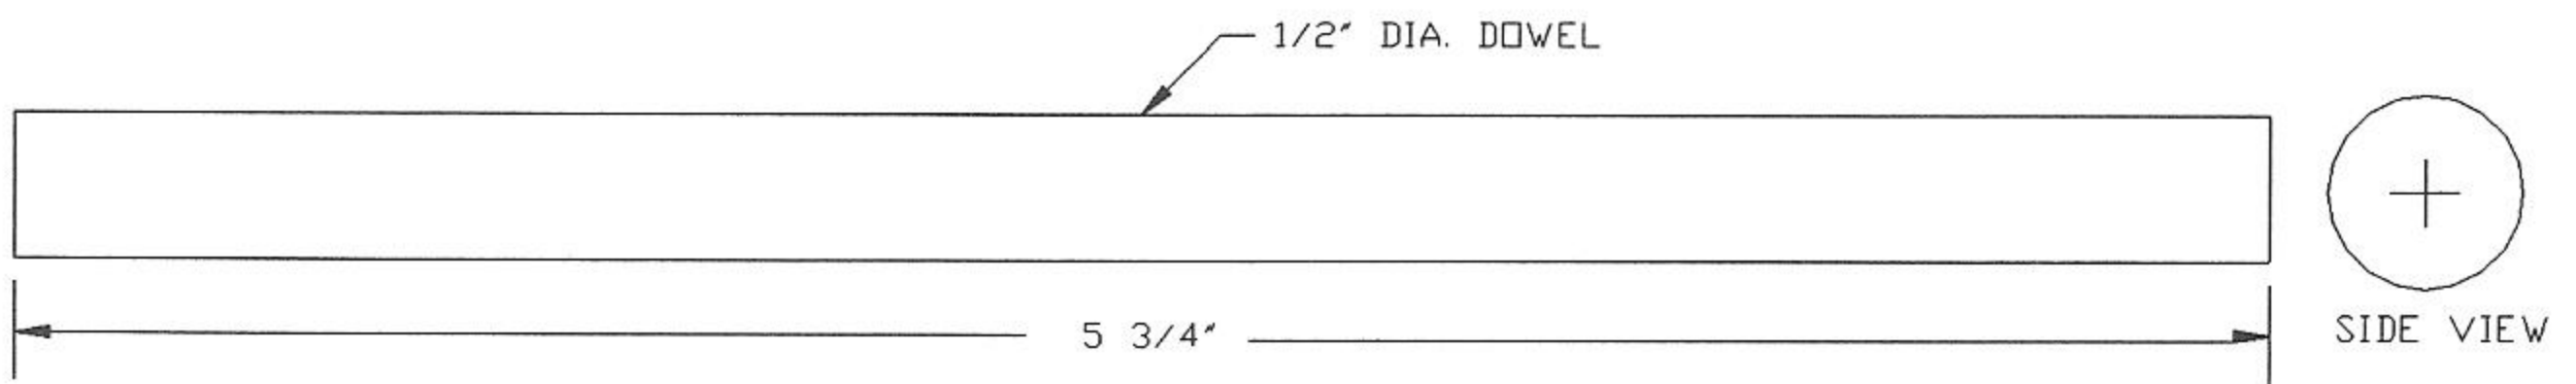


GS28

MAIN PIVOT PIN
(1 REQUIRED)

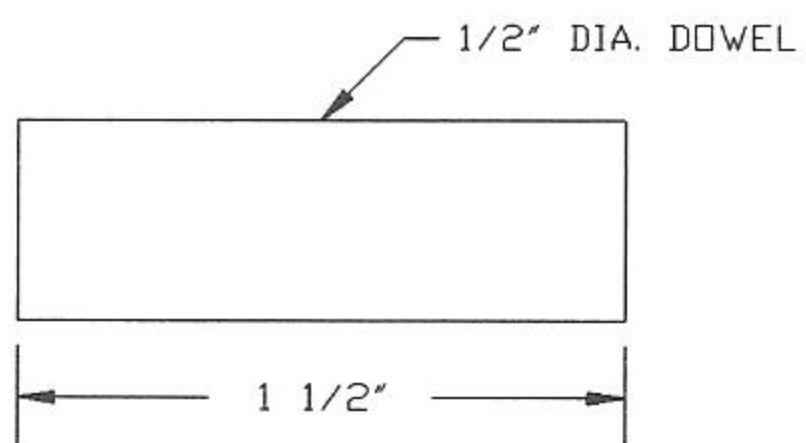


GS29

PINS
(2 REQUIRED)

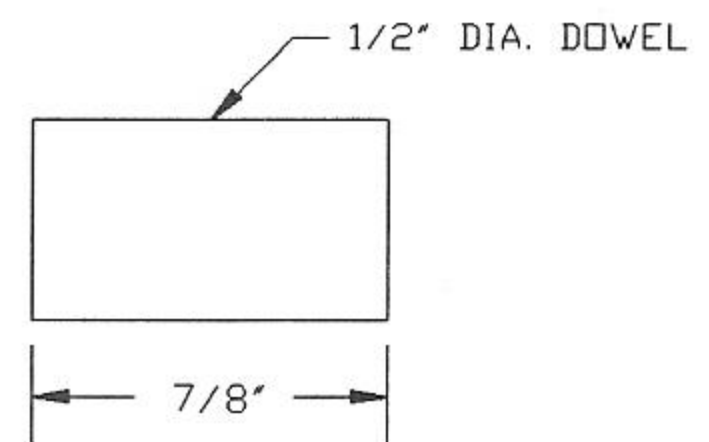


GS33

PIN
(1 REQUIRED)












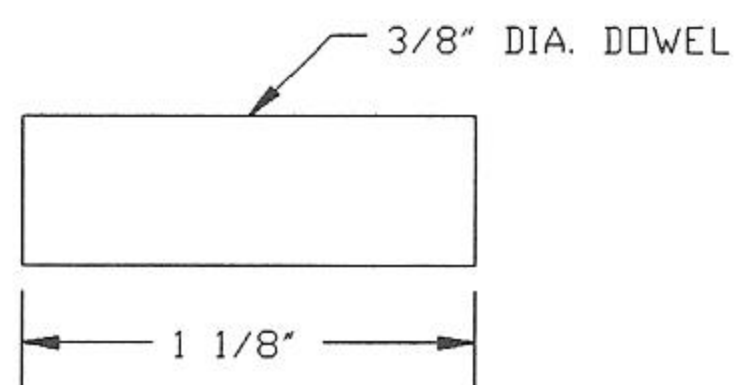


GS34


PINS
(2 REQUIRED)

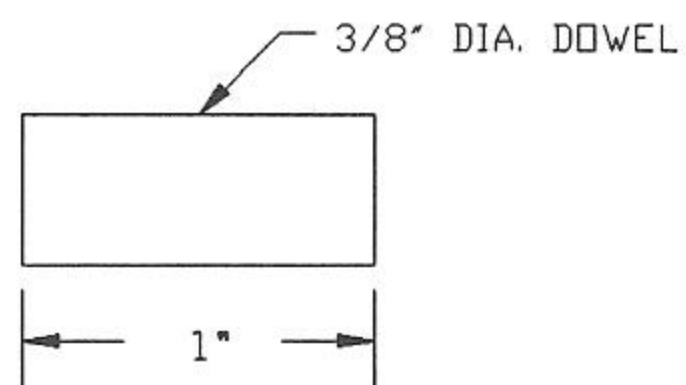

Grapple Skidder - Assembly Drawings

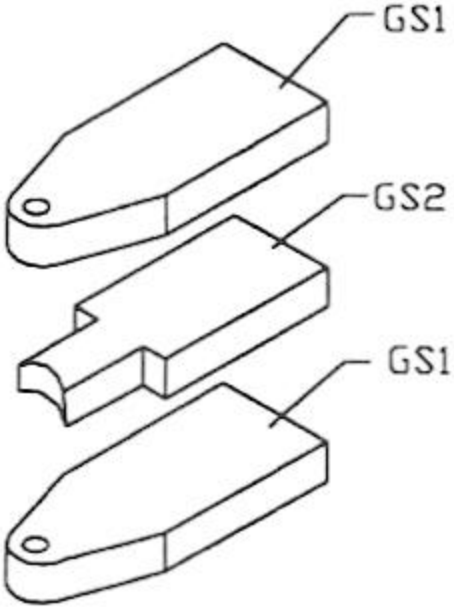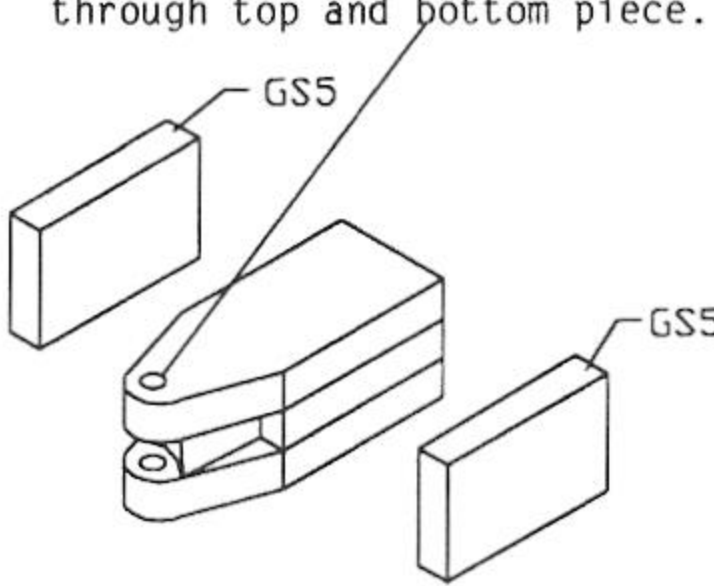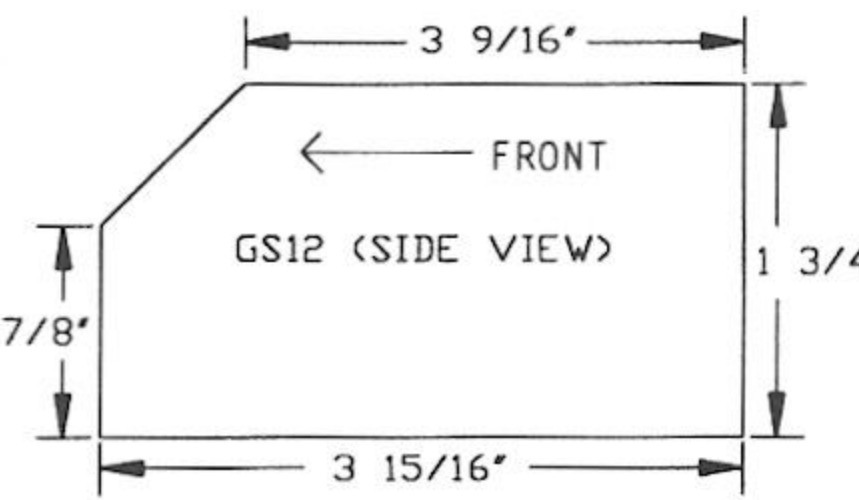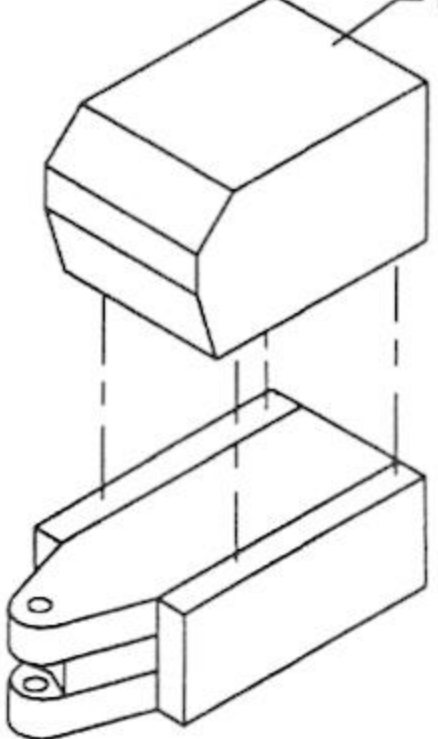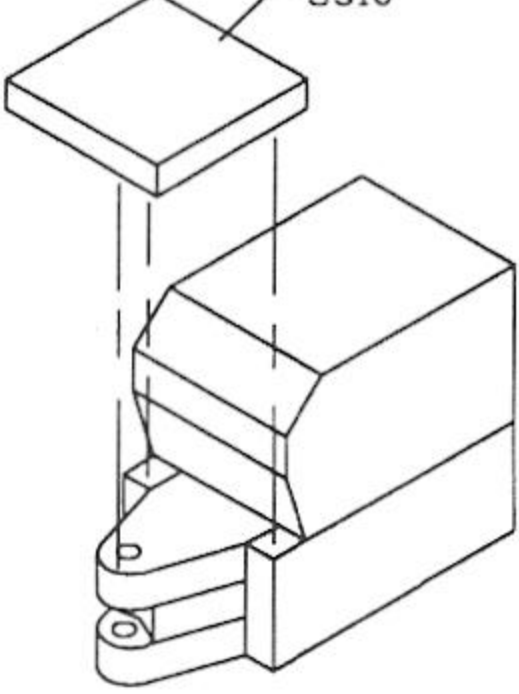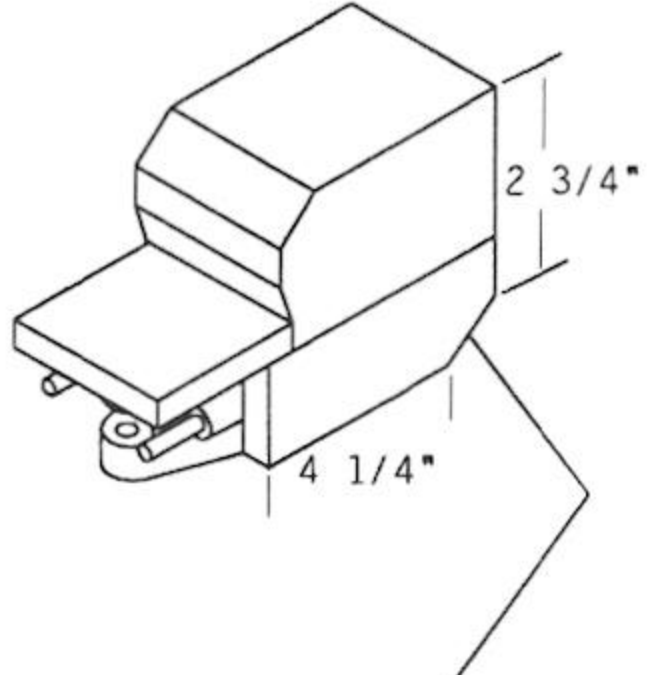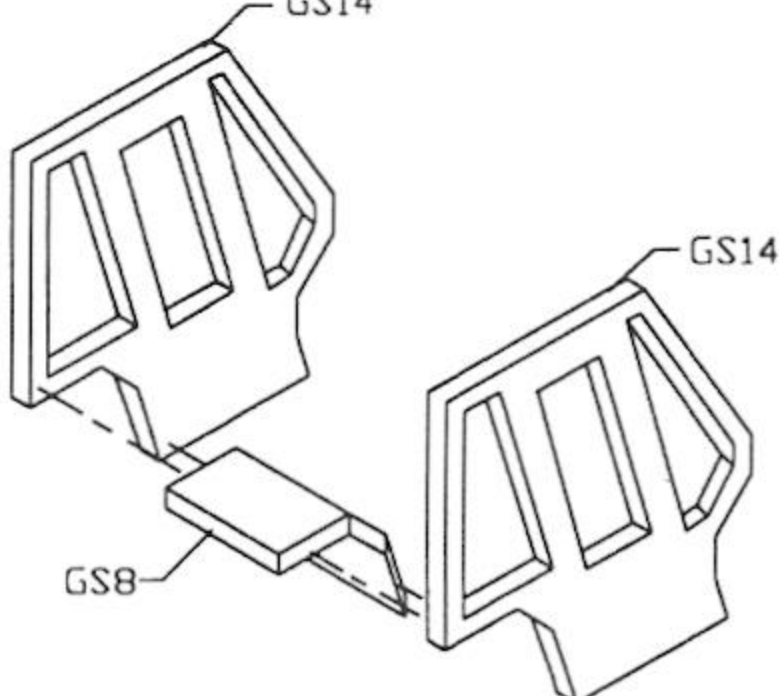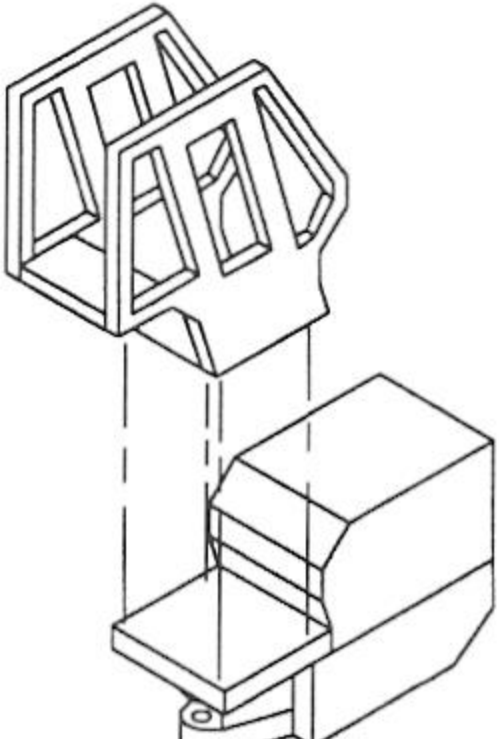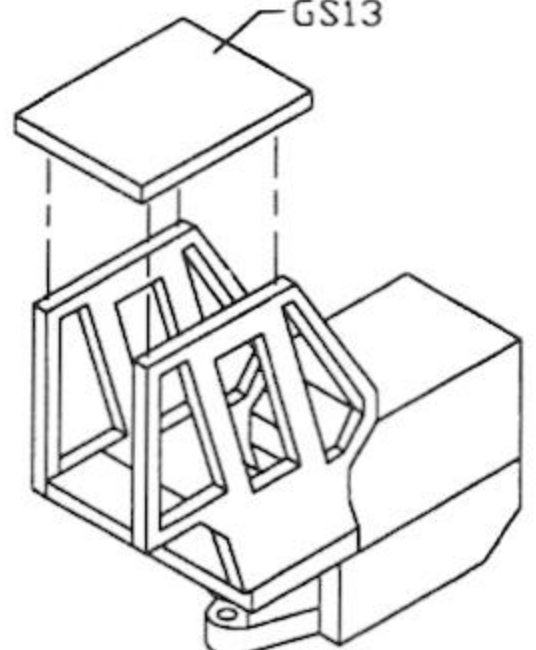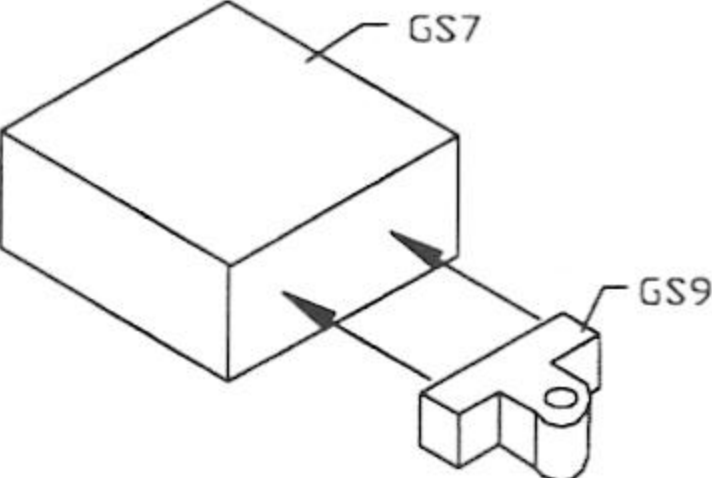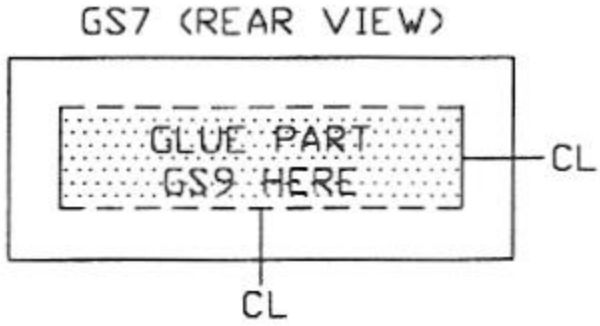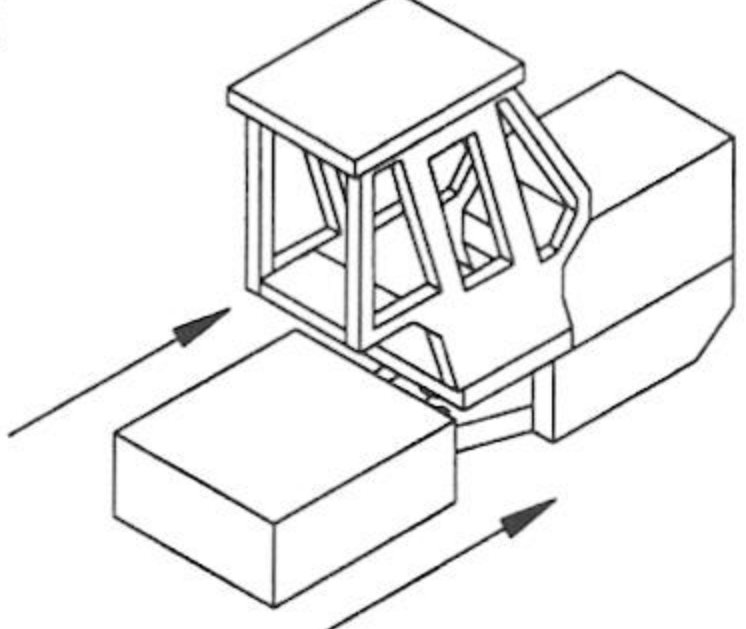
1  GS1 GS2 GS1 Glue mid-body GS2 between upper and lower body GS1.	2 Re-drill 31/64" dia. hole through top and bottom piece.  GS5 GS5 Re-drill hole, as shown. Glue sides GS5.	 3 9/16" FRONT GS12 (SIDE VIEW) 7/8" 3 15/16" 1 3/4" Sand angle on rear hood, as shown.
3  GS12 Glue rear hood GS12 onto body.	4  GS10 Glue cabin floor GS10.	5  2 3/4" 4 1/4" Sand angle (from side to side).
6  GS14 GS14 GS8 Glue front dash GS8, as shown.	7  Glue cabin onto floor.	8  GS13 Glue roof GS13 onto cabin.
9  GS7 GS9 Glue pivot plate GS9 onto body GS7. See next frame for exact location.	10  GS7 (REAR VIEW) GLUE PART GS9 HERE CL CL Where to glue pivot plate GS9 onto body GS7.	11  Slide front assembly into rear body.

12

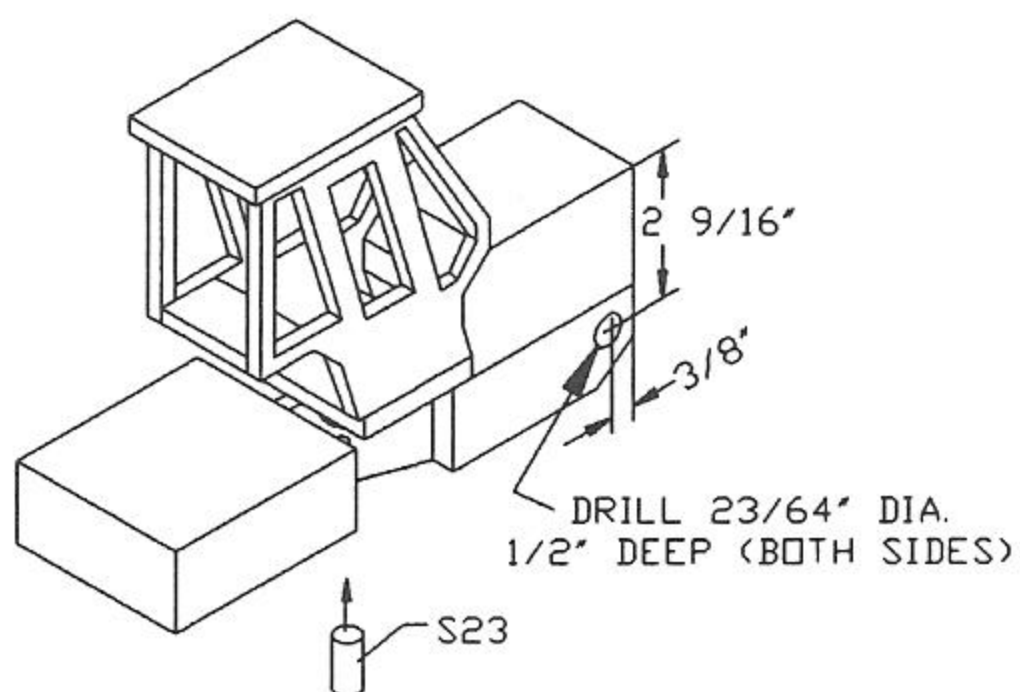


Insert main pivot pin GS28. Drill holes into body, as shown.

13

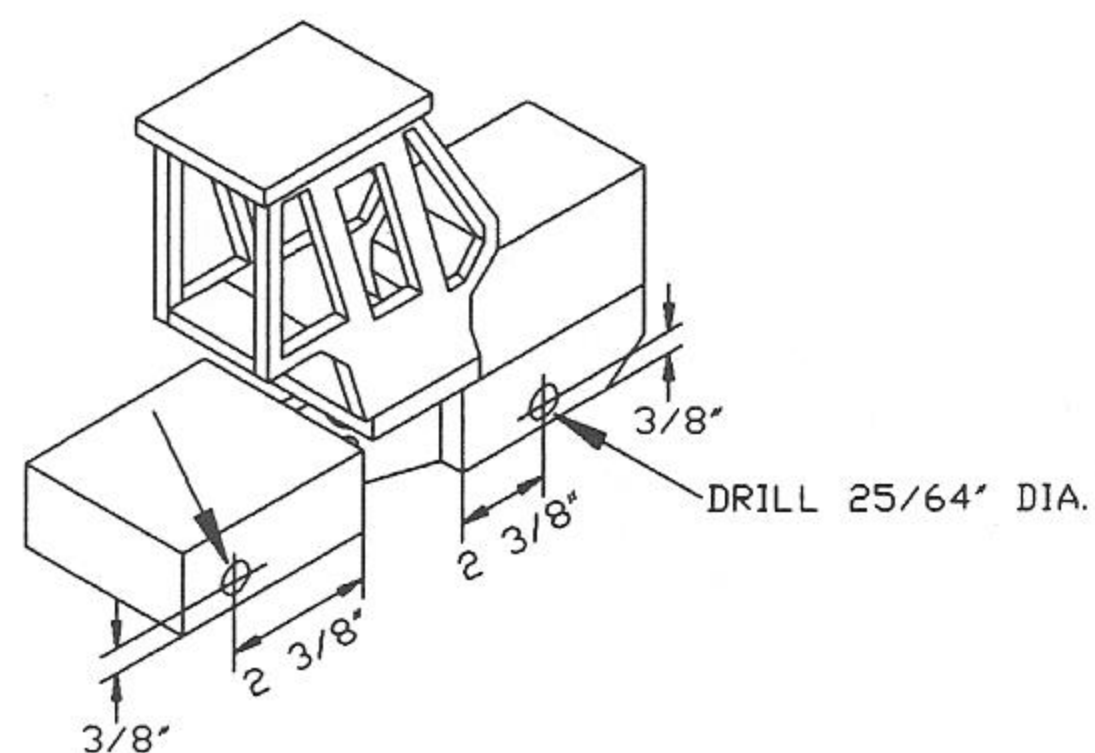


Drill holes into body, as shown.

14

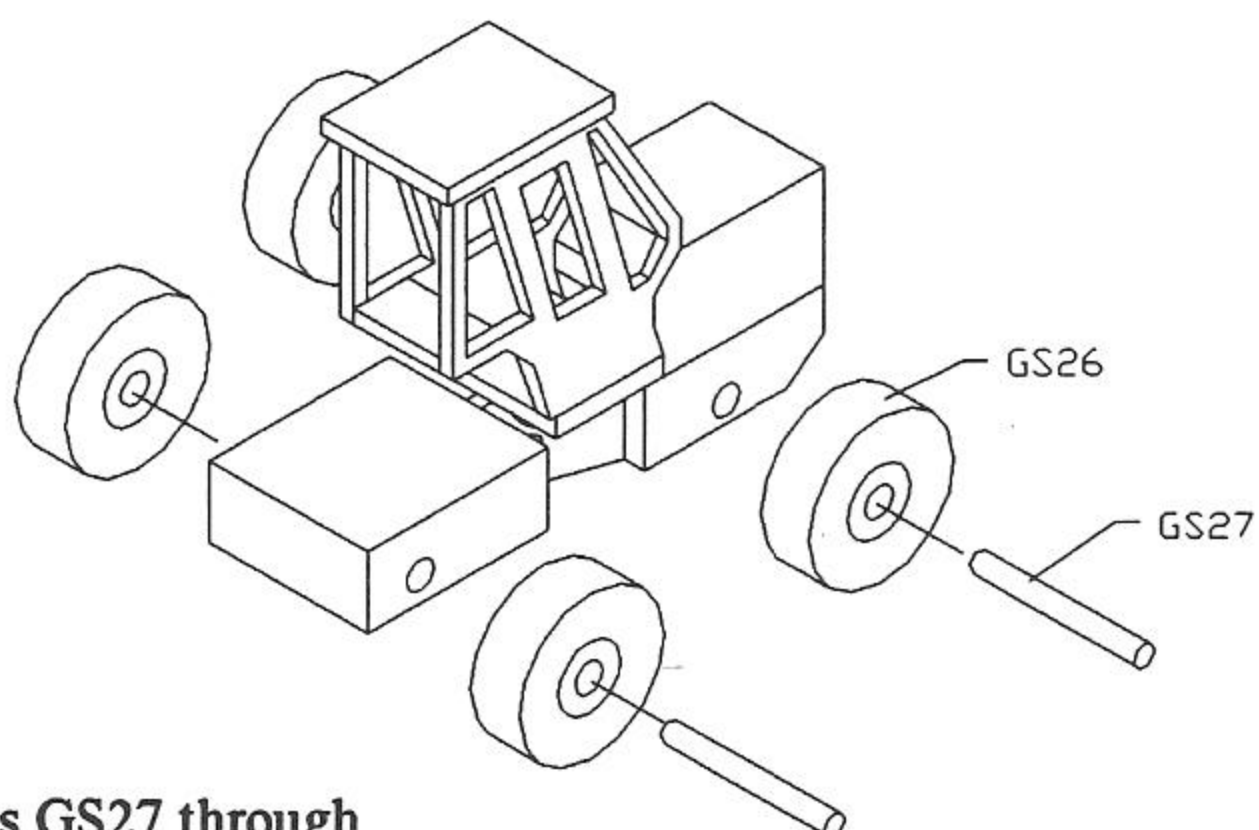


Insert wheel shafts GS27 through wheels GS26 and body.

15

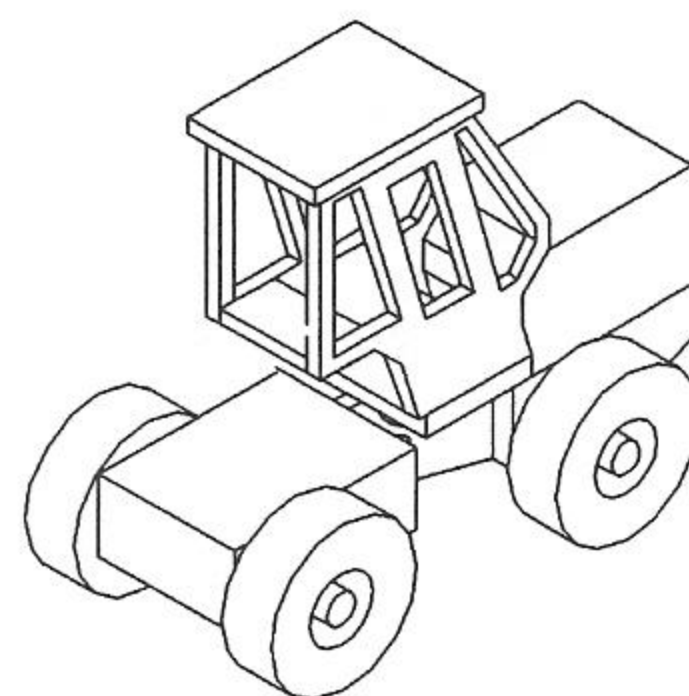


Start shovel assembly.

16

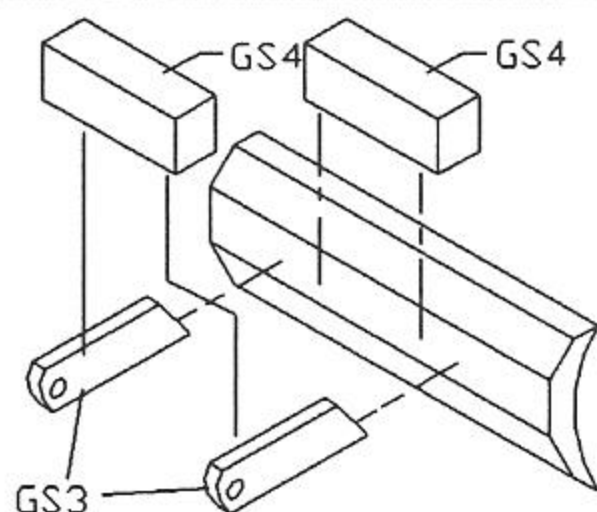


Glue levers GS3 and re-enforcing blocks GS4, as shown.

17

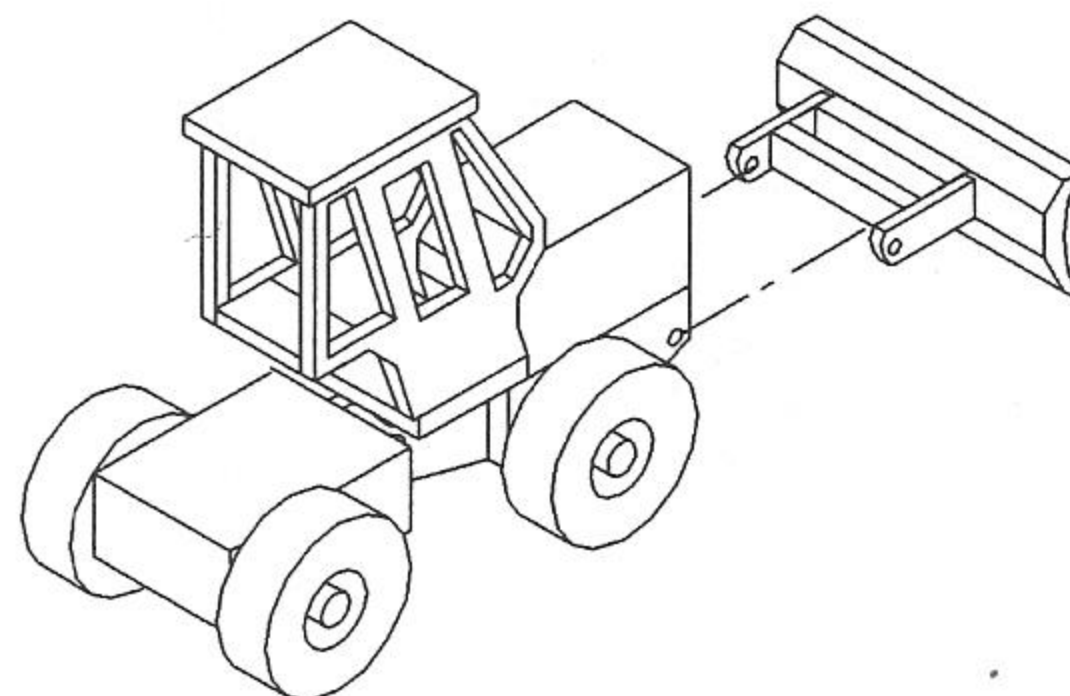


Slide shovel assembly, as shown.

18











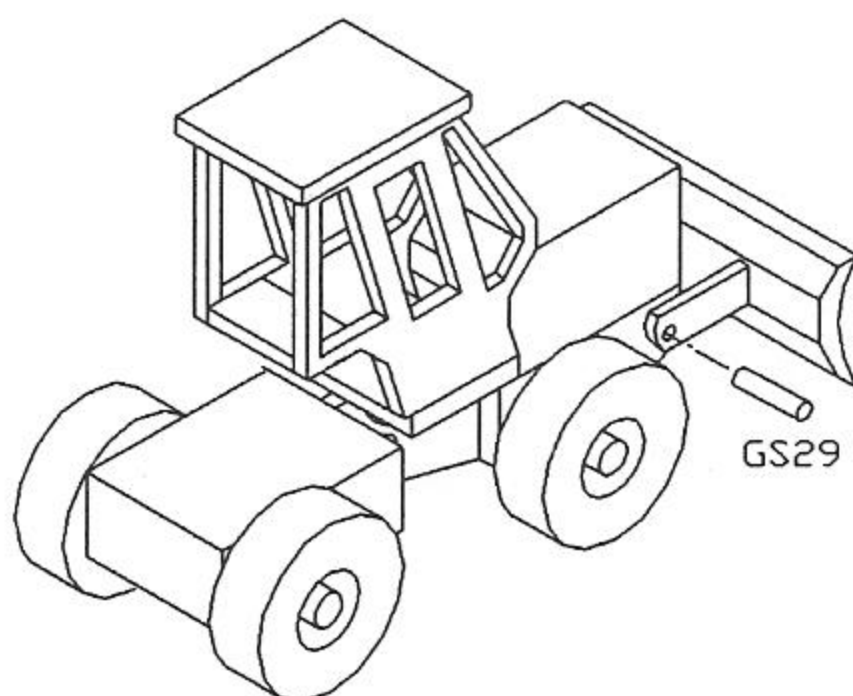


Insert pins GS29.


19

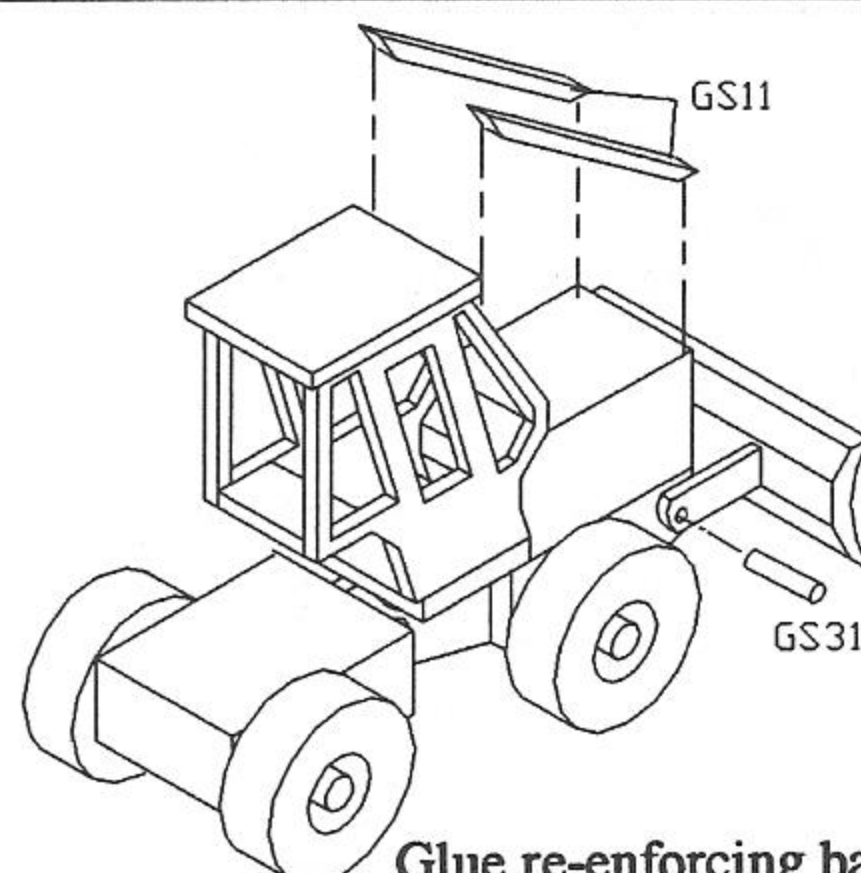

Glue re-enforcing bars GS11.

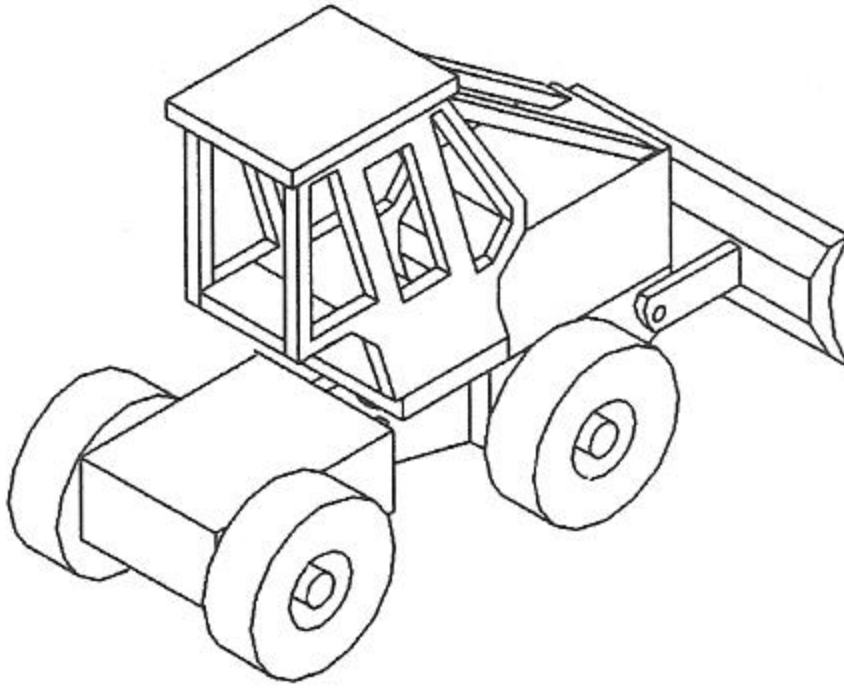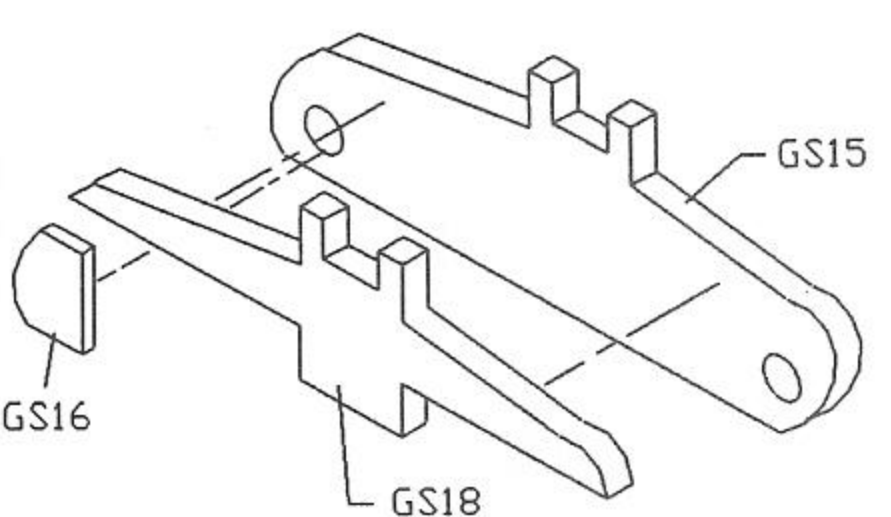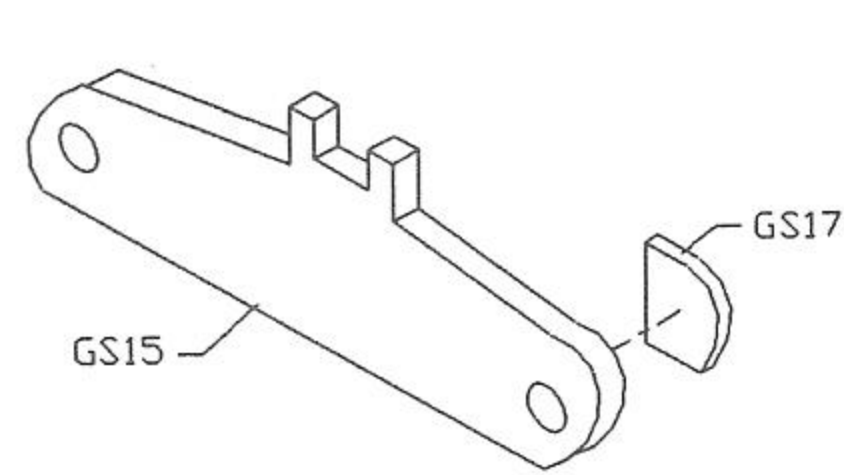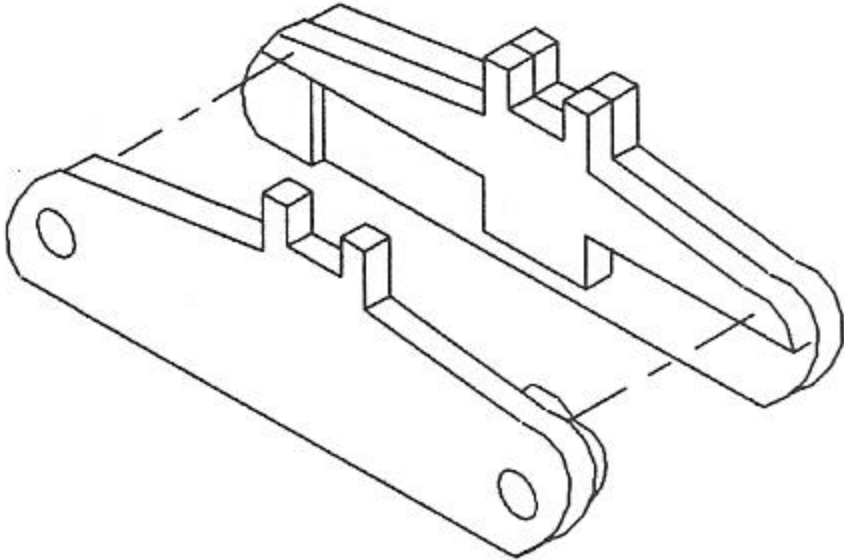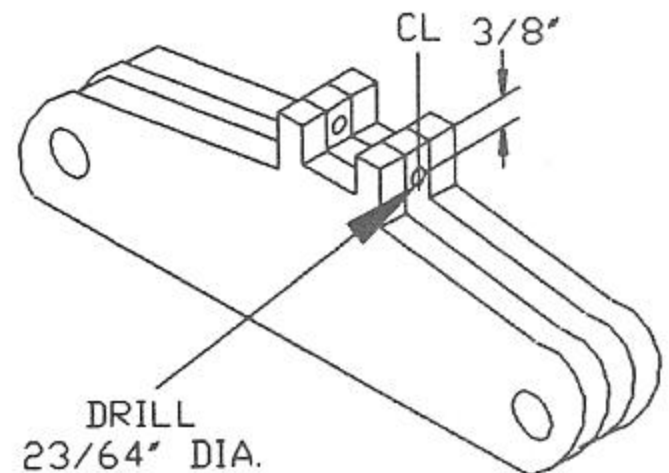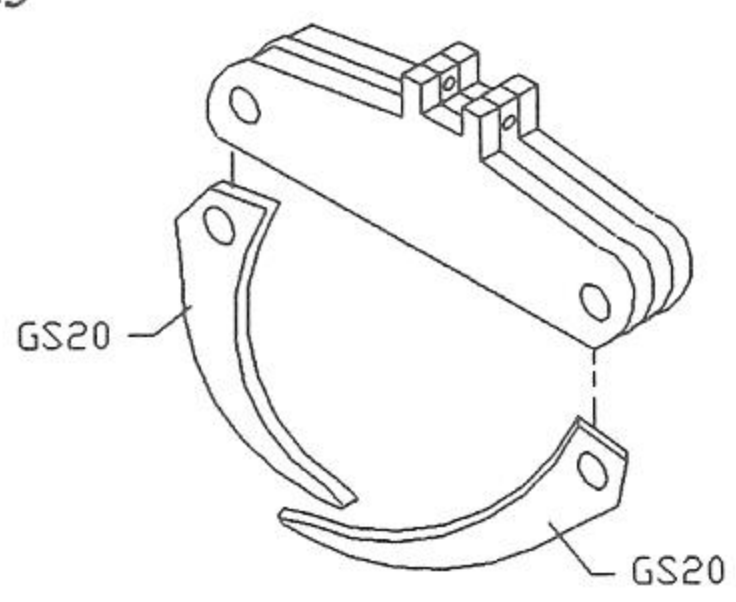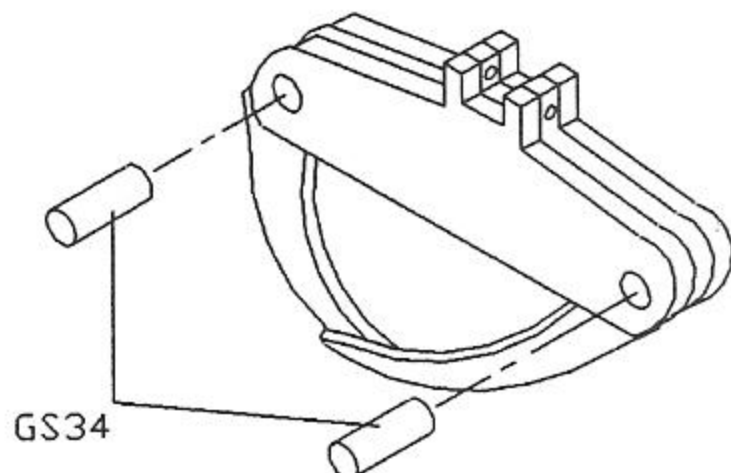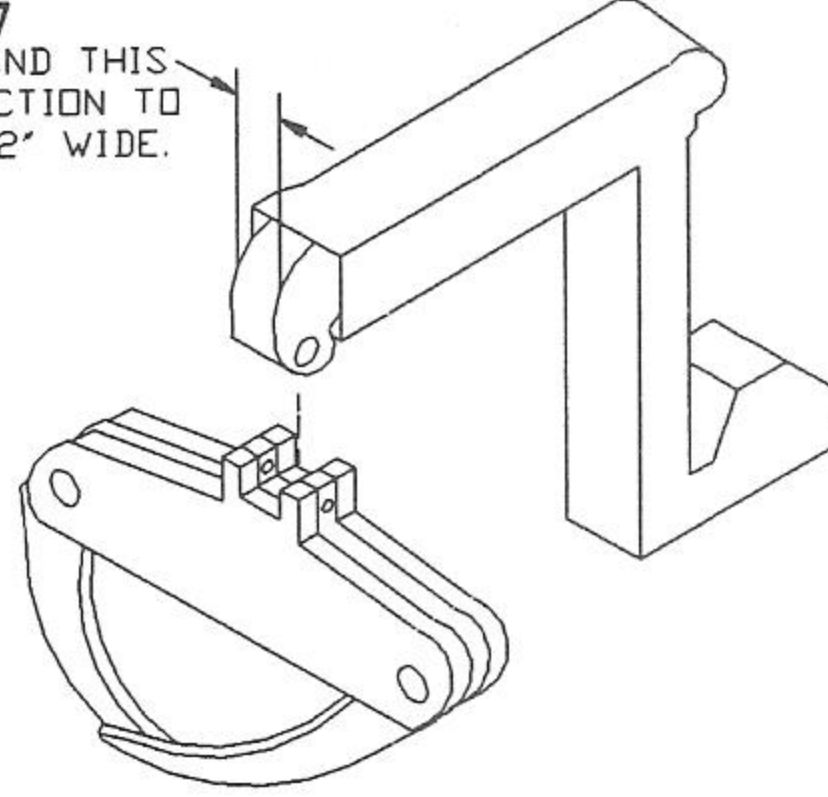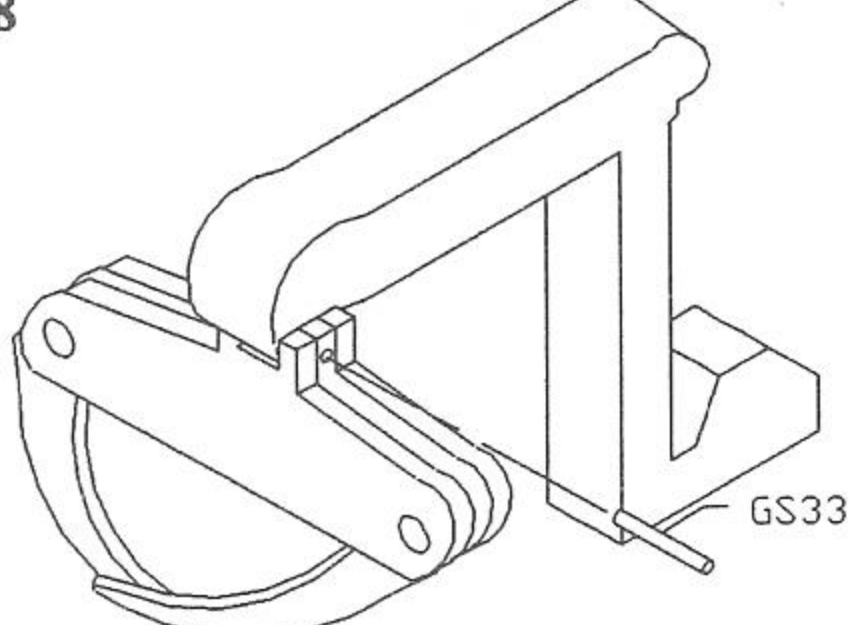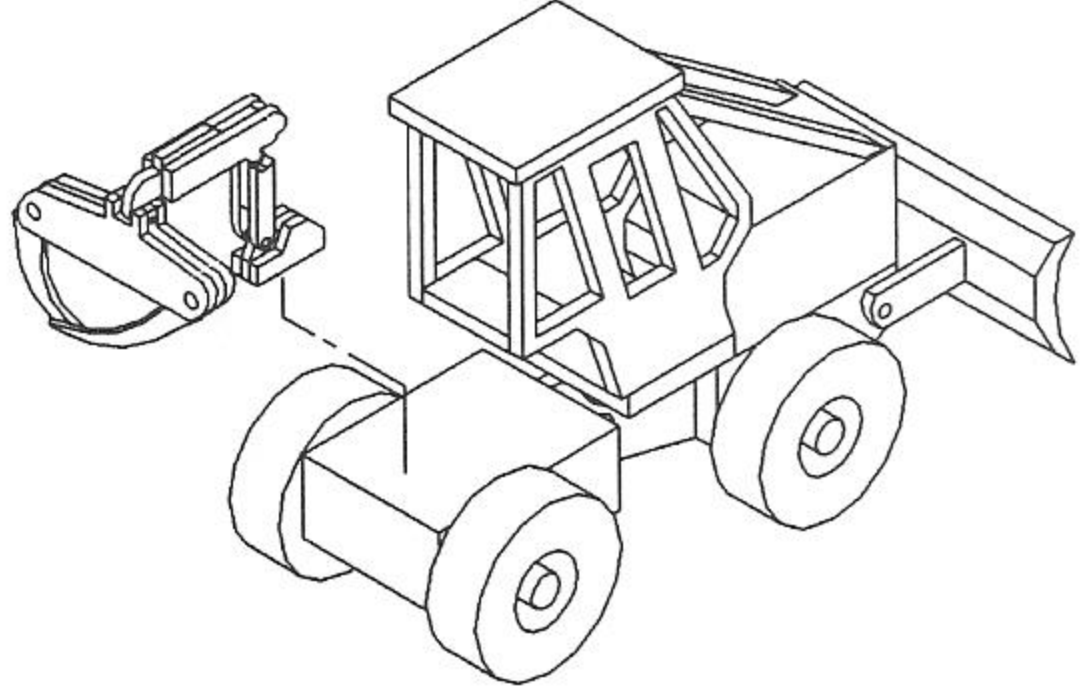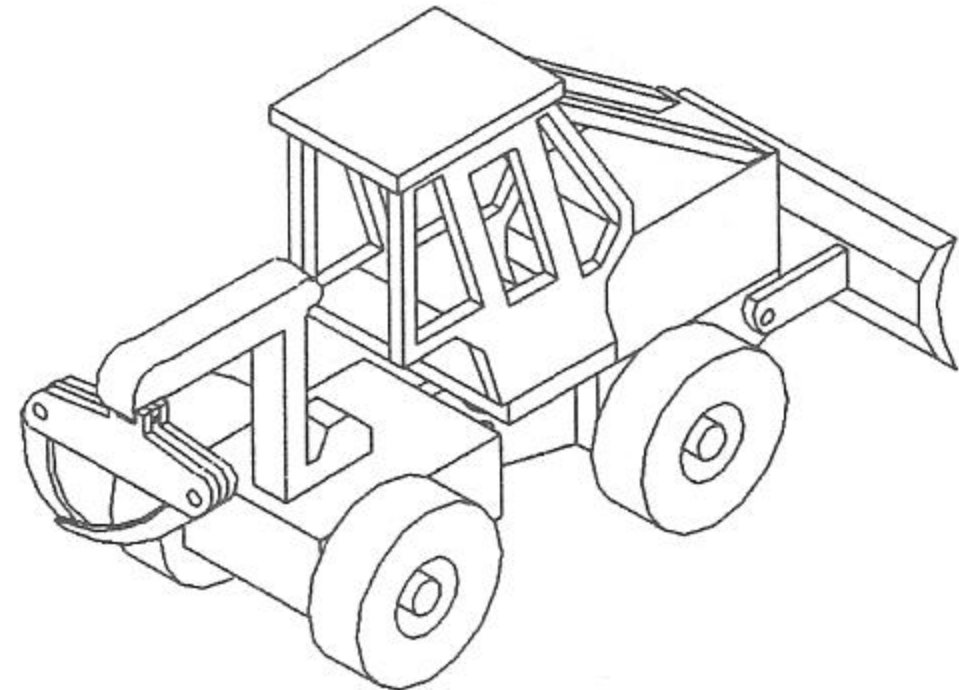20  Start gripper assembly.	21  Glue shim GS16, mid-section GS18 onto gripper body GS15.	22  Glue other shim GS17 onto other gripper body GS15.
23  Glue both assembly's together.	24  DRILL 23/64" DIA. CL 3/8" Drill hole, as shown.	25  Slide grippers GS20 into gripper body assembly.
26  Insert pins GS34.	27  SAND THIS SECTION TO 1/2" WIDE. Sand part, as shown. Slide in assembly.	28  Insert pins GS33.
29  Glue gripper assembly onto body.	30  Your model should now be complete.	

BACKHOE

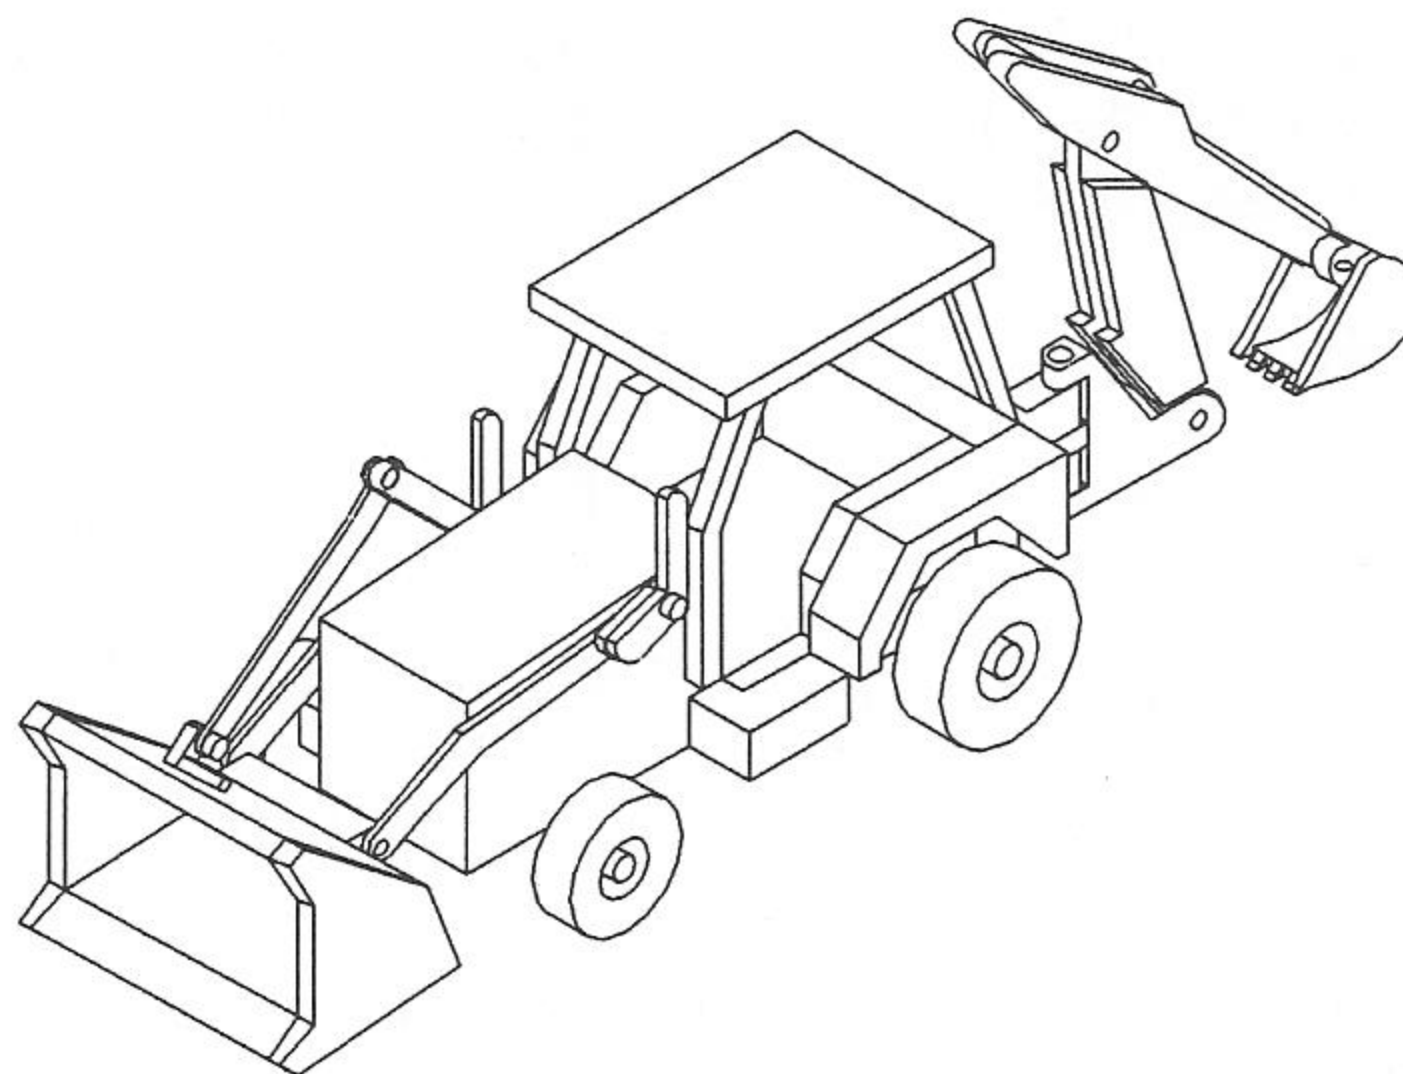


General Instructions - Backhoe

- 1- Start by cutting materials needed by following the list of materials, paying attention to the rough and finished size. **Identify the parts as they are cut.**

Please note: Different types of wood can be used for the various parts. It is suggested, however, that hard wood be used, since many of the parts would be much too fragile if using soft wood. We have used a combination of pine, maple and oak to give the models a nice contrast!

- 2- Remove the full-size patterns found in the appendix. Cut them out, leaving approximately $1/16"$ all around, and place on the proper piece of wood. Patterns can be secured to wood using either spray adhesive or rubber cement. If using the latter, cut and sand the part first to finished size. If drilling is required, mark the hole by inserting a scribe or nail through the pattern into the wood. Remove the pattern before drilling.

You should have no trouble determining which surface to attach most of the patterns. Some parts, however, can be confusing since the pattern could fit on more than one surface. The drawings below indicate exactly which surface to attach the patterns for these parts.

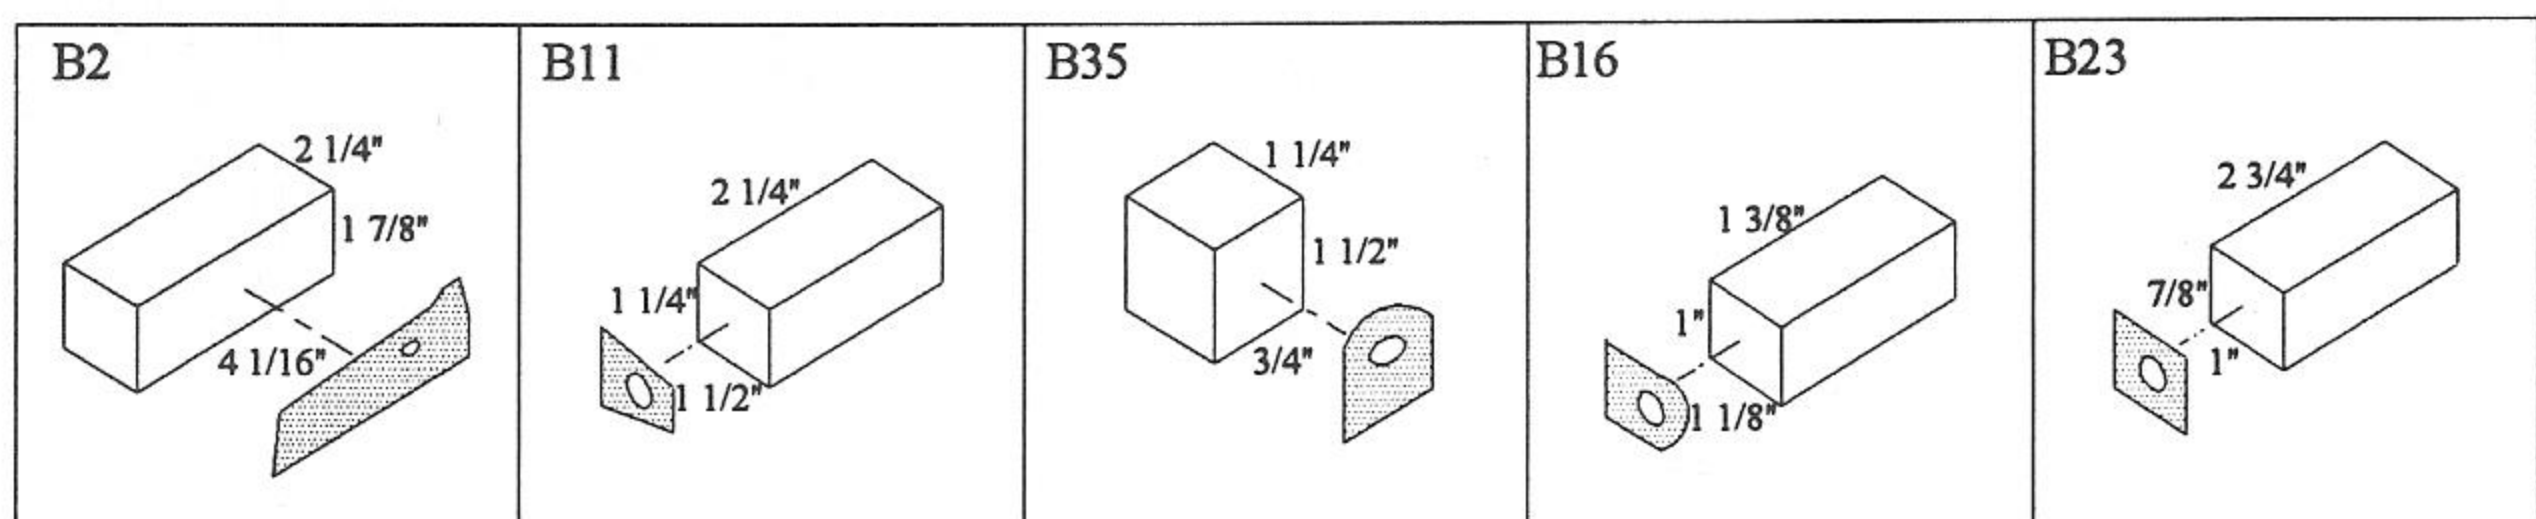

- 3- Look at the full-size drawing sheets to finish part B3.
- 4- Parts B11, B35, B14, B16, B19 and B23 will need additional cuts and details, please refer to the additional information pages, to complete these parts.
- 5- Using maple dowels, make all pins, shafts, etc.
- 6- Follow the assembly drawings to complete your model.

List of Materials - Backhoe

Part	T	W	L	Material	Qty.	*
B1	1"	2 1/4"	7 1/2"	pine	1	F
B2	1 7/8"	2 1/4"	4 1/16"	pine	1	F
B3	5/8"	2 3/4"	2 3/8"	pine	1	F
B4	1/4"	1"	3 3/8"	pine	2	F
B5	1"	1 1/2"	3 5/8"	pine	2	R
B6	3/8"	4"	5"	oak	2	R
B7	3/8"	1 1/4"	2 3/4"	maple	1	R
B8	3/8"	3 1/2"	4 1/4"	pine	1	F
B9	1/4"	2"	5 1/2"	pine	1	F
B10	1/4"	1 1/2"	6 1/8"	pine	1	F
B11	1 1/4"	1 1/2"	2 1/4"	maple	1	F
B12	1/4"	2 5/8"	5 1/2"	pine	2	F
B13	1/4"	2 5/8"	2 3/4"	pine	1	R
B14	1"	2 1/2"	2 1/2"	maple	1	R
B15	1"	1 1/2"	1 3/8"	oak	2	R
B16	7/8"	1 1/4"	1 3/8"	maple	1	F

Part	T	W	L	Material	Qty.	*
B17	3/8"	1 3/4"	6 5/8"	maple	2	R
B18	1/4"	2"	3 1/8"	maple	2	R
B19	1 3/4"	2 5/8"	3 1/2"	maple	1	R
B20	1/4"	1 3/4"	4 1/2"	maple	2	R
B21	3/8"	1 7/8"	5 1/2"	maple	1	R
B23	7/8"	1"	2 3/4"	maple	1	F
B24	1/4"	1 1/2"	3"	oak	2	R
B25	1 1/4"	3 1/8" DIA.		oak	2	F
B26	1"	1 7/8" DIA.		oak	2	F
B27	1/4"	1 1/2"	4 5/8"	maple	2	R
B28	3/8"	1 1/2"	6 1/4"	maple	1	R
B33	1/4"	1"	6 3/4"	maple	1	R
B34	3/8"	2 3/4"	2 3/4"	maple	1	R
B35	1"	1 1/4"	1 3/8"	maple	1	F
B36	3/8"	3"	3 1/4"	maple	1	R

T = Thickness

W = Width

L = Length

Instructions:


R = Rough size







F = Finished size

R= Rough sizes, the material is cut oversized so you have ample room to apply the pattern on the surface. Sanding is not required at this point.


F = Finished Size: Cut and sand parts to finished size.

Full-Sized Patterns: Set One

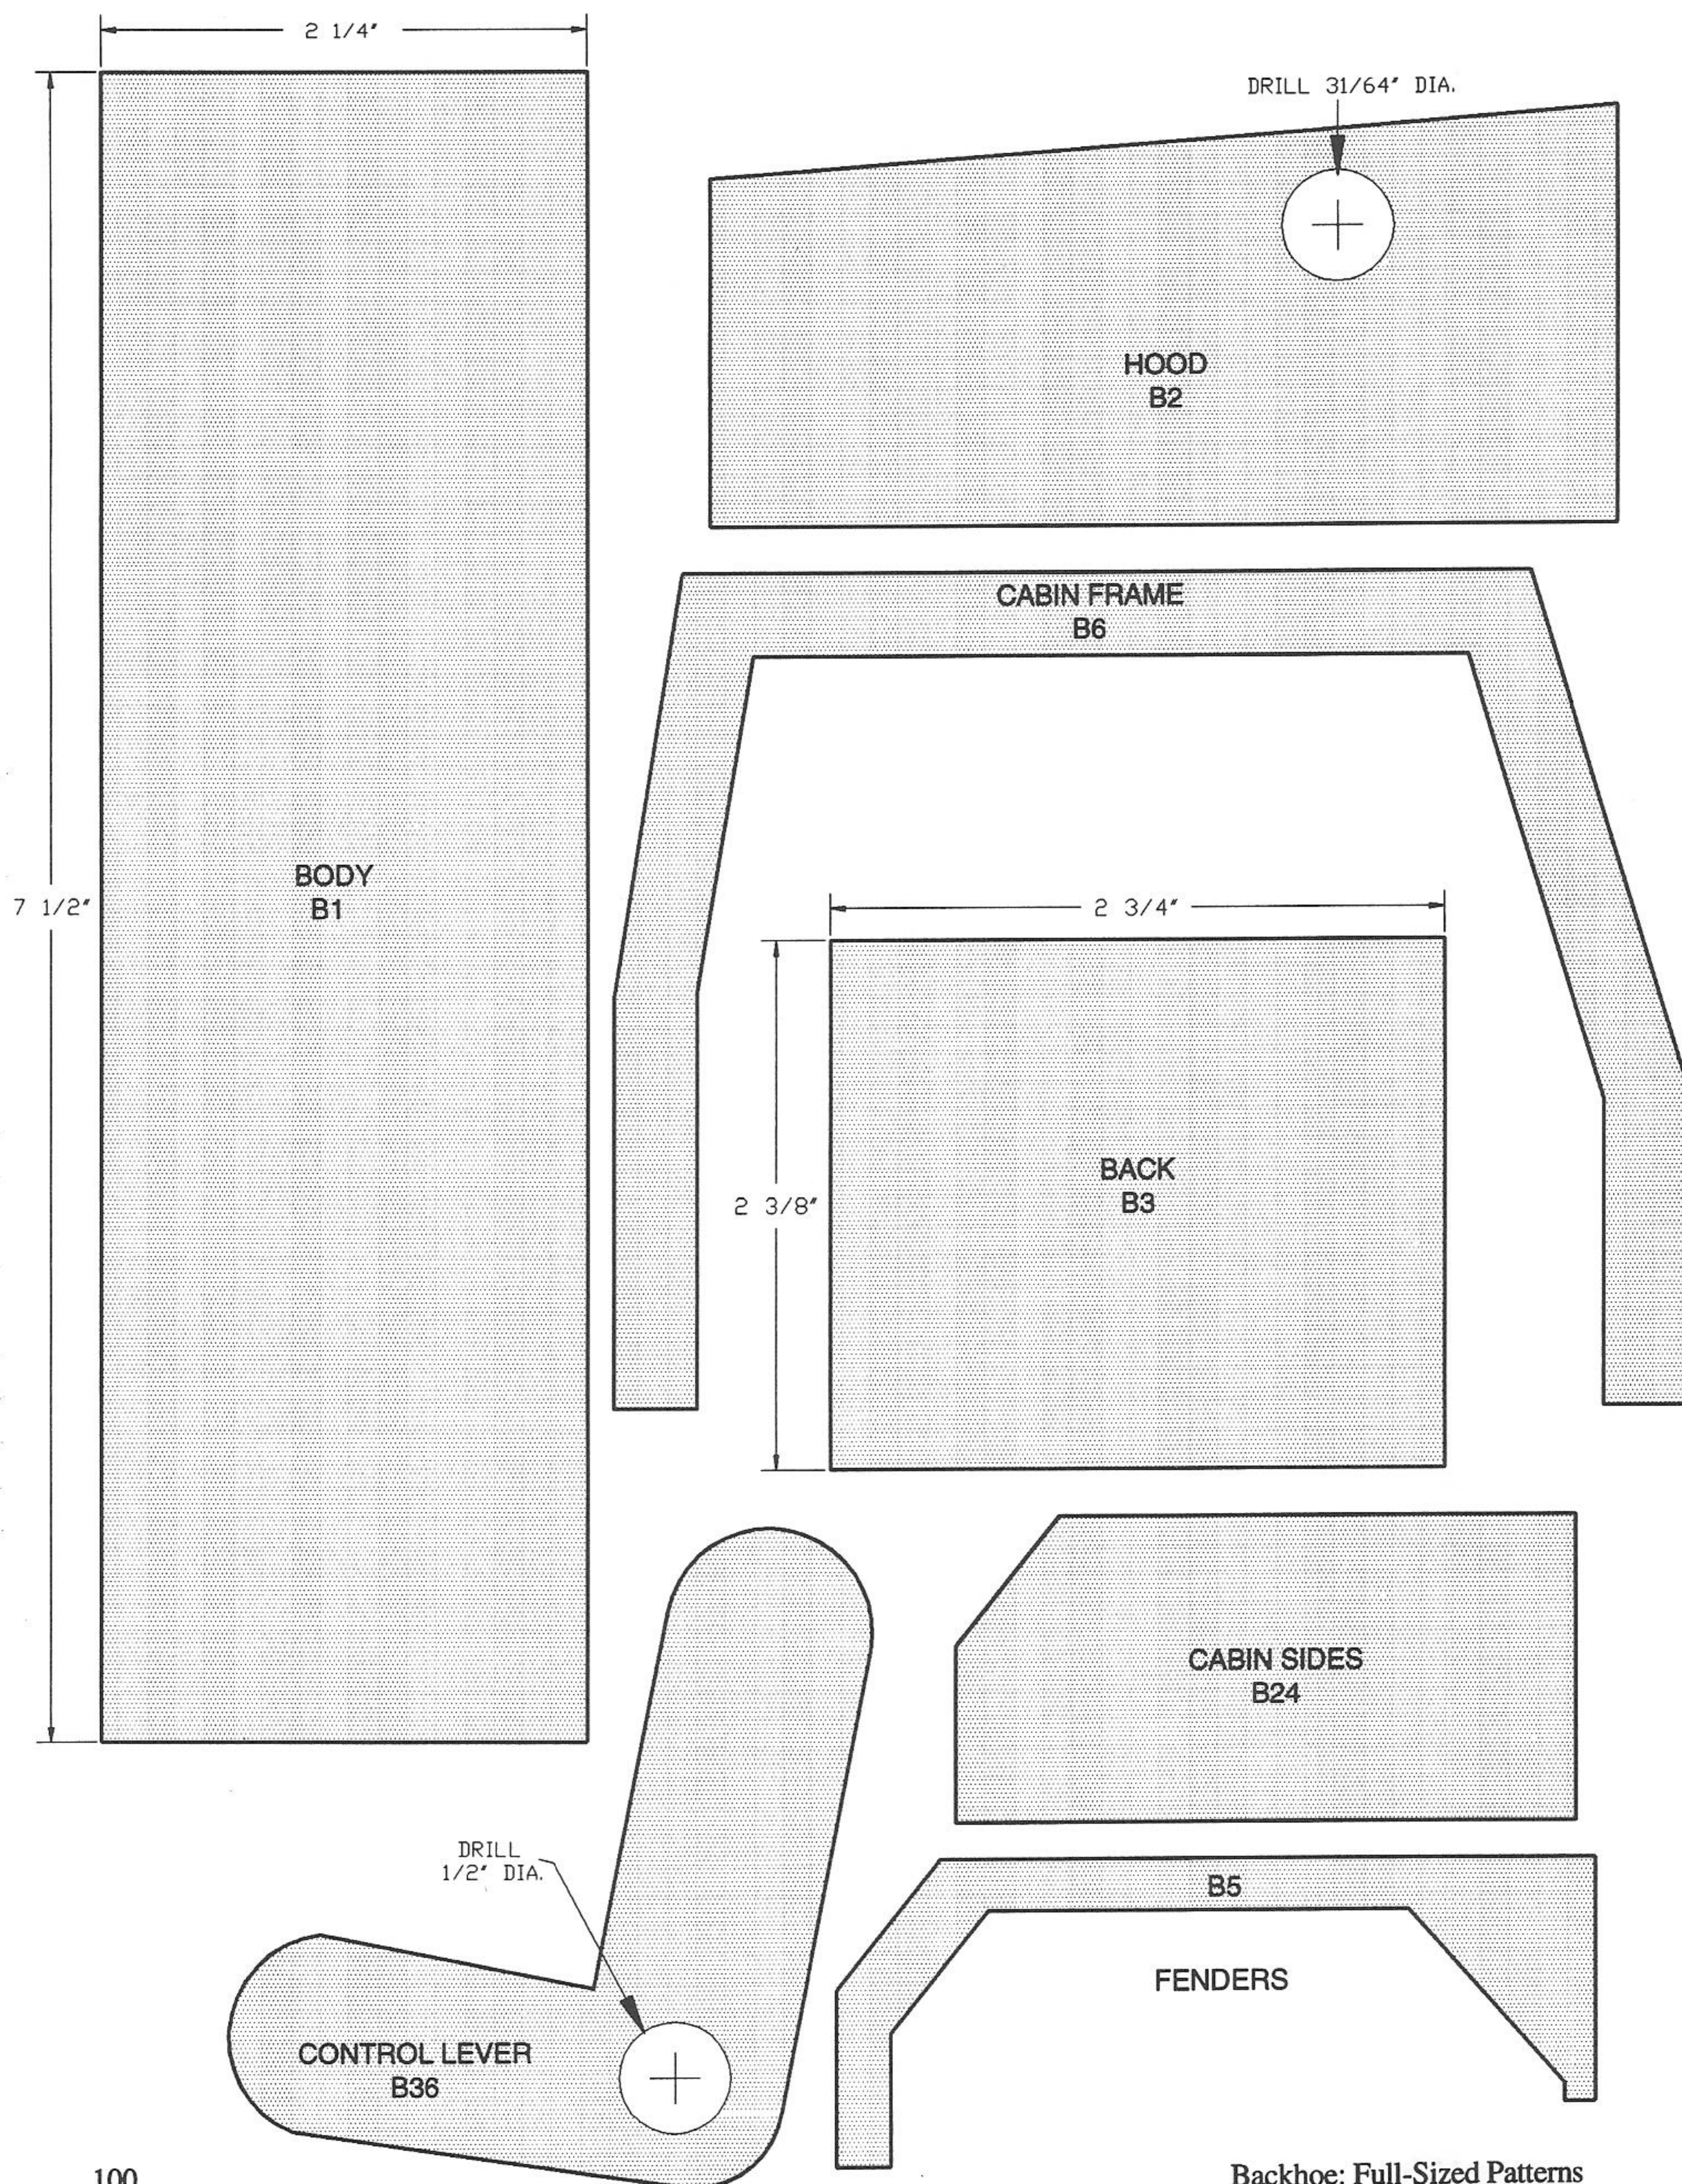


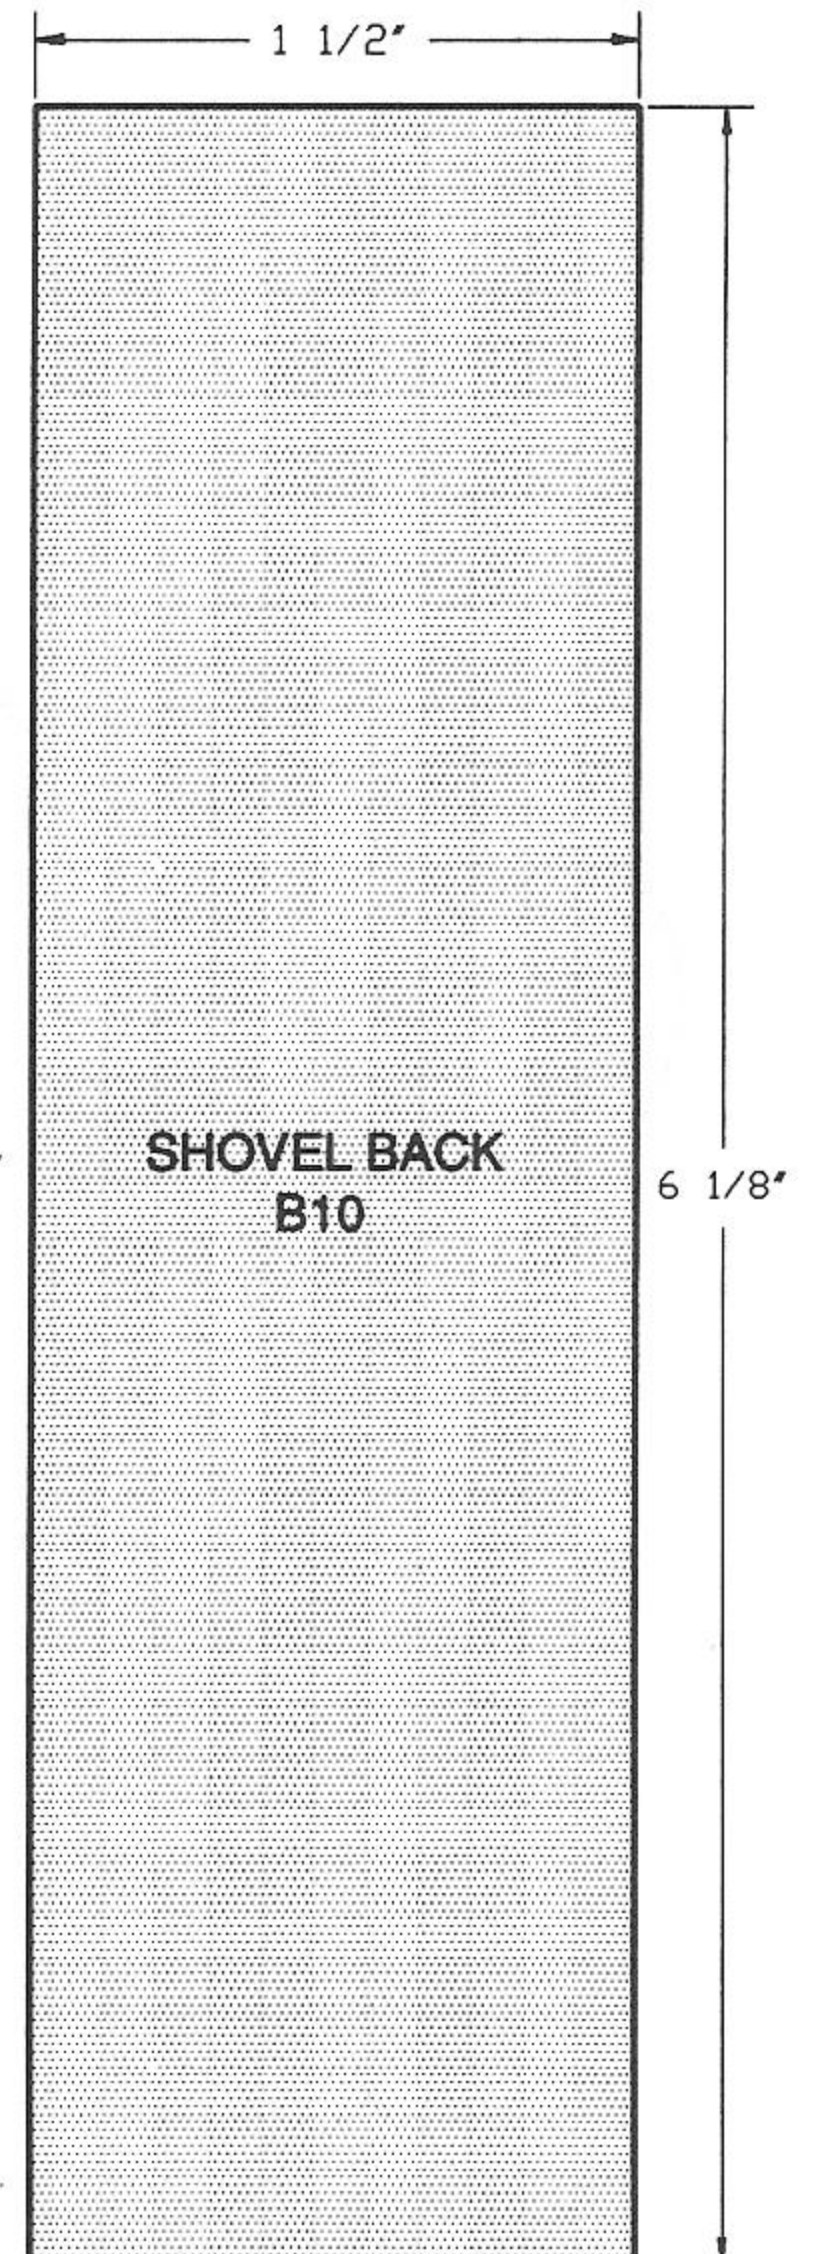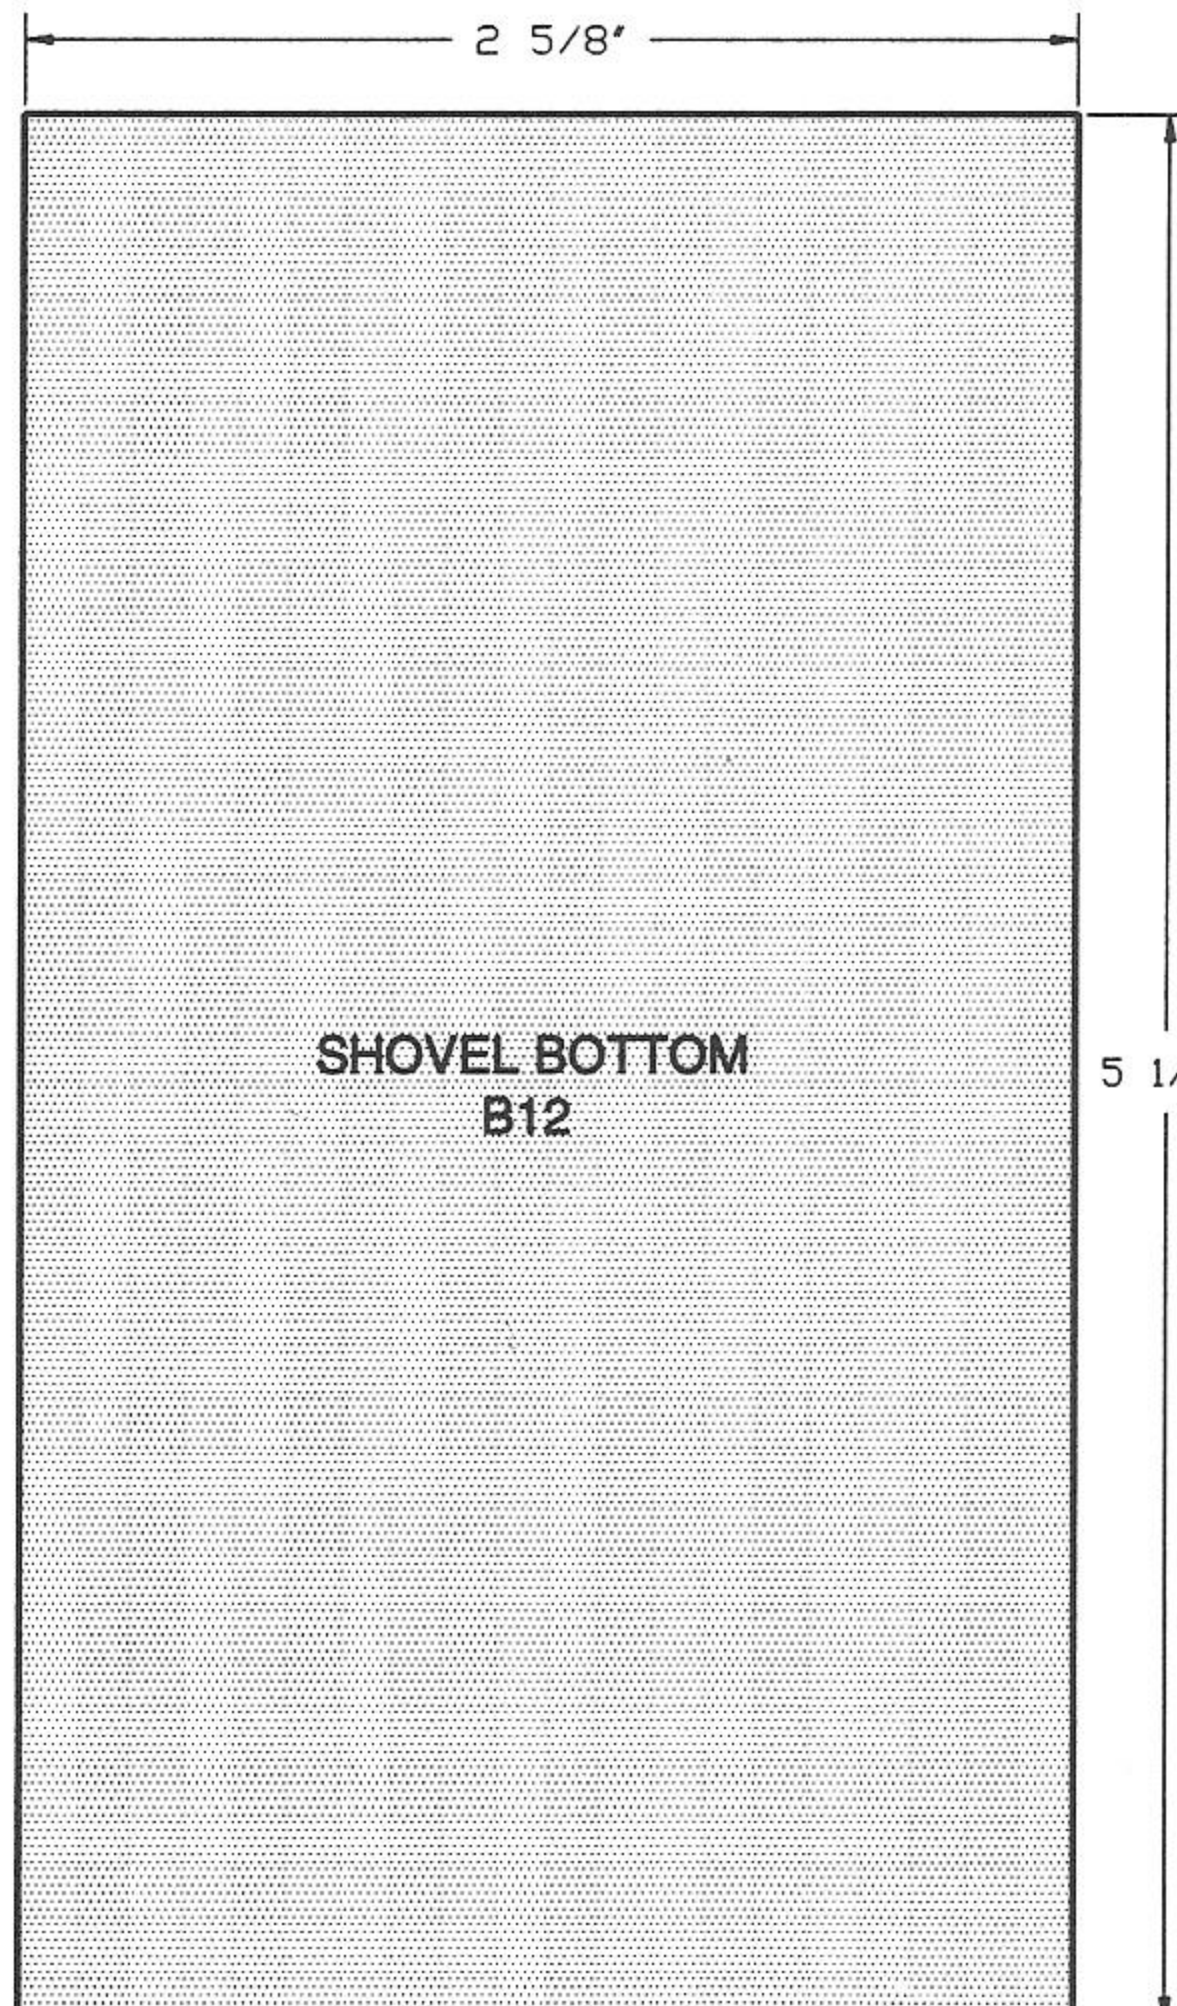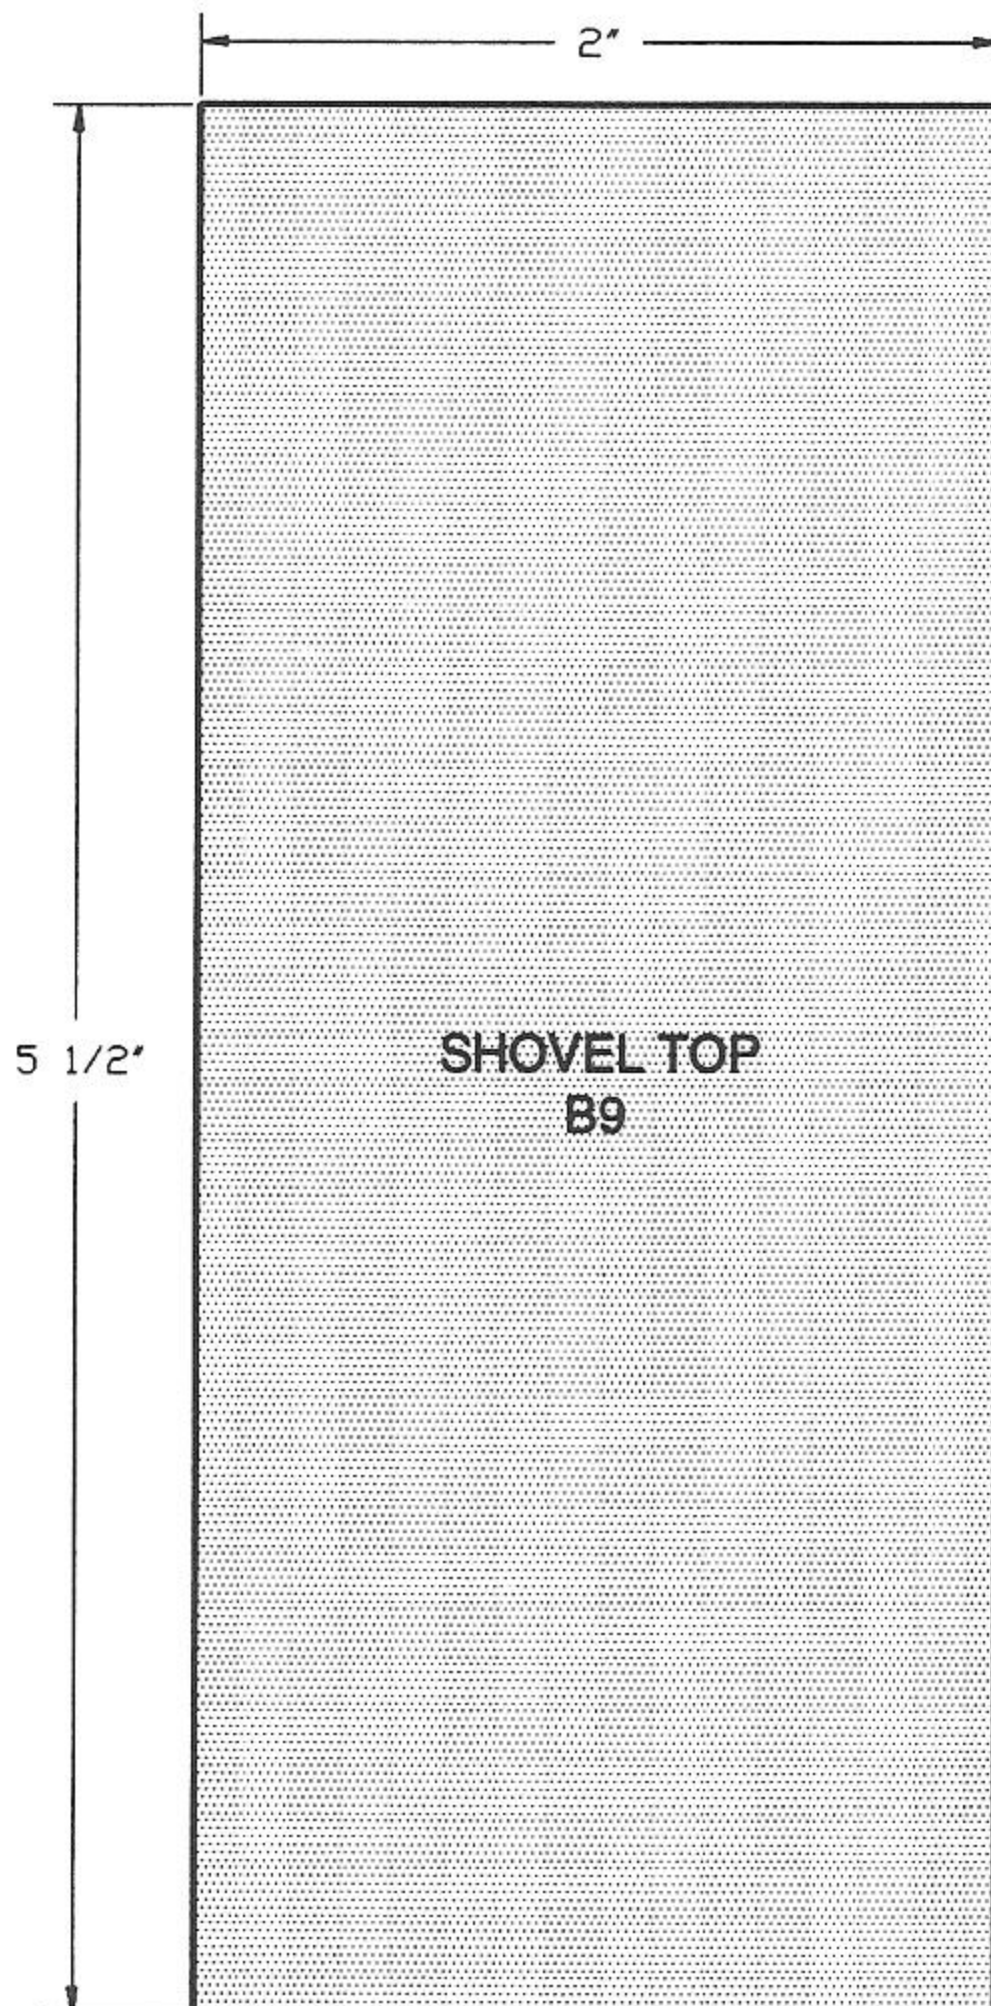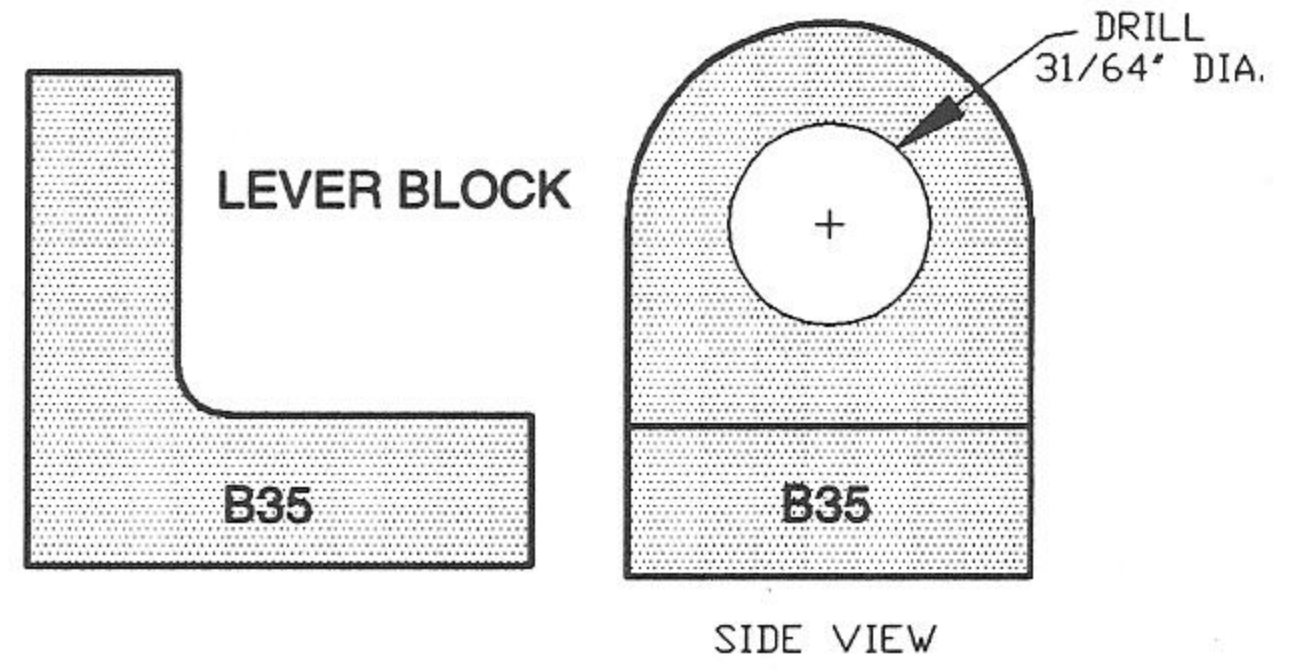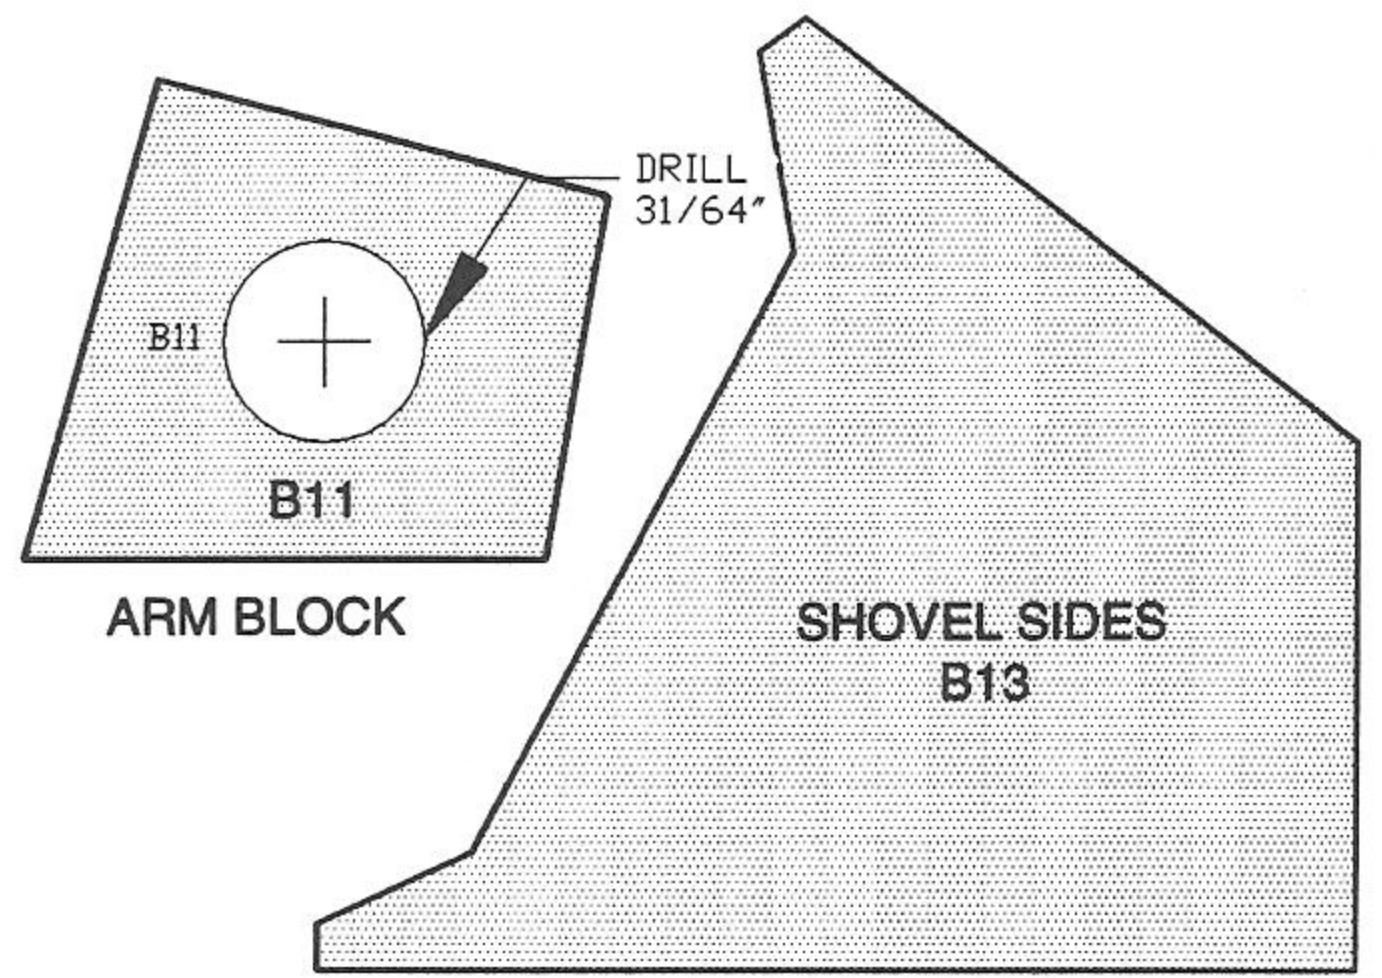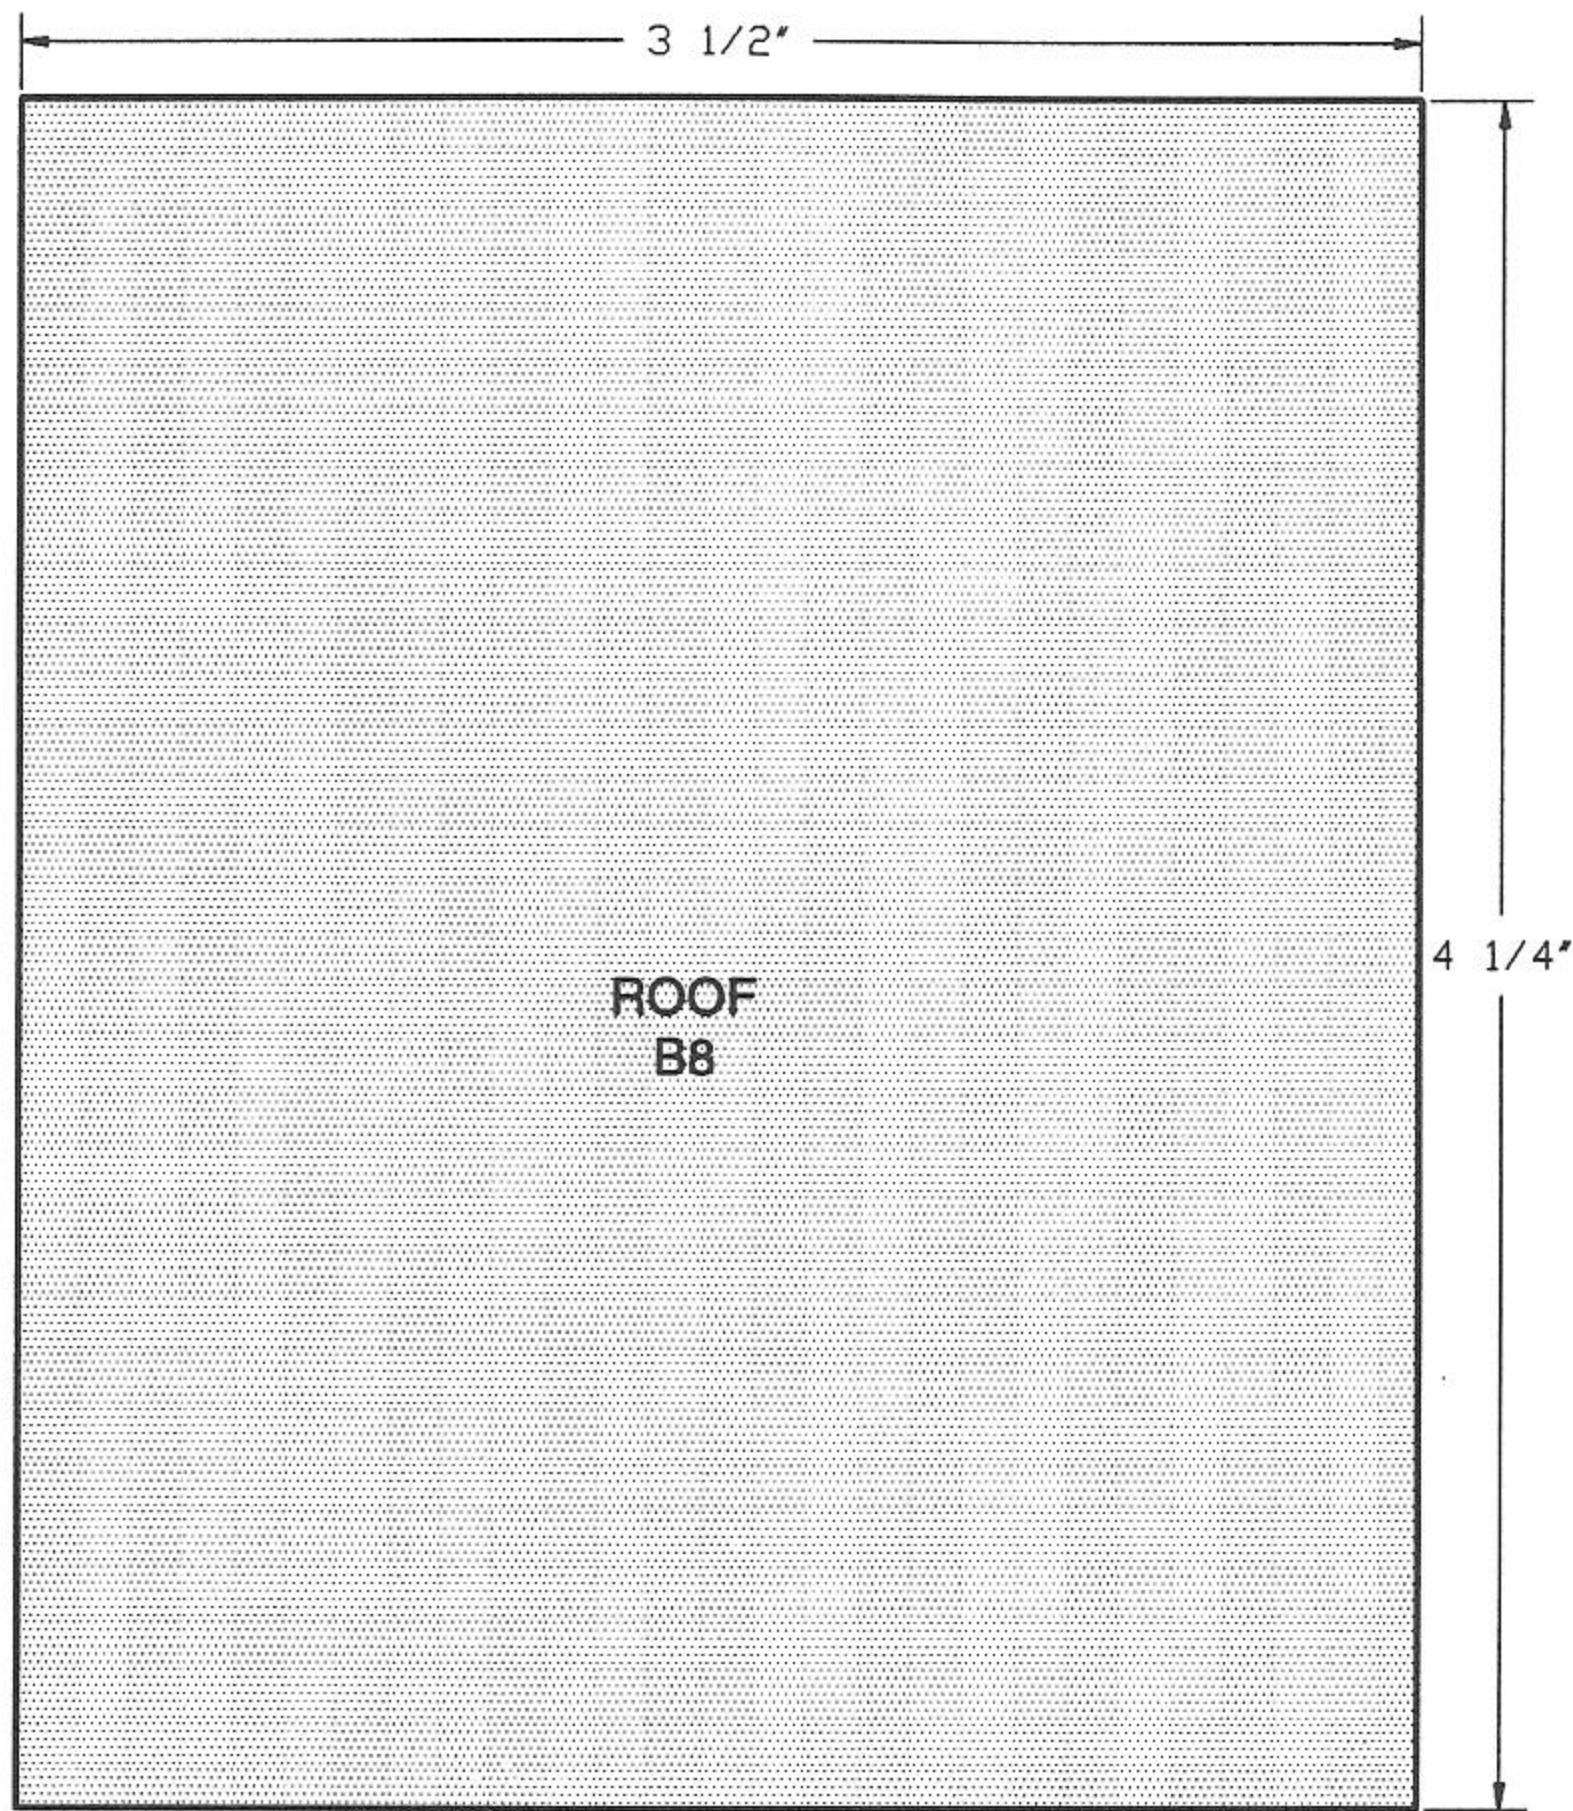





SECTION VIEW (TOP) B14

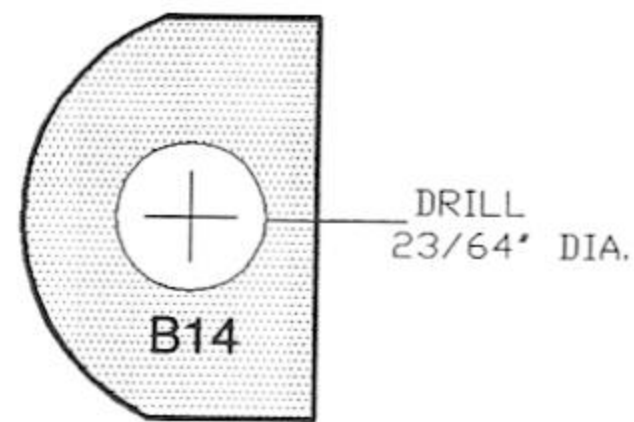







REAR ARM HOLDER

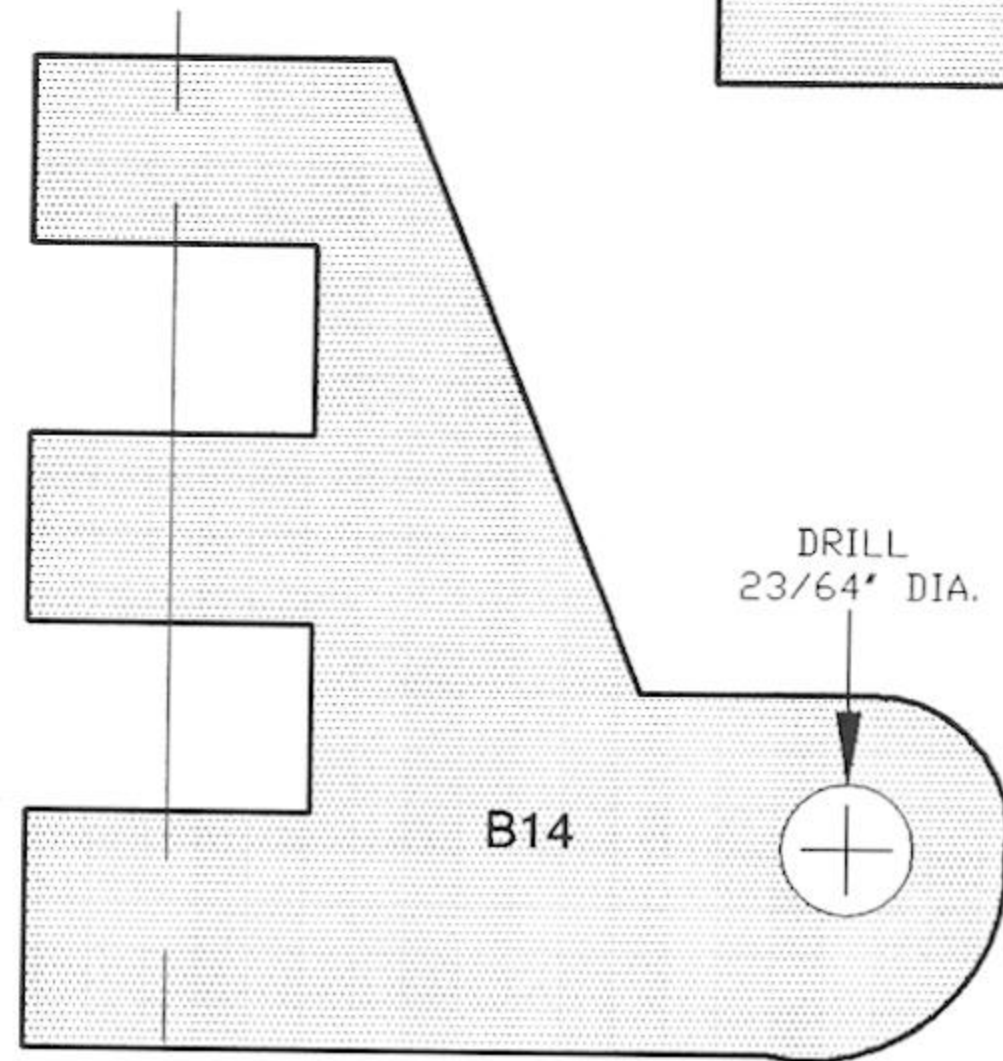

MAIN ARM SUPPORT

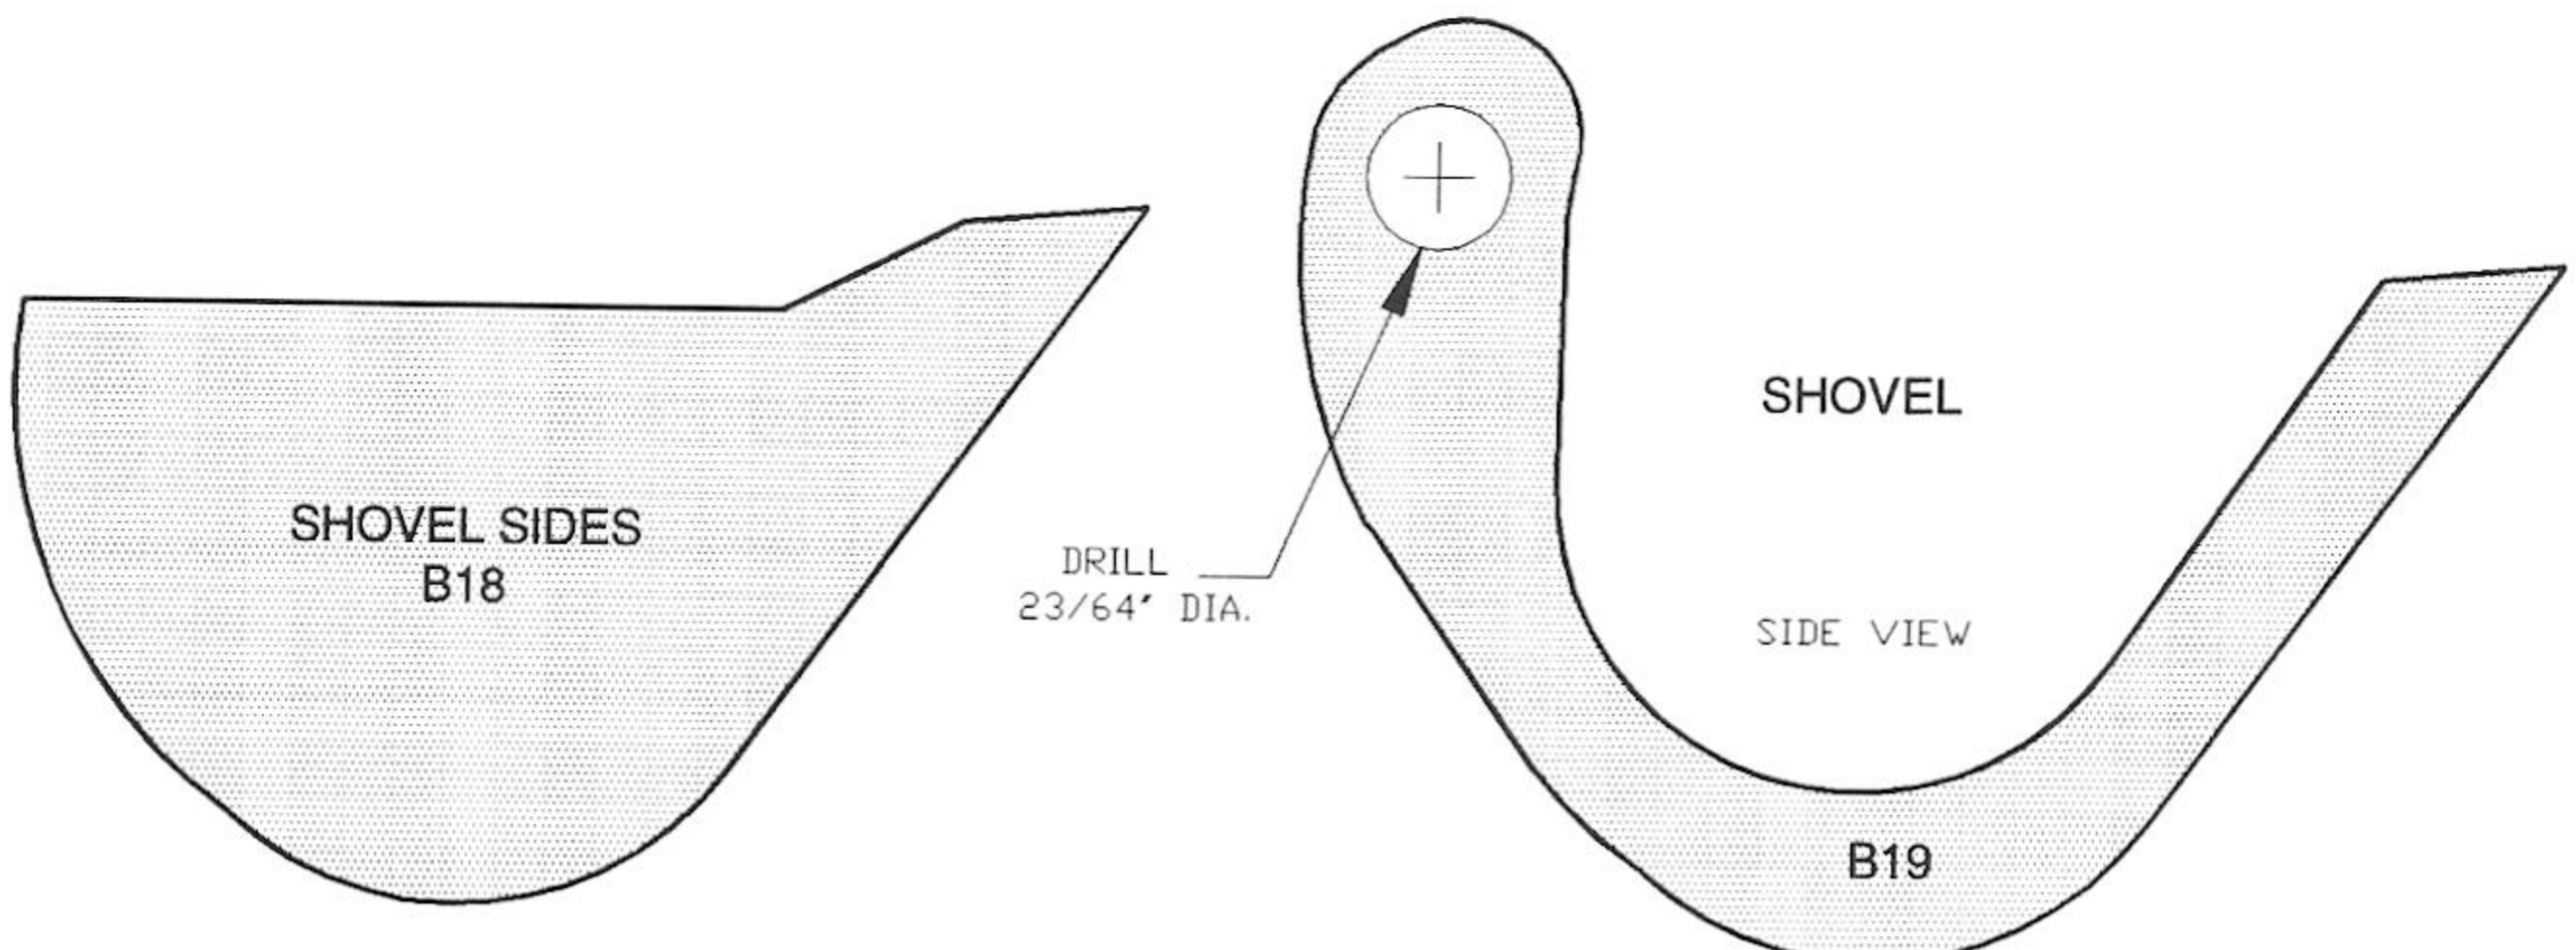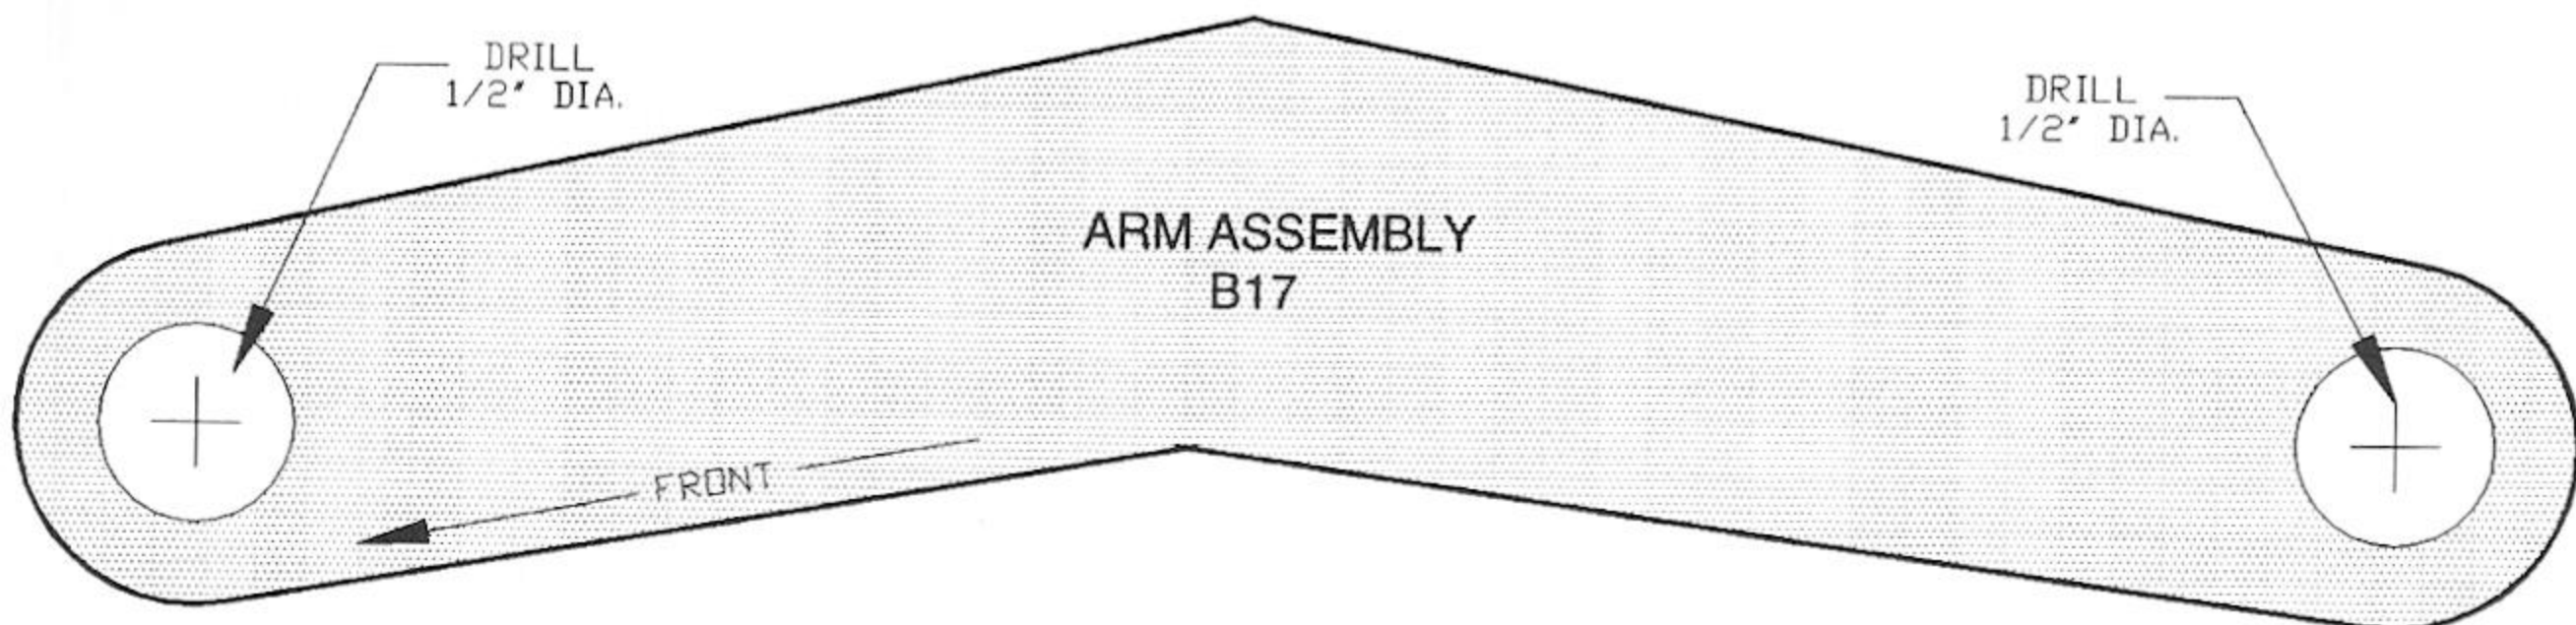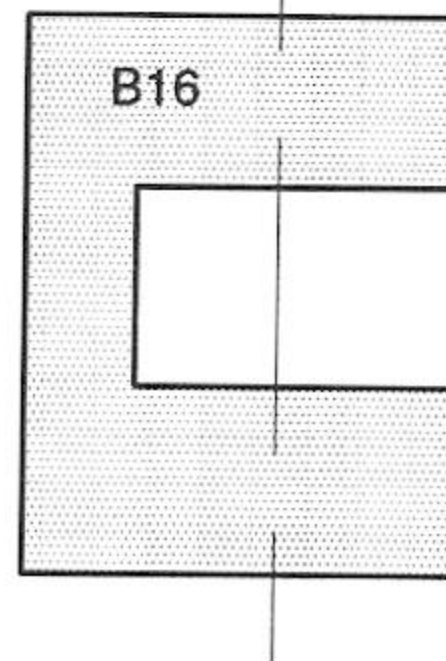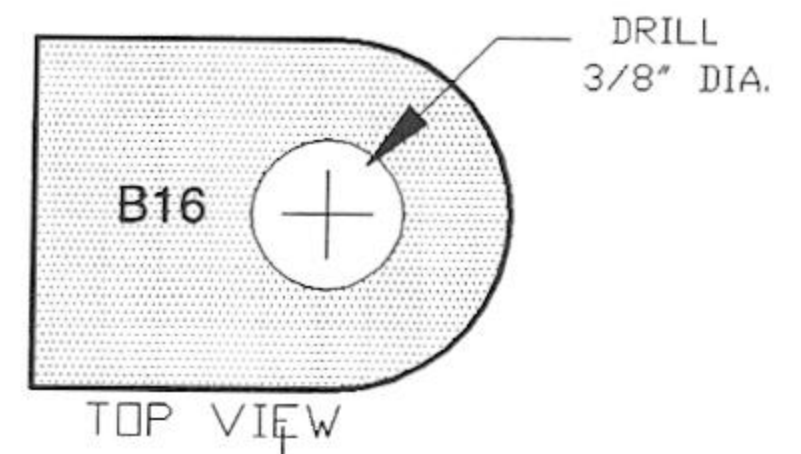


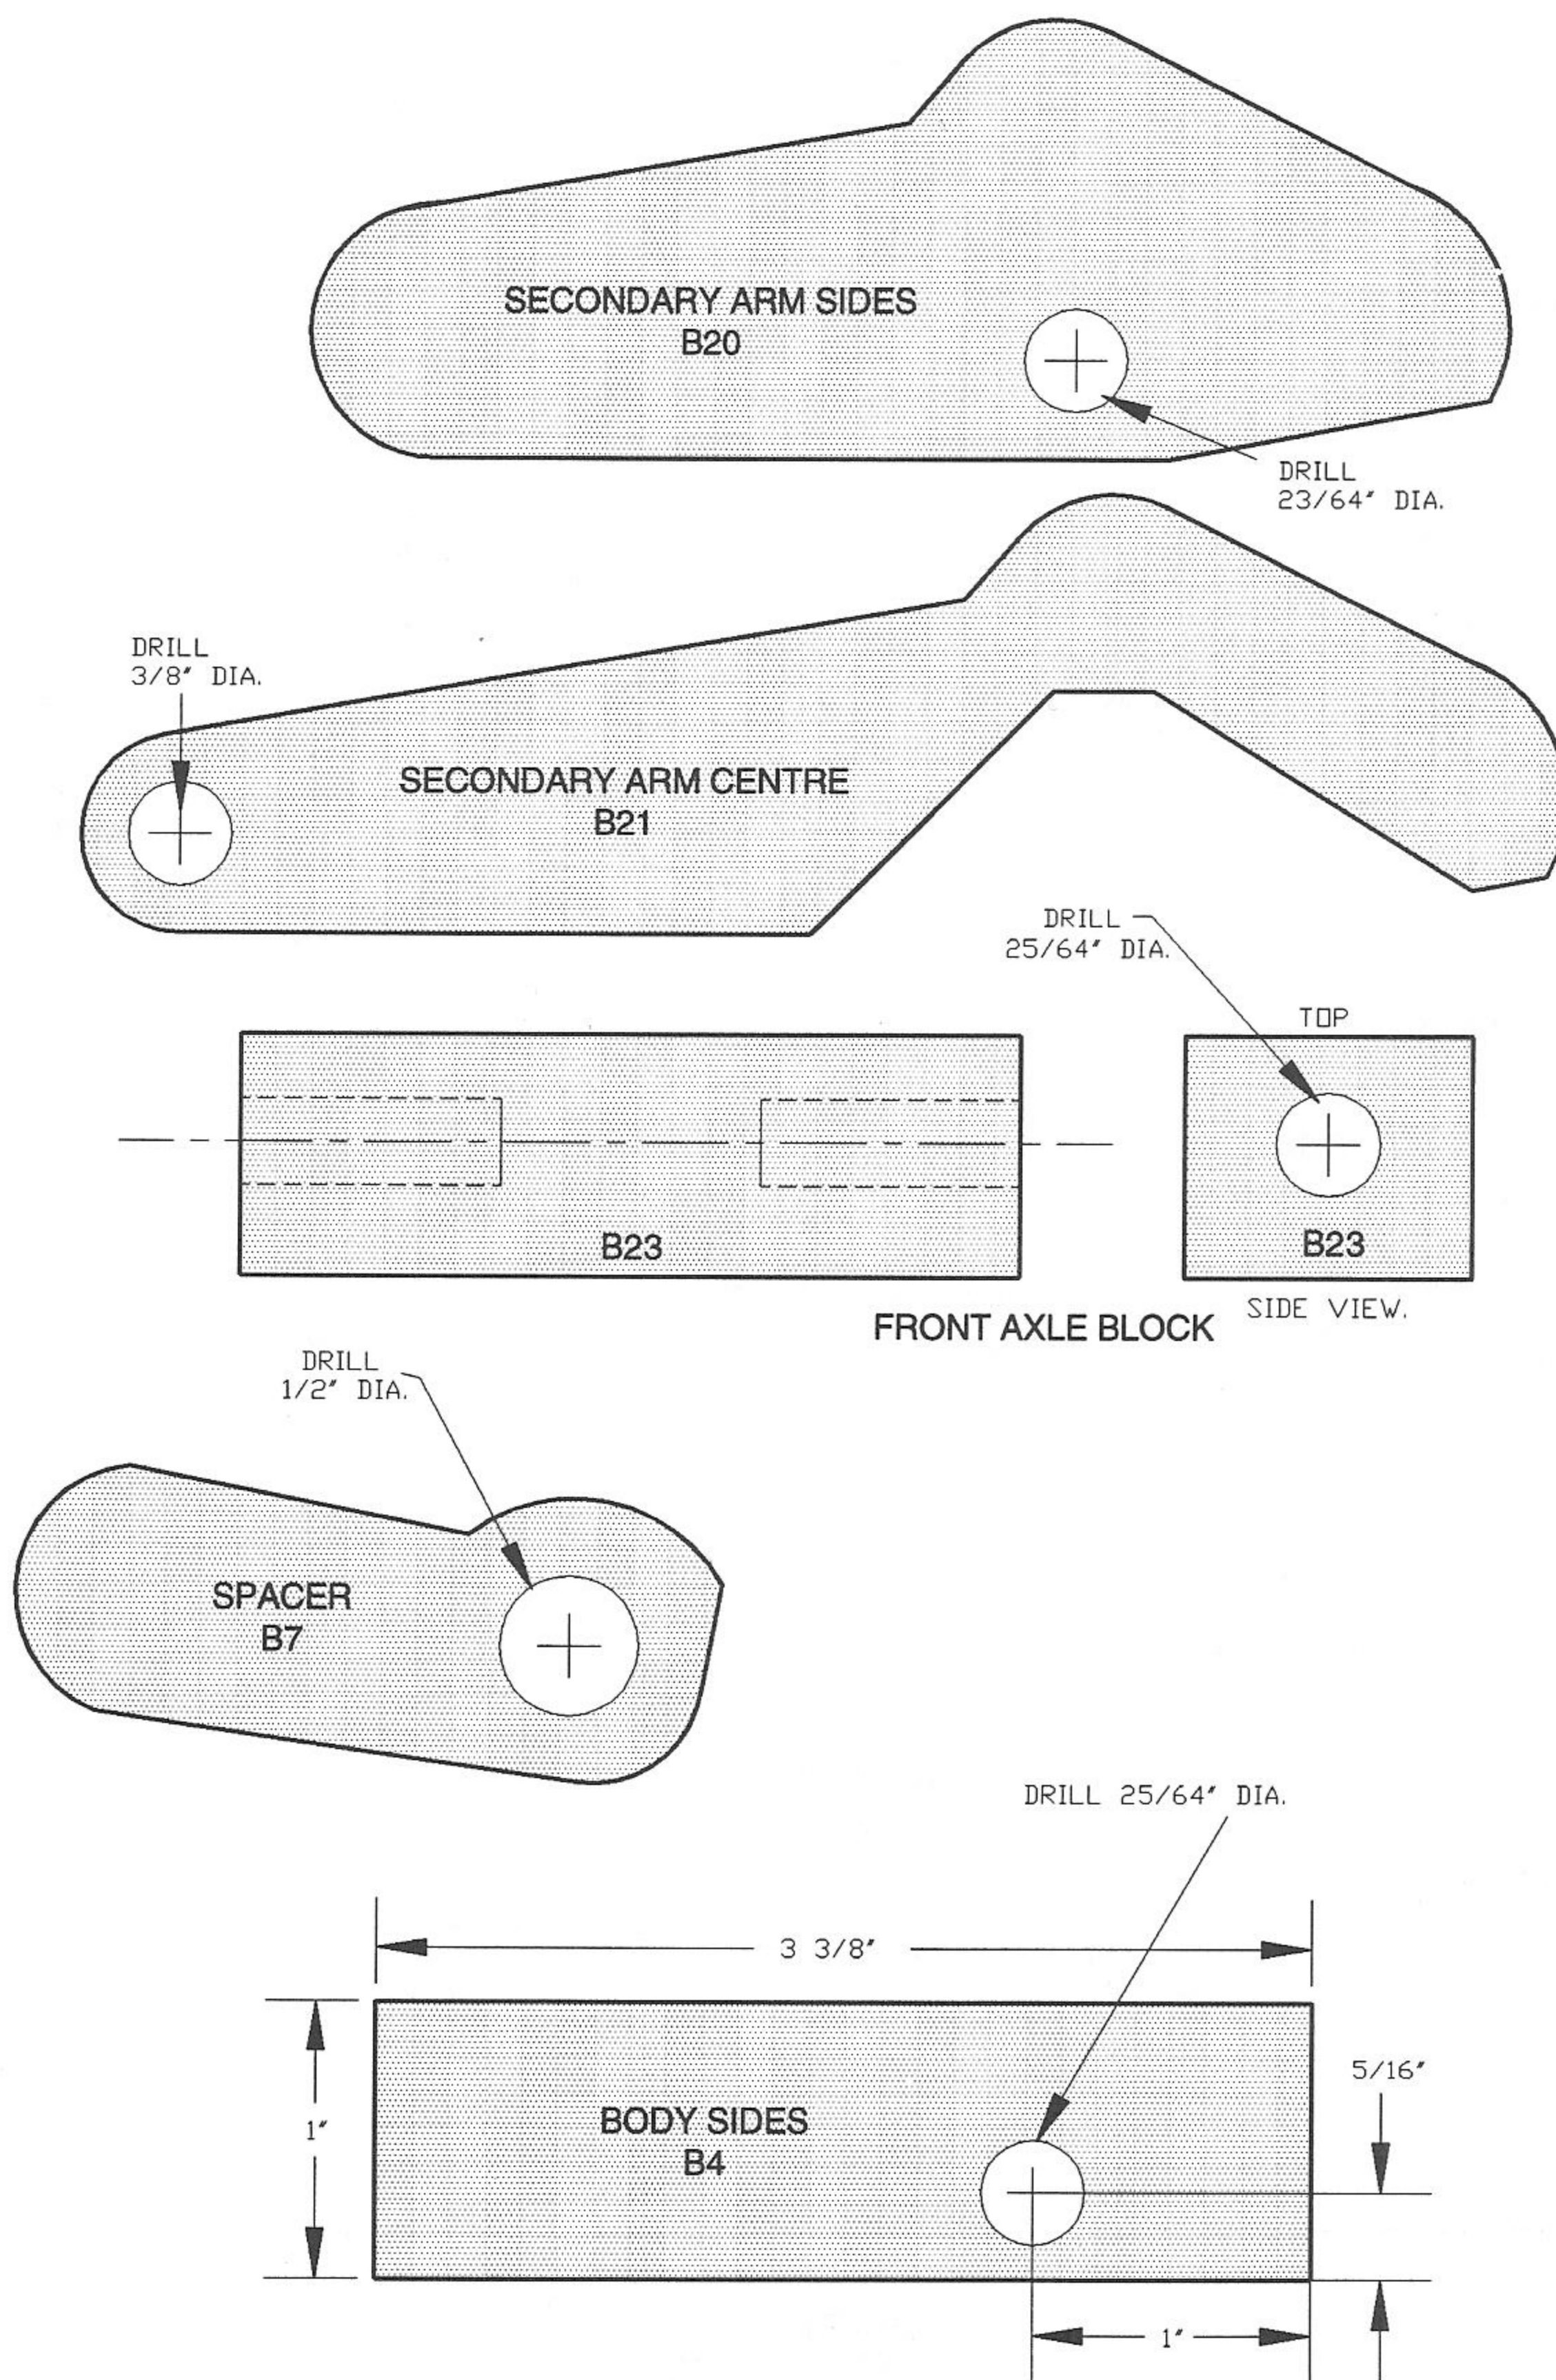

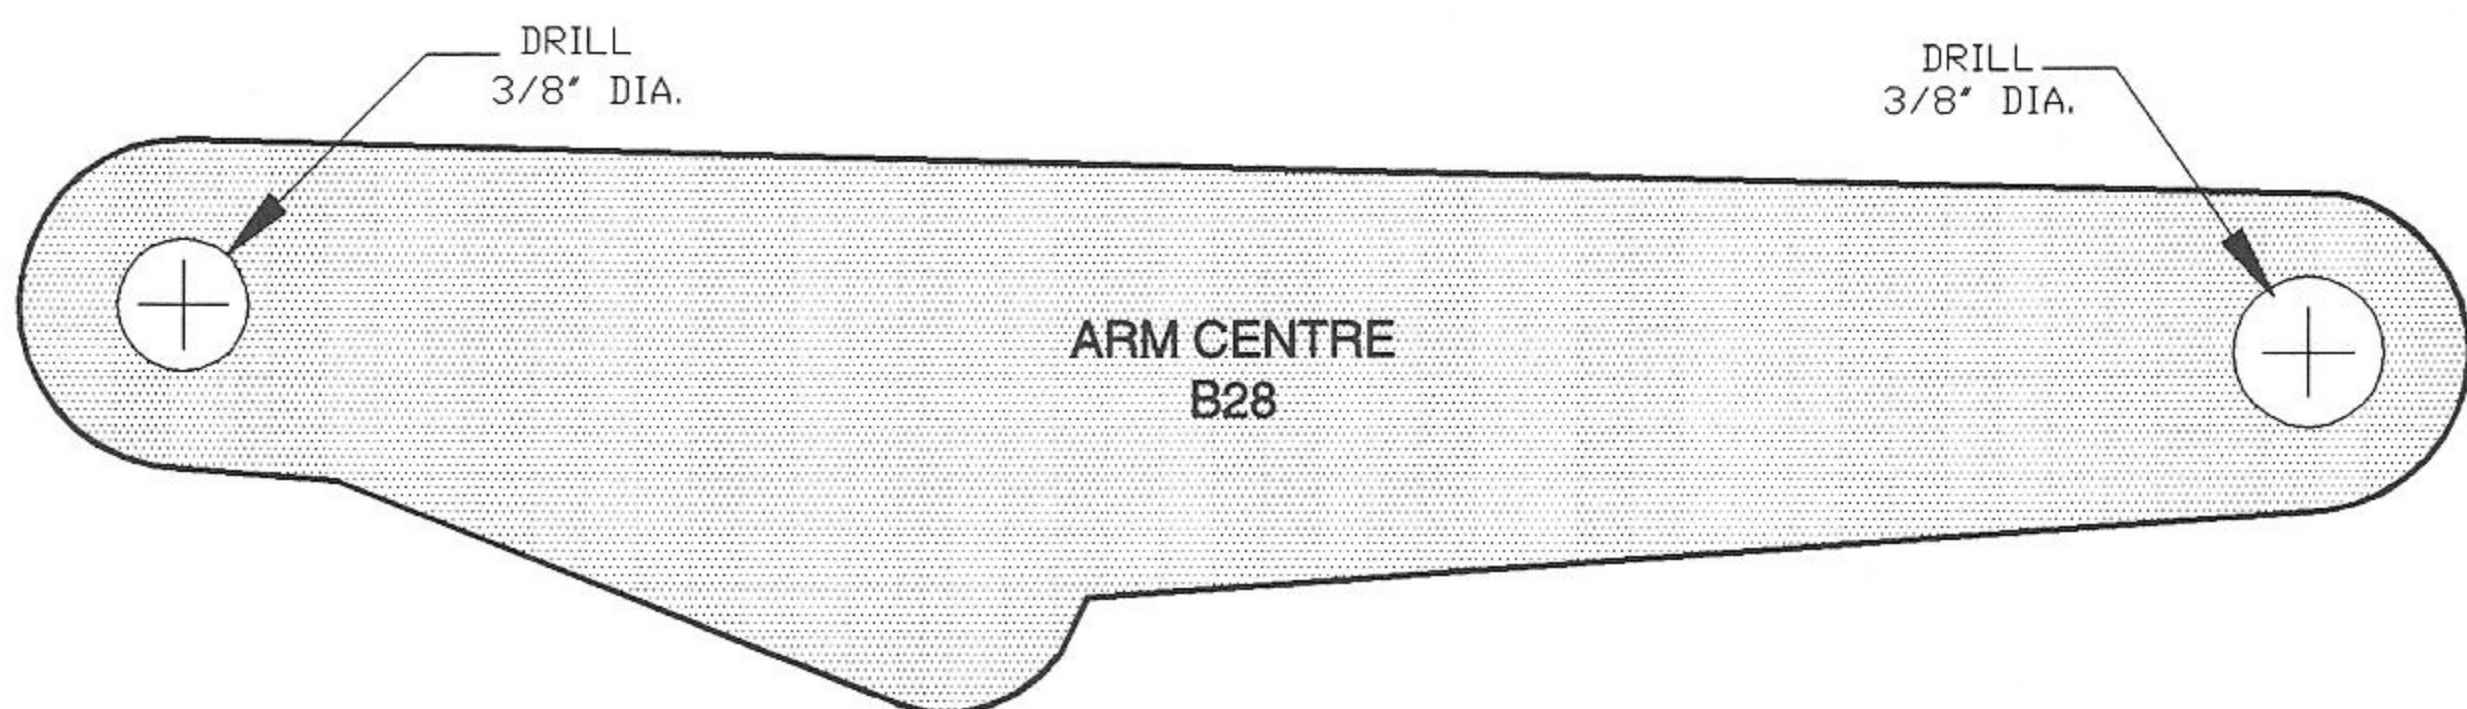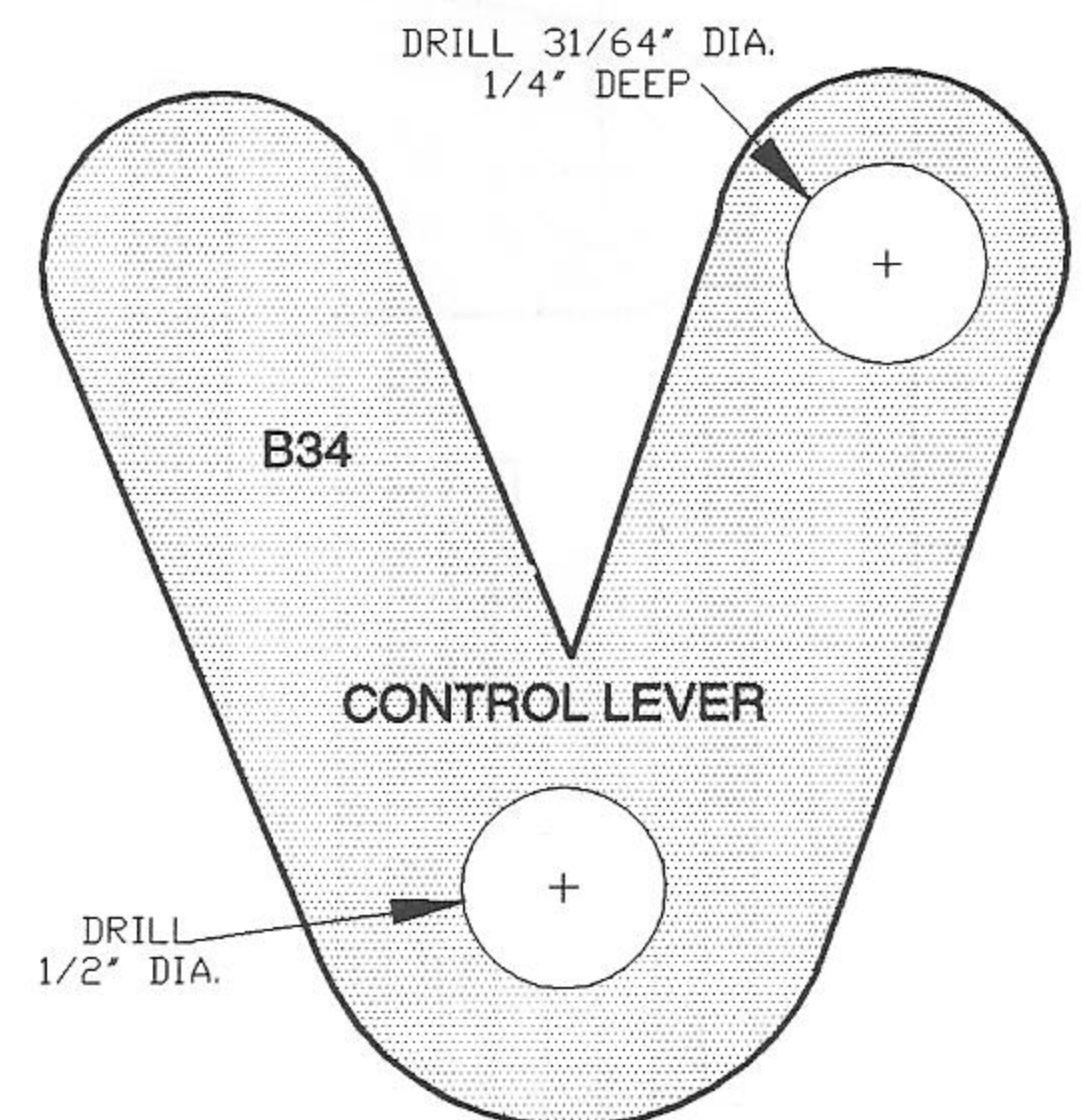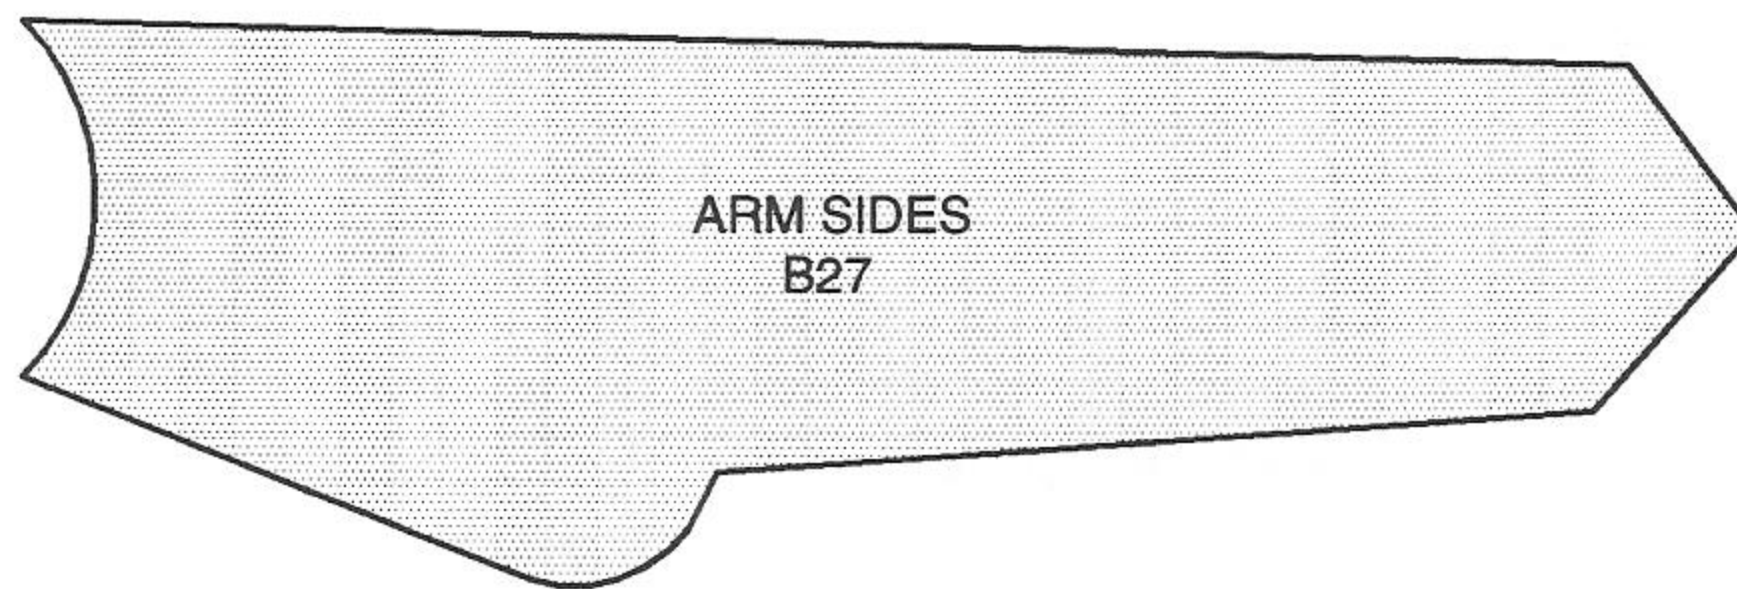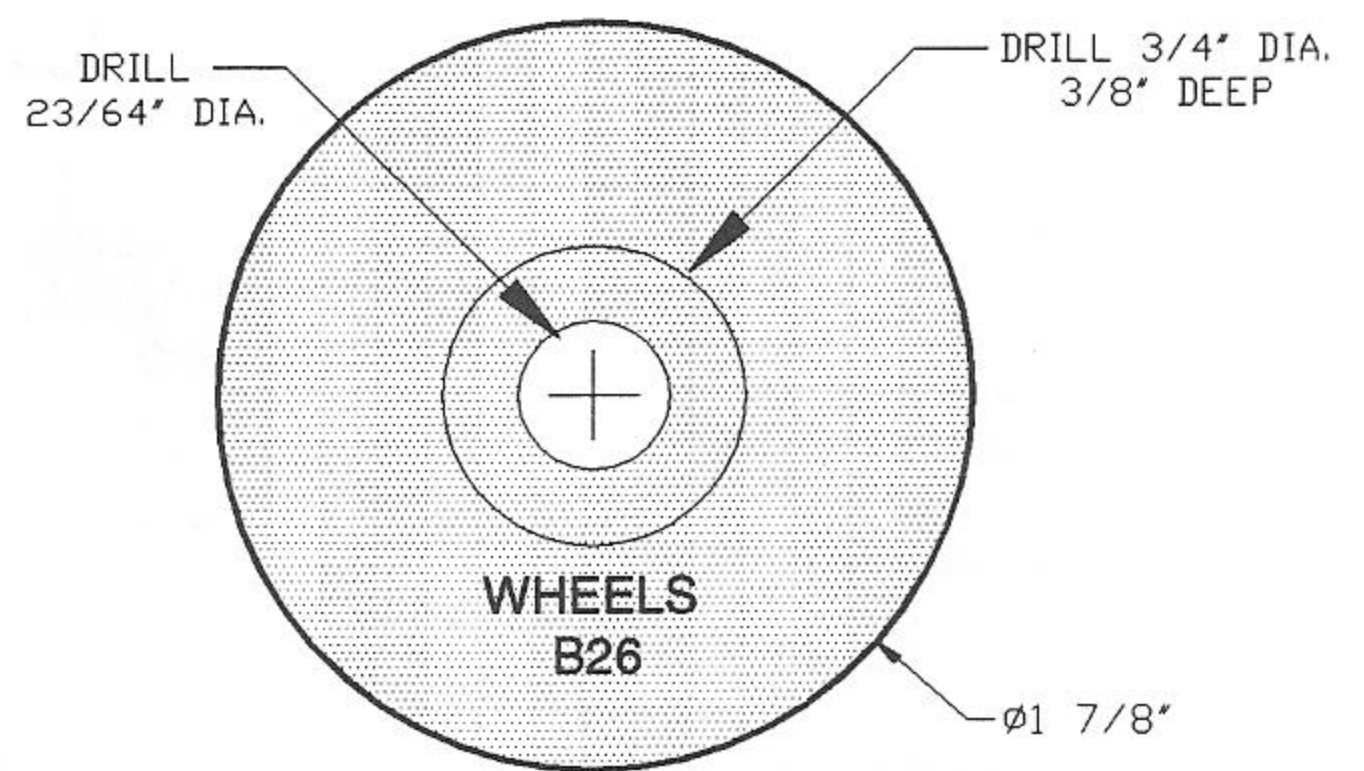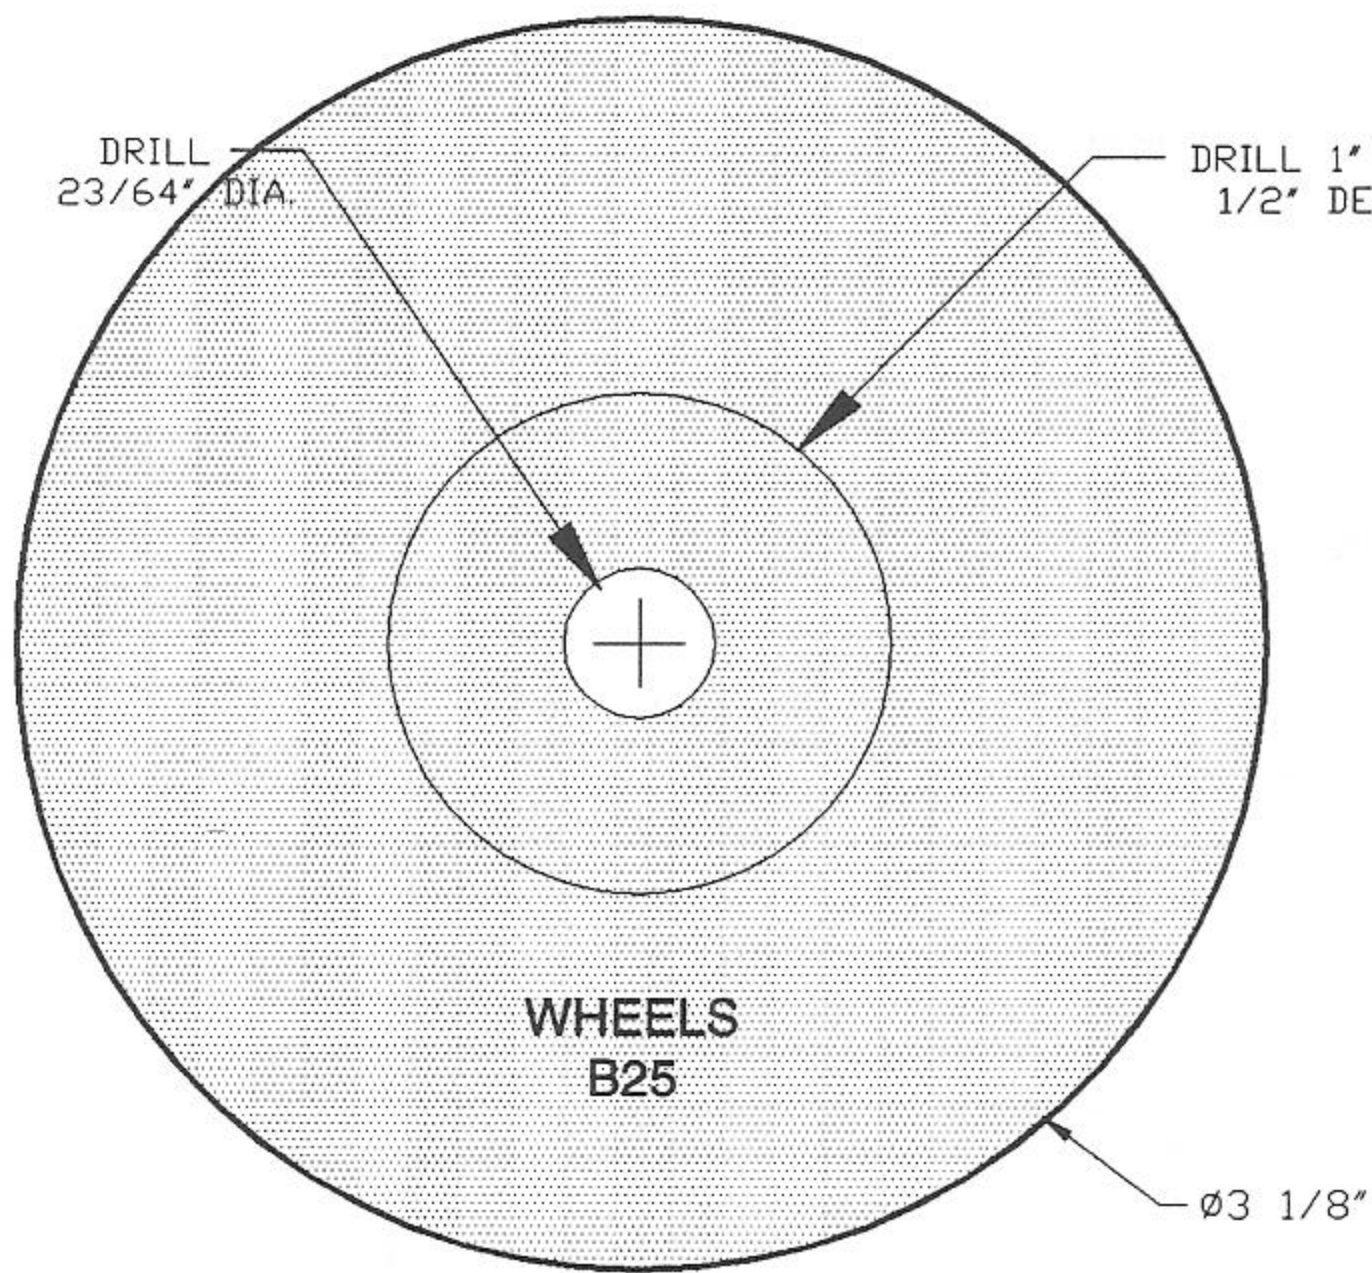


B29 WHEEL SHAFT (1 REQUIRED) 3/8" DIA. DOWEL 4 1/2" SIDE VIEW	B30 WHEEL SHAFT (1 REQUIRED) 3/8" DIA. DOWEL 4 1/4" SIDE VIEW	
B31 PINS (2 REQUIRED) 3/4" DIA. DOWEL DRILL 1/2" DIA. 3/8" DEEP GLUE IN 1/2" 1/2" DIA. DOWEL 2 3/8" SIDE VIEW ASSEMBLED PART		
B32 PINS (2 REQUIRED) 3/4" DIA. DOWEL DRILL 1/2" DIA. 3/8" DEEP GLUE IN 1/2" 1/2" DIA. DOWEL 1 1/2" SIDE VIEW ASSEMBLED PART		
B37 PIN (1 REQUIRED) 3/8" DIA. DOWEL 7/8" SIDE VIEW	B38 PIN (1 REQUIRED) 3/8" DIA. DOWEL 1 3/4" SIDE VIEW	B39 PIN (1 REQUIRED) 3/8" DIA. DOWEL 1" SIDE VIEW
B40 SPACER (1 REQUIRED) 1" DIA. DRILL 1/2" DIA. SIDE VIEW 3/8"	B41 PIN ASSEMBLED PART (2 REQUIRED) 3/4" DIA. DOWEL DRILL 1/2" DIA. 3/8" DEEP GLUE IN 1/2" 1/2" DIA. DOWEL 1 1/8" SIDE VIEW	B42 PIN (1 REQUIRED) 3/8" DIA. DOWEL 2 1/2" SIDE VIEW


Additional Information - Backhoe

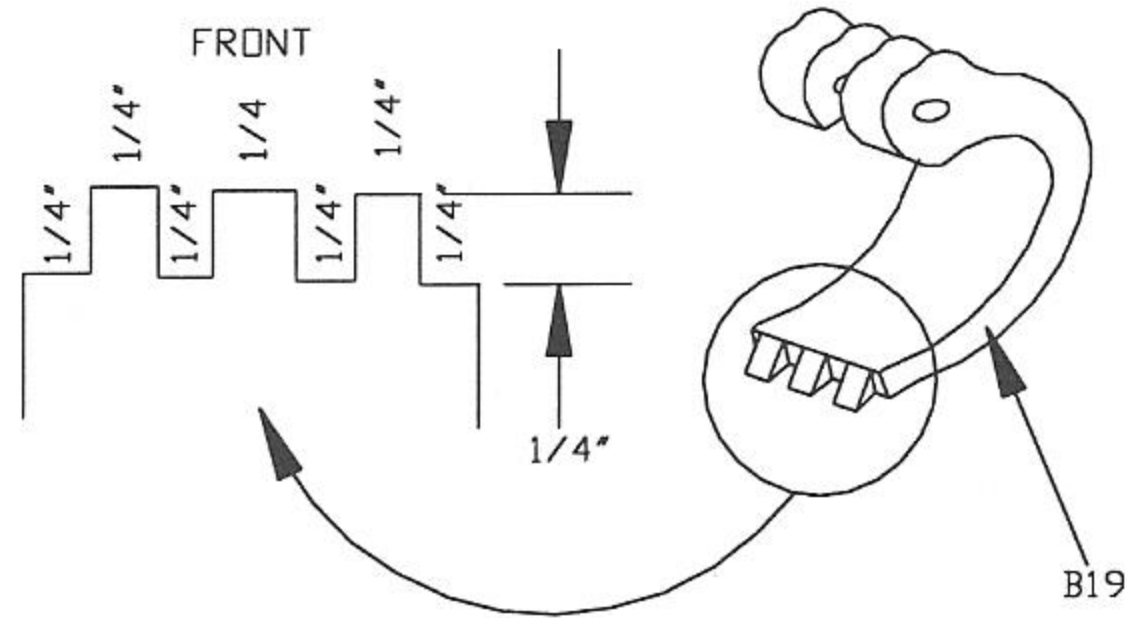

Using your Scroll Saw, cut grooves in part B19, as shown.

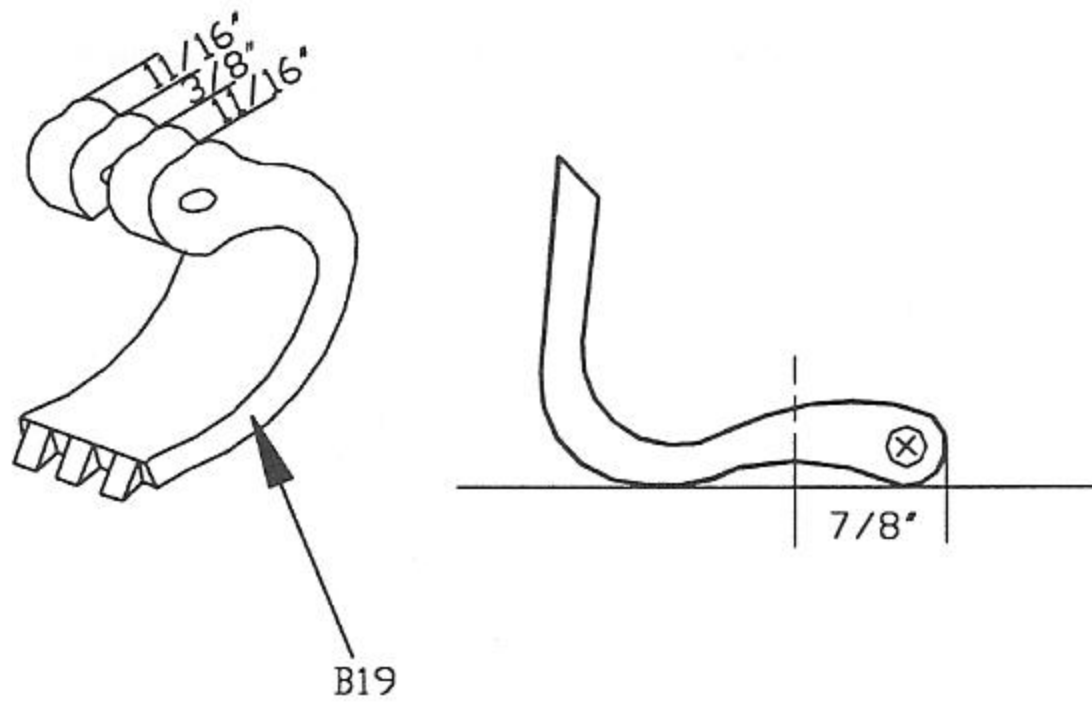


Using your Scroll Saw, cut groove in part B19.

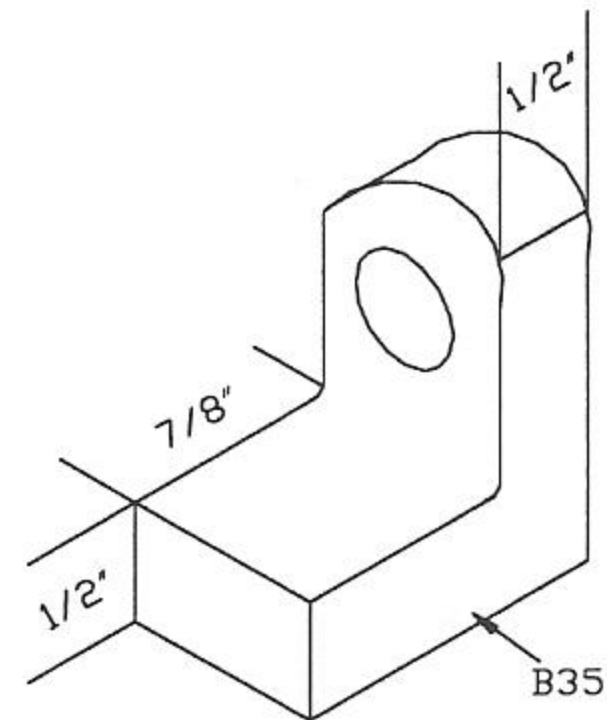


Drawing showing part B35 completed.

Important: When you cut this groove, make sure that arm assembly fits in tight. (this way, arm assembly stays up)












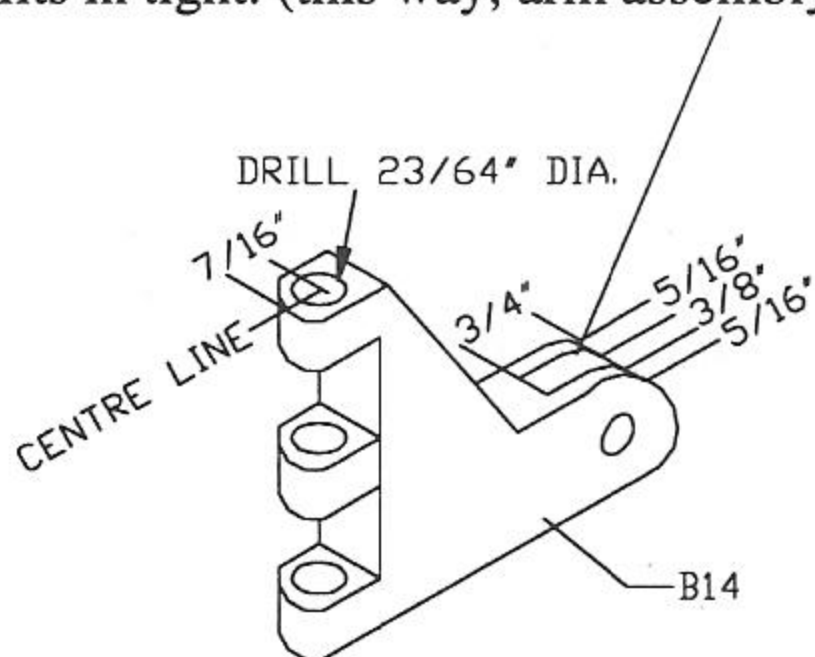



Using your Scroll Saw, cut groove in part B14, as shown.

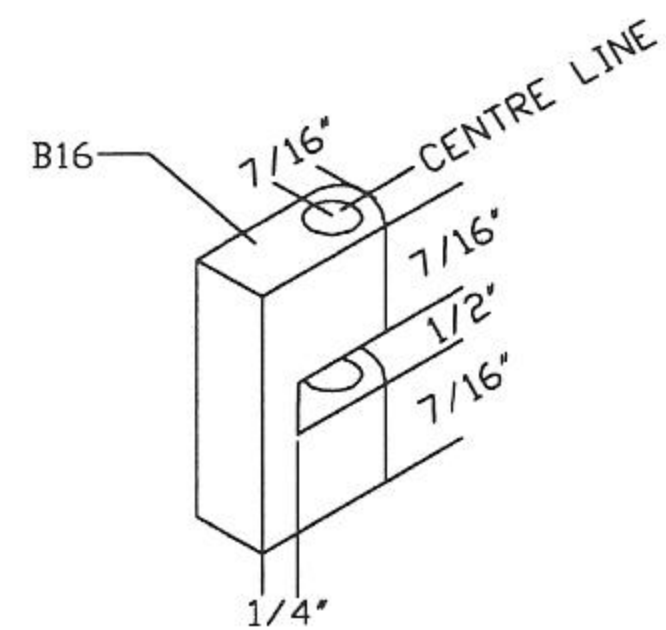


Using your Scroll Saw, cut groove in part B16, as shown.

Backhoe - Assembly Drawings

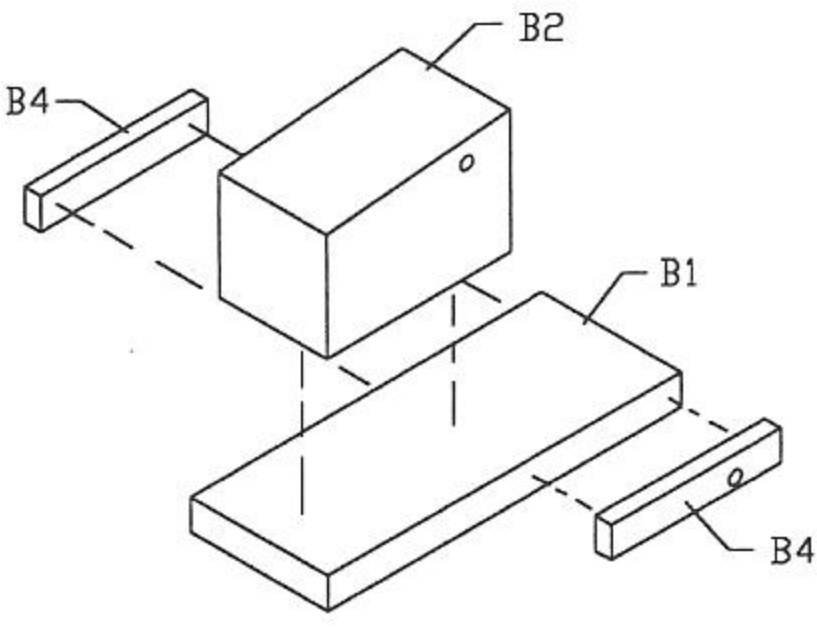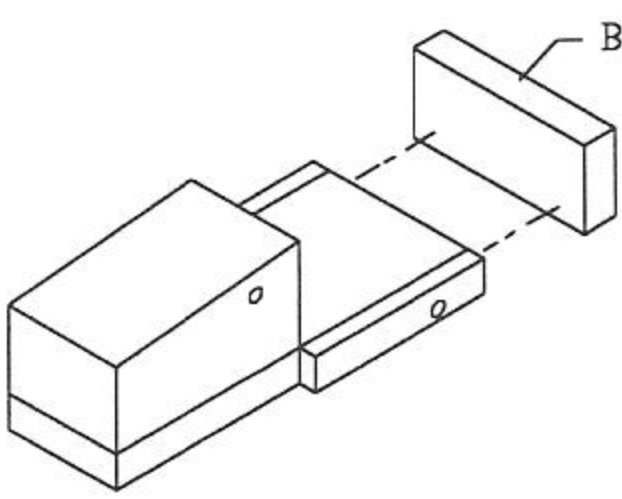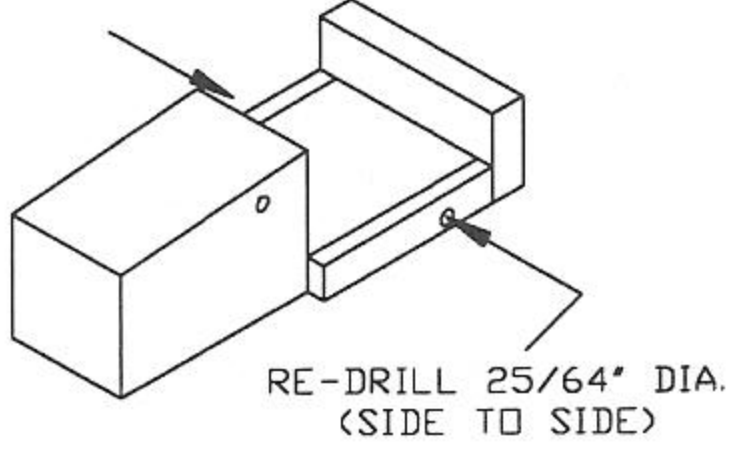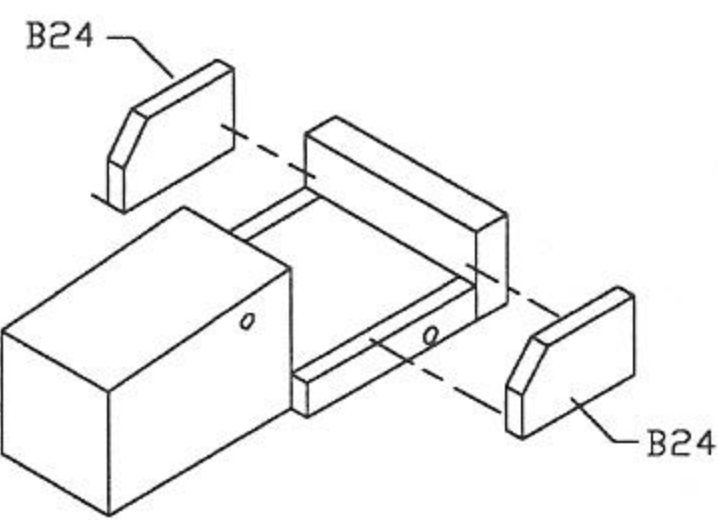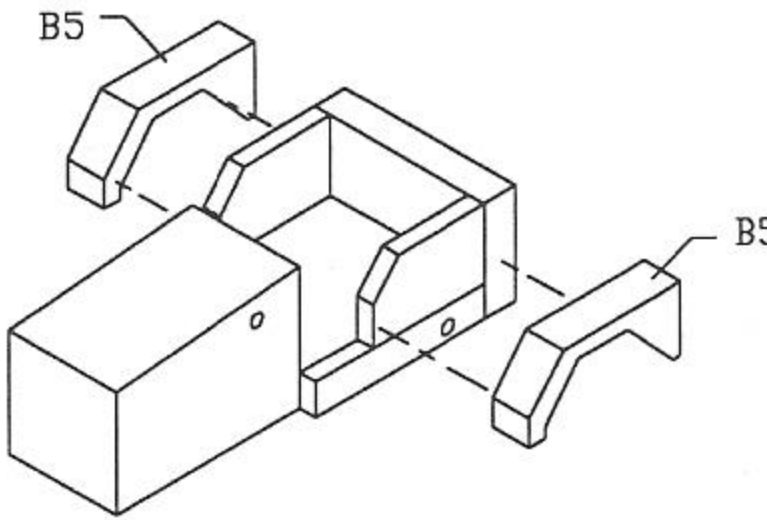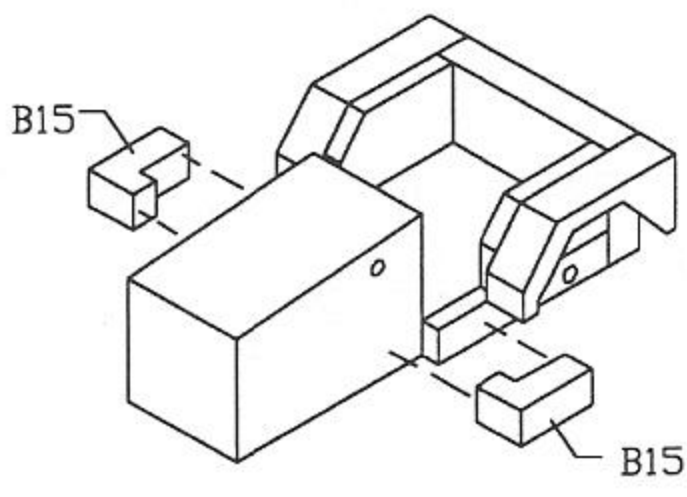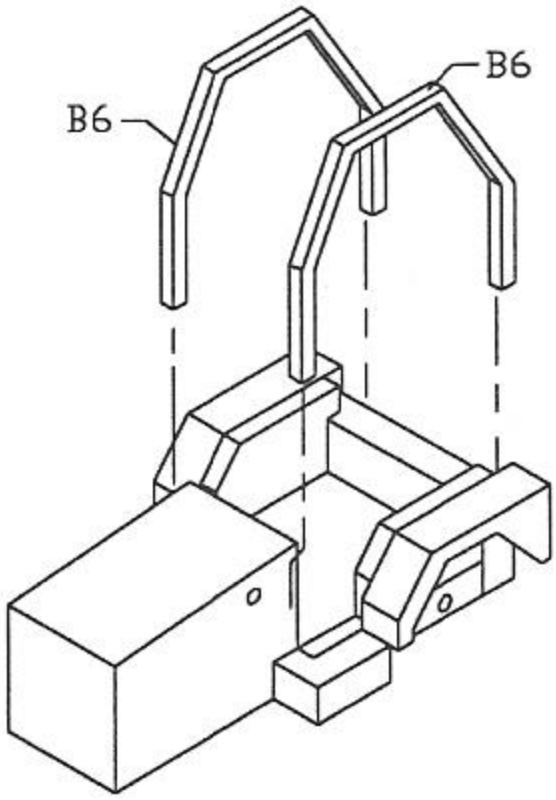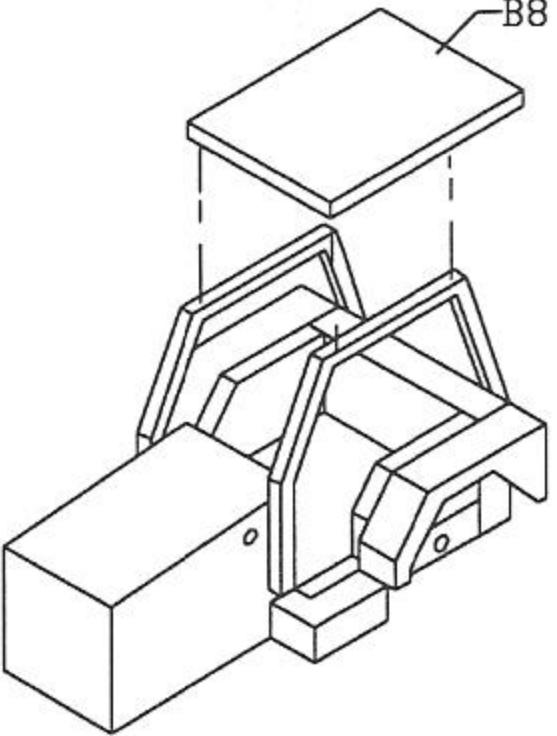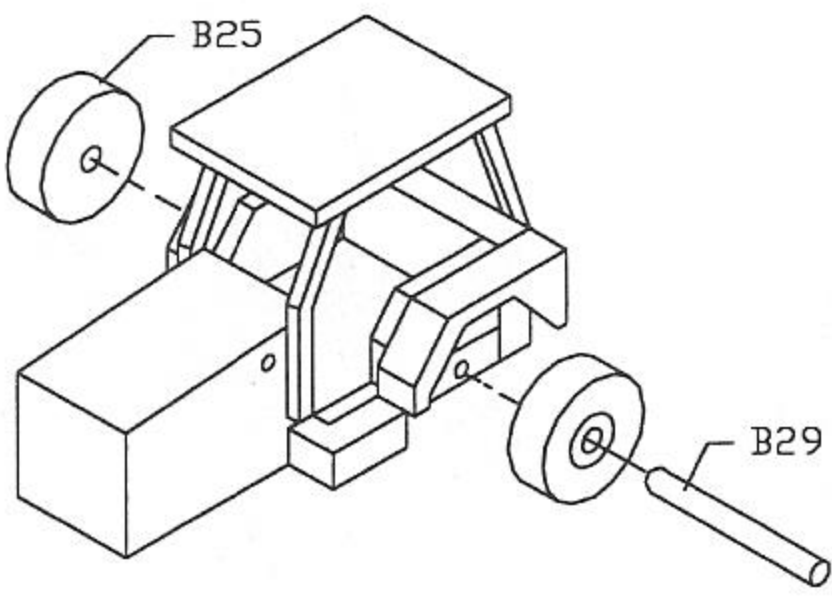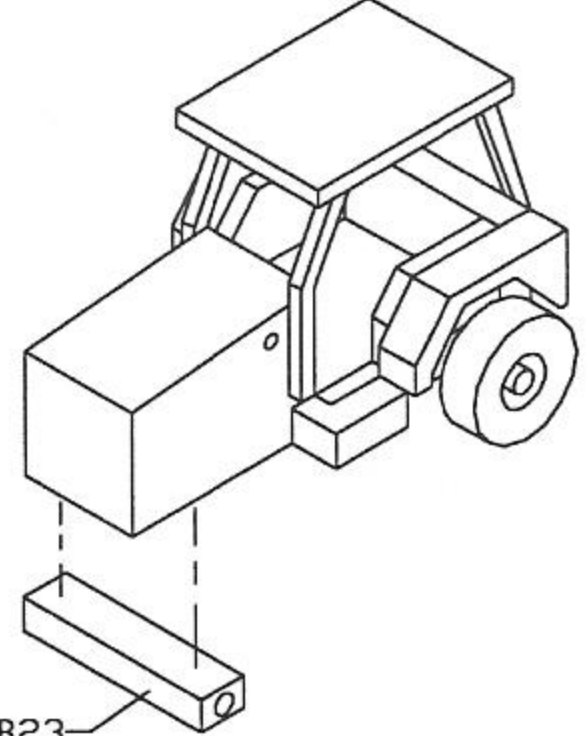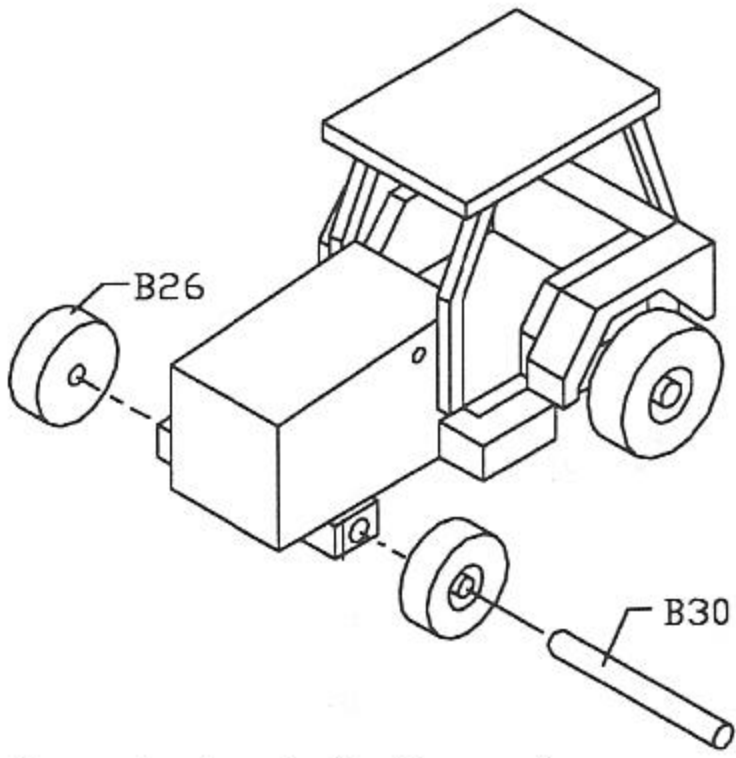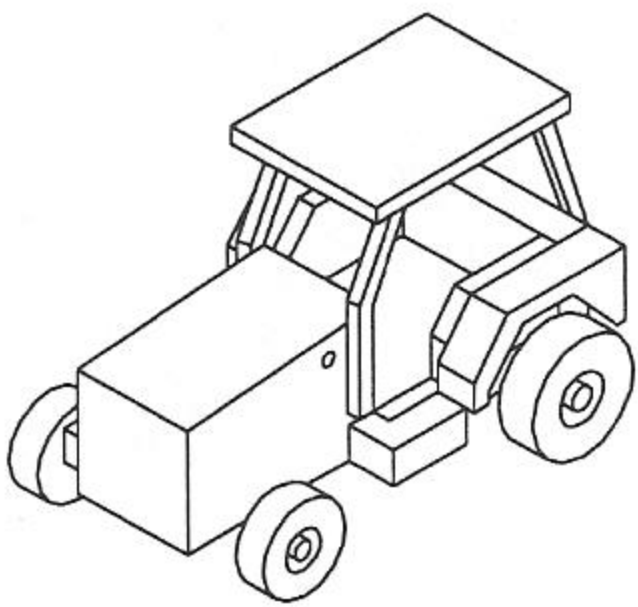
1  Glue hood B2 onto body B1. Glue body sides B4.	2  Glue back B3.	3  Re-drill hole through body.
4  Glue cabin sides B24.	5  Glue fenders B5.	6  Glue hydraulic boxes B15.
7  Glue cabin frames B6.	8  Glue roof B8.	9  Insert wheel shaft B29 through wheels B25 and body.
10  Glue front axle block B23.	11  Insert wheel shaft, as shown.	12  Start front shovel assembly.

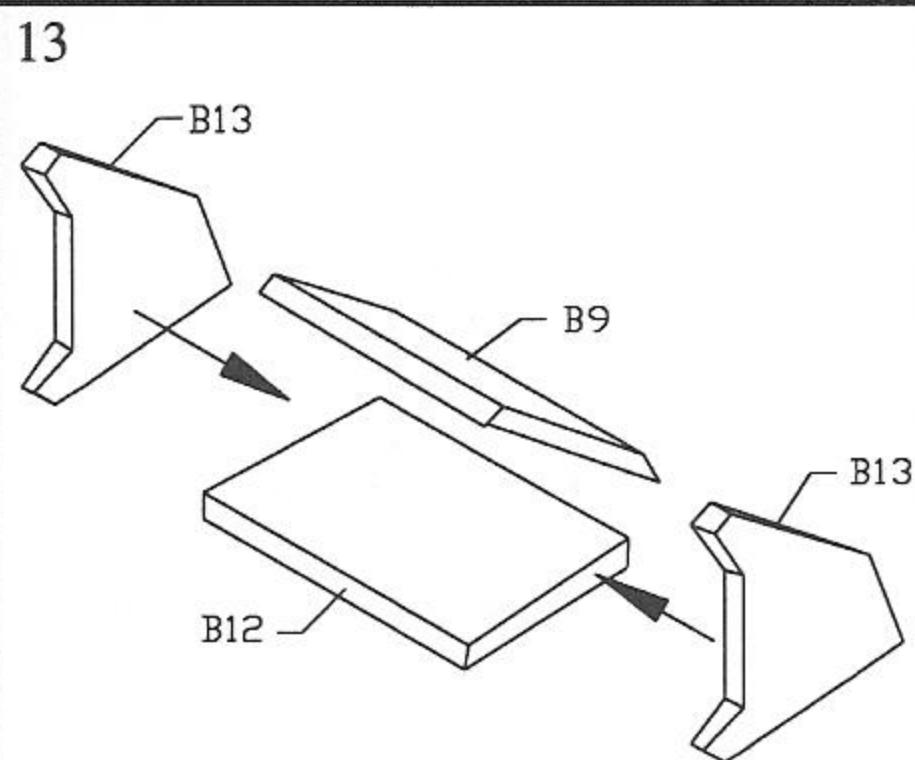


Glue shovel sides B13 onto shovel top B9 and bottom B12.

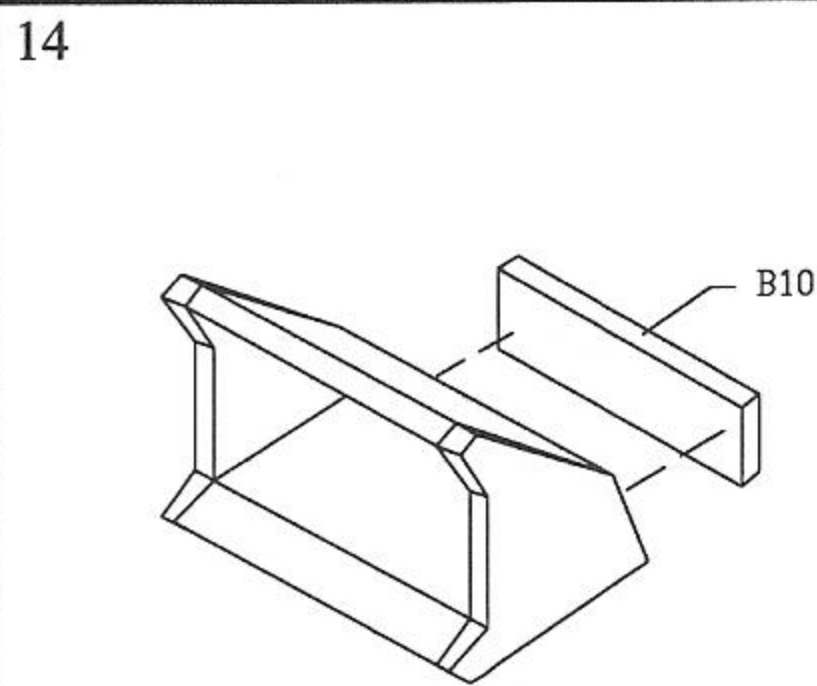


Glue shovel back B10.
See page 6 for hints on making shovel.

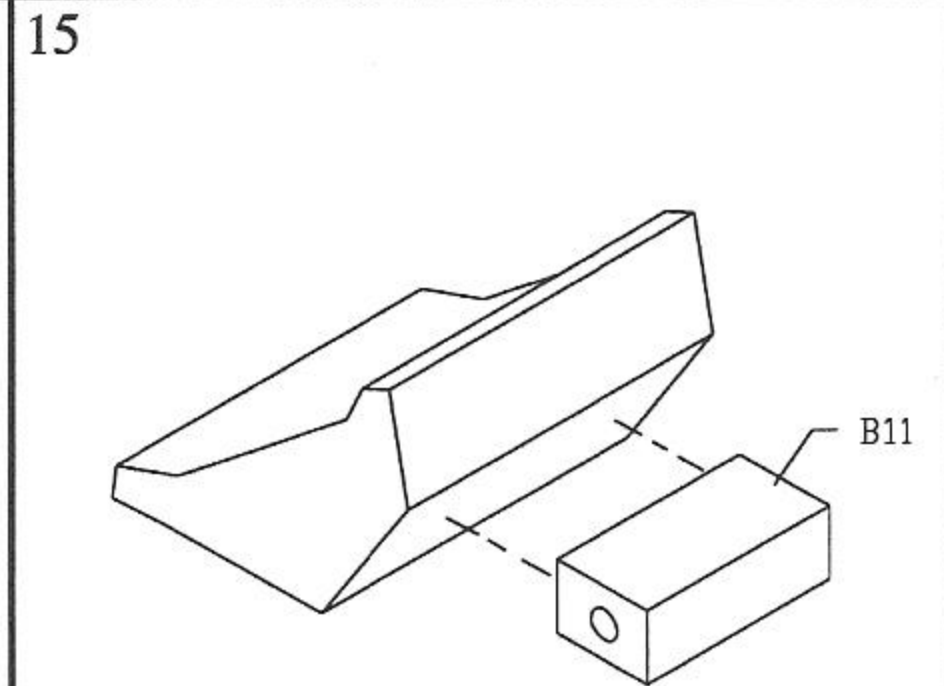


Glue arm block B11.

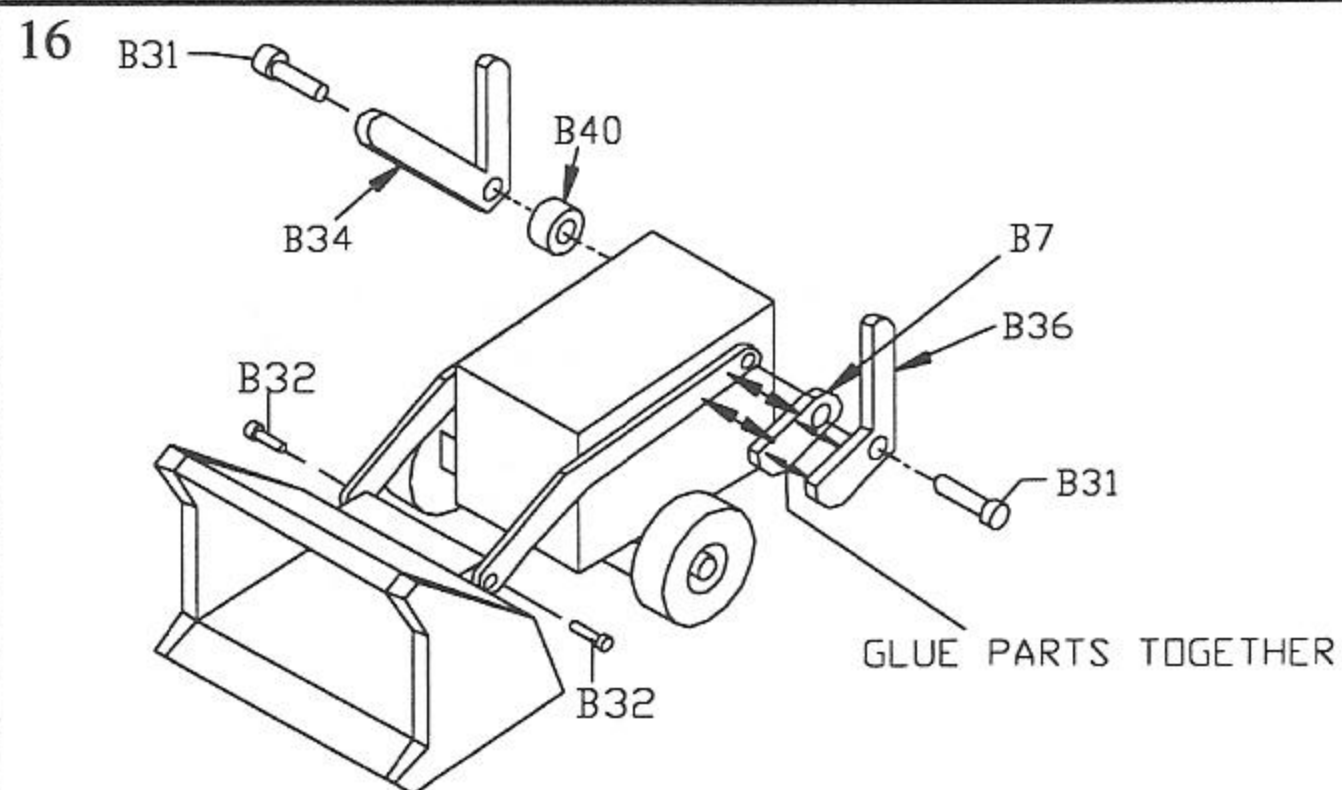


Assemble parts, as shown.

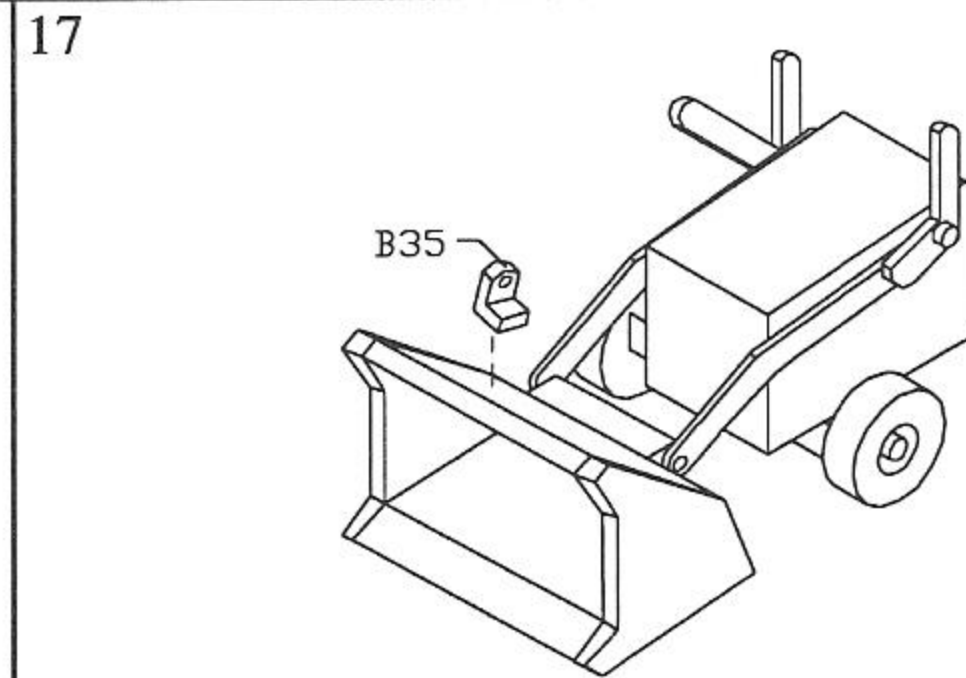


Glue lever block B35.

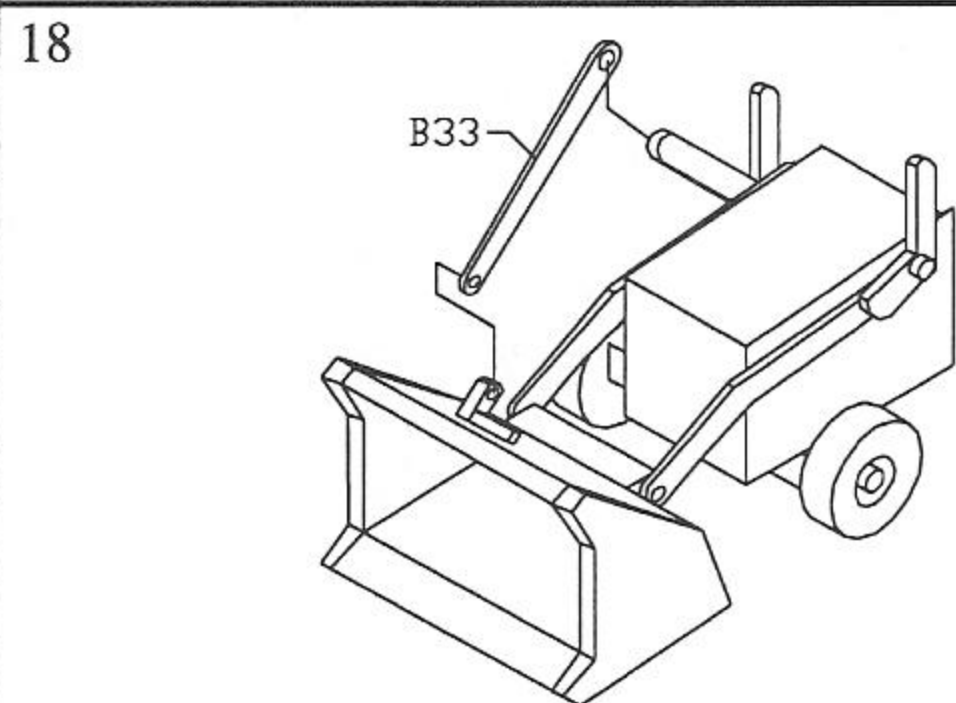


Install lever arm B33.

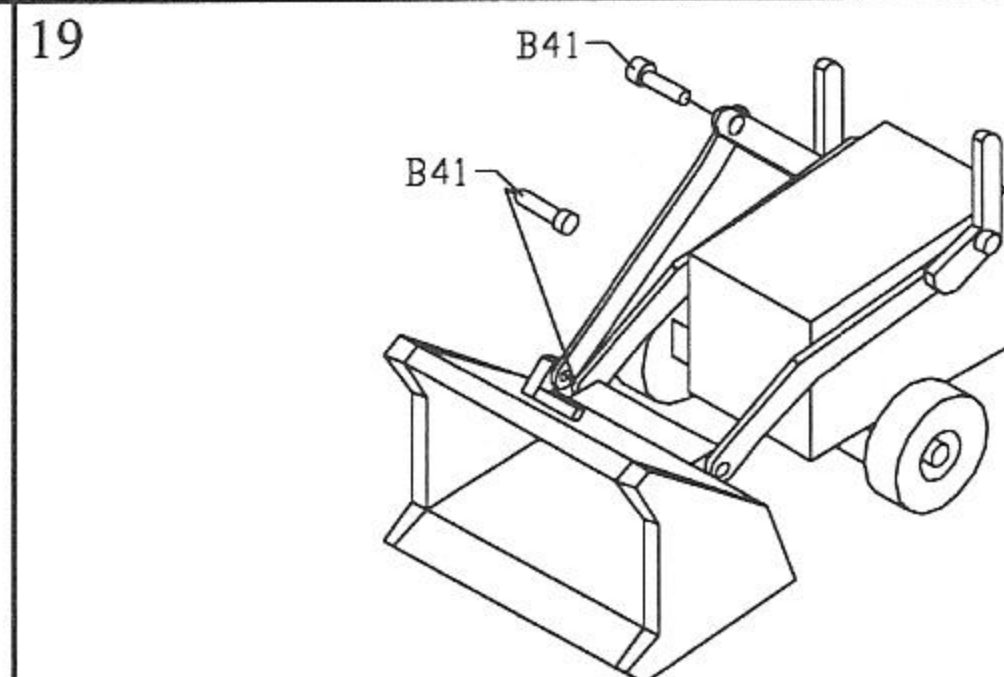

Insert locking pins B41.

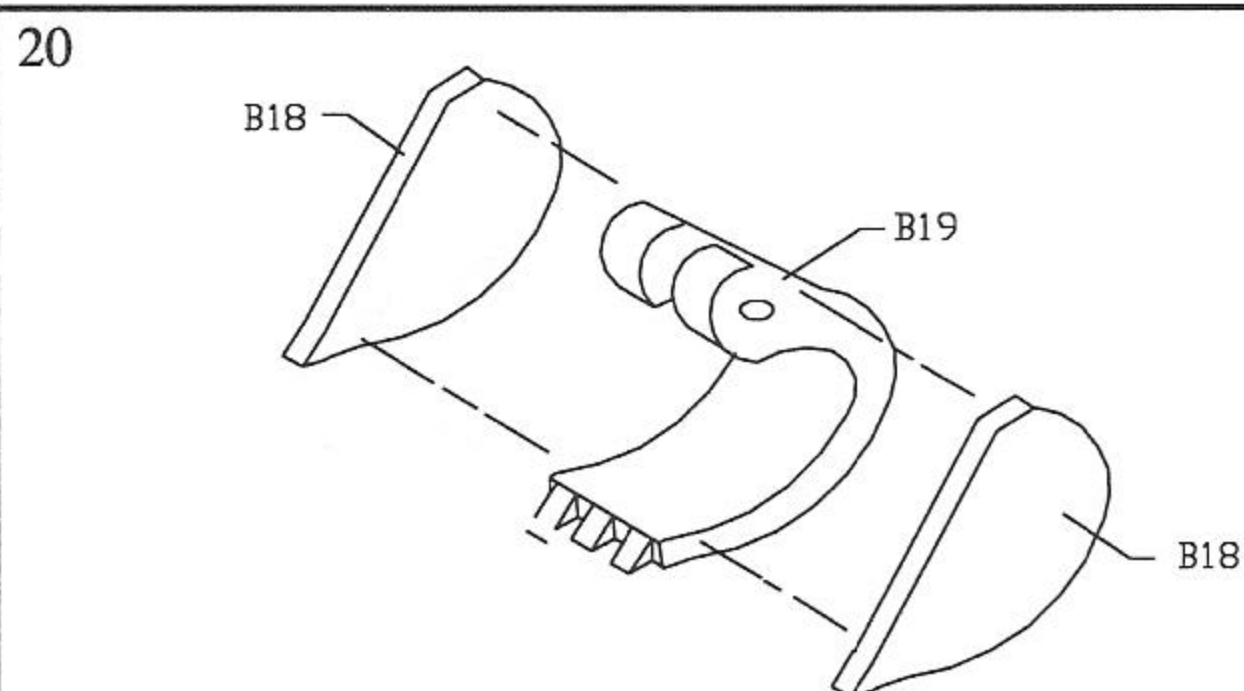


Glue shovel sides B18 onto shovel B19.

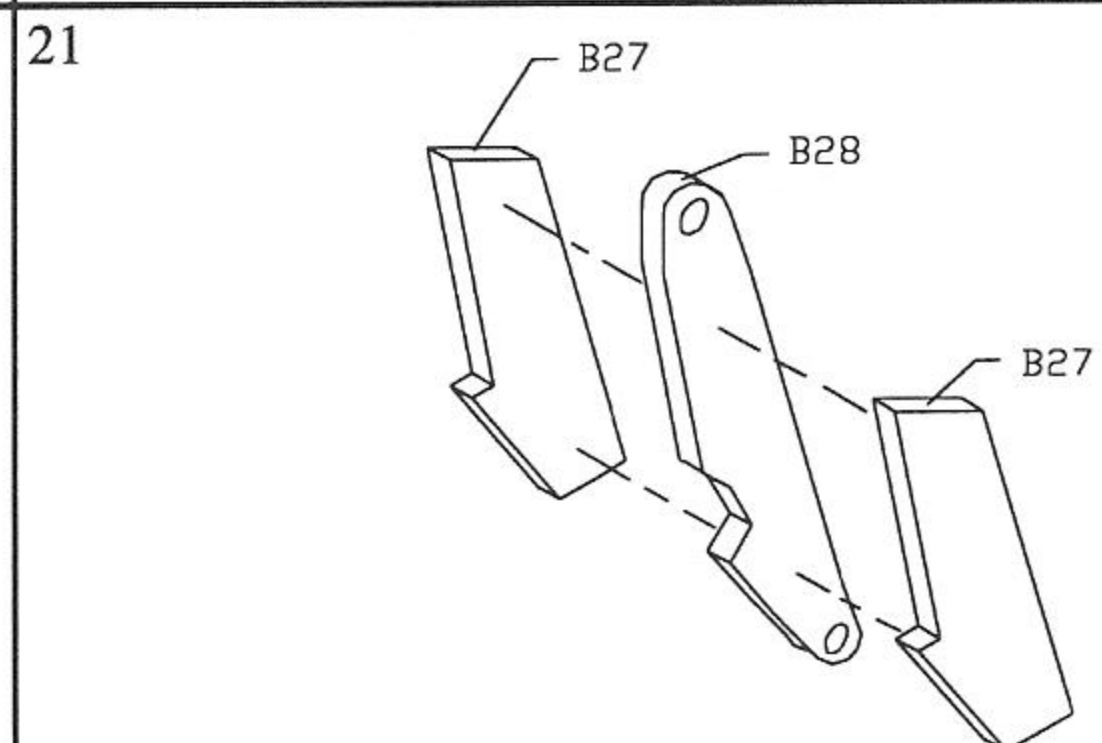


Glue arm centre B28 between arm sides B27.

22

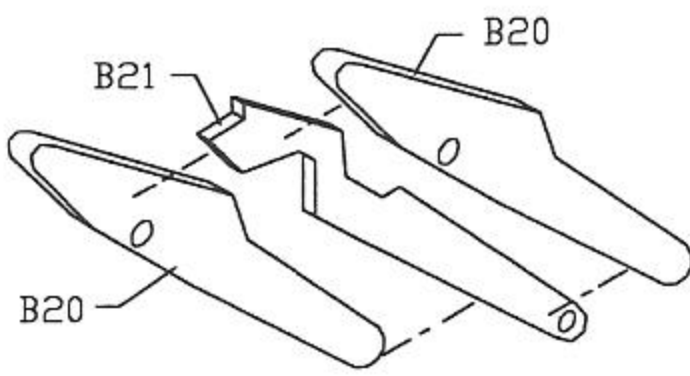


Glue secondary arm centre B21
between secondary arm sides B20.

23

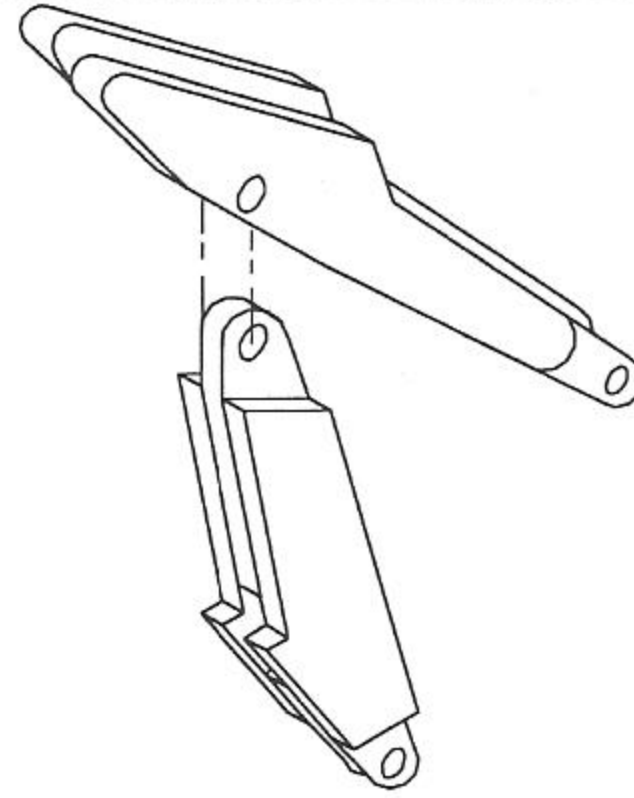


Slide arm assembly, as shown.

24

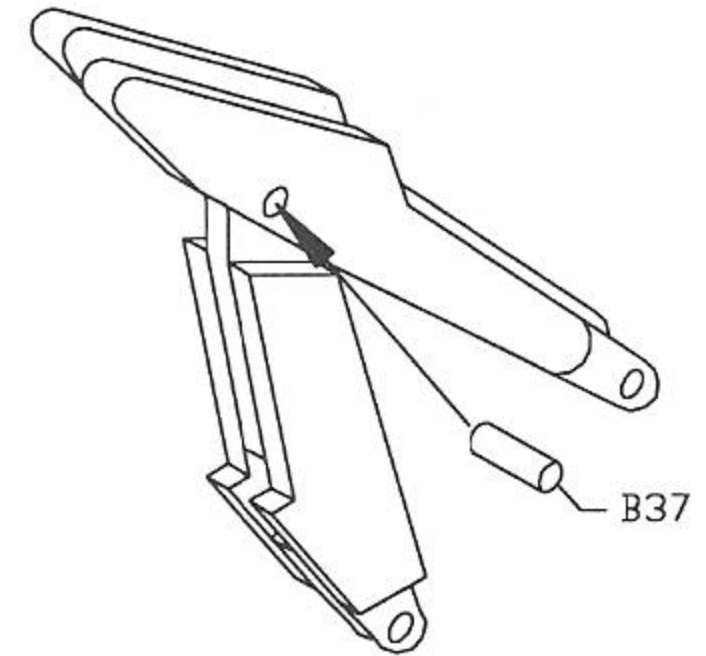


Insert pin B37.

25

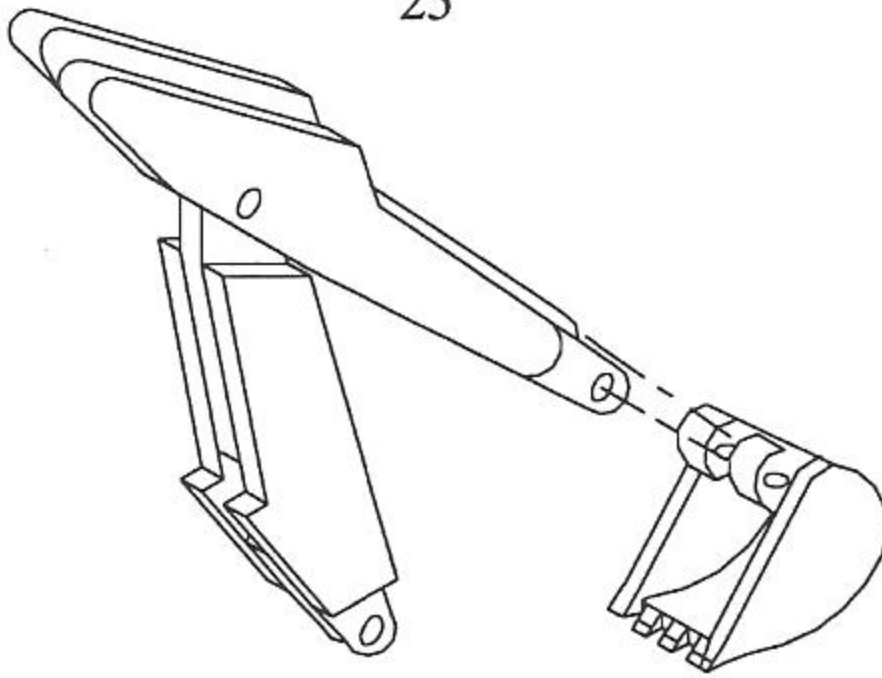


Slide shovel onto arm assembly.

26

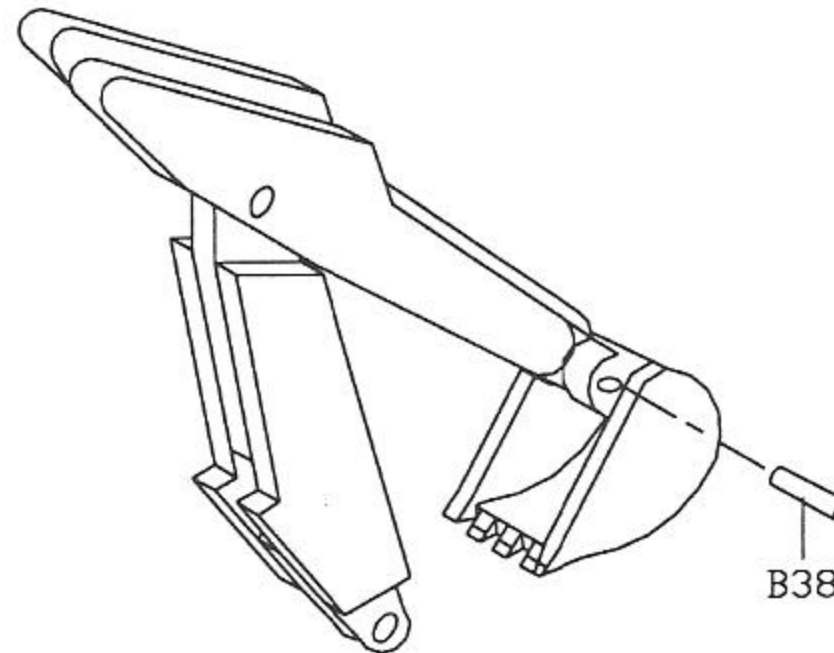


Insert pin B38.

27

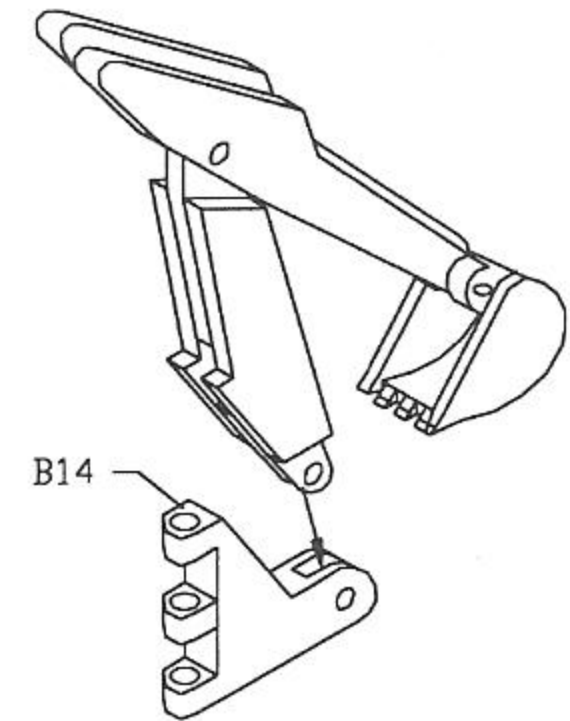


Slide arm assembly into holder B14.

28

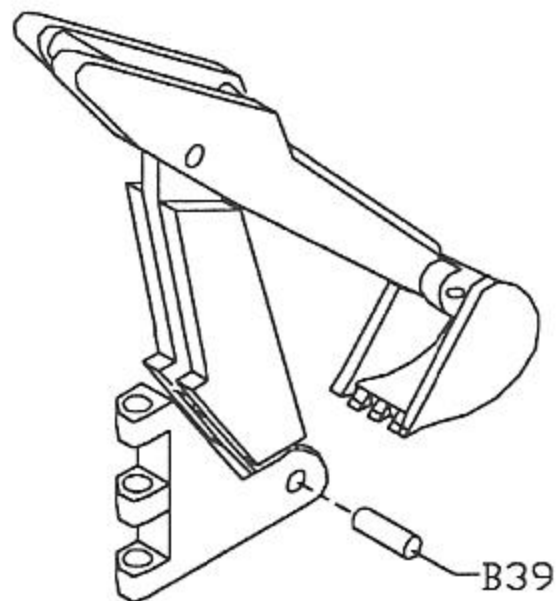


Insert pin B39.

29

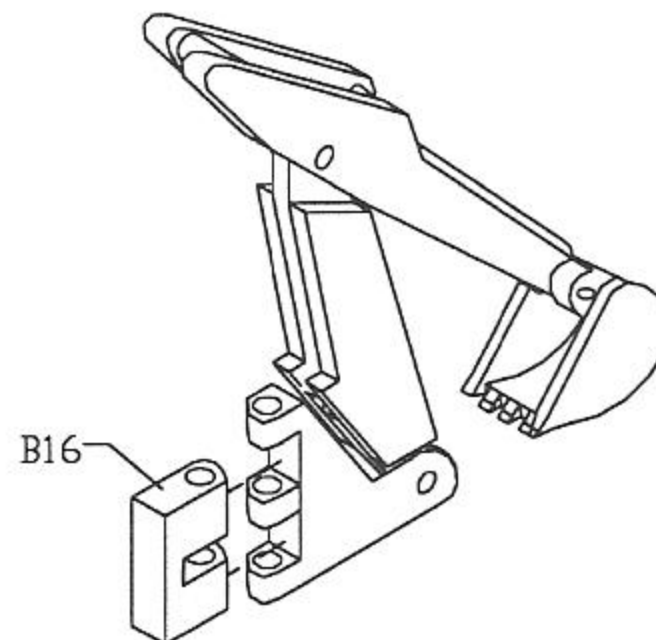


Slide arm assembly into support B16.

30

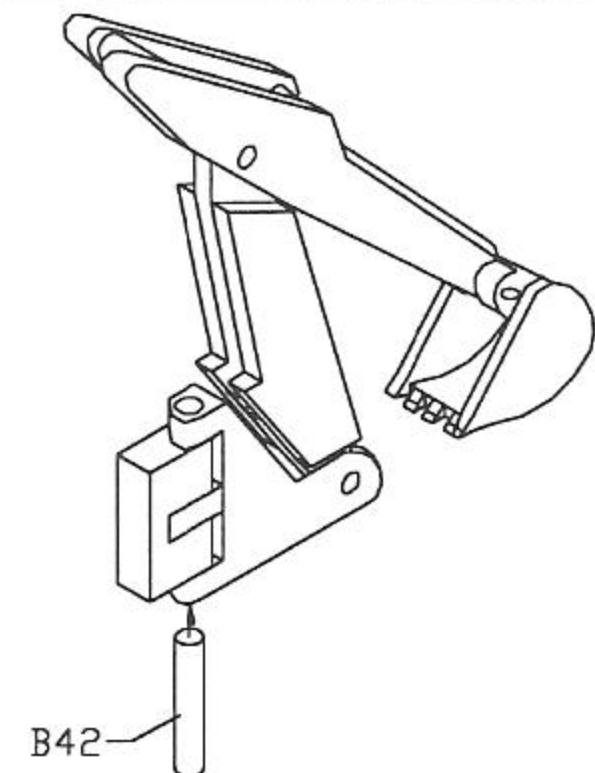


Insert pin B42.

31

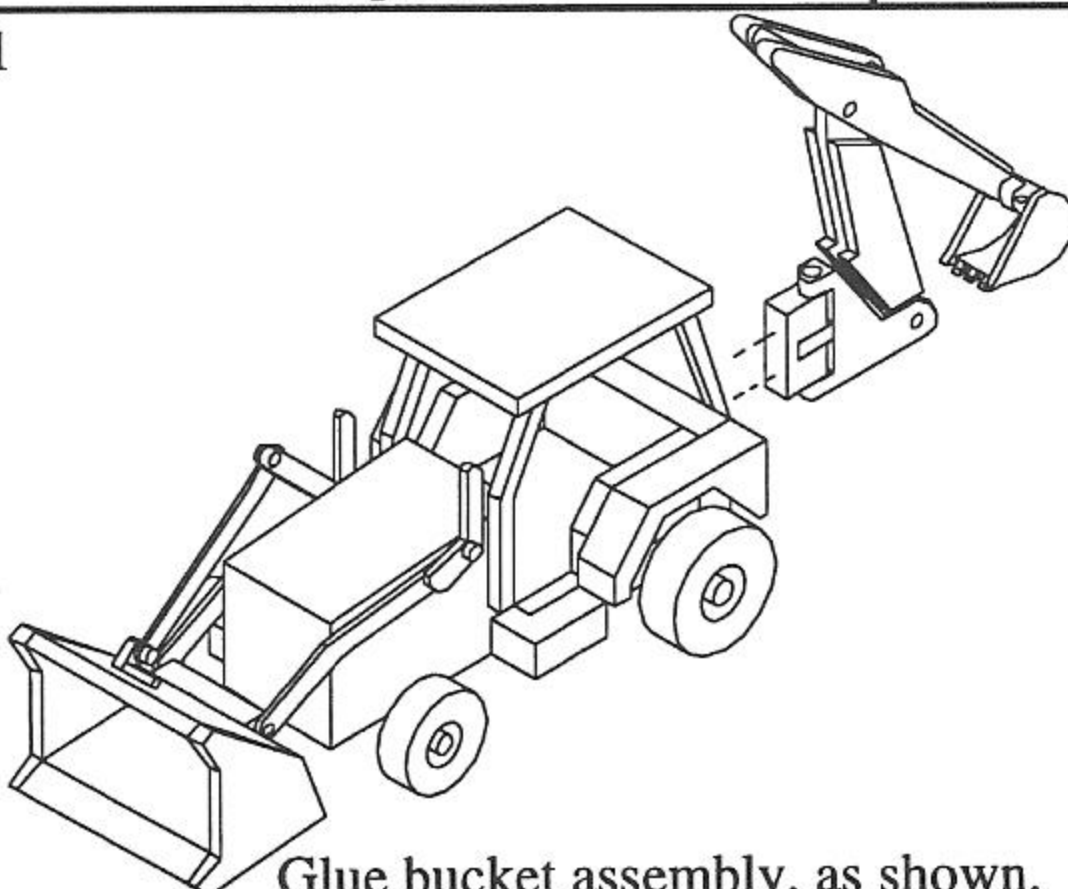


Glue bucket assembly, as shown.

32

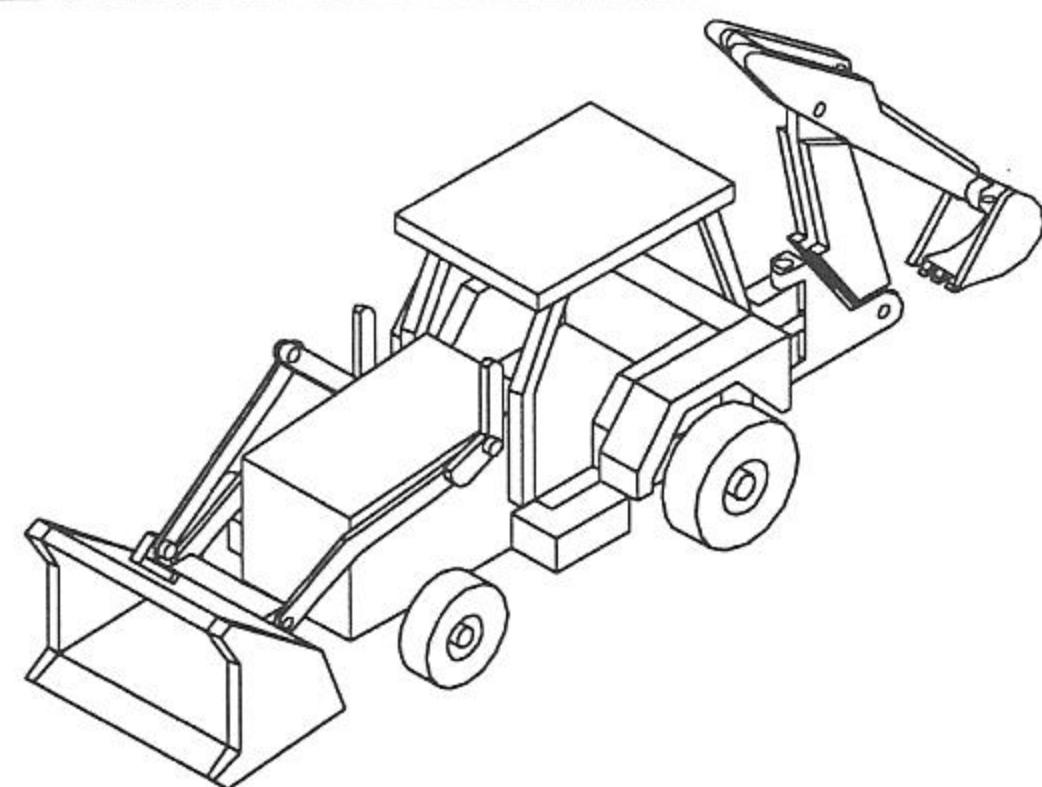

Your model should now be complete.

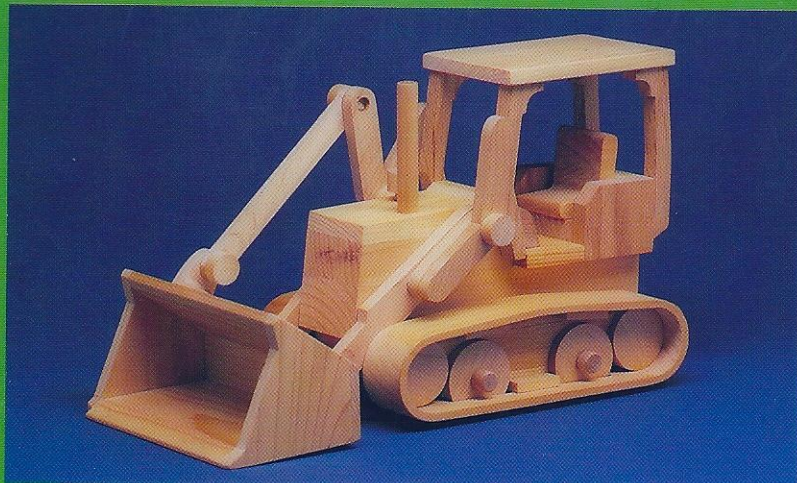


Move-It-Out Dozer Loader, page 33

Parents, grandparents and woodworkers with small children in their lives will love these chunky model construction toys. Built to last, these eight wooden toys make the perfect "made with love" gift for children ages five and older.

Each construction model features over-sized, exaggerated parts that are easy for little hands to manipulate. And the moveable wheels and buckets will keep imaginative children engaged in hours of creative play.

Complete assembly drawings for each of the eight toys make these projects simple for adults to make. The author also includes tested and proven parts lists and full-size cutting templates.

All of the models presented here can be made with common shop tools. The author recommends a scroll saw, a drill press, a belt/disc sander, a one-inch belt sander, a band saw, and a thickness planer.

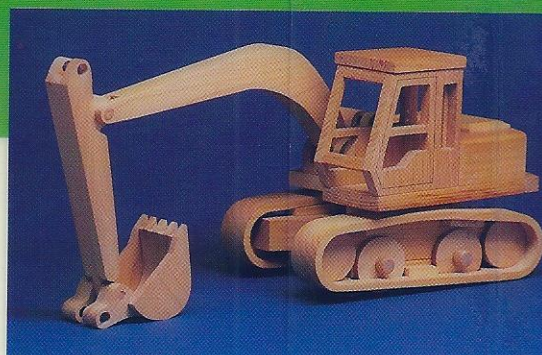

Scoop-and-Move Excavator, page 46




Heavy Duty Grapple Skidder, page 86


Start today on these toys:

- Move-It-Out Dozer Loader
- Scoop-and-Move Excavator
- Giant Grader
- Super Skidder
- Double Duty Backhoe
- Clear-the-Way Dozer
- Heavy Duty Grapple Skidder
- Lift'N Loader


Sample assembly drawings for Grapple Skidder

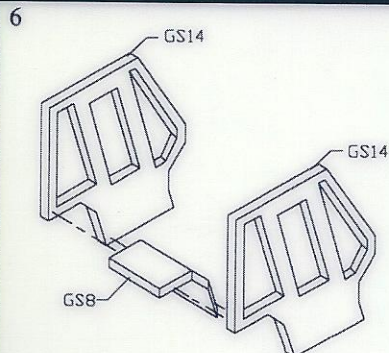

Glue front dash GS8, as shown.

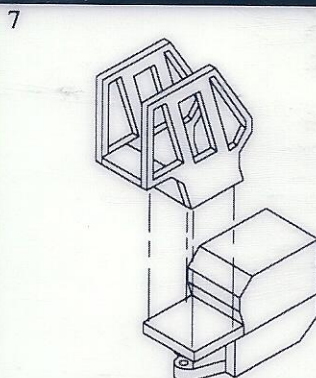

Glue cabin onto floor.

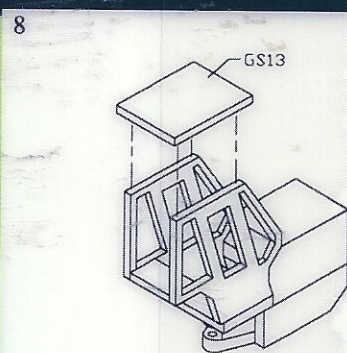

Glue roof GS13 onto cabin.



**Fox
Chapel Publishing Co. Inc.**

1970 Broad Street • East Petersburg, PA 17520 • www.foxchapelpublishing.com