

# woodshop Storage Solutions



RALPH LAUGHTON



# read this important safety notice

To prevent accidents, keep safety in mind while you work. Use the safety guards installed on power equipment; they are for your protection. When working on power equipment, keep fingers away from saw blades, wear safety goggles to prevent injuries from flying wood chips and sawdust, wear hearing protection and consider installing a dust vacuum to reduce the amount of airborne sawdust in your woodshop. Don't wear loose clothing—such as neckties or loose-sleeved shirts, or jewelry-such as rings, necklaces or braceletswhen working on power equipment. Tie back long hair to prevent it from getting caught in your equipment. People who are sensitive to certain chemicals should check the chemical content of any product before using it. The authors and editors who compiled this book have tried to make the contents as accurate and correct as possible. Plans, illustrations, photographs and text have been carefully checked. All instructions, plans and projects should be carefully read, studied and understood before construction begins. Due to the variability of local conditions, construction materials, skill levels, etc., neither the author nor Popular Woodworking Books assumes any responsibility for any accidents, injuries, damages or other losses incurred resulting from the material presented in this book. Prices listed for supplies and equipment were current at the time of publication and are subject to change. Glass shelving should have all edges polished and must be tempered. Untempered glass shelves may shatter and can cause serious bodily injury. Tempered shelves are very strong and if they break will just crumble, minimizing personal injury.

### metric conversion chart

| to convert                | to          | multiply by |
|---------------------------|-------------|-------------|
| Inches                    | Centimeters | 2.54        |
| $Centimeters\ \dots\dots$ | Inches      | 0.4         |
| Feet                      | Centimeters | 30.5        |
| Centimeters               | Feet        | 0.03        |
| Yards                     | Meters      | 0.9         |
| Meters                    | Yards       | 1.1         |

**WOODSHOP STORAGE SOLUTIONS.** Copyright © 2006 by Ralph Laughton. Printed and bound in Singapore, All rights reserved. No part of this book may be reproduced in any form or by any electronic or mechanical means including information storage and retrieval systems without permission in writing from the publisher, except by a reviewer, who may quote brief passages in a review. Published by Popular Woodworking Books, an imprint of F+W Publications, Inc., 4700 East Galbraith Road, Cincinnati, Ohio, 45236. First edition.

Distributed in Canada by Fraser Direct 100 Armstrong Avenue Georgetown, Ontario L7G 5S4 Canada

Distributed in the U.K. and Europe by David & Charles Brunel House Newton Abbot. Devon TQ12 4PU Tel: 01626 323200 Fax: 01626 323319 E-mail: postmaster@davidandcharles.co.uk

Distributed in Australia by Capricorn Link P.O. Box 704 Windsor, NSW 2756 Australia

Visit our Web site at www.popularwoodworking.com for information on more resources for woodworkers.

Other fine Popular Woodworking Books are available from your local bookstore or direct from the publisher.

10 09 08 07 06 5 4 3 2 1

Library of Congress Cataloging-in-Publication Data

Laughton, Ralph, 1956-

Woodshop storage solutions / by Ralph Laughton. -- 1st ed.

p. cm.

Includes bibliographical references and index.

ISBN-13: 978-155870-784-9 (pbk.: alk. paper) ISBN-13: 978-1-55870-949-2 (EPUB)

ISBN-10: 1-55870-784-0 (pbk.: alk. paper)

ISBN -13: 978-1-55870-812-9 (hc. : alk paper)

ISBN -10: 1-55870-812-X (hc. : alk paper)

1. Workshops--Equipment and supplies. 2. Workshops--Design and construction. 3. Storage cabinets--Design and construction. 4. Woodwork. I. Title.

TT152.L38 2006 684.1'6--dc22

2006016902

Acquisitions/Editor: Jim Stack Cover Designer: Brian Roeth Designer/Page Layout: Dragonfly Graphics, L.L.C. Illustrator: Len Churchill Photographer: Ralph Laughton Production coordinator: Jennifer L. Wagner



### dedication

In memory of Danny Proulx 1947–2004

### about the author

Ralph Laughton originally trained as an engineer but did not follow that path; instead, on leaving full-time education, he embarked on a career as an editor for a specialist publisher. This led him into the world of graphic design, where he found it possible to indulge a creative passion for well over 20 years. Then he decided to take a life-changing opportunity and make his lifelong passion a reality. Now a full-time woodworker, he is designing and building furniture, repairing old joinery and writing about the techniques he has spent nearly 40 years acquiring. He is an established author of woodworking books and a regular contributor to several U.K. woodworking magazines.

## acknowledgements

I would like to thank the following people for their help in the compilation of this book:

First, I would like to pay tribute to the late Danny Proulx. Without his encouragement and help I would not be writing this book. He was a prolific and knowledgeable writer of the many and varied techniques involved in woodworking and will be sorely missed.

My thanks are due to the good people at Trend Machinery & Cutting Tools Ltd. for their support with routing and cutters, DeWALT UK, Screwfix Direct and all the other people too numerous to mention who have helped out over the years.

Most of all, thanks are due to my long-suffering wife, Sue, who has not only read each and every word but has actively helped with the work shown in this book and collaborated on the design and photography of its content. She did this, as well as feeding and watering a sometimes grumpy and tired husband.

# contents

introduction page 6

PROJECT 1

chisel rack page 8

**PROJECT 2** 

sandpaper press page 12

PROJECT 3

small-items chest page 18

**PROJECT 4** 

router-cutters storage cabinet page 26

PROJECT 5

drill press cabinet page 36

PROJECT 6

tool tote and stool page 46

PROJECT 7

small offcuts storage trolley page 54

PROJECT 8

wall-hung cabinet page 62 PROJECT 9

downdraft table page 70

**PROJECT 10** 

clamp stand page 78

PROJECT 11

mobile table saw stand page 84

PROJECT 12

outfeed table page 90

**PROJECT 13** 

freestanding cabinet page 96

PROJECT 14

router trolley page 104

**PROJECT 15** 

computer station page 112

PROJECT 16

router table page 118

suppliers page 126 index page 127









# introduction

# This book is the story of a journey of discovery

made over several years. It shows that no matter how large or small a work-shop there is always something that can be made to improve the workshop's usefulness. The projects here are real: all have been built to solve a particular problem and are in use today.

The three locations where the projects have been built cover the whole spectrum of size and available equipment. The largest workshop was a small commercial unit covering 1250 square feet (116 square meters) with high ceilings and level access through roller shutters to a road-accessible yard. Some of the larger projects as well as some smaller things were built there.

The smallest venue for sawdust making is my  $8' \times 6'$  (244cm  $\times$  183cm) garden shed. This was the main workshop for the house, and all sorts of projects have been produced there over the 20-plus years it has been in use—everything from reproduction windows for our Victorian house to the small, simple, invaluable chisel stand.

The final venue is our new modestly sized home workshop, which has been built over the past couple of years. This is a purpose-made wooden building with an internal dimension of  $18' \times 12'$  ( $549 \text{cm} \times 366 \text{cm}$ ).

So you can see that whatever the size of your workshop or however limited your selection of tools, you can find something here for you.








# chisel rack

# Now to make something . . .

The projects in this book are all useful. Some will take a lot of work and result in substantial pieces of floor-standing furniture. Others will be just as useful but entail very little

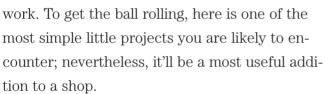


Chisels are best kept close at hand and in a manner that enables the user to select the correct size of chisel for the job as opposed to the first one that can be found. Of course, I would never compromise and use the only chisel I could lay my hand on . . . no, no, not me.



A rack is the best option, but it should not be a fixed rack, screwed to the wall. A sort of desk tidy for the bench that can be conveniently positioned for the job at hand is the idea here. As all the handles are similar, the only way to know which chisel is being selected is to be able

to see the blade. Standing the chisels with the blades up in a container would solve that problem but create another! A more sensible solution is to suspend them in a rack that has a solid back and has a piece of wood fixed across the lower portion of the front. This will make the sizes of the blades visible but prevent the sharp ends from harming anything else—like me.

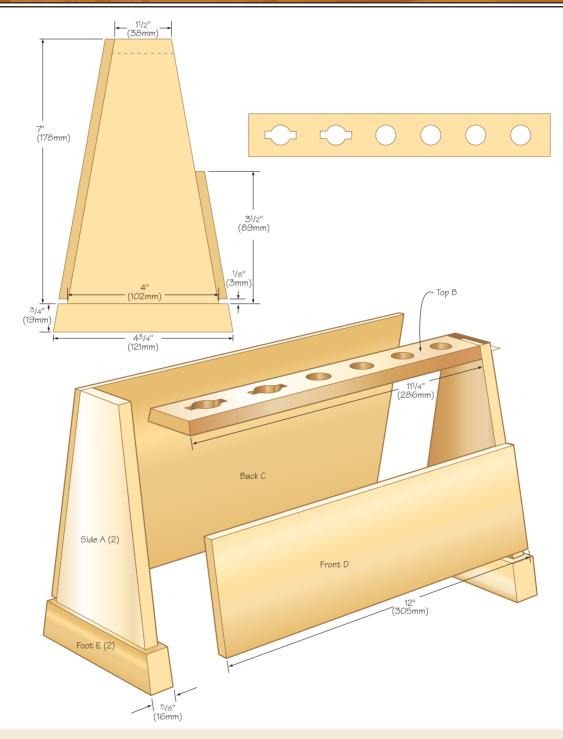

| chisel | rack | inches | (millimeters) |
|--------|------|--------|---------------|
|--------|------|--------|---------------|


|   | REFERENCE | QUANTITY | PART  | STOCK    | THICKNESS |      | WIDTH                         |       | LENGTH                         |       | COMMENTS |
|---|-----------|----------|-------|----------|-----------|------|-------------------------------|-------|--------------------------------|-------|----------|
| ı | Α         | 2        | legs  | MDF      | 3/8       | (10) | 4                             | (102) | 7                              | (178) |          |
| ı | В         | 1        | top   | hardwood | 3/8       | (10) | 11/2                          | (38)  | 11 <sup>1</sup> / <sub>4</sub> | (286) |          |
| ı | С         | 1        | back  | MDF      | 1/4       | (6)  | 7                             | (178) | 12                             | (305) |          |
| ı | D         | 1        | front | MDF      | 1/4       | (6)  | 3 <sup>1</sup> / <sub>2</sub> | (89   | 12                             | (305) |          |
| ı | Е         | 2        | feet  | hardwood | 5/8       | (16) | 3/4                           | (19)  | 4 <sup>3</sup> /4              | (121) |          |
| ı |           |          |       |          |           |      |                               |       |                                |       |          |

# chisel rack






The holes in the top of the rack can be made using a drill or a Forstner bit. However a cleaner hole can be easily cut using a small router and a template. This technique will enable any size of hole to be made without the need to buy lots of large drill bits that you may only use once. Although overkill used here, the method is worth illustrating. Any large hole cutter or Forstner bit can be used to make the template; use the appropriate bushing-guided cutter to cut the required-size hole.

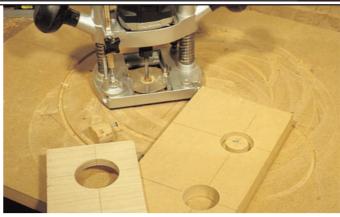

Make a template with an appropriate hole cut in it, in this case one with a  $1^{1}/4^{"}$  (32mm) diameter, and mark the quadrants. Add to the template a fence that is  $1/8^{"}$  (3mm) from the edge of the hole. Cut a strip of wood  $1^{1}/2^{"}$  (38mm) wide and  $12^{"}$  (305mm) long. Mark it up with a center line along its length and six cross lines at  $2^{"}$  (51mm) centers starting  $1^{"}$  (25mm) in from the end.

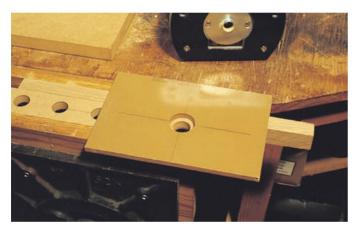

3 Align the hole-cutting jig with the cross lines and cut the six holes; the fence will ensure that all the holes are perfectly aligned. The fence will center the jig, and all that you need to do is align the cross lines to ensure even spacing. Clamp the template to the strip of wood or hold it in the vise using the fence to secure it. Use the router set up with an  $^{11}/_{16}$ "-diameter (17mm) guide bushing and a  $^{1}/_{4}$ " (6mm) cutter.



Slot the two end holes using the  $\frac{1}{4}$ " (6mm) cutter so that they accept the two larger chisels.



Cut the ends from <sup>3</sup>/8" (9mm) MDF and make them wider at the bottom than the top to aid stability. Chamfer or angle the top to match the sides. Add the back as a solid piece mounted just a few millimeters short of the bottom of the legs. This will prevent the rack from rocking on an uneven surface. Add the front from about the halfway mark down to the same distance from the bottom as the back. Secure all the parts together using fine panel pins (small nails) and glue, and that's it. This very simple little project will prove itself to be one of the most useful things you ever make for the bench top, and it can be stored full of chisels on a shelf when not on active duty.



# sandpaper press

# You know how some

things can be irritating: the dog next door still barking at the cat five minutes after the cat has gone to sleep on today's newspaper, or the mobile phone going off just

when you are trying listen to the latest baseball (or cricket) score. Well, the one thing that really grates on me is curly sandpaper—a change in humidity and off it goes trying to turn into sanding tubes.

The temporary solution has been the "scrap of plywood and a brick" approach. However, the time has come for a more professional solution to the problem. While we are in the mood for improvement we should make a simple cutting jig too.

The box needs to be just larger than a full sheet of sandpaper. Inside the box you'll use dividers between the sandpaper grades and a



weight to keep the whole stack flat.


A full sheet of sandpaper measures  $9" \times 11"$  ( $230 \times 280$ mm). The box interior needs to be slightly larger than that to allow the sheets to be inserted and removed without binding on the sides. The dividers are 1/16" (2mm) less than the width

of the box interior and the same length. They get profile cuts to make tabs that can be labelled on the front edge.

The carcass of the box gets made from <sup>3</sup>/<sub>4</sub>" (18mm) medium-density fiberboard (MDF), painted gray and edged with walnut. The <sup>1</sup>/<sub>4</sub>" (6mm) MDF back is set with a loose fit into grooves in the carcass. The weight gets made from a sandwich of MDF and some sheet lead (roofing lead offcut).

A simple sandpaper cutting jig and sized templates get built and stored on the top of the box.

# sandpaper press construction notes

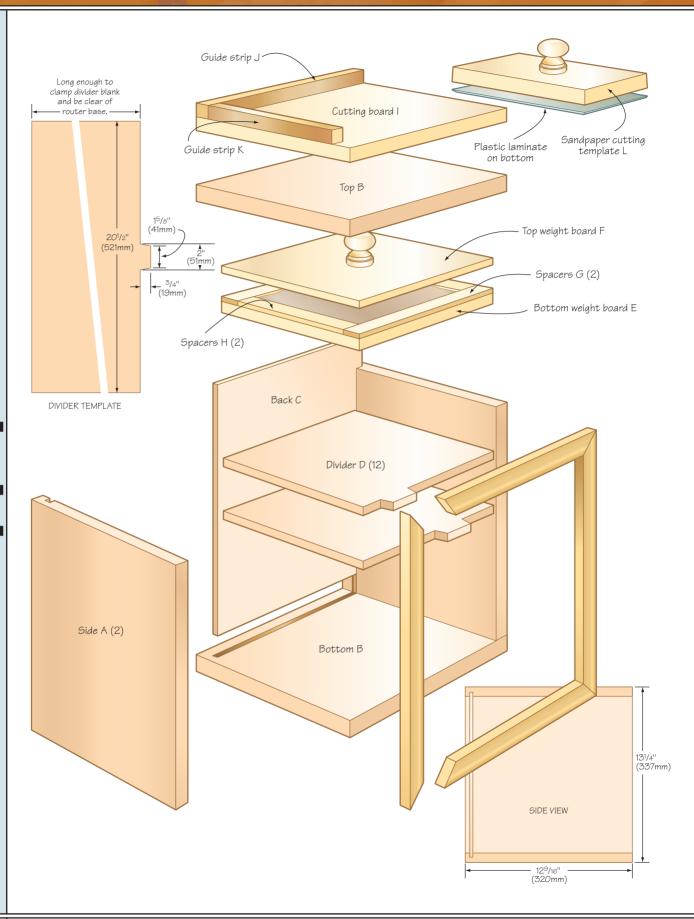

# sandpaper press

### sandpaper press inches (millimeters)

|           |          |                            |          | -                    |                                      |  | i          |
|-----------|----------|----------------------------|----------|----------------------|--------------------------------------|--|------------|
| REFERENCE | QUANTITY | PART                       | STOCK    | THICKNESS            | WIDTH                                | LENGTH                                 | CHINEFIELD |
| Α         | 2        | sides                      | MDF      | <b>3/4</b> (18)      | 12 <sup>9</sup> /16 (320)            | 11 <sup>3</sup> / <sub>4</sub> h (298) |            |
| В         | 2        | top and bottom             | MDF      | <b>3/4</b> (18)      | 10 <sup>5</sup> /8 (270)             | 12 <b>9/</b> 16 (320)                  |            |
| C         | 1        | back                       | MDF      | <b>1/4</b> (6)       | 10 <sup>1</sup> /8 (257)             | 12 <sup>3</sup> / <sub>4</sub> (324)   |            |
| D         | 12       | dividers                   | plywood  | <b>1/4</b> (6)       | 9 <sup>1</sup> / <sub>16</sub> (230) | 11 <sup>13</sup> / <sub>16</sub> (300) |            |
| Е         | 1        | bottom weight board        | MDF      | <b>3/4</b> (18)      | 9 <sup>1</sup> / <sub>16</sub> (230) | 11 <sup>13</sup> / <sub>16</sub> (300) |            |
| F         | 1        | top weight board           | MDF      | <b>1/4</b> (6)       | 9 <sup>1</sup> / <sub>16</sub> (230) | 11 <sup>13</sup> / <sub>16</sub> (300) |            |
| G         | 2        | spacers                    | MDF      | <b>1/4</b> (6)       | <b>3/4</b> (19)                      | 11 <sup>13</sup> / <sub>16</sub> (300) |            |
| Н         | 2        | spacers                    | MDF      | <b>1/4</b> (6)       | <b>3/4</b> (19)                      | 10 <sup>5</sup> / <sub>16</sub> (262)  |            |
| - 1       | 1        | cutting board              | MDF      | <b>3/4</b> (18)      | 10 <sup>5</sup> /8 (270)             | 12 <b>9/16</b> (320)                   |            |
| J         | 1        | guide strip                | hardwood | <b>3/4</b> (18)      | <b>3/4</b> (19)                      | 12 <b>9/16</b> (320)                   |            |
| K         | 1        | guide strip                | hardwood | <b>3/4</b> (18)      | <b>3/4</b> (19)                      | 9 <b>7/8</b> (251)                     |            |
| L         | 1        | sandpaper-cutting template | MDF      | <b>3/4</b> (18)      | 4 <sup>1</sup> / <sub>2</sub> (114)  | 5 <sup>1</sup> / <sub>2</sub> (140)    |            |
| М         | 1        | sandpaper-cutting template | MDF      | 3/ <sub>4</sub> (18) | 4 <sup>1</sup> / <sub>2</sub> (114)  | 11 (279)                               |            |

### hardware & supplies

3 11/4" (30mm)-diameter wooden knobs roofing lead or other heavy material to use as weight 1/4" (6mm) x 3/4" (18mm) x 50" (127cm) hardwood edging

bottom is laminated, cut slight bevel on edges bottom is laminated, cut slight bevel on edges



Rout the grooves in the carcass sides using a ¼"-diameter (6mm) straight cutter and a parallel guide fence attached to the router base.



2 Cut the biscuit slots using a simple right-angle jig. Rout the grooves for the back. Then dry assemble the parts to check for fit.



3 When all is ready, apply glue to the parts and clamp the assembly together. Make sure the box is square.



If you want to paint the box, do it now, before you apply the wood trim.



Measure and fit the hardwood trim to the front face of the box.



Cut the dividers from thin plywood to the depth of the box and  $\frac{3}{32}$ " (2mm) narrower than the interior width. Next, make a template from a suitable piece of MDF to the dimensions shown in the drawing. This will be used to form the tabs on the front edge of the dividers. The tabs are cut so that four dividers can span the width of the box before the next one's tab position coincides with the first. The same template is used to cut all tabs by moving its position along the various dividers in increments of  $2\frac{1}{4}$ " (57mm).



Draw around the tab with a pencil. Remove the bulk of the waste with a jigsaw. Clamp the template in position with the template below the divider. Fit a small router—or as shown here, a laminate trimmer—with a bearing-guided flush-trim cutter. Trim the divider to the line. Reposition the template on the next divider, one tab position over, and repeat. Continue until you have enough dividers for your needs. It is a good idea to make a few extras at this time to cater to any future expansion of the sandpaper stock.




In order to keep the sandpaper flat, a weight is required. No, not that old brick—it does not match the color scheme! Cut one piece of  $^1\!\!/_2$ " (12mm) and one piece of  $^1\!\!/_2$ " (6mm) MDF to the same size as a full sheet of sandpaper, 9"  $\times$  11" (229  $\times$  279mm). Cut some strips of  $^1\!\!/_2$ " (6mm) MDF to trim around the top surface of the  $^1\!\!/_2$ " (12mm) piece to make a tray. Cut a small square of the  $^1\!\!/_2$ " (6mm) MDF and glue it on the inside center of the board. This will act as a spacer and stop the sandwich compressing when the knob is fitted.




**9** The other piece of MDF will make the top of the weight. Fill the void with something heavier than the MDF—an offcut of roofing lead is ideal. Alternatively, a steel plate could be used if you have the means to trim it to size. Sand could also be used, but make sure it is absolutely dry first.


# sandpaper press

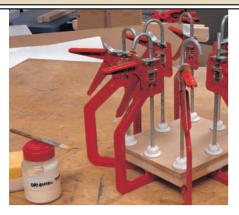

10 Glue the sandwich together and clamp. Let the glue cure overnight.

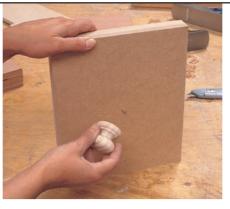


**11** Drill a hole through the center and attach a wooden knob.

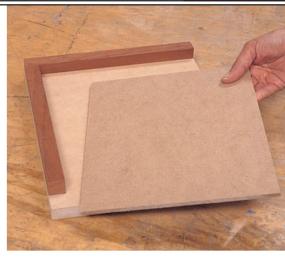

Cut a piece of  $\frac{3}{4}$ " (18mm) MDF to the same size as the top of the box. Trim the back and left-hand edge (right-hand edge if you are left-handed) with some strips of hardwood  $\frac{3}{4}$ " (18mm) square, to make an L-shaped alignment fence. Cut a second piece of MDF, this time from a  $\frac{1}{4}$ " (6mm) sheet, and  $\frac{3}{4}$ " (18mm) shorter and narrower than the first piece. This will act as a cutting board and can be replaced as it becomes worn.



13 Cut the sandpaper templates from 3/4" (18mm) MDF (which has been plastic laminated on the underside) at a slight angle on the edges in order to make cutting easier. This will provide a cleaner edge for the knife to follow. Make the templates to suit the sanders you have or the preferred size for hand sanding. Fix a wooden knob to the top surface, and the templates are ready to use.

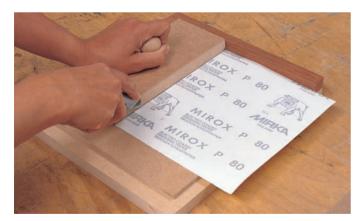

14 To use the sandpaper cutter and templates, place a sheet of sandpaper facedown on the jig, pushed into the corner and against both fences. Select the required template and place it onto the back of the sandpaper also against both fences. Trim the paper along the edge of the template with a knife. It is possible to tear the finer grades along the edge of the template if you wish. When cutting smaller sheets it is advisable to cut the finished size from a precut sheet, e.g., cut quarter sheets from a precut half sheet. This will keep you from ending up with lots of L-shaped sheets.



15 Fill the sandpaper press with the coarse grade at the bottom, using the dividers to separate the various grades, and place the weight on top of the stack. No more curly sandpaper!





# small-items chest

# Well, I am amazed.

For years I have spent a great deal of my leisure time trying to enhance the productivity of my woodworking by improving my working conditions and automating my tool col-

lection with the acquisition of power tools and machines. The trouble is that it is far too easy to start compromising the design to fit the tools, for example, letting the size that the jig will allow dictate the size of a dovetail.

Over the past couple of years I have spent some of the most enjoyable days of woodworking here in the garden shed getting back to




basics and hand tools. A nice new router is a great tool and it does a wonderful job, but nothing compares to enjoying the peace and quiet of the shed on a sunny afternoon while removing wafer-thin shavings of oak with a hand plane.

So why am I amazed? Because

I am enjoying working with limited resources again. Nothing in this shed cost a fortune. The tools, although not the very cheapest, are all readily available at a local home improvement store or by mail order. The space, or lack of it, makes for creative solutions. And I am creating something — not just running a noisy tool to produce it.

# small-items chest construction notes

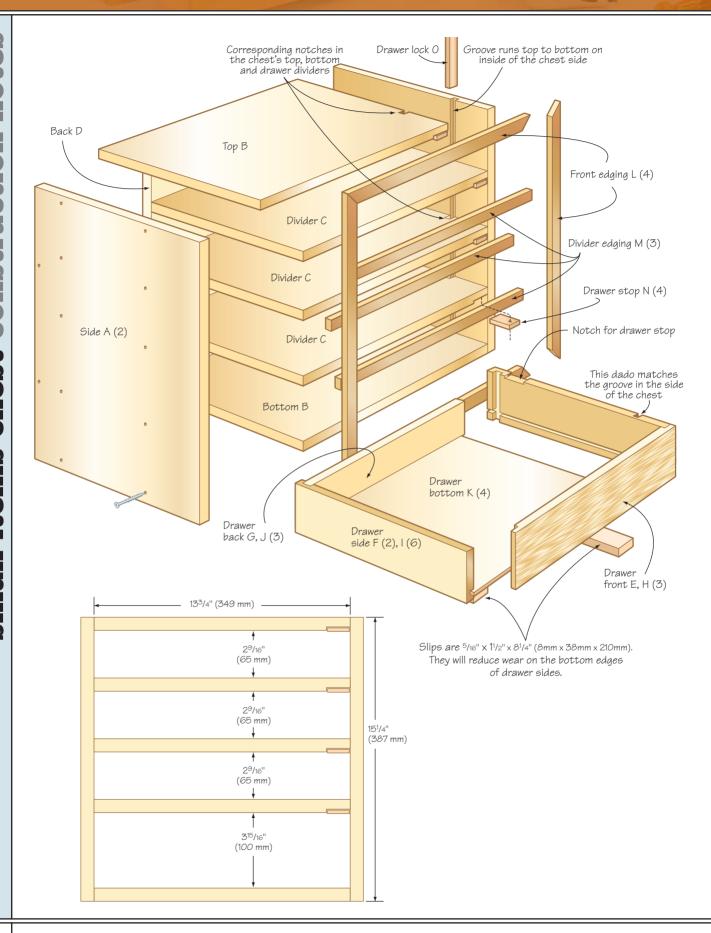

# small-items chest

# small-items chest inches (millimeters)

| REFERENCE | QUANTITY | PART            | STOCK    | THICKNESS |      | WIDTH                         |       | LENGTH                           |       | COMMENTS |
|-----------|----------|-----------------|----------|-----------|------|-------------------------------|-------|----------------------------------|-------|----------|
| Α         | 2        | sides           | MDF      | 3/4       | (18) | 10 d                          | (254) | 15 <sup>1</sup> / <sub>4</sub> h | (387) |          |
| В         | 2        | top and bottom  | MDF      | 3/4       | (18) | 10 d                          | (254) | 13 <sup>3</sup> /4               | (350) |          |
| C         | 3        | dividers        | MDF      | 3/4       | (18) | 9 <sup>1</sup> / <sub>4</sub> | (235) | 13 <sup>3</sup> /4               | (350) |          |
| D         | 1        | back            | MDF      | 3/4       | (18) | 13 <sup>3</sup> /4            | (350) | 13 <sup>3</sup> /4               | (350) |          |
| Е         | 1        | drawer front    | oak      | 3/4       | (18) | 3 <sup>15</sup> /16           | (100) | 13 <sup>3</sup> /4               | (350) |          |
| F         | 2        | drawer sides    | oak      | 1/2       | (13) | 3 <b>7/8</b>                  | (98)  | 9                                | (229) |          |
| G         | 1        | drawer back     | oak      | 1/2       | (13) | 3 <sup>3</sup> /8             | (86)  | 13 <sup>1</sup> /4               | (337) |          |
| Н         | 3        | drawer fronts   | oak      | 3/4       | (18) | 2 <sup>9</sup> /16            | (65)  | 13 <sup>3</sup> /4               | (350) |          |
| - 1       | 6        | drawer sides    | oak      | 1/2       | (13) | 21/2                          | (64)  | 9                                | (229) |          |
| J         | 3        | drawer backs    | oak      | 1/2       | (13) | 2                             | (51)  | 13 <sup>1</sup> /4               | (337) |          |
| K         | 4        | drawer bottoms  | plywood  | 1/4       | (6)  | 8 <sup>1</sup> / <sub>2</sub> | (216) | 13 <sup>1</sup> / <sub>4</sub>   | (337) |          |
| L         | 4        | front edgings   | oak      | 1/4       | (6)  | 3/4                           | (18)  | 15 <sup>1</sup> /4               | (387) |          |
| М         | 3        | divider edgings | oak      | 1/4       | (6)  | 3/4                           | (18)  | 13 <sup>3</sup> /4               | (350) |          |
| N         | 4        | drawer stops    | oak      | 1/4       | (6)  | 1                             | (25)  | 2                                | (51)  |          |
| 0         | 1        | drawer lock     | hardwood | 1/4       | (6)  | 1/2                           | (13)  | 15 <sup>1</sup> /4               | (387) |          |

### hardware & supplies

- 4 3"(75mm) homemade wooden drawer pulls
  - $7^{5/8}$ " x  $^{3/4}$ " (194mm x 19mm) lay-flat chest handle
- 30 2"(50mm) carcass screws
- 4 3/4"(20mm) screws



In a workshop full of tools, In a workshop and drawers can be knocked out with speed and precision. Saws and routers wailing away and the air thick with sawdust, the pile of soulless drawers grows rapidly. On the other hand, doing this by hand in the shed makes for an altogether relaxed affair. Design becomes what it should be: aesthetic and not primarily production efficient. Proportions can be dictated by function, and an awareness of the overall feel becomes paramount.



Planing one side of the oak flat. Plane the other side to thickness.



- The kit of parts is labeled and ready for assembly.
- Recess the drawer latches into the bottom of the drawer dividers and top using a guide bushing fitted to the router.





5 Cut the  $\frac{1}{4}$ " (6mm) × 1" (25mm) × 2" (51mm) recesses for the drawer stops using a router with a straight-cutting bearing-guided bit and a template cut from scrap material.



Attach the drawer stops using small screws. These stops are small pieces of wood that sit in the top of the drawer openings. The screw is tightened just enough to allow the latches to move. They will hang down at a slight angle after the chest is assembled. The drawer boxes have notches cut into them at the back of the right-hand sides. As the drawer is pulled forward, the latch will drop into the notch to stop the drawer. If the drawer is to be removed, the latch can be lifted with your finger while pulling out the drawer.

# small-items chest



Pilot and counterbore the sides and dividers. Using drywall screws, assemble the drawer box.



Then plug the counterbored screw holes with wooden plugs.



**9** Trim the wooden plugs flush to the surface of the drawer box using a sharp chisel. Cut and fit facing strips of oak. Using glue, attach them to the front edges of the drawer box.



10 Fit the drawer fronts to the openings in the drawer box. Note the notches with the drawer stops installed. After the hardwood edging is attached, these will be invisible.



Cut the drawer faces to rough length.



**1 2** Final fit the drawer fronts using your handplane.



Cutting large sheets of material is easily handled using a handsaw.

Here, I'm cutting the drawer bottoms to size.



The drawer faces are rebated (rabbetted) to accept the sides, and grooved to accept the bottoms. Two holes are drilled for the drawer pulls. The sides are cut to be the same height as the fronts and a groove is cut along their length to accept the bottom. A vertical housing is cut on the outside of the right-hand drawer side perfectly in line with the groove made in the cabinet side and a notch in the top. Two strips of oak are glued and pinned to the inside of the drawer sides below these grooves. These will help support the bottom and reduce the wear on the drawer dividers. The drawers are glued and pinned together. Then, the bottoms are installed and pinned in place through the bottom panel and into the bottom of the back.

# small-items chest



15 The top three drawers are all the same size and the bottom drawer is made deeper in order to accommodate some larger items. But design this box to fit your own tools and needs.



16 The finished chest showing the handle attached to the top. Note the hole in the top that will accept the drawer lock that runs top to bottom inside the chest to lock the drawers when the chest is being transported.



17 The drawers are the perfect size for holding plastic compartments that can serve as dividers to separate smaller parts.



# router-cutters storage cabinet


# The first

router I bought came with one cutter. It was a ¼" (6mm), High-speed steel (HSS), single-flute straight cutter that burnt the wood and became dull after a few minutes of abuse in my inexperienced hands. I then found a manufacturer's catalog

and discovered a whole new world of tungsten carbide (TC) router cutters: I thought I would never be able to afford them if they only lasted a few minutes! That was over 30 years ago, and my collection of router bits has since grown somewhat—I discovered how to not abuse them, of course!

Over the years I've aquired a large collection of cutters. The result is a box full of cutters I need to search through every time a particular cutter is required; picture a child raking through a box full of LEGO's searching for that elusive brick.

I wanted to organize the larger cutters by profile regardless of shank diameter. I also wanted to be able to identify each cutter with its own label. To make the best use of the space, one

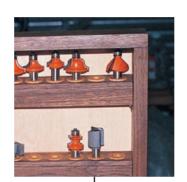


shelf has two rows of holes that will accept ½" (6mm)-shank cutters. However, my collection of larger cutters is mounted on various-size shanks [5/16" (8mm), ¾8" (10mm) and ½" (13mm)]. The single most important thing has to be the ability to rearrange the positions of these

cutters as the collection grows. This problem is resolved by using a standard size hole in the shelf that holds them and bushing the hole with a loose insert that matches the diameter of the shank. By moving the inserts around, you can house any cutter in any position. The shelf has a wide, shallow dovetail slot cut along the length of the front edge. Identification tags get sprung into position rather like the price labels on supermarket shelves. The cabinet is consructed from walnut with maple for the raised panel in the door and the back. The inserts get cut from a length of 25mm hardwood dowel. The cabinet gets assembled using dovetail joinery.

Enough is enough; it's time to build the cabinet!

# router-cutters storage cabinet construction notes

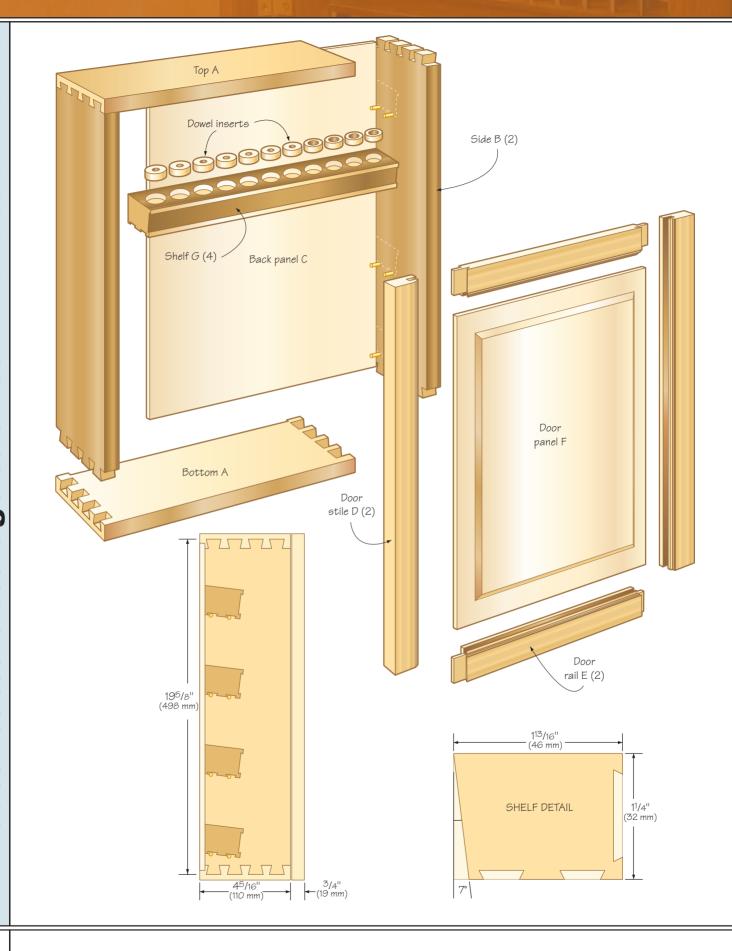

# router-cutters storage cabinet

### router-cutters storage cabinet inches (millimeters)


|           |          |                | _      |           |      |                     |       |                     | -     |          |
|-----------|----------|----------------|--------|-----------|------|---------------------|-------|---------------------|-------|----------|
| REFERENCE | QUANTITY | PART           | STOCK  | THICKNESS |      | WIDTH               |       | LENGTH              |       | COMMENTS |
| Α         | 2        | top and bottom | walnut | 3/4       | (19) | 4 <sup>5</sup> /16  | (110) | 15                  | (381) |          |
| В         | 2        | sides          | walnut | 3/4       | (19) | 4 <sup>5</sup> /16  | (110) | 19 <sup>5</sup> /8  | (498) |          |
| C         | 1        | back panel     | maple  | 1/4       | (6)  | 14 <sup>9</sup> /16 | (370) | 19 <sup>5</sup> /16 | (490) |          |
| D         | 2        | door stiles    | walnut | 3/4       | (19) | 2                   | (51)  | 20 <sup>1</sup> /4  | (521) |          |
| Е         | 2        | door rails     | walnut | 3/4       | (19) | 2                   | (51)  | 12                  | (305) |          |
| F         | 1        | door panel     | maple  | 5/8       | (16) | 11 <sup>1</sup> /2  | (292) | 15 <sup>3</sup> /4  | (400) |          |
| G         | 4        | shelves        | walnut | 11/4      | (32) | 1 <sup>13</sup> /16 | (46)  | 13 <sup>3</sup> /8  | (340) |          |
|           |          |                |        |           |      |                     |       |                     |       |          |

### hardware & supplies

- 2 2<sup>1</sup>/<sub>2</sub>" (65mm) brass hinges
- 1 11/4"-diameter (30mm) wooden knob
- 16 65mm shelf pins
- 55 1/2" × 1"-diameter (13mm × 25mm) dowel inserts (number of inserts to be determined by your personal needs.)



A trip to the local lumber merchants resulted in a few lengths of hardwood of dubious character. The odd knot here and there and a waney edge or two makes a big difference in price. There is plenty of room to select knot-free wood from the clear areas.

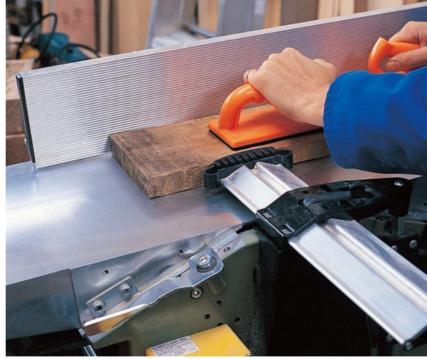

2 To achieve a square finish from sawn boards it is important to start by planing a true, flat surface on one side of the boards. Look at the boards end on and determine whether there is any cupping in any of the boards. Place the boards to be machined with the crowns uppermost and plane until they are perfectly flat. Now set the fence on the jointer 90° to the table and plane one edge of each board. You now have face sides and face edges perpendicular to each other. Plane the boards to final thickness, cut to proper width and you're ready to start building the cabinet.



Route the profile on the door frame components. Use featherboards to keep the stock in contact with the cutter and reduce the risk of kickback.




Reconfigure the cutter to scribe mode as detailed in the manufacturer's instructions. Follow these instructions and you won't go wrong.



Use a push block as a backer to support the rail and prevent any tear-out while routing the scribe.



6 Make a gauge for setting the height of the panel raiser.

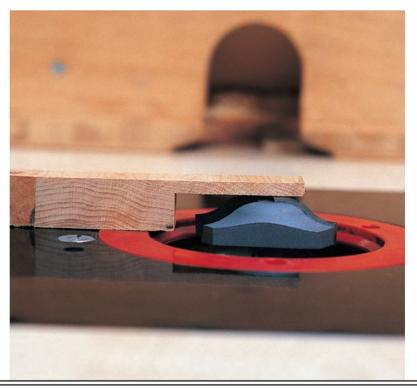

Use the gauge to set the height of the panel raiser. This is a quick, easy and accurate way to set the cutter height.

# router-cutters storage cabinet



The door panel blank is wider than the lumber, so glue up enough stock to make the proper width.



**9** Use a planer to flatten and cut the door panel to the proper thickness.



**10** Make the first pass of the door insert. When using a panel cutter, make partial cuts instead of hogging the entire cut in one pass.



11 For this panel, four small incremental cuts gets the panel raised properly. Note the clean cuts. Making small cuts lets the cutter do its work without overworking, which can quickly dull the cutter and most likely leave burn marks in the wood.

# adjusting dovetails

The cabinet is four pieces of walnut stock, dovetailed together with a thin maple back rebated (rabbeted) into it. Start by cutting the top and bottom to length. Using a dovetail jig and a router fitted with the ap-



propriate guide bushing and cutter, cut all the dovetails. Glue, clamp and check for square. When the assembly is dry, remove it from the clamps and rabbet the back edge to accept the maple back.

When cutting lap dovetails using a dovetail jig, the depth of the cutter will determine the tightness of the joint. Too deep and the joint will wobble; too shallow and the joint will be so tight you may not even be able to get the joint together. In soft woods, a little less tight can usually be accommodated by the inherent give in the wood. However, hardwoods such as walnut are far less forgiving. With a combination square as a depth gauge, the setting can be registered at the setup and checked between cuts to pick up any creep (from the original setting) that may have been caused by vibration during the cutting operation.




12 Check the fit of all the door parts prior to gluing.



13 Cut some insert blanks from a hardwood dowel. Cut as many as you think you'll need, then cut about 10 more for future additions to your collection of cutters.



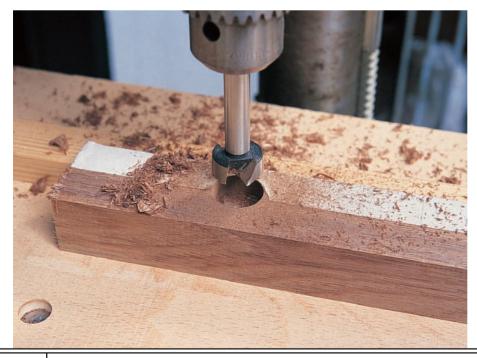

14 Clamp the blanks in place and drill properly sized holes to accept the shanks of your router cutters.

Use a Forstner bit and guide fence on the drill press to bore the 1" (25mm) sockets in the shelves.

# router-cutters storage cabinet



16 Drill the air holes with the fence kept in the same position as step 15.



**17** Drill three shelves with sockets. (The bottom one shows a test hole in the waste area.) The top shelf is to be drilled for the smaller 1/4" (6mm) shank cutters.




Test fit cutters in various-size inserts. This system of cutter storage allows you great freedom to organize.




19 Use a drilling template to properly locate the holes for the shelf supports. The template will ensure the correct positioning of holes on both sides.



**20** Use small panel pins or finish nails to secure the back of the cabinet in place.

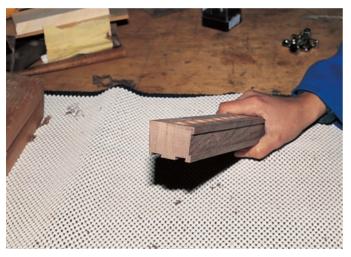


**21** The end of a finished shelf shows the profile and shallow dovetail detail on the front edge. Note the two shallow grooves in the bottom of the shelf: These align with the shelf brackets to hold the shelf securely in place.

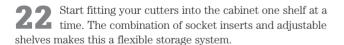



### router-cutters storage cabinet

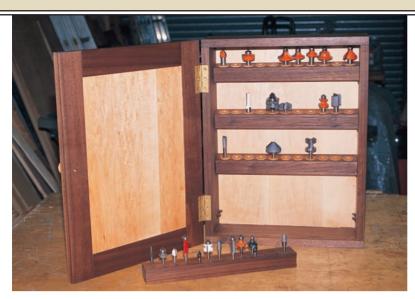

23 Install the hinges, attach the door and install the shelves.




**24** Install a wooden knob and you're done. In addition to being functional, this cabinet is handsome!

### hanging the cabinet

Use caution if you intend to hang the cabinet on the wall. Drilling through the back and screwing it to the wall will probably result in the back parting company from the carcass. Needless to say, neither the cutters nor the cabinet benefit from such a scenario!

One way to avoid this

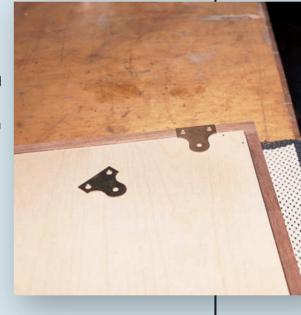


is to use mirror plates, intended as a means to secure mirrors (in frames) to walls or over fireplaces. Today, these small brass plates are frequently used to secure pictures to the walls in public places to prevent the pictures from being removed by the unscrupulous. In such situations, the plates are fitted so that the plate is visible and a screw can be inserted. However, by inverting them as shown in the photograph, you can secure them to the cabinet with screws through two of the holes and drill the back in line with the third hole. Now the cabinet can be hung on the wall with screws passing through the back and the plate.



## The small drill press is a

great little machine—so versatile yet underused if it has no permanent place to reside. For me this is due, in part, to my requirement to keep it portable so that I can use it

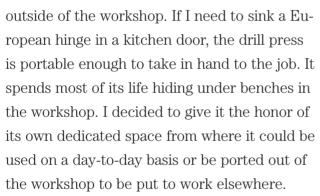

The other thing it needs is a bespoke table or a worktop. An offcut of medium-density fiberboard (MDF) bolted to the table and a scrap of wood clamped in place for a fence works well in a temporary situation but needs to be much improved to be practical in its new come-and-use-me role!

The working height of the drill press is




something that only you can decide. The height I have opted for here is 31½" (791mm), which is the height of the folding bench it invariably came to rest on in the past. What suits me might not suit you, so you may modify the dimensions accordingly.

From an aesthetic point of view, the new piece of workshop furniture has to match the other cabinets in the grand workshop refit plan—OK, the other cabinet, but you have to start somewhere! This is made from solid walnut and maple, which is fine for a relatively small router cutter cabinet (project four) but could get a little expensive if used to build a floor-standing cabinet carcass. In order to keep the cost of this project reasonable, 3/4"-thick (18mm) MDF is used to make a carcass for the walnut and maple door.

The new table is made from MDF edged with walnut and covered with plastic laminate. An adjustable fence is fabricated from maple to keep the theme going.



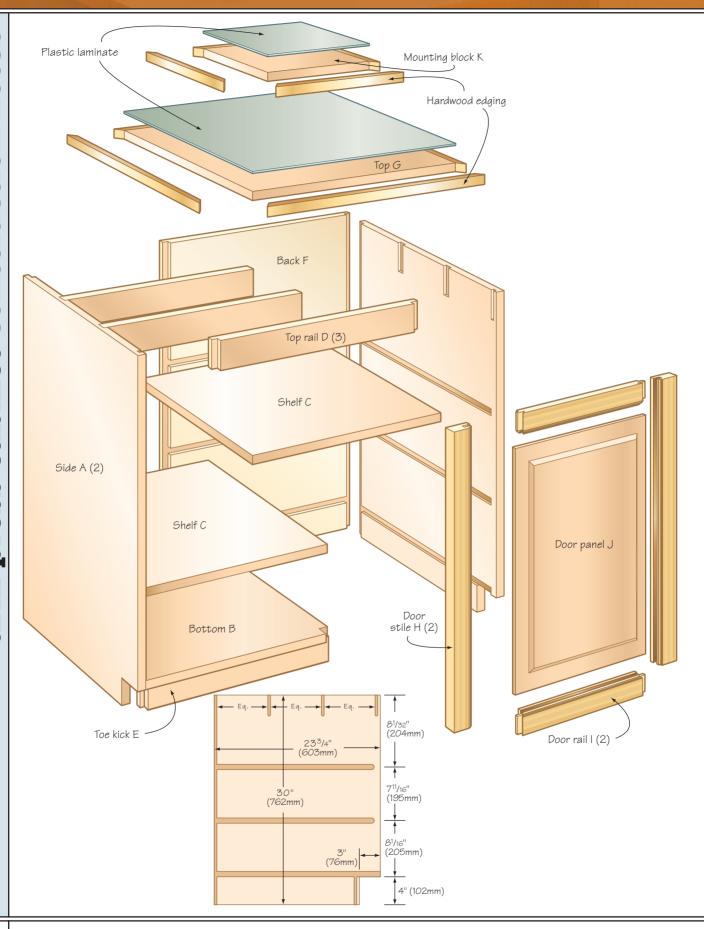


| dr        | ill      | press ca                | binet    | in                | ches | (mill               | imete | ers)                           |       |   | h                 | ardware & supplies  |
|-----------|----------|-------------------------|----------|-------------------|------|---------------------|-------|--------------------------------|-------|---|-------------------|---|
|           |          | _                       |          |                   |      | •                   |       |                                |       | 22  | 2                 | 170° European hinges  |
| RENC      | Ę        |                         | <b>×</b> | (NES              |      | Ŧ                   |       | E                              |       | COMMENTS  | 1                 | 1 <sup>1</sup> / <sub>4</sub> " (32mm)-diameter wooder                |
| REFERENCE | QUANTITY | PART                    | STOCK    | THICKNESS         |      | WIDTH               |       | LENGTH                         |       | COM   | 4                 | $\frac{3}{8}$ - 16 × 1 $\frac{1}{4}$ " (10M x 1.5 x 30 carriage bolts |
| Α         | 2        | sides                   | MDF      | 3/4               | (18) | 23 <sup>3</sup> /4  | (603) | 30                             | (762) |   | 1                 | 3/8" (10M) hex nuts   |
| В         | 1        | bottom                  | MDF      | 3/4               | (18) | 17 <sup>1</sup> /4  | (438) | 23 <sup>3</sup> /8             | (594) |   |                   | _   |
| C         | 2        | shelves                 | MDF      | 3/4               | (18) | 17 <sup>1</sup> /4  | (438) | 22 <sup>3</sup> /8             | (568) |   | 4                 | <sup>3</sup> /8" (10M) flat washers                                   |
| D         | 3        | top rails               | MDF      | 3/4               | (18) | 3                   | (76)  | 17 <sup>1</sup> /4             | (438) |   | 4                 | <sup>3</sup> /8" (10M) lock washers                                   |
| Ε         | 1        | toe kick                | MDF      | 3/4               | (18) | 4                   | (102) | 17 <sup>1</sup> / <sub>4</sub> | (438) |   | 2                 | 5/16 - 18 × 3" (8M x 1.25 x 75n                                       |
| F         | 1        | back                    | MDF      | 3/4               | (18) | 17 <sup>1</sup> /4  | (438) | 30                             | (762) |   |                   | carriage bolts  |
| G         | 1        | top                     | MDF      | 3/4               | (18) | 18 <sup>7</sup> /16 | (468) | 24 <sup>7</sup> /16            | (621) | edged with hardwood                             | 1                 | <sup>5</sup> /16" (8M) hex nut  |
| Н         | 2        | door stiles             | hardwood | 3/4               | (18) | 21/4                | (57)  | 26                             | (660) |   | 1                 | <sup>5</sup> /16" (8M) wing nut                                       |
| I         | 2        | door rails              | hardwood | 3/4               | (18) | 21/4                | (57)  | 14 <sup>1</sup> /4             | (362) |   | 2                 | 5/16" (8M) flat washers   |
| J         | 1        | door panel              | hardwood | 9/16              | (14) | 14                  | (356) | 22                             | (559) |   |                   | 7/16" × 3/4" × 250"   |
| K         | 1        | mounting block          | pine     | 1 <sup>1</sup> /8 | (29) | 10                  | (254) | 10                             | (254) | edged with hardwood                             |                   | (11mm × 18mm × 635cm) hard  |
|           | 1        | drill press table       | MDF      | 3/4               | (18) | 12                  | (305) | 24                             | (610) | edged with <sup>3</sup> / <sub>4</sub> " (18) x | <sup>13</sup> /16 | " (21mm) hardwood, laminate   |
|           | 1        | drill press table fence | hardwood | 1 <sup>1</sup> /8 | (29) | 2                   | (51)  | 24                             | (610) |   |                   |   |
|           |          |                         |          |                   |      |                     |       |                                |       |   |                   |   |

### hardware & supplies

- 170° European hinges
- 1<sup>1</sup>/<sub>4</sub>" (32mm)-diameter wooden knob
- 3/8 16 × 1<sup>1</sup>/<sub>4</sub>" (10M x 1.5 x 30mm) carriage bolts
- 3/8" (10M) hex nuts
- 3/8" (10M) flat washers
- 3/8" (10M) lock washers
- 5/16 18 × 3" (8M x 1.25 x 75mm) carriage bolts
- 5/16" (8M) hex nut
- 5/16" (8M) wing nut
- 5/16" (8M) flat washers
- 7/16" × 3/4" × 250"
- $(11mm \times 18mm \times 635cm)$  hardwood trim



1 Drill press under bench—Ah! There it is...

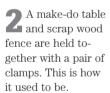





3 Cut out the parts for the cabinet. Trim the recess for the kick space in the side panels.



4 Lay the sides on a bench with their back edges touching and in perfect alignment. Mark the locations for the shelf and bottom panel housings (dadoes). Use a straightedge guide and a <sup>23</sup>/<sub>32</sub>"-diameter (18mm) straight cutter to rout the dadoes.



Cut the upper dadoes, for the dividers, back and the toe kick.




6 Add glue to the dadoes and assemble the cabinet.



Toenail the parts in place to add extra strength to the cabinet.



Select the maple pieces from which the door panel blank is to be made, and trim them to rough length. Be sure the mating edges are square and true. Place the boards together in their intended orientation and mark out the finished size and position of biscuits. Keep the biscuits within the raised area to avoid them showing after the panel has been routed. Then cut the biscuit slots.

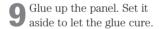



 $10^{\rm Rout\ the\ profile\ on\ the\ door\ rails\ and\ stiles.}$ 




**11** Rout the end profile on each end of the rails. Use a backer board to prevent tear-out on the rails.



 $oldsymbol{12}$  Rout the profile of the door panel. Make this cut in several light passes.




13 Assemble the door and check it for squareness.

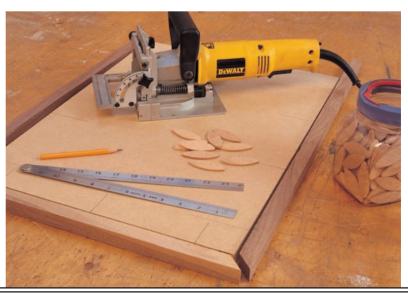

**14** Trim the worktop with walnut strips secured with No. 10 biscuits.



**15** Pour some contact adhesive into a jar, and use a brush to apply a thin coat to the surface of the MDF and trim. Let this dry about 20 minutes, then apply a second coat. Finally, apply a coat to the back of the plastic laminate, and set this aside until almost dry—about 10 minutes. (If the humidity is high, it will take longer for the contact adhesive to dry.)

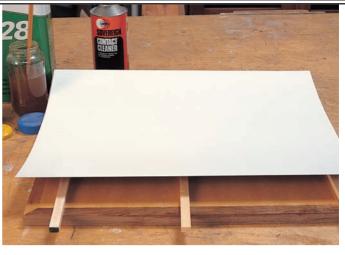

16 When the contact adhesive is dry to the touch, place thin strips of wood over the glued surface and position the laminate on top of them.




**17** Remove the strips, starting in the center and working toward the outside. Apply pressure with the aid of a J-roller.



18 Use a trim router to cut the laminate flush with the edges of the top.




**1 9** Use knockdown blocks to secure the top to the carcass.

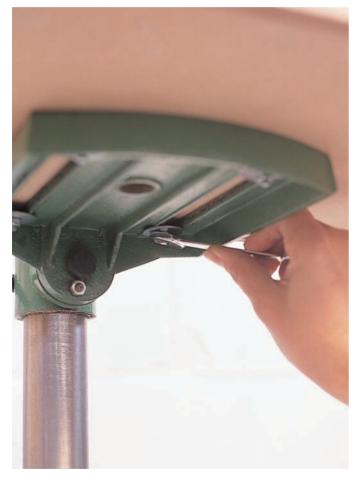

2 1 Cut out the drill press table. Drill and counterbore four holes from the top of the table to coincide with the outer end of the slots on the drill press's metal table. Pass four bolts through the holes and hold them in place with an epoxy filler. When the filler is dry, sand the filler flush with the MDF. Edge the table with hardwood and laminate the top. Then mount the table on the metal table of the drill press and secure it with washers and hex nuts threaded onto the captured bolts.




 $20\,$  Make the mounting block from a  $1^{1}/8^{"}$ -thick (29mm) piece of pine edged with walnut and laminated and trimmed the same as the top. Drill two holes through it to align with the cast base of the drill press. Then position the block on the top of the cabinet and secure it from underneath with screws. Extend the two mounting holes through the top. Secure the drill press in position with bolts, nuts and washers.

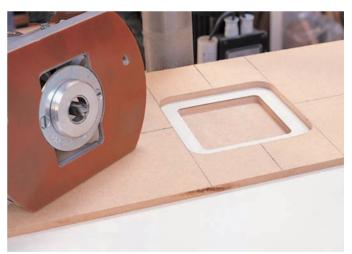

22 Make a template from 1/4"-thick (6mm) MDF for the sacrificial insert. The size of the insert should be about 3" (76mm) square. Using a guide bushing and collar, cut the recess to a depth of 1/2" (12 mm). Square the corners with a sharp chisel, taking care not to chip the laminate.



Remove the collar from the guide bushing and use the same template to cut squares from ½"-thick (12mm) MDF. These can be inserted into the recess and replaced when required.

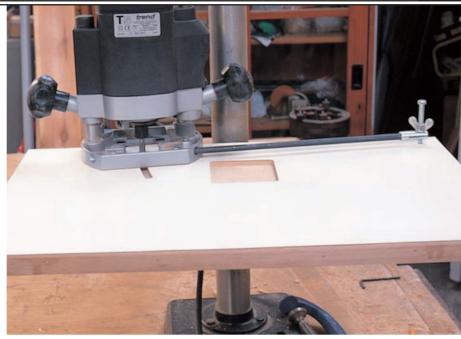

24 Drill a small hole 1" (25mm) in from the back right-hand side of the table. Mount a single rod in a router fitted with a 5/16"-diameter (8mm) straight cutter. Fit a trammel pivot onto the other end of the rod and cut an arc starting 1" (25mm) in from the back of the table to a point just forward of the center line of the drill's chuck.



25 Drill a 5/16" (8mm)-diameter hole at one end of the fence to align with the hole in the table and a second hole at the other end to align with the arc. Use bolts, washers and wing nuts or threaded knobs to lock the fence into its required position.



26 Using the new worktop and adjustable fence to hold the door in place, drill holes for the hinges. Install the hinges and hang the door.





# tool tote & stool

### If you have the luxury

of your own workshop you probably have all your tools stored in beautifully crafted cabinets. Each tool has its place and is judiciously replaced after each use, but not



Reality dictates that no matter how good the intentions, more storage places are needed than are available. The ever increasing tool collection evolves into groups: bench tools, home repair tools, metalworking tools, etc. However some tools—hammers, screwdrivers, saws, measuring tools and so forth—are needed regardless of the job.

Rather than gathering these tools from storage in a fixed cabinet, you can use a tool




tote of some kind to house these frequently required tools. You can then take it to the workplace, whether that is at the bench, in the house or in the garden, for that matter. The problem I have found with this is that the tote or caddy needs somewhere to sit while you work. Parking it on

the floor is inconvenient if you are working at the bench in the shop or on a portable bench elsewhere.

Building a stand for the caddy would solve the height problem but would hardly justify the effort. However if you were to build something useful that could also double as a stand, well that's a different matter.

A stool is the answer. It consists of a top surface that matches the dimensions of the toolbox, a pair of legs and a stretcher. The legs splay slightly wider than the width of the top and are splayed to match the length. A handhold cut into the top and clearance in the top of the stretcher allow for fingers to pass through, making it easy to move from one location to another.

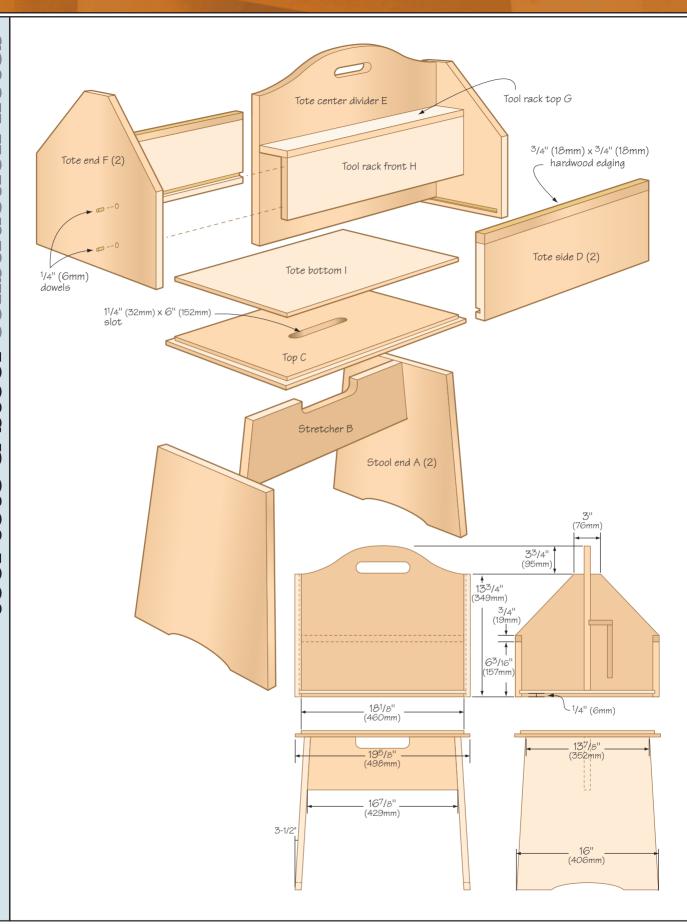

### tool tote & stool

### tool tote & stool inches (millimeters)

| REFERENCE | QUANTITY | PART                | STOCK   | THICKNESS |      | WIDTH              |       | LENGTH               |       | COMMENTS  |
|-----------|----------|---------------------|---------|-----------|------|--------------------|-------|----------------------|-------|---|
| Α         | 2        | stool ends          | MDF     | 3/4       | (18) | 16                 | (406) | 16                   | (406) |   |
| В         | 1        | stretcher           | MDF     | 3/4       | (18) | 6                  | (152) | 16 <sup>7</sup> /8   | (429) | 3 <sup>1</sup> / <sub>2</sub> ° angle both ends |
| C         | 1        | top                 | MDF     | 3/4       | (18) | 19 <sup>5</sup> /8 | (498) | 16 <sup>3</sup> /8   | (416) |   |
| D         | 2        | tote sides          | MDF     | 3/4       | (18) | 6 <sup>3</sup> /16 | (157) | 18 <sup>1</sup> /8   | (460) |   |
| Е         | 1        | tote center divider | MDF     | 3/4       | (18) | 17                 | (432) | 18 <sup>5</sup> /8   | (473) |   |
| F         | 2        | tote ends           | MDF     | 3/4       | (18) | 16 <sup>1</sup> /8 | (410) | 13 <sup>3</sup> /4 h | (349) |   |
| G         | 1        | tool rack top       | MDF     | 1/2       | (12) | 21/2               | (64)  | 18 <sup>1</sup> /8   | (460) |   |
| Н         | 1        | tool rack front     | MDF     | 1/2       | (12) | 6 <sup>5</sup> /8  | (168) | 18 <sup>1</sup> /8   | (460) |   |
| 1         | 1        | tote bottom         | plywood | 1/4       | (6)  | 12 <sup>3</sup> /4 | (324) | 18 <sup>5</sup> /8   | (473) |   |
|           |          |                     |         |           |      |                    |       |                      |       |   |



The original stools are still in use years after they were consigned to the skip.



How many tools can you fit in a tool tote? The original tote is too big for domestic use and gets heavier on every outing.



Begin by building the tool tote. To protect the top edges of the sides, lip them with hardwood strips. You could use birch-faced cabinet-grade plywood instead of MDF, but that would be fairly expensive and, lets face it, this box is meant to be functional. Good looks are a bonus here. Use biscuits and glue to attach the strips to the sides. Then, use a router and a roundover bit to rout the inner edge of the hardwood lipping. Leave the outer edge square, and remove the arris with a single stroke of a finely set block plane.



Route a 1/4" (6mm) wide by 1/4" (6mm) deep groove along the bottom inside edge of the side (the same side as the roundover) to accept the plywood bottom.



**5** Cut the stopped grooves for the bottom using the router setup used to cut the grooves in the sides. Then cut the ends to shape.




 $6\,$  Cut a vertical groove in the end panels for the center divider. This groove can be cut with a  $^{23}\mbox{/}_{32}\mbox{"-diameter (18mm)}$  straight cutter.

### tool tote & stool



**7** Use cardboard to make a template for the curve of the handhold. Fold the cardboard in half, draw half the profile, and cut it out. Unfold the template and you'll have a perfectly symmetrical pattern for the shape of the handhold. Use the template to mark the curve on the top of the divider.

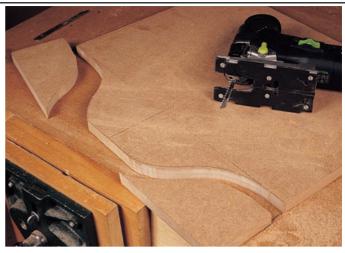


Rough-cut the shape of the divider using a jigsaw.



9 Sand to the line of the handhold shape. Here I'm using a 3"-diameter (76mm) sanding drum in the drill press. Cut the handhold using a 1½" (32mm) spade bit. Bore the holes from each side to the center to avoid breaking out the MDF. Join the holes using a jigsaw, and sand smooth. Use a bearing-guided roundover cutter to smooth the edges of the cutout. Then cut a horizontal groove in the center divider for the tool rack.



10 Use biscuits and glue to join the sides to one end, and insert screws through the ends into the sides. Then set the plywood base into the groove and secure the other end in place using biscuits, glue and screws. Glue the central divider into the grooves in the sides and secure it with screws.

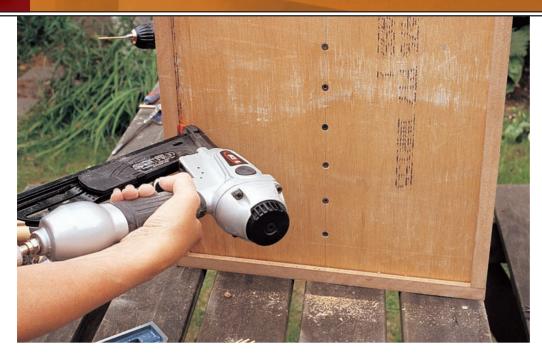

11 Toenail the bottom into the sides from underneath and screw it to the bottom edge of the divider to further strengthen the tote.



Make the chisel and tool rack from ½"-thick (12mm) MDF. Drill holes or make slots to accommodate the tools that you are going to store in it. Round over the front edge. Glue the rack into the groove cut into the divider.




13 Attach a front skirt to the tool rack to prevent the sharp edges of the chisels from getting damaged and causing damage (mainly to you!). Secure it in place using glue and small dowels driven through the ends of the tote.





### tool tote & stool



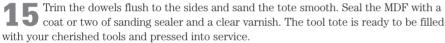



16 Move on to the stool. Cut the legs to of the stool to size and shape. Lay out the curve at the bottom. Make the cutout to create feet, which prevent the stool from rocking on an uneven surface. Cut the stretcher to size, and cut out the space for the handhold. Attach the two legs to the stretcher using glue and screws. Then plug the screw holes and trim the plugs flush to the surface of the legs. Cut the top to size and attach it to the leg assembly using glue and screws.



Using a straight cutter and a parallel fence attached to a router base, cut a rabbet ½" (6mm) deep by 23/32" (18mm) wide around the top surface. Cut the handhold using a 1½" (32mm) spade bit. Join the holes using a jigsaw and sand smooth. Use a bearing-guided roundover cutter to smooth the edges of the cutout. Check that the tool tote fits onto the rabbet and adjust the rabbet if necessary.



**18** Seal the MDF of the stool with a coat or two of sanding sealer and a clear varnish. The stool can be used as a sawhorse or as a stool.

# small offcuts storage trolley

### There comes a point when

the offcuts that might come in handy one day become a liability, a stack in the corner that is constantly falling over or getting in the way. Next comes a great temptation to

clear it all out and start again. After all, finding a suitable piece of wood in that chaos becomes harder and harder. The thought of going through all those pieces of wood, expecting a cascade of wood every time the stack slips a little, is just too much. I am sure you know the feeling.

I have tried the "chuck it if it is under a certain length or width" routine and have even done some major clearing out from time to time, but the pile still becomes unmanageable very quickly. The trouble is that as soon as that piece of oak strip gets thrown out, a use for it arises the very next day.

What this lot needs is a home: not a big home, but a relatively small home that can be




moved around easily to a convenient position when it is needed and out of the way when it is not.

This unit is not for storing large pieces or even sheet goods—these are all stored elsewhere and do not create the same problems. This is for all those small strips, dowel

lengths and blocks. The whole thing is only 195/8" (498mm) wide and 14" (356mm) deep. The small size will automatically limit your collection—if a piece will not fit because the compartment is full, either swap it or get rid of it.

This restriction will pare your collection down to useful pieces by a process of natural selection as long as you abide by the rules. My offcuts are managed in this way at the moment. I have been using an old plastic swing bin without the lid. The trouble with this is that all the shorter bits get lost in the bottom of the bin, but what it has done is keep the salvage down to a minimum.

# small offcuts storage trolley construction notes

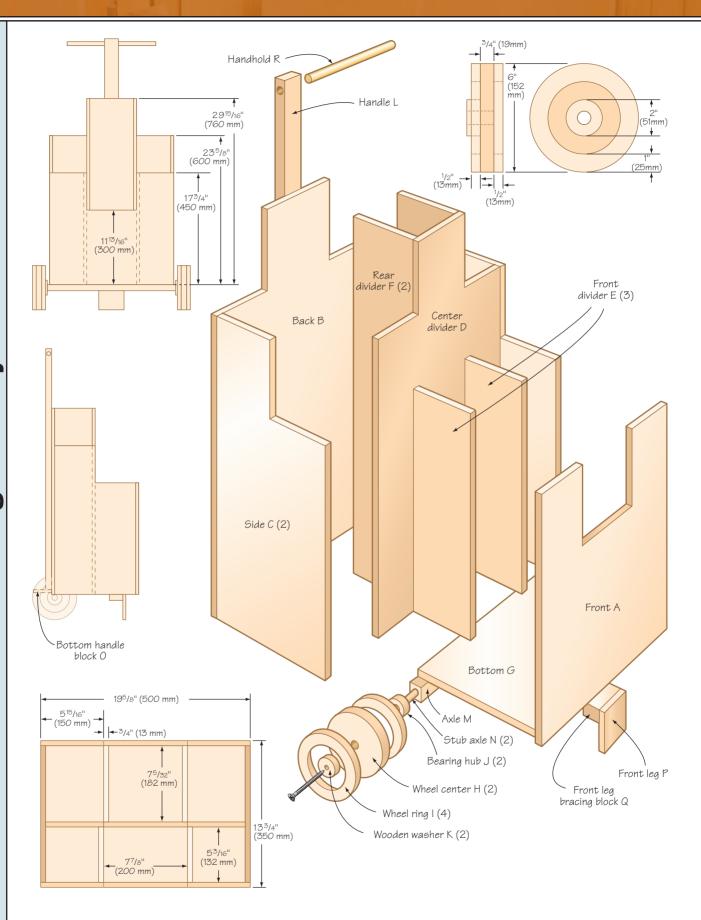

### small offcuts storage trolley


### small offcuts storage trolley inches (millimeters)

|           |          |                         |          | <b>J</b>     |      |                                  |       | ,                             |        |          |
|-----------|----------|-------------------------|----------|--------------|------|----------------------------------|-------|-------------------------------|--------|----------|
| REFERENCE | QUANTITY | PART                    | STOCK    | THICKNESS    |      | WIDTH                            |       | LENGTH                        |        | COMMENTS |
| Α         | 1        | front                   | MDF      | 1/2          | (12) | 19 <sup>11</sup> /16             | (500) | 17 <sup>3</sup> /4            | (451)  |          |
| В         | 1        | back                    | MDF      | 1/2          | (12) | 19 <sup>11</sup> / <sub>16</sub> | (500) | 29 <mark>1/2</mark>           | (749)  |          |
| C         | 2        | sides                   | MDF      | 1/2          | (12) | 12 <sup>3</sup> /4               | (324) | 23 <sup>5</sup> /8            | (600)  |          |
| D         | 1        | center divider          | MDF      | 1/2          | (12) | 18 <sup>11</sup> /16             | (475) | 29 <sup>1</sup> /2            | (749)  |          |
| Е         | 2        | front dividers          | MDF      | 1/2          | (12) | 5 <sup>3</sup> /16               | (132) | 17 <sup>3</sup> /4            | (451)  |          |
| F         | 2        | rear dividers           | MDF      | 1/2          | (12) | 7                                | (178) | 29 <sup>1</sup> /2            | (749)  |          |
| G         | 1        | bottom                  | MDF      | 1/2          | (12) | 13 <sup>3</sup> /4               | (349) | 19 <sup>11</sup> /16          | (500)  |          |
| Н         | 2        | wheel centers           | MDF      | 3/4          | (18) | 6 d                              | (152) |                               |        |          |
| - 1       | 1        | wheel rings             | MDF      | 1/2          | (12) | 6 d                              | (152) |                               |        |          |
| J         | 2        | bearing hubs            | hardwood | 1            | (25) | 2 d                              | (51)  |                               |        |          |
| K         | 2        | wooden washers          | hardwood | 1            | (25) | 2 d                              | (51)  |                               |        |          |
| L         | 1        | handle                  | 2x3 pine | 11/2         | (38) | 2 <sup>1</sup> /2                | (64)  | 39 <sup>3</sup> /8            | (1000) |          |
| М         | 1        | axle                    | 2x3 pine | 11/2         | (38) | 1 <sup>1</sup> /2                | (38)  | 20 <sup>3</sup> /4            | (527)  |          |
| N         | 2        | stub axles              | hardwood | 3/4 d        | (19) |                                  |       | 5 <sup>1</sup> /2             | (140)  |          |
| 0         | 1        | bottom handle block     | MDF      | 1/2          | (12) | 2 <sup>1</sup> /2                | (64)  | 4 <sup>1</sup> / <sub>2</sub> | (114)  |          |
| Р         | 1        | front leg               | MDF      | 1/2          | (12) | 2 <sup>1</sup> /2                | (64)  | 3 <sup>3</sup> /4             | (95)   |          |
| Q         | 1        | front leg bracing block | 2x3 pine | 11/2         | (38) | 2 <sup>1</sup> /2                | (64)  | 3                             | (76)   |          |
| R         | 1        | handhold                | hardwood | <b>3/4</b> d | (19) |                                  |       | 12                            | (305)  |          |
|           |          |                         |          |              |      |                                  |       |                               |        |          |






**1** Existing storage is a long way from being described as user friendly.

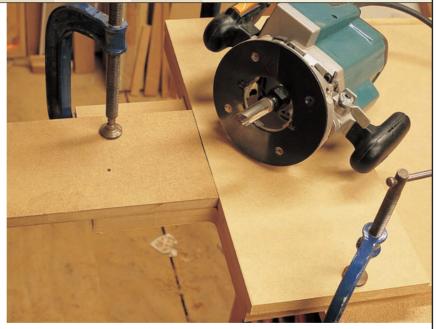



 ${\bf 2}$  Cut the center divider and back to shape using a template and a router setup with a straight-cutting bit and a guide bearing.



3 Cut the sides and front panel to shape using a jigsaw. Use a straightedge to help guide the jigsaw.

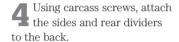

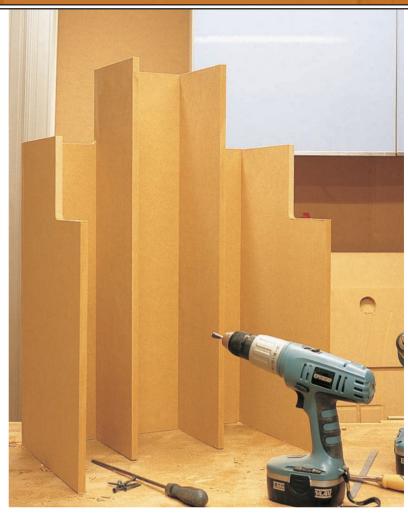

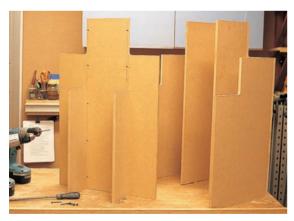


Attach the front dividers to the center partition.




6 Lay the unit on its back and attach the sides. Then attach the front.


### small offcuts storage trolley

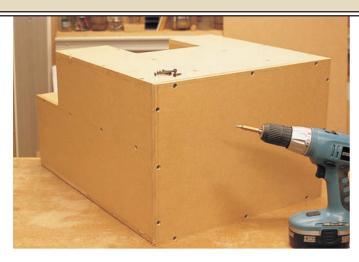


Attach the bottom.

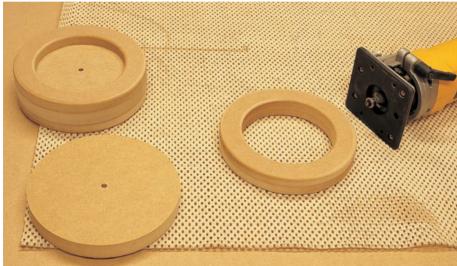

Set the drill press to its slowest speed. Secure the adjustable hole cutter in the drill press chuck and adjust it so that it will cut a disc 6" (152mm) in diameter. Cut two discs from  $^3$ /4"-thick (18mm) and four discs from  $^1$ /2"-thick (12mm) MDF. This will make two wheels. Reset the hole cutter to a 4" (102mm) diameter and cut the center out of the  $^1$ /2"-thick (12mm) discs to form rings.

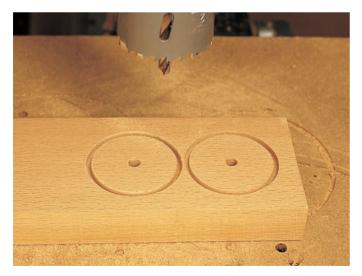

9 With the drill press still set at its slowest speed use a sawtooth cutter to core out two bearing hubs of hardwood.

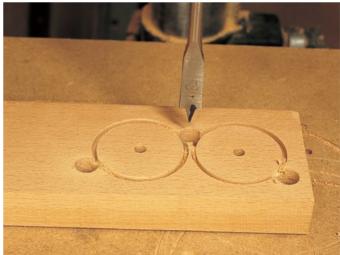

10 One trick you might want to try is drilling waste clearance holes. This will keep the cutting waste wood from clogging up and burning. Before you get all the way through, flip the block over and finish the cut from the other side.



**11** Remove the core from the hole saw by prying it out using a screwdriver. Fit the cores onto a long bolt and secure them with a washer and nut. Then chuck the assembly in the drill press and sand it.




**12** Assemble two wheels by gluing rings to one disc, one on each side, and the bearing hub to the center on one side only—this will be the inside of the wheel. If you want to paint the "tires" to look like the real thing, feel free. Mine are staying natural with just a coat of sanding sealer.



13 The wheels run on stub axles fitted into the ends of a length of timber screwed to the rear bottom of the box. Mortise the dowel stub axles into the ends of the length of timber. This is the trickiest bit of the whole operation. The holes need to be made perfectly parallel to the timber, otherwise the wheels will not be true and will look wonky. Use a combination square as a guide to square the timber in a vise and to line up the drill.




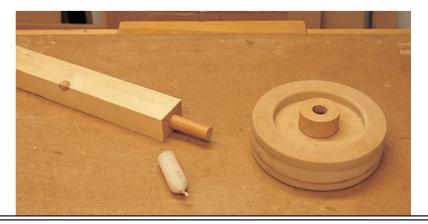


### small offcuts storage trolley



15 Cut 2 wooden discs to use as washers. Use a disc and a screw to hold each wheel onto the stub axle.

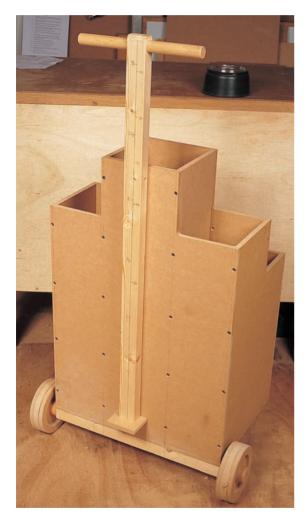

**17** Drill a hole in the top of the handle and glue the handhold in place. Using glue and screws, attach the handle assembly to the rear of the storage box. Attach the bottom handle block to the handle assembly.

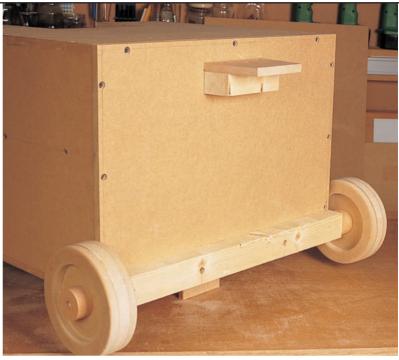

16 Using screws, attach the front leg and blocking and the wheel assembly to the bottom of the trolley.



18 Add some measuring marks to the back of the handle, starting at the bottom. Use the bottom handle block as a stop to measure the rough length of your offcuts.



# wall-hung cabinet

### Let's face it,

we all love new tools—even if they are just old ones we have newly acquired. The trouble is they all need somewhere to live. In my shed, the planes have spent the past couple of years at the back of the bench

under the window. This is far from ideal; they are usually in the way and must be moved from place to place.


The toolbox is good for storing larger tools, but the marking tools and planes need to be close at hand as they are in constant use. A cabinet for the planes and marking tools is a good idea, but finding somewhere to keep the



cabinet can be a challenge. After a bit of solo debating—the best kind because I always win—it was unanimously decided to sacrifice some wall space that I had been using to post my schedules, drawings and notes.

To say that space is a bit tight in my shed is an understatement. A conventional door on a cabinet this size would just get in the way. By splitting the door down the middle, the problem is quite literally halved. The doors' frame and panel construction keeps their weight down, which puts less strain on the wall fixings when the doors are open.

# wall-hung cabinet construction notes

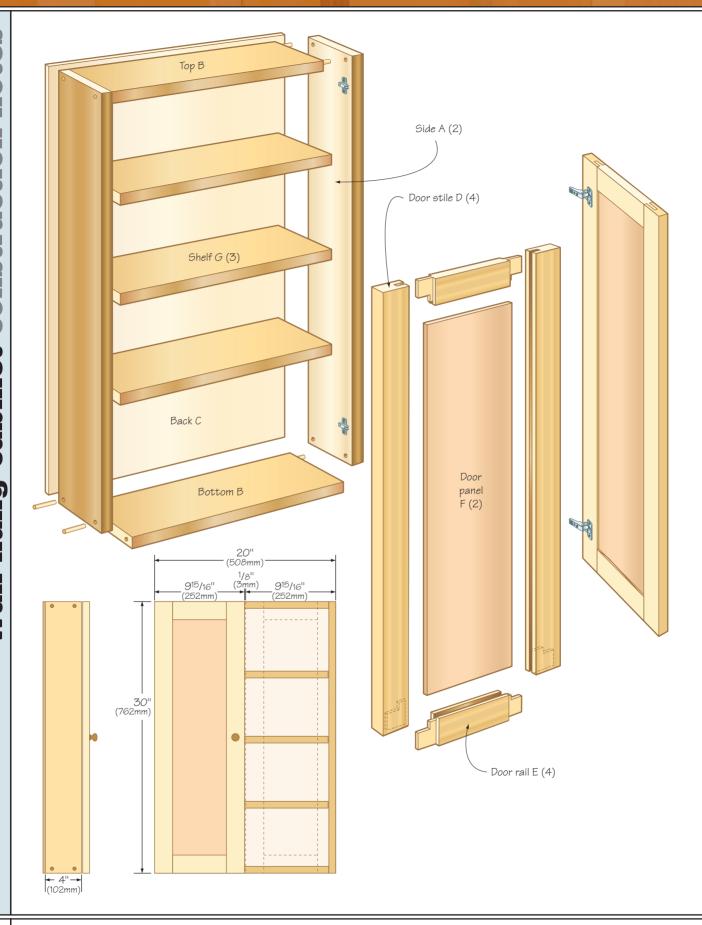


### wall-hung cabinet

### wall-hung cabinet inches (millimeters)

| REFERENCE | QUANTITY | PART           | STOCK    | THICKNESS                       | WIDTH             |       | LENGTH              |       |
|-----------|----------|----------------|----------|---------------------------------|-------------------|-------|---------------------|-------|
| Α         | 2        | sides          | MDF      | <b>3/4</b> (18)                 | 21/2              | (64)  | 30                  | (762) |
| В         | 2        | top and bottom | MDF      | <b>3/4</b> (18)                 | 21/2              | (64)  | 18 <sup>1</sup> /2  | (470) |
| C         | 1        | back           | plywood  | <sup>3</sup> / <sub>8</sub> (9) | 20                | (508) | 30                  | (762) |
| D         | 4        | door stiles    | hardwood | <b>3/4</b> (18)                 | 2                 | (51)  | 30                  | (762) |
| Е         | 4        | door rails     | plywood  | <b>3/4</b> (18)                 | 2                 | (51)  | 71/2                | (191) |
| F         | 2        | door panels    | plywood  | 1/4 (6)                         | 6 <sup>1</sup> /2 | (165) | 26 <sup>1</sup> /2  | (673) |
| G         | 3        | shelves        | MDF      | <b>3/4</b> (18)                 | 2                 | (51)  | 18 <sup>7</sup> /16 | (468) |

### hardware & supplies

- 4 21/4" (57mm) hinges
- 8 Miller® dowels
- 2 1" (25mm) wooden knobs

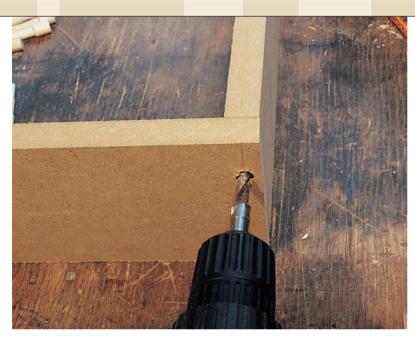

1 Cut the cabinet parts to size. Then drill holes into the end of the cabinet for the dowels. You may need to use clamps to hold the parts in place during this assembly.



Apply a little glue to each dowel and push it as far as it will go using hand pressure. Tap it home using a hammer.



When the glue has dried, cut the dowel off just above the surface. Then plane the excess down until it is flush.



The back is cut to be just oversized.

Then it's screwed to the cabinet along one of the long edges.



Turn the cabinet over and check for square. When it's square, clamp it in position, turn over the assembly, and install the screws. After the screws have been inserted, remove the clamps and plane the back or trim it flush with the outside of the cabinet.




6 Make the doors using frame-and-panel construction. After you cut the frame parts to size, cut a groove down the center of each part.


### wall-hung cabinet




Cut the grooves in both the stiles and the rails.

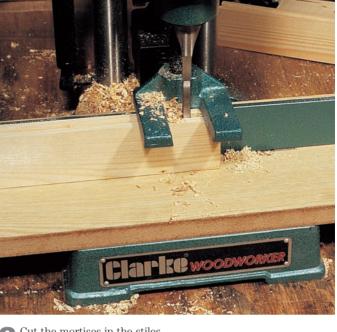

Cut the mortises in the stiles.

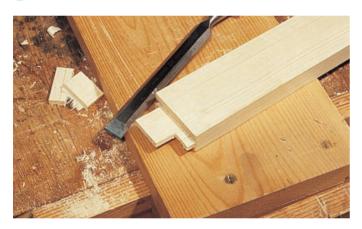

On the ends of the rails, cut and fit the tenons to the mortises. Cut a haunch in the tenons so you can have a longer tenon and still keep the groove for the panel at a smaller depth.

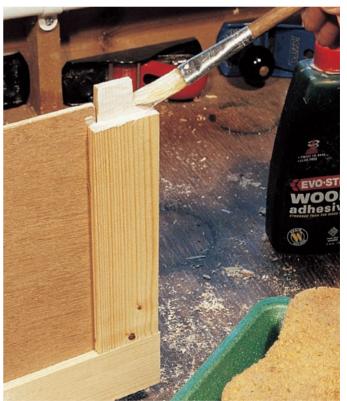

**10** Have your clamps ready, then apply glue to the tenons and assemble the doors.




11 Once the doors are glued and clamped, check them for square, set them on a level surface, and let the glue cure.



12 Chiseling the mortises in the edge of the cabinet is unconventional because it means cutting them into the end grain of the MDF. The best way I have found to do this is to score around the hinge with a knife to the depth of the mortise and then gauge a line to the depth required. Chip down into the cut, opening the cut line out to a V that extends into the waste. Then carefully pare down the rest of the waste to the gauge line. Use a very sharp chisel for this, and try not to break out the back of the mortise.




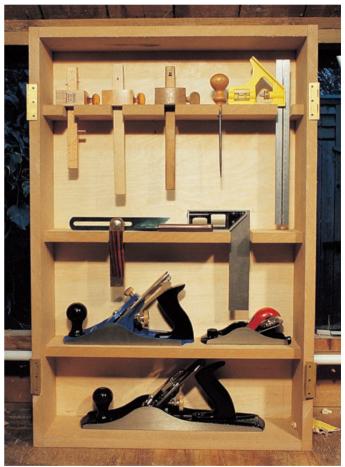

13 Attach the hinges to the cabinet.

Rest the doors on the face of the cabinet and trim them to fit. A bit of time spent here carefully planing the doors to fit is a good investment. Use the cabinet as a gauge to fit the doors. When you are satisfied that the doors fit correctly with a nice even gap between them, you can hang them.

### wall-hung cabinet

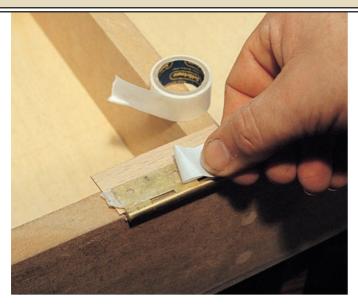

**15** Support the hinge with a thin piece of cardboard or a piece of veneer to stop it from closing completely. Then apply a strip of double-stick tape to each hinge.



16 Place the doors back on top and arrange them in their final position. Press down at the hinge positions to stick the hinges to the doors. Open each door in turn and scribe the hinge positions with a knife.



CHISCOLOG ARTHURS

**17** Separate the hinge from the door and chop the mortise's waste.



**18** Cut the mortises on the door in the conventional way and hang the doors. They will fit perfectly!

19 Fit a couple of wooden knobs on the doors and hang the cabinet on the wall similar to the router cutters cabinet. See page 35, "Hanging the cabinet". Fill it with planes, marking tools or other tools of your choice.



# downdraft table

# What is the worst job

in the workshop? For me it is cleaning up all the dust produced by sawing, routing and sanding. A good power tool extractor can help, but it will collect only the dust right


from the power tool and allow some dust to get blasted into the environment. Given time, air cleaners will remove dust from the air; keeping the dust out of the air in the first place is even better.

To prevent dust from being blown all over the workshop, we need to create an airflow that



will guide the dust where we want it to go. To create a downdraft all we need to do is to create lower pressure below the bench than above it. The theory may be simple, but putting it in practice requires some thought.

The downdraft table is basically an empty box with lots of holes in the top and an extractor plugged into the bottom. The idea is to work on top of the table and let the airflow draw any extraneous dust down into the void below, through the hose and into the collection bin or bag of the extractor.

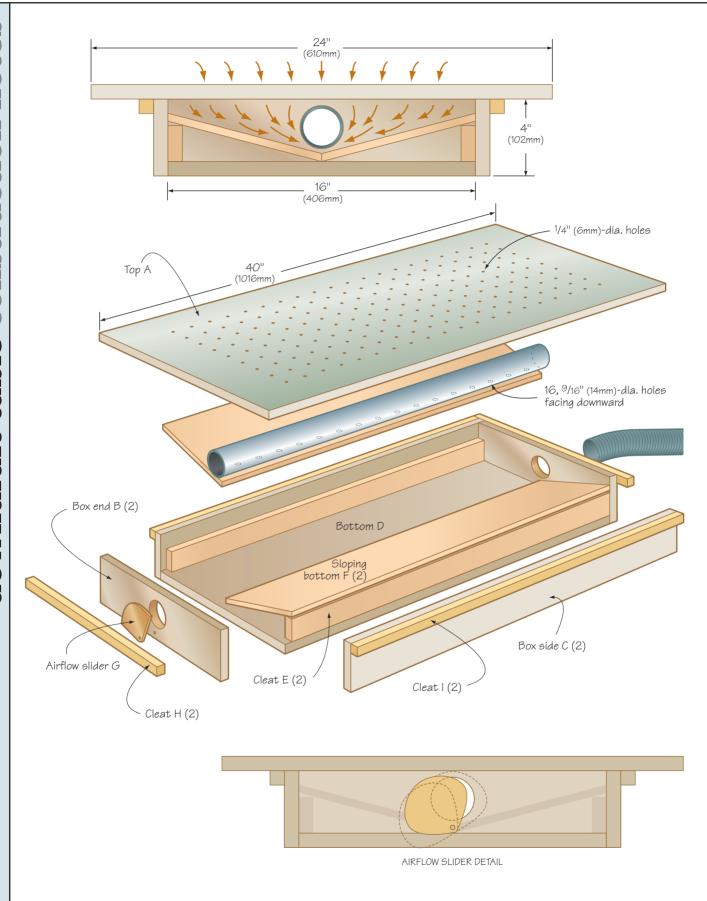

### downdraft table

### downdraft table inches (millimeters)

| REFERENCE | QUANTITY | PART            | STOCK    | THICKNESS |      | WIDTH              |       | LENGTH                         |        | COMMENTS |
|-----------|----------|-----------------|----------|-----------|------|--------------------|-------|--------------------------------|--------|----------|
| Α         | 1        | top             | MDF      | 3/4       | (18) | 23 <sup>1</sup> /2 | (597) | 47 <sup>1</sup> /2             | (1207) |          |
| В         | 2        | box ends        | MDF      | 3/4       | (18) | 4                  | (102) | 14 <sup>1</sup> / <sub>2</sub> | (368)  |          |
| C         | 2        | box sides       | MDF      | 3/4       | (18) | 4                  | (102) | 40                             | (1016) |          |
| D         | 1        | bottom          | MDF      | 3/4       | (18) | 14 <sup>1</sup> /2 | (368) | 38 <sup>1</sup> /2             | (978)  |          |
| Е         | 2        | cleats          | MDF      | 3/4       | (18) | 21/2               | (64)  | 38 <sup>1</sup> /2             | (978)  |          |
| F         | 2        | sloping bottoms | MDF      | 3/8       | (9)  | 7 <sup>1</sup> /8  | (181) | 38 <sup>1</sup> /2             | (978)  |          |
| G         | 1        | airflow slider  | MDF      | 1/4       | (6)  | 3                  | (76)  | 3                              | (76)   |          |
| Н         | 2        | cleats          | hardwood | 1/4       | (6)  | 3/4                | (19)  | 17 <sup>1</sup> /2             | (445)  |          |
| - 1       | 2        | cleats          | hardwood | 1/4       | (6)  | 3/4                | (19)  | 40                             | (1016) |          |
|           |          |                 |          |           |      |                    |       |                                |        |          |

### hardware & supplies

1/4" (6mm) x 3/4" (18mm) x 13'(4m) hardwood edging for top

109" (277cm) strip insulation

2<sup>1</sup>/<sub>4</sub>" (57mm)-diameter x 40" (1016mm) plastic pipe

- 1 1<sup>1</sup>/<sub>4</sub>"(32mm)-20 x 1<sup>1</sup>/<sub>4</sub>" (32mm) bolt
- 1 11/4"(32mm)-20 wingnut 24"(610mm) x 48"(1219mm) high-pressure laminate



1 Edge the MDF with a hardwood edging to help keep the table in good condition. This downdraft table is going to be a benchtop item. The size of the table will vary depending on your expected use. If you are only making small boxes, for example, then a small, compact version will do the trick. As most of my building is furniture of one kind or another I have decided to build this one with a table size of  $48" \times 24"$  ( $1219mm \times 610mm$ ). This is large enough to accommodate most parts that will need sanding or routing.



2 Apply contact cement to both the tabletop and bottom of the laminate



When the glue is dry to the touch, lay sticks to aid positioning. Remove the center stick first and work your way out to the ends. This prevents air from being trapped under the laminate.



4 Use a J-roller to apply even pressure on the laminate.



**5** Using a trim router with a bevel cutter and a guide bearing, trim the laminate flush with the edges of the tabletop.





### downdraft table





Cut the parts for the box, then glue and screw them together.

You can drill the holes freehand, but this hardwood drilling guide will keep the holes lined up straight. Drill a hole in the block that lines up with the intersection of the grid lines when a straightedge is set on a grid line. Rest the tabletop on a piece of scrap sheet material and bore the holes through the tabletop and into the scrap. This will reduce the tear-out on the underside of the tabletop.

### back to school

Because we are dealing with fine, fast-moving dust in relatively small quantities we need to keep the air velocity high to be effective. My dust extractor (vacuum) has a specified airflow of 116.53 CF/Minute (3300 L/Minute). Fitted with a 2½"-diameter (57mm) hose, the air speed is quite acceptable. In order to maintain that speed the total area of the holes open to the atmosphere must equal the area of the hose opening.

Here's the math bit—now don't rush off; it's not that bad. It is worked here in metric. The area of a circle is  $\pi r^2$ , where  $\pi = 3.142$  and  $r^2 = \text{radius} \times \text{radius}$ . The sectional area of the hose is calculated as follows:

 $3.142 \text{ x } (57\text{mm} \div 2)^2$ 

= 3.142 x 812.25

= 2552 sq. mm

By the same formula, the area of a 5mm-diameter hole is 19.6375 sq. mm. Divide the sectional area of the hose by the area of one hole to get the optimum number of holes, which is 130 holes ( $2552 \div 19.6375$ ).

For those of you that work in inches and feet, the equivalent calculations follow:

 $3.142 \times (2.25" \div 2)^{2}$ 

= 3.142 x 1.2656

= 3.9765 sq. in. (rounded to 4 sq. in.)

The area of a .25"-diameter hole is .049 sq. in.

The number of  $\frac{1}{4}$ "-diameter holes needed is 82 (4  $\div$  .049). A  $\frac{1}{4}$ "-diameter hole is 1.6 times larger in area than a 5mm hole, therefore, less holes are needed.

My table has 189, 5mm holes. Assuming that some of the holes are covered by the workpiece, this will work efficiently.



• Glue the cleats and the sloping sections in place to create an airtight seal.



10 See the illustration for locating the holes for the plastic pipe. Cut the holes for the pipe using a hole saw of the appropriate size.



**11** Bore 16 holes, each with a <sup>9</sup>/16" (14mm) diameter, down the pipe's length. This is about the same area as the extractor's hose and will ensure an even draft throughout the box. Fit the pipe with the holes on the underside into the holes at each end of the box. Trim the ends of the pipe flush with the box.




12 The airflow slider consists of a quadrant of thin MDF which pivots on a bolt and is secured in position by a wing nut. Position the airflow slider at one end. Plug the extractor hose into the opposite end.


### downdraft table




13 Center the tabletop over the box and hold it in place with strips of wood glued and nailed to the underside of the tabletop. Adding strip insulation around the top of the box will help make an airtight seal.

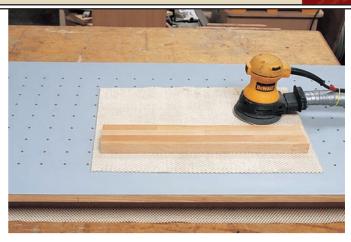


14 To use this downdraft box, secure it to a bench. You can do this in a variety of ways. I stand the unit on a nonslip mat. A batten screwed to the bottom of the unit could be held in a Workmate® portable bench or your shop bench's vise. Once the unit is secure, place a nonslip mat between the surface and the workpiece. If you are sanding or doing light profiling, the mat will be sufficient.

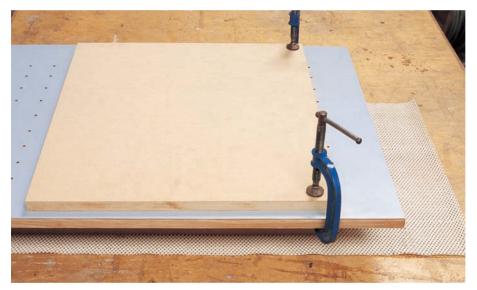

15 If necessary, use clamps around the overhang to secure the workpiece to the tabletop. If the workpiece is large and covers too many holes, the sound of the extractor will rise in tone and volume, similar to what happens when an obstruction causes a blockage in the hose. To rectify this, open the airflow slider until the tone of the extractor returns to normal.

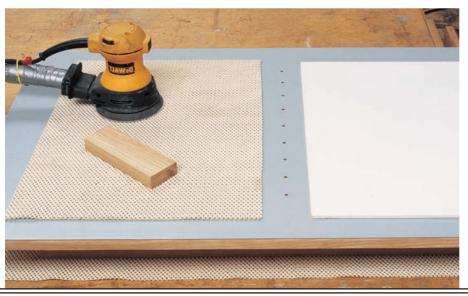

**16** Conversely, if a workpiece is very small, the airflow around it may not be sufficient to clear the waste quickly enough. To rectify this cover a section of the table with a sheet of MDF or something similar to restrict the airflow.

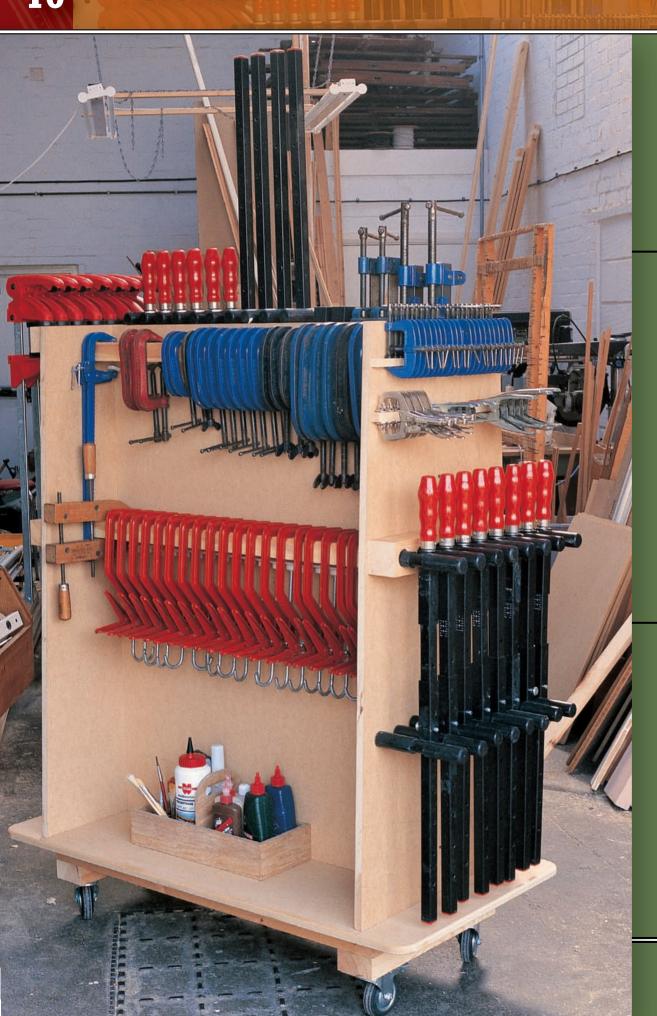

# clamp stand

## As your collection of


clamps grows, and it will if it hasn't already, storage becomes a more significant issue. The time-honored solution of hanging clamps on the wall is fine if you have the room, but

it is not ideal if glue-up will take place in various locations within the work area. An alternative is to build a portable rack to hold the clamps and the glue paraphernalia.



This simple-to-build clamp stand, requiring only basic tools and techniques, is a useful addition to any small workshop. The sizes specified can, of course, be modified to suit individual requirements. If space is at a real premium, you could build two smaller stands to be

used and stored individually, without compromising the amount of clamp storage.

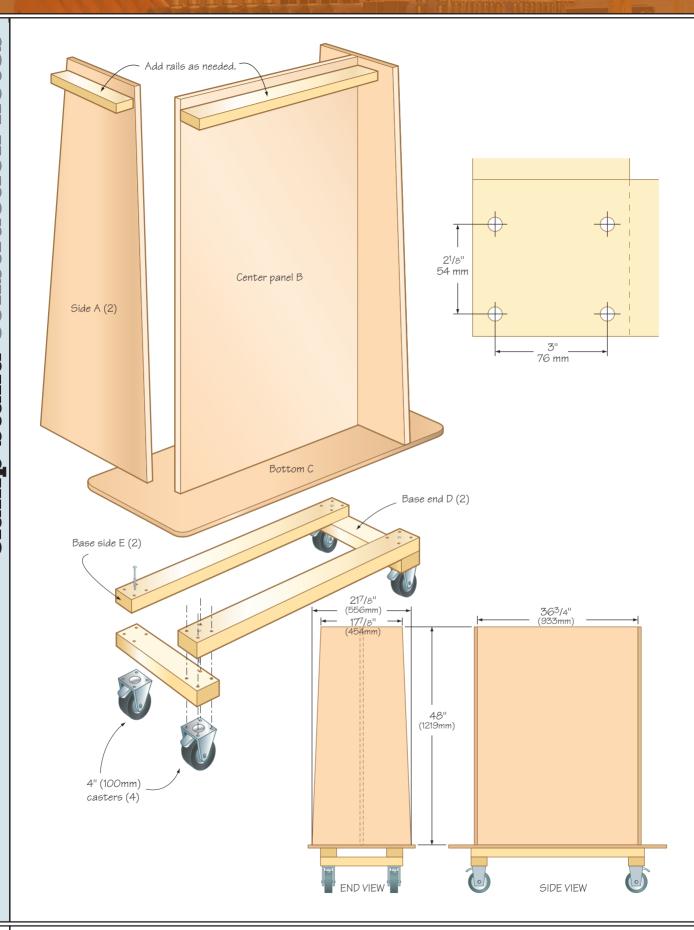

### clamp stand

### clamp stand inches (millimeters)

| REFERENCE | QUANTITY | PART         | STOCK | THICKNESS                          | WIDTH                                | LENGTH                               | CONTRACTOR |
|-----------|----------|--------------|-------|------------------------------------|--------------------------------------|--------------------------------------|------------|
| Α         | 2        | sides        | MDF   | <b>3/4</b> (18)                    | 21 <sup>7</sup> /8 (556)             | 48 (1219)                            |            |
| В         | 1        | center panel | MDF   | <b>3/4</b> (18)                    | 36 <sup>3</sup> / <sub>4</sub> (933) | 48 (1219)                            |            |
| С         | 1        | bottom       | MDF   | <b>3/4</b> (18)                    | 24 (610)                             | 48 (1219)                            |            |
| D         | 2        | base ends    | pine  | 1 <sup>1</sup> / <sub>2</sub> (38) | 3 <sup>1</sup> / <sub>2</sub> (89)   | 18 (457)                             |            |
| Е         | 2        | base sides   | pine  | 1 <sup>1</sup> / <sub>2</sub> (38) | 3 <sup>1</sup> / <sub>2</sub> (89)   | 38 <sup>1</sup> / <sub>4</sub> (972) |            |
|           |          |              |       |                                    |                                      |                                      |            |

### hardware & supplies

- 4 4"(100mm)-diameter casters
- 16 <sup>3</sup>/<sub>8</sub>"-16 x 3" (M10 x 1.5 x 75mm) carriage bolts
- 16 <sup>3</sup>/<sub>8</sub>" (M10) hex nuts
- 16 3/8" (M10) flat washers



A substantial frame is required to support the weight of many clamps. This will also provide a firm fixing point for the mounting plate of the wheels. On a workshop floor (or the garage or shed floor) any wheels smaller than 4" (100mm) in diameter will get caught on small obstructions.



Mark up the ends of the shorter pieces for drilling as shown in the drawing. Vary the dimensions if you are using lumber of a different cross sectional size. Counterbore at the inner marks, using a 1" (25mm) Forstner bit, to a depth of 5/8" (16mm). Continue the holes through, using a 3/8" (10mm) drill bit. Bore the outer holes to 3/8" (10mm).



3 Lay the two shorter pieces on the bench and place the longer pieces across them to make a rectangle. Mark the center point of each intersection and bore a countersunk hole for a wood screw. Coat the mating surfaces with glue, and secure the frame at each corner with a 3" (76mm) wood screw. When the glue is dry, extend the outer holes through using a 3/8" (10mm) drill bit and counterbore to 5/8" (16 mm).



4 Fit each wheel using two 4" (100mm) and two 2" (50mm) coach (carriage) bolts. If you use wider bottom boards, all four holes can be drilled through both base frame pieces. Then you would use four 4" (100mm) carriage bolts to attach each wheel.



The base needs rounded corners to make the stand more user friendly. Make a template from an offcut of sheet material by drawing an arc at one corner and trimming to just outside of the line. Finish down to the line by carefully sanding to the mark.



6 Position the template on the corners of the base and trace the arc. Trim to the outside of the line with a jigsaw. Reposition the template onto the base to ensure that the sides are flush. Using a bearing-guided, flush-trim cutter in a small router or laminate trimmer, machine the corner flush to the template. Repeat for the other three corners.

### clamp stand



Replace the flush-trim cutter with a roundover cutter and round over the top and bottom surfaces of the base.



Cut the parts for the stand and glue and screw them together. Trace the outline of the assembly onto the base and lift the assembly clear. Drill pilot holes through the base. Invert the assembly and position the base, now on top, using the traced alignment marks. Drill through the pilot holes into the assembly and secure with carcass screws. Return the structure to its correct orientation and fasten it to the wheeled frame with screws.



9 Use one side of this stand exclusively for the storage of bar and sash clamps.



10 The other side has a couple of rails added; use these to hang C-clamps and individual clamps. Handscrew clamps and other types of clamps can also be attached to these bars.

# mobile table saw stand

# Let's assume that you are

a keen woodworker whose work
space has to double as something
else, such as a garage, a garden
shed or an outbuilding. Ideally everything will be portable so that it
can be stored in a minimum amount of space
and out of the way while not in use.

This is especially challenging with the table saw. A prime consideration is weight—even




with wheels, mobility is an issue—so I have concentrated on contractor's saws.

A contractor's saw is intended for use on a collapsible stand. That method just means the idle saw will take up floor space and the stand will have to be stored too. Besides

that, you will have to set up the stand and the saw every time you want to use it. With the mobile table saw stand, you can forget about all that fuss and gain valuable storage space.

# mobile table saw stand construction notes

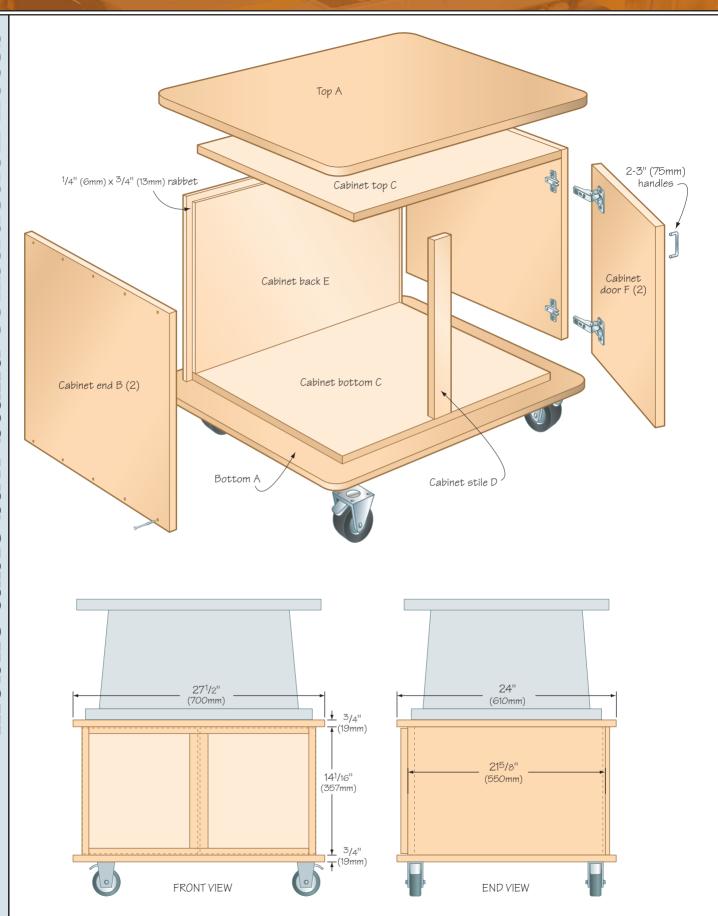

### mobile table saw stand

### mobile table saw stand inches (millimeters)


| REFERENCE | QUANTITY | PART                   | STOCK | THICKNESS       | WIDTH              |       | LENGTH               |       | COMMENTS |
|-----------|----------|------------------------|-------|-----------------|--------------------|-------|----------------------|-------|----------|
| Α         | 2        | top and bottom         | MDF   | <b>3/4</b> (18) | 24                 | (610) | 27 <sup>1</sup> /2   | (700) |          |
| В         | 2        | cabinet ends           | MDF   | <b>3/4</b> (18) | 14 <b>1/16</b> h   | (357) | 21 <sup>5</sup> /8 d | (550) |          |
| C         | 2        | cabinet top and bottom | MDF   | <b>3/4</b> (18) | 22                 | (559) | 24                   | (610) |          |
| D         | 1        | cabinet stile          | MDF   | <b>3/4</b> (18) | 2                  | (51)  | 12 <sup>1</sup> /8   | (308) |          |
| Е         | 1        | cabinet back           | MDF   | <b>3/4</b> (18) | 13 <b>5/8</b> h    | (346) | 25 <sup>1</sup> /2   | (648) |          |
| F         | 2        | doors                  | MDF   | <b>3/4</b> (18) | 12 <sup>5</sup> /8 | (321) | 13 <sup>3</sup> /4 h | (349) |          |
|           |          |                        |       |                 |                    |       |                      |       |          |

### hardware & supplies

- 4 4"(100mm)-diameter lockable casters
- 16 <sup>3</sup>/8"-16 x 1" (M10 x 1.5 x 25mm) carriage bolts
- 16 <sup>3</sup>/<sub>8</sub>" (M10) hex nuts
- 16 <sup>3</sup>/<sub>8</sub>" (M10) flat washers
- 4 107° European overlay hinges with mounting plates



This is how it used to be. The saw was screwed to a pair of horses through a piece of MDF

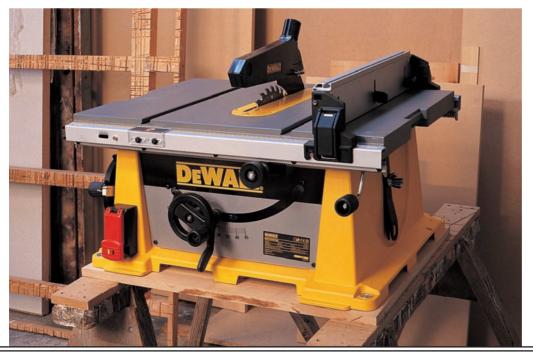



This temporary arrangement is fine for a small amount of cutting. However, it does make it a bit on the high side for every day use and the horses' legs can get in the way when using the saw.



1 Make a rounded-corner template. Mark the corners of the top and bottom pieces using the template as a guide. Remove the bulk of the waste with a jigsaw, and trim to the line using a router fitted with a profiling cutter. Round over the top and bottom edges.

**2** Drill holes for mounting the wheels into one of the pieces. I use coach (carriage) bolts to mount the casters. The bolts need to be just long enough to pass through the mounting plate of the wheel plus the base and leave enough thread to secure a nut over a washer.

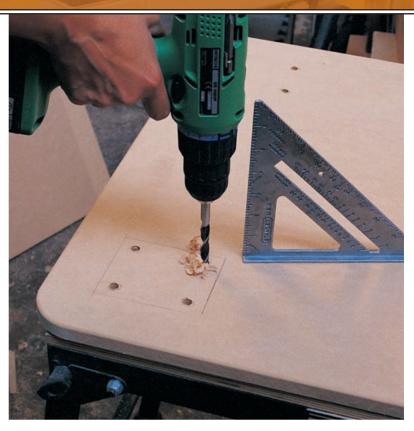

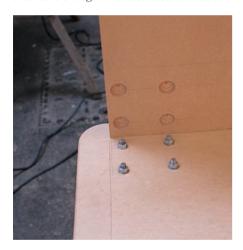

3 Cut out the cabinet parts and bore some clearance holes in the bottom of the cabinet bottom. This will enable you to mount the assembled cabinet flat on the base.




4 Using biscuits, glue and carcass screws, assemble the cabinet sides and top and bottom pieces. Then install the cabinet stile using glue and screws.

### mobile table saw stand



**5** Cut a  $^{3}$ /4"-wide (18mm) by  $^{1}$ /4"-deep (6mm) rabbet around the inner face of the back panel to match up with the open carcass.

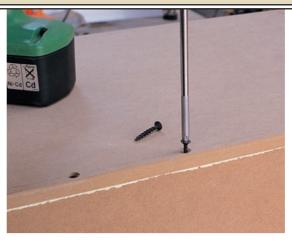

Secure the back with glue and carcass screws. Do not overtighten the screws or the cabinet parts will split.



The doors are hung on European-style concealed hinges. Drill the cup holes in the doors for the hinges using a drill press. Fix the hinge mounting plates to the inside of the carcass and hang the doors. Fit on the doors a pair of handles, rather than knobs that may catch on something.

Turn the assembled cabinet upside down. Attach the bottom by locating the wheel-securing nuts in the previously drilled clearance holes and secure the wheeled base to the cabinet with screws. Turn the unit back up the correct way and lock the wheels.

Mark the position of the saw on the top and, using a 1" (25mm) Forstner bit, bore a 1/8"-deep (3mm) recess at each of the hole positions. Follow through with a 7/16" (11mm) hole. Set a T-nut into each recess from inside the cabinet. Do not hammer these in; it is far better to pull these home using a wrench and a couple of washers to spread the load.

Put the saw on top of the cabinet (you will most likely need an assistant to do this!), aligning the bolts through the mounting holes in the saw's base. Install washers and nuts on the bolts and tighten them to hold the saw securely in place.

If the table saw you are using does not have a place to store the cable, make simple wind-around storage hooks and affix them to the back of the cabinet.





# outfeed table

# No matter how large a

workshop is you can never have enough space. Floor space is always at a premium in an environment that is constantly changing: Lumber stocks vary, the waste (those might-

come-in-handy-one-day offcuts) starts occupying more space than the stock lumber, projects under construction need somewhere to sit and the occasional new piece of equipment has to be squeezed in!

One casualty of my space problem has been the router table. A permanent router cabinet, one that supports a custom-made router table and a fence and has the storage space of an aircraft hanger, had been in my "planning department" for more years than I care to remember. Its development was thwarted by the advantages of using a router tabletop mounted




on a pair of collapsible workbenches—even though that approach cost each project a lot of setup time.

My space problem also led to unsatisfactory working practice at the cabinet saw. Every time I wanted to rip something down I had to figure out how to support the work

at the outfeed. I have used something that is collapsible, which has meant more setup time.

My solution to these problems was inspirated by the combination woodworking machine one space, multiple uses.

An outfeed table with lockable casters can be used for other purposes—an assembly table or just a flat surface on which to lay out the components of a job. Cut a recess in one end for a router mounting plate, and two of the workshop's logistical problems have been solved in one go.

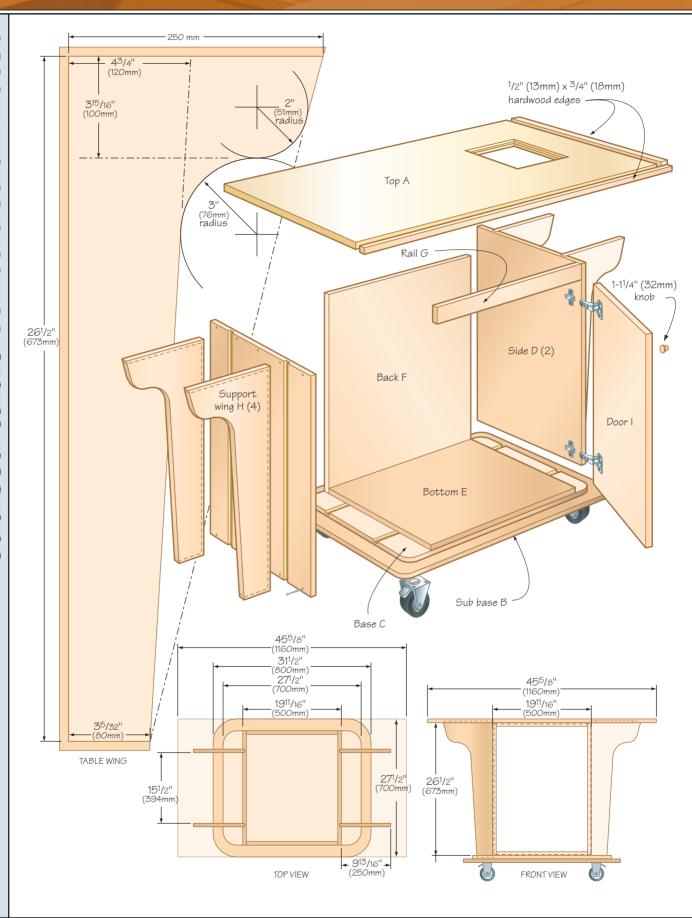

### outfeed table

### outfeed table inches (millimeters)

| REFERENCE | QUANTITY | PART          | STOCK | THICKNESS |      | WIDTH                |       | LENGTH               |        | COMMENTS |
|-----------|----------|---------------|-------|-----------|------|----------------------|-------|----------------------|--------|----------|
| Α         | 1        | top           | MDF   | 3/4       | (18) | 27 <sup>1</sup> /2   | (700) | 45 <sup>5</sup> /8   | (1160) |          |
| В         | 1        | sub base      | MDF   | 3/4       | (18) | 27 <sup>1</sup> /2   | (700) | 31 <sup>1</sup> /2   | (800)  |          |
| C         | 1        | base          | MDF   | 3/4       | (18) | 23 <sup>5</sup> /8   | (600) | 27 <sup>1</sup> /2   | (700)  |          |
| D         | 2        | sides         | MDF   | 3/4       | (18) | 23 <sup>3</sup> /4   | (603) | 26 <sup>1</sup> /2   | (673)  |          |
| Е         | 1        | bottom        | MDF   | 3/4       | (18) | 18 <b>1/8</b>        | (460) | 22 <sup>13</sup> /16 | (580)  |          |
| F         | 1        | back          | MDF   | 3/4       | (18) | 19 <sup>11</sup> /16 | (500) | 26 <sup>1</sup> /2   | (673)  |          |
| G         | 1        | rail          | MDF   | 3/4       | (18) | 4                    | (102) | 18 <b>1/8</b>        | (460)  |          |
| Н         | 4        | support wings | MDF   | 3/4       | (18) | 9 <sup>13</sup> /16  | (250) | 26 <sup>1</sup> /2   | (673)  |          |
| - 1       | 1        | door          | MDF   | 3/4       | (18) | 19 <sup>11</sup> /16 | (500) | 26                   | (660)  |          |
|           |          |               |       |           |      |                      |       |                      |        |          |

### hardware & supplies

- 4 4"(100mm)-diameter castors
- 16 <sup>3</sup>/8"-16 x 1"(M10 x 1.5 x 25mm) carriage bolts
- 16 <sup>3</sup>/8" (M10) hex nuts
- 16 <sup>3</sup>/<sub>8</sub>" (M10) flat washers 29" (740mm) x 47" (1200mm) high-pressure laminate
- 4 170° European hinges with mounting plates



1 Cut the top to size according to the cutting list and edge it with strips of hardwood using No. 0 biscuits and glue to secure the hardwood trim on the edges of the top.



2 Edging cramps (clamps) are used to secure the hardwood trim. When the glue has cured, laminate the top surface, including the hardwood edges.




Trim the edges with a flush-trim cutter or, as shown here, with a bearing-guided chamfer cutter. The chamfer will prevent the top from being damaged by something catching the edge of the laminate.



Lay out the shape of the wings and make a template.



**5** Cut out the template and sand the curves smooth. Use this template to rout four wings. Then round over the curved, outside edges of the wings using a router and a roundover cutter.

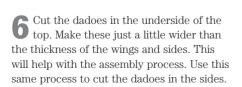




### outfeed table




Assemble the cabinet and round over its outside edges. Mark the position of the grooves to be cut in the cabinet by setting it on the overturned top. Then cut the grooves in the cabinet sides.



Using glue and screws, attach the cabinet to its top, taking care to align the grooves. Apply glue in the grooves, set the wings into them and toenail them to the cabinet.

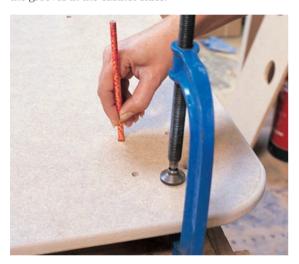

Qut out the larger bottom, and round the corners using a template and a router. Locate the casters on the bottom; trace and drill the mounting holes for the casters. Cut out the smaller base, center it on the larger base plate, and clamp it in place. Using the larger base as a template, mark the location of the mounting holes on the smaller base.

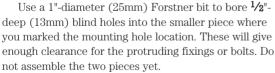

Lay the smaller piece, blind holes down, on a flat surface and place the cabinet carcass on it in its correct orientation. Mark the position of the dadoes for the side supports and wings. Cut the dadoes using the router setup as you did in step 6.

Attach the small bottom to the cabinet using glue and screws. Attach the casters to the larger base, then attach that to the smaller base using glue and screws.



10 Drill the cup holes for the European hinges, hang the door and install a knob. If you want to use this as a router table, make in one end of the top the recessed cut for the router mounting plate.




1 The MDF will absorb moisture and all sorts of stains if it is not sealed. Do this by painting or, as I have done; applying a couple of coats of sanding sealer. Finish the plastic laminate top with furniture polish. This will help the project materials slide over the surface with minimum resistance.



# Storage in the workshop

needs to be practical and flexible. To this end, a lot of the principles used in kitchen cabinets can be employed. Good-quality secondhand kitchen units are useful if they are

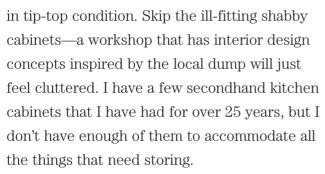

Rather than trying to imitate high-quality mass-produced cabinets, I have embarked on building a cabinet system that looks totally different from the commercial offerings. I have also taken a modular approach so the units can be moved around somewhat easily.




Using the European system as a basis, the entire cabinet system is based on modules that are  $19^5/8$ " (500mm) wide. The cabinet in this project is a double-base unit that is  $39^1/4$ " (1000mm) wide. All the base units will be  $18^3/16$ " (460mm) deep and  $33^7/8$ " (860mm) high. The units

stand on a 4"-high (100mm) plinth and have false backs that are set in grooves 2" (50mm) from the rear of the sides.

The space at the back of the cabinet will allow the cabinet to be scribed and cut to fit against an uneven wall. Cords or other services can be run behind the cabinets or through the plinth.

The front of the carcass has a face frame planted onto it. The raised-panel doors are hung within the face frame using butt hinges, and the drawers are beaded top and bottom and sit flush within the face frame.

# freestanding cabinet construction notes

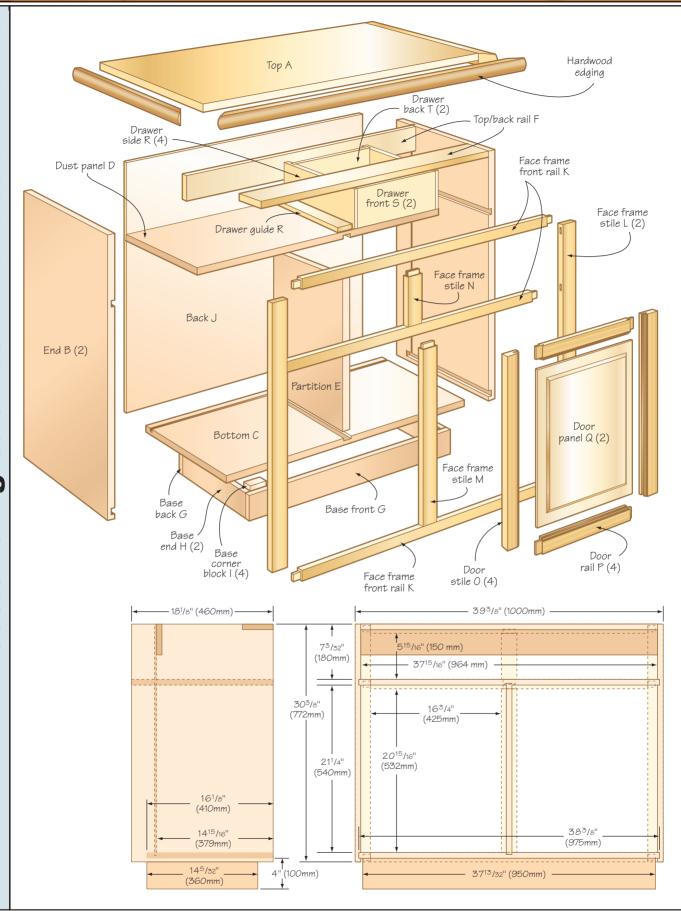

| freestanding cabinet inche | es (millimeters) |
|----------------------------|------------------|
|----------------------------|------------------|

|           |          |                     |         |                  |      | -                    |       | _                    |        |             |  |  |
|-----------|----------|---------------------|---------|------------------|------|----------------------|-------|----------------------|--------|-------------|--|--|
| REFERENCE | QUANTITY | PART                | STOCK   | THICKNESS        |      | WIDTH                |       | LENGTH               |        | COMMENTS    | hardware & supplied 4 11/4" (32mm) wooden knobs 4 21/2" (64mm) butt hinges |  |
| Α         | 1        | top                 | pine    | 11/2             | (38) | 19 <sup>11</sup> /16 | (500) | 41 <sup>3</sup> /8   | (1051) |             | 4 272 (04mm) butt minges   |  |
| В         | 2        | ends                | MDF     | 3/4              | (18) | 18 <sup>3</sup> /32  | (460) | 30 <b>3/8</b>        | (772)  |             |  |  |
| C         | 1        | bottom              | MDF     | 3/4              | (18) | 18 <sup>3</sup> /32  | (460) | 38 <sup>13</sup> /32 | (976)  |             |  |  |
| D         | 1        | dust panel          | MDF     | 3/4              | (18) | 16 <sup>1</sup> /8   | (410) | 38 <sup>13</sup> /32 | (976)  |             |  |  |
| Е         | 1        | partition           | MDF     | 3/4              | (18) | 16 <b>1/8</b>        | (410) | 21 <sup>7</sup> /8   | (556)  |             |  |  |
| F         | 2        | top and back rails  | MDF     | 3/4              | (18) | 4                    | (100) | 37 <sup>15</sup> /16 | (964)  |             |  |  |
| G         | 2        | base front and back | MDF     | 3/4              | (18) | 4                    | (100) | 37 <sup>13</sup> /32 | (950)  |             |  |  |
| Н         | 2        | base ends           | MDF     | 3/4              | (18) | 4                    | (100) | 12 <sup>3</sup> /4   | (324)  |             |  |  |
| - 1       | 4        | base corner blocks  | MDF     | 3/4              | (18) | 4                    | (100) | 4                    | (100)  |             |  |  |
| J         | 1        | back                | MDF     | 1/4              | (6)  | 29 <sup>15</sup> /32 | (748) | 38 <sup>13</sup> /32 | (976)  |             |  |  |
| K         | 3        | face frame rails    | pine    | 3/4              | (19) | 1 <sup>3</sup> /16   | (30)  | 37 <sup>13</sup> /32 | (950)  | tenons on b | ooth ends  |  |
| L         | 2        | face frame stiles   | pine    | 3/4              | (19) | 2                    | (50)  | 30 <sup>3</sup> /8   | (772)  |             |  |  |
| М         | 1        | face frame stile    | pine    | 3/4              | (19) | 2                    | (50)  | 21 <sup>7</sup> /8   | (556)  | tenons on b | ooth ends  |  |
| N         | 1        | face frame stile    | pine    | 3/4              | (19) | 2                    | (50)  | 6 <sup>13</sup> /16  | (174)  | tenons on b | ooth ends  |  |
| 0         | 4        | door stiles         | pine    | 3/4              | (19) | 2 <sup>11</sup> /32  | (60)  | 21 <sup>9</sup> /32  | (540)  |             |  |  |
| Р         | 4        | door rails          | pine    | 3/4              | (19) | 2 <sup>11</sup> /32  | (60)  | 13 <sup>11</sup> /32 | (339)  |             |  |  |
| Q         | 2        | door panels         | pine    | <sup>9</sup> /16 | (14) | 13 <sup>3</sup> /32  | (333) | 17 <sup>5</sup> /8   | (448)  |             |  |  |
| R         | 4        | drawer sides        | pine    | 1/2              | (13) | 5 <sup>13</sup> /16  | (148) | 16 <sup>9</sup> /16  | (421)  |             |  |  |
| S         | 2        | drawer fronts       | pine    | 1/2              | (13) | 5 <sup>13</sup> /16  | (148) | 16 <sup>23</sup> /32 | (425)  |             |  |  |
| T         | 2        | drawer backs        | pine    | 1/2              | (13) | 5 <sup>5</sup> /16   | (135) | 16 <sup>7</sup> /32  | (412)  |             |  |  |
| U         | 2        | drawer bottoms      | plywood | 1/4              | (6)  | 16 <sup>7</sup> /32  | (412) | 15 <sup>23</sup> /32 | (399)  |             |  |  |
| V         | 4        | drawer slips        | pine    | 1/2              | (13) | 3/4                  | (19)  | 15 <sup>3</sup> /8   | (391)  |             |  |  |
|           |          |                     |         |                  |      |                      |       |                      |        |             |  |  |



 ${\bf 1}$  Nominal 1"  $\times$  6" (25mm  $\times$  150mm) boards are ready for rough cutting to length after spending a week in the workshop acclimating. A hand saw is the quickest way to cut long boards in a short workshop!



**?** Rip the boards to width using a table saw.



Large sheets can be easily cut into manageable pieces using a circular saw and a straightedge clamped in place.



After cutting all parts to size as shown in the cutting list, mark the locations of the dadoes in the cabinet sides, drawer sides, etc., and rout them. You may need to adjust the width of the grooves slighty to accept the panels that fit into them. It's almost impossible to find a router bit that is just the right size.



Assemble the cabinet using glue and screws. Be sure the screw hole is big enough or you could split the MDF. Or, if the hole is too big your screw might not hold properly.



6 Using glue and screws, assemble the plinth (base).



Cut the face frame components to length. Then cut the mortises, and cut and fit the tenons.



Attach the face frame to the face of the carcass using No. 20 biscuits. Temporarily clamp the frame to the carcass and mark the position of the biscuit slots. Remove the frame and cut the slots in the carcass. To make cutting the slots in the frame much easier, flip the frame and clamp it back onto the carcass. Cut the biscuit slots, ensuring that the carcass is not proud of the frame where the slot is being cut, as this will affect the alignment. Paint a coat of polyvinyl acetate glue (PVA) onto the front edge of the carcass and let it dry for about 15 minutes. Glue up the face frame and paint all the biscuits with glue before inserting them in the slots. The MDF on the carcass will have soaked up the first coat of glue, so apply a second coat and fit the face frame to the carcass. Use plenty of clamps to hold it in place.



Glue and clamp the frame together, ensuring that it is square and not twisted. Let the glue dry.



The face frame is attached to the carcass so that the top of the rails align with the dust panel and the bottom.



1 Cut the profile on one edge of all the door parts.



12 Use a profiled push block as a backer to prevent breakout while cutting the scribe on the ends of the stiles.




Raise the panels, first across the grain and then along the grain to clean up the tear-out. Make several shallow passes.



14 Assemble the doors. Glue the rails to the stiles, but let the panels float in the grooves. Check for square and be sure to rest the door on a flat surface while the glue is drying.



Remove the bulk of the waste from the hinge mortises using a laminate trimmer fitted with a ½" (13mm) mortising cutter. Square the corners and clean up the mortise using a sharp chisel.

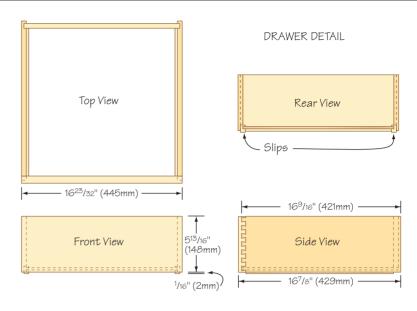



16 Make the drawers with dovetail joints holding the fronts to the sides and dadoes holding the back in place.





17 Make the slips along the edge of a full board by first running the groove into which the bottom fits and then rounding over the edge with a roundover cutter. Then rip the slips from the board so that the groove will coincide with the groove on the rear of the drawer front.

18 Glue the drawer front, sides and back together. Using glue, attach the slips to the bottoms of the sides. Slide the bottom panel into the grooves (use no glue), clamp the drawer, check for square, and secure the bottom with a couple of brads in the bottom of the drawer back.



# router trolley

# Two things make up the

the constant router user's bane—
the power cord and having to
park the router between cutting
operations. Yes, there are cordless
routers, but the demand on the


batteries is huge and the additional weight and bulk do nothing to ease the handling. Parking a router is always a problem, especially if it is locked in position with the cutter protruding, as when using cutters with long guides.

This router trolley was designed to solve these problems without creating a whole host



of new ones. This flexible piece has a low center of gravity for stability, a circular design to avoid snagging cords or extraction hoses and compatibility with any router. The design incorporates adequate storage for cutters and tools as well as other router accessories. It also has its

own power supply socket to reduce the amount of trailing leads across the workshop at bench height. The most important feature for me is the maneuverability. Its wheels make it easy to move the trolley wherever it's needed, and they can be locked so the trolley will stay put.

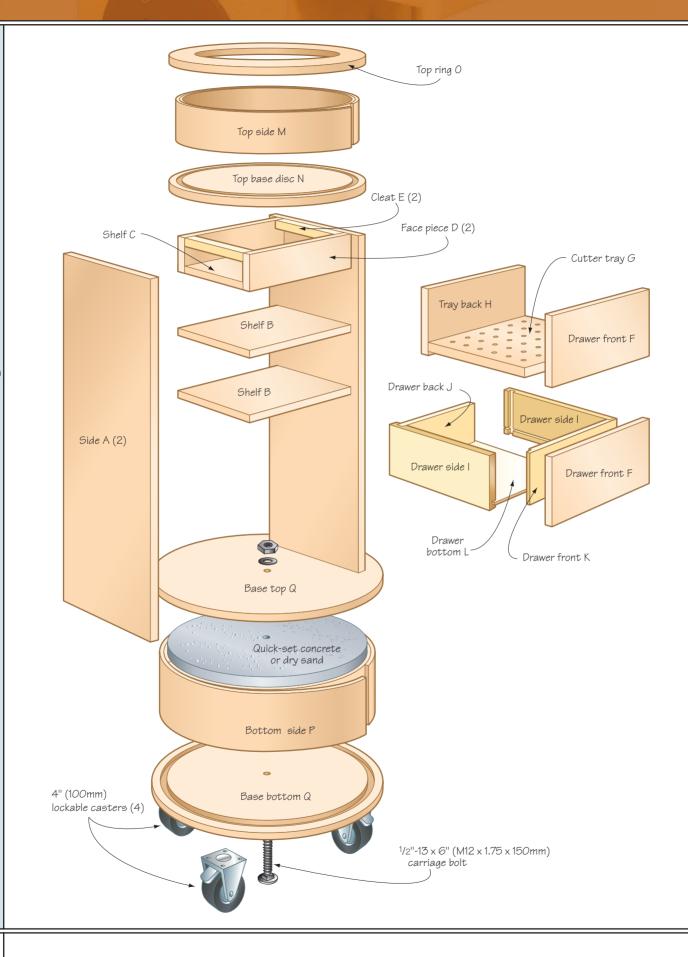


### router trolley

| router trolley inches (millimeters) |          |                     |              |           |      |                               |       |                    |        |          |  |  |  |  |
|-------------------------------------|----------|---------------------|--------------|-----------|------|-------------------------------|-------|--------------------|--------|----------|--|--|--|--|
| ENCE                                | IITY     |                     |              | VESS      |      |                               |       | I                  |        | ENTS     | hardware & supplies                                      |  |  |  |
| REFERENCE                           | QUANTITY | PART                | STOCK        | THICKNESS |      | WIDTH                         |       | LENGTH             |        | COMMENTS | plastic sheet  |  |  |  |
| А                                   | 2        | sides               | MDF          | 3/4       | (18) | 9 <b>7/8</b>                  | (251) | 29 <sup>1</sup> /2 | (749)  |          | 1 bag quick-set concrete                                 |  |  |  |
| В                                   | 2        | shelves             | MDF          | 3/4       | (18) | 7 <sup>5</sup> /8             | (194) | 8 <sup>3</sup> /8  | (213)  |          | 2 3" (76mm) drawer pulls                                 |  |  |  |
| С                                   | 1        | shelf               | MDF          | 3/4       | (18) | 6 <sup>1</sup> /4             | (159) | 8 <sup>3</sup> /8  | (213)  |          | 4 4" (100mm) casters                                     |  |  |  |
| D                                   | 2        | face pieces         | MDF          | 3/4       | (18) | 3 <sup>1</sup> /8             | (79)  | 8 <sup>3</sup> /8  | (213)  |          | 16 <sup>3</sup> / <sub>8</sub> "-16 x 1" (M10 x 1.5 x    |  |  |  |
| Е                                   | 2        | cleats              | softwood     | 3/4       | (18) | 3/4                           | (19)  | 6                  | (152)  |          | 25mm) carriage bolts                                     |  |  |  |
| F                                   | 2        | drawer fronts       | MDF          | 3/4       | (18) | 5 <sup>3</sup> /4             | (146) | 8 <sup>3</sup> /8  | (213)  |          | 16 <sup>3</sup> / <sub>8</sub> " (M10) hex nuts          |  |  |  |
| G                                   | 1        | cutter tray         | MDF          | 3/4       | (18) | 6 <sup>7</sup> /8             | (175) | 8 <sup>3</sup> /8  | (213)  |          | 16 <sup>3</sup> / <sub>8</sub> " (M10) flat washers      |  |  |  |
| Н                                   | 1        | tray back           | MDF          | 3/4       | (18) | 5 <sup>1</sup> /8             | (130) | 8 <sup>3</sup> /8  | (213)  |          | 1 <b>1/2</b> "-13 x 6"(M12 x 1.75 x 150mm) carriage bolt |  |  |  |
| 1                                   | 2        | drawer sides        | softwood     | 1/2       | (12) | 41/2                          | (114) | 7 <sup>5</sup> /32 | (182)  |          | 1 1/2" (M12) hex nut                                     |  |  |  |
| J                                   | 1        | drawer back         | softwood     | 1/2       | (12) | 4 <sup>1</sup> /4             | (108) | 7 <sup>3</sup> /4  | (197)  |          |  |  |  |  |
| K                                   | 1        | drawer front        | softwood     | 1/2       | (12) | 4 <sup>1</sup> / <sub>2</sub> | (114) | 8 <sup>3</sup> /8  | (213)  |          | 1 <sup>1</sup> / <sub>2</sub> " (M12) flat washer        |  |  |  |
| L                                   | 1        | drawer bottom       | plywood      | 1/4       | (6)  | 7 <sup>5</sup> /32            | (182) | 7 <sup>3</sup> /4  | (197)  |          |  |  |  |  |
| М                                   | 2        | top sides           | flexible MDF | 1/4       | (6)  | 3 <sup>1</sup> /8             | (79)  | 44 <sup>3</sup> /8 | (1127) |          |  |  |  |  |
| N                                   | 1        | top base disc       | MDF          | 3/4       | (18) | 15 <sup>3</sup> /4 d          | (400) |                    |        |          |  |  |  |  |
| 0                                   | 1        | top ring            | MDF          | 3/4       | (18) | 15 <sup>3</sup> /4 d          | (400) |                    |        |          |  |  |  |  |
| Р                                   | 2        | bottom sides        | flexible MDF | 1/4       | (6)  | 5 <sup>1</sup> / <sub>2</sub> | (140) | 59                 | (1499) |          |  |  |  |  |
| Q                                   | 2        | base top and bottom | MDF          | 3/4       | (18) | 19 <sup>3</sup> /4 d          | (502) |                    |        |          |  |  |  |  |



To cut out the round parts, passed board on the bench with a nonslip router To cut out the round parts, place a backer mat underneath it. Secure the blank to the backer board with double-stick tape. Set the router compass to the correct radius and proceed to cut out the circle by making several shallow cuts, each of which should be no more than 3/16" (5mm) deep.

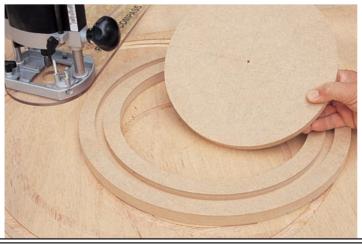


2 To cut the grooves into the discs that require grooves, set the depth stop on the router to  $\frac{3}{8}$ " (10mm) and make the cuts in small increments until you've reached the required depth.



Using a trim router fitted with a ½"-radius (6mm) bearing-guided roundover cutter, round over all the edges. Position the wheels so that all the bolts holes are inside the groove. Install the wheels from the other side of the bottom.



Insert flexible MDF into the groove and glue it in place. Use the top disc to hold the flexible MDF in place (don't glue the top disc) and apply some clamps to hold the sandwich together until the glue dries.

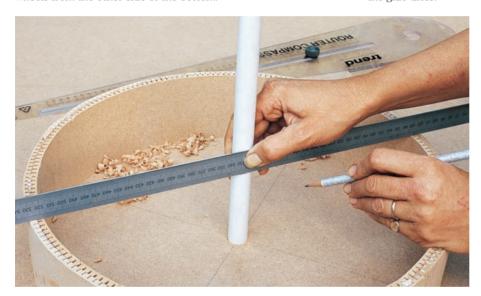

To make the mould for the concrete, cut a ½"-wide (13mm) circular groove, %" (10mm) deep, in a piece of MDF. This groove should be slightly smaller in diameter than the groove cut into the base. Cut some flexible MDF and insert it into the groove. Then insert a ¾" (19mm) piece of plastic pipe into the center of the mould.



6 Line the mold with plastic and pour quick-set concrete into it. Use some clamps, if necessary, to hold the mold round. When the concrete has set, remove it from the mold and let it dry for a week.




Drill a <sup>3</sup>/<sub>4</sub>" (19mm) hole in the center of the bottom of the base. Drill some small air holes in the base and line the bottom with plastic. Insert the dry concrete disc upside down, aligning the protruding pipe with the hole in the base.

### router trolley




Drill pocket holes in the shelves.

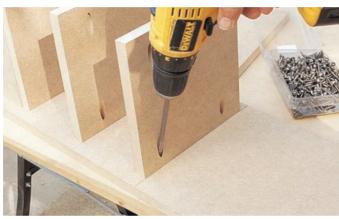

**9** Using pocket-hole screws install the shelves on one side of the tower.



10 Attach the other tower side to the shelves using pocket-hole screws.

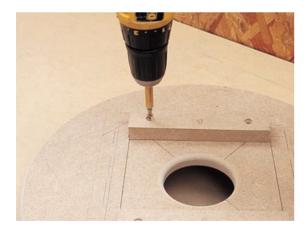

11 Use cleats to situate the router park on the tower. This allows you to remove the top to recover anything that drops inside the void.




**12** Round over all the exposed edges of the router park.



13 Attach the tower to the bottom using glue and screws. Then run a bolt up through the pipe and through the tower base. Secure the whole base assembly with a washer and nut. Attach the router park to the tower using screws and no glue.



 ${\bf 14}$  Cut out the drawer parts and assemble the drawer, securing the bottom using brads.

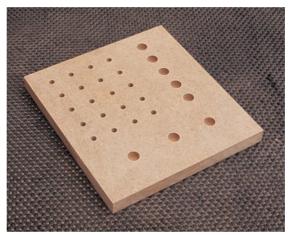

15 The base of the cutter tray is drilled with 1/4" (6mm) and 1/2" (13mm) holes for various sizes of router cutters.



 ${f 16}$  Attach the front to the cutter tray using glue and pocket-screws.



17 Attach a power switch and box to the side of the tower.

### router trolley

### using the router trolley



The tool drawer will hold extra collets, wrenches, small clamps and whatever else you need to operate your router.



The cutter tray is easily accessible and keeps cutters within easy reach.



The router park is perfect for holding your router when it's not in use and is large enough to take the largest of routers with a long cutter installed.



When not in use, the trolley can be easily tucked away in a corner.



You can hang any fences or other accessories on the side of the trolley's tower.  $\,$ 



# computer station

# If you had told me a

while back that my life would revolve around computer use, I probably would have laughed at you.

While all around me were diving headlong into mega this and pixel that, I was struggling to program the VCR.

A few years down the road and here I am bashing keys and looking at a computer screen for a big chunk of the day. Okay, I had to sit here to write this book, but I spend a lot of time designing and working out jobs, using CAD programs, "talking" to fellow woodworkers around the world and doing general research.

The thought of running a computer in the workshop was not entertained with any enthusiasm due to expense and problems with dust. As time has passed and my reliance on the electronic abacus has grown, the expense and problems have diminished.

For me part of the solution is to use a desktop PC with a few modifications: a wireless




optical mouse and keyboard. The CPU and monitor can be housed in a cabinet with a clear acrylic panel allowing the screen to be viewed. The mouse and keyboard can be kept in a drawer.

This was the initial plan. Then an American friend mentioned that

his keyboard could be put in the dishwasher! It is called "the indestructible keyboard." Although it needs to be hardwired it can be left out amidst the sawdust, coffee cups and any other hazards.

So, the workshop system will be made up of an old(ish) CPU and a 15" monitor housed inside a fixed cabinet that has a fan-driven air intake to pull in dust-free air from outside the workshop. There is also room inside the cabinet for a printer. The keyboard and mouse are housed on a rigid shelf. This can be a drawer if you want to use and protect a conventional keyboard. My system is linked to the computer in the house via an Ethernet card and a crossover cable.

# computer station construction notes

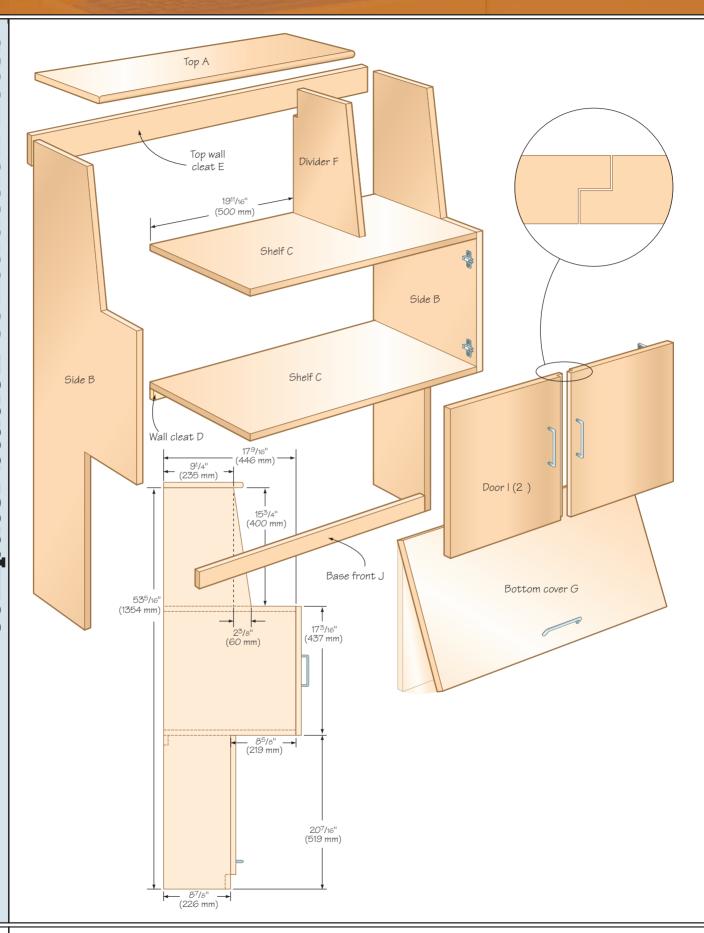

### computer station



| computer station | inches (millimeters) |
|------------------|----------------------|
|------------------|----------------------|

| REFERENCE | QUANTITY | PART              | STOCK | THICKNESS                        | WIDTH                                 | LENGTH                                 | CONMACNITO |
|-----------|----------|-------------------|-------|----------------------------------|---------------------------------------|--|------------|
| Α         | 1        | top               | MDF   | <b>3/4</b> (18)                  | 10 (254)                              | 33 <sup>15</sup> / <sub>16</sub> (862) |            |
| В         | 2        | sides             | MDF   | <b>3/4</b> (18)                  | 17 <sup>9</sup> / <sub>16</sub> (446) | 53 <sup>5</sup> /16 (1354)             | )          |
| С         | 2        | shelves           | MDF   | <sup>3</sup> / <sub>4</sub> (18) | 17 <sup>9</sup> /16 (446)             | 31 <sup>7</sup> / <sub>16</sub> (799)  |            |
| D         | 1        | wall cleat        | MDF   | <sup>3</sup> / <sub>4</sub> (18) | 1 <sup>1</sup> / <sub>2</sub> (38)    | 31 <sup>7</sup> / <sub>16</sub> (799)  |            |
| Е         | 1        | top wall cleat    | MDF   | <sup>3</sup> / <sub>4</sub> (18) | 4 (102)                               | 31 <sup>7</sup> / <sub>16</sub> (799)  |            |
| F         | 1        | divider           | MDF   | <sup>3</sup> / <sub>4</sub> (18) | 11 <sup>5</sup> /8 (295)              | 15 (381)                               |            |
| G         | 1        | bottom cover      | MDF   | <sup>3</sup> / <sub>4</sub> (18) | 18 <sup>7</sup> /16 (468)             | 32 <sup>15</sup> /16 (837)             |            |
| Н         | 1        | inner cover panel | MDF   | <b>1/2</b> (12)                  | 17 <sup>5</sup> / <sub>8</sub> (448)  | 31 <sup>3</sup> / <sub>8</sub> (797)   | ir         |
| - 1       | 2        | doors             | MDF   | <sup>3</sup> / <sub>4</sub> (18) | 16 <sup>3</sup> / <sub>4</sub> (425)  | 17 <sup>3</sup> /16 (437)              |            |
| J         | 1        | base front        | MDF   | <sup>3</sup> / <sub>4</sub> (18) | 2 (51)                                | 31 <sup>7</sup> / <sub>16</sub> (799)  |            |
|           |          |                   |       |                                  |                                       |  |            |

### hardware & supplies


- 4 170° overlay self-closing Eurohinges with mounting plates
- 3 4" (100mm) handles

  1/4" (6mm)-thick acrylic panel cut
  to fit computer opening
- 4  $\frac{1}{2}$ " (13mm) x  $\frac{1}{2}$ " (13mm) cleats for mounting acrylic panel

installed on inside of bottom cover




1 Cut out the parts according to the cutting list. Then round over the edges to smooth them.

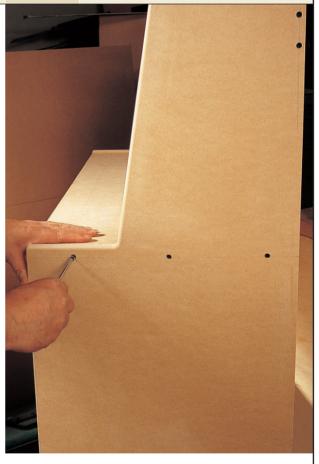

**2** Using biscuits, glue and screws, assemble the cabinet.



3 Fit the vertical divider between the monitor enclosure and the storage compartment. Install the cleats on the left side and vertical divider that hold the acrylic panel in place.

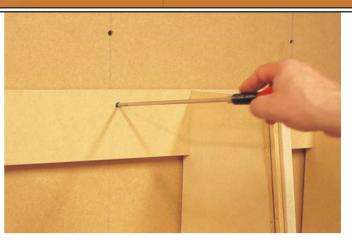

Affix the carcass to the wall through the cross brace.



**5** Install the top of the station. Then install the top and bottom cleats that hold the acrylic panel. After the monitor is in place, install the acrylic panel using four cleats screwed to the side, vertical divider, top and shelf. The keyboard will sit in front of the acrylic panel.



6 Laminate a piece of  $\frac{1}{2}$ " (12mm) MDF to the inside of the lower cover to creat a lip around the edges that will hold the cover in place. This way, when the CPU needs to be accessed the cover can be completely removed.



For the airflow and cable access use a plastic pipe that is large enough to allow the plugs to pass through easily.

### computer station






Cut out the doors and cut a rabbet on one long edge of each door. These rabbets are cut opposite of each other. See the illustration for details. Then drill the holes for the Eurohinges.



9 Set the mounting plates on the carcass at the same spacing as the holes on the doors. For exact positioning of the mounting plates, refer to the manufacturer's instructions.

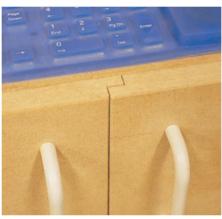

10 The rabbets on the doors will help keep the dust out.



11 Plug the carcass holes and sand the plugs flush to the sides of the cabinet.



1 2 Make connections via the pipe.



## My router table is of a

conventional design with plenty of storage and a practical size.

My criteria are fairly open. I
want to adopt a standard height for
units wherever possible. The router
table has to be mobile within the workshop and
most importantly, it needs to be capable of handling and containing much of the dust that a
router used in a confined space will make.

A mobile unit such as this should carry all the paraphernalia that goes with routing. Taking this into account, a cabinet-style base with stor-




age and a sealed router compartment are the dictates that define this design.

Solidity with a mobile unit is best accomplished by giving it mass; you can do this easily by building it from substantial materials. Don't forget, once completed it will roll over

the floor with ease, so weight is not an issue. The cabinet, dividers, drawer fronts and door should all be cut from ¾"-thick (18mm) MDF.

Consider the wheels. The larger the wheel the less likely it will be to stall on a small piece of debris on the floor. The wheels used here are 4" (100mm) in diameter.

# router table construction notes

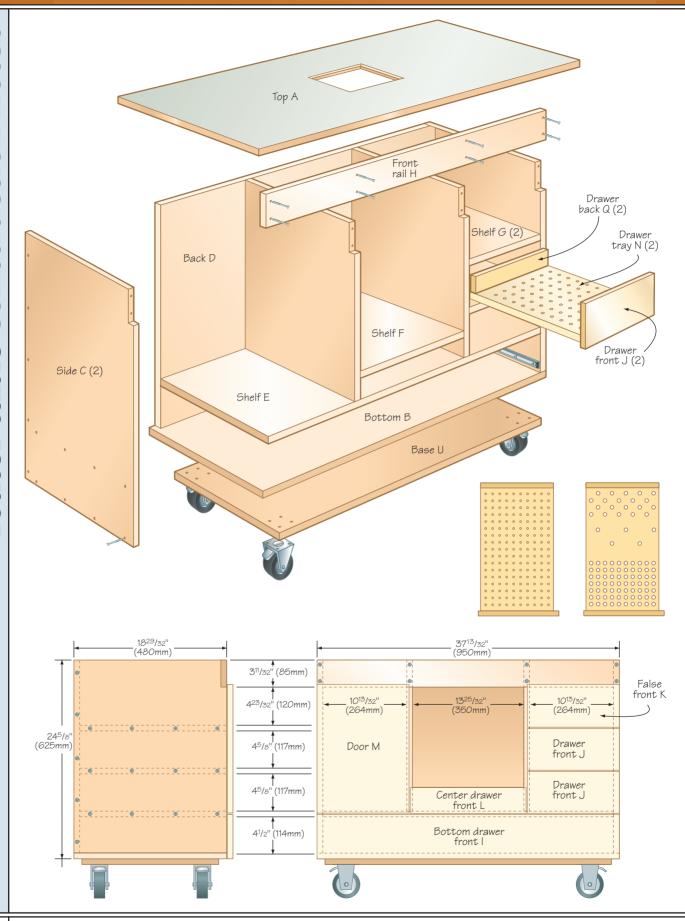

### router table inches (millimeters)

|           |          | 01 001010           | IIIOIICO ( |           | IIIICO. | 010)                          |       |                      |        |
|-----------|----------|---------------------|------------|-----------|---------|-------------------------------|-------|----------------------|--------|
| REFERENCE | QUANTITY | PART                | STOCK      | THICKNESS |         | WIDTH                         |       | LENGTH               |        |
| Α         | 1        | top                 | MDF        | 1         | (25)    | 20 <sup>7</sup> /8            | (530) | 39 <sup>1</sup> /2   | (1003) |
| В         | 1        | bottom              | MDF        | 3/4       | (18)    | 18 <sup>29</sup> /32          | (480) | 37 <b>7/16</b>       | (950)  |
| С         | 2        | sides               | MDF        | 3/4       | (18)    | 18 <sup>29</sup> /3           | (480) | 23 <b>7/8</b>        | (606)  |
| D         | 1        | back                | MDF        | 3/4       | (18)    | 237/8                         | (606) | 35 <sup>15</sup> /16 | (913)  |
| Е         | 1        | shelf               | MDF        | 3/4       | (18)    | 18 <b>1/8</b>                 | (460) | 35 <sup>15</sup> /16 | (913)  |
| F         | 1        | shelf               | MDF        | 3/4       | (18)    | 13 <sup>3</sup> /4            | (349) | 18 <b>1/8</b>        | (460)  |
| G         | 2        | shelves             | MDF        | 3/4       | (18)    | 10 <sup>3</sup> /8            | (264) | 18 <sup>1</sup> /8   | (460)  |
| Н         | 1        | front rail          | MDF        | 3/4       | (18)    | 3 <sup>11</sup> /32           | (85)  | 37 <b>15/32</b>      | (950)  |
| -1        | 1        | bottom drawer front | MDF        | 3/4       | (18)    | 5 <sup>1</sup> /2             | (140) | 37 <b>15/32</b>      | (950)  |
| J         | 2        | drawer fronts       | MDF        | 3/4       | (18)    | 5 <sup>1</sup> /8             | (130) | 11 <sup>3</sup> /8   | (289)  |
| K         | 1        | false front         | MDF        | 3/4       | (18)    | 5 <sup>1</sup> / <sub>4</sub> | (133) | 11 <sup>3</sup> /8   | (289)  |
| L         | 1        | center drawer front | MDF        | 3/4       | (18)    | 3 <sup>3</sup> /8             | (86)  | 14 <sup>1</sup> /4   | (362)  |
| М         | 1        | door                | MDF        | 3/4       | (18)    | 11 <sup>3</sup> /8            | (289) | 15 <b>7/8</b> h      | (403)  |
| N         | 2        | drawer trays        | MDF        | 3/4       | (18)    | 10 <sup>3</sup> /8            | (264) | 18 <sup>1</sup> /8   | (460)  |
| 0         | 1        | center drawer tray  | MDF        | 3/4       | (18)    | 13 <sup>3</sup> /4            | (349) | 18 <b>1/8</b>        | (460)  |
| Р         | 1        | bottom drawer tray  | MDF        | 3/4       | (18)    | 18 <sup>1</sup> /8            | (460) | 35 <sup>15</sup> /16 | (913)  |
| Q         | 2        | drawer backs        | MDF        | 3/4       | (18)    | 4 <sup>5</sup> /8             | (117) | 10 <sup>3</sup> /8   | (264)  |
| R         | 1        | center drawer back  | MDF        | 3/4       | (18)    | 2 <sup>3</sup> /8             | (60)  | 13 <b>3/4</b>        | (349)  |
| S         | 1        | bottom drawer back  | MDF        | 3/4       | (18)    | 4 <sup>1</sup> / <sub>2</sub> | (114) | 35 <sup>15</sup> /16 | (913)  |
| T         | 1        | base                | MDF        | 3/4       | (18)    | 17                            | (432) | 35 <sup>1</sup> /2   | (902)  |


### hardware & supplies

- 2 170° full-overlay self-closing Eurohinge with mounting plates
- 4 4"(100mm)-diameter lockable casters
- 16 <sup>3</sup>/<sub>8</sub>"-16 x 1"(M10 x 1.5 x 25mm) carriage bolts
- 16 <sup>3</sup>/<sub>8</sub>" (M10) hex nuts
- 16 3/8" (M10) flat washers
- 6 4" (100mm) handles
- 1 set 18" (500mm) drawer slides
- 1 22" (559mm) x 41" (1041mm) sheet of laminate 1/2" (13mm) x 3/4" (18mm) x 130"

(330cm) hardwood edging



Cut out all of the parts according to the cutting list. The use of Cut out all of the parts according to the carry 3/4"-thick (18mm) material for the drawers is not usual, but in this case the added weight will aid stability. To hold together the entire carcass and the drawer assemblies use pocket holes and pockethole screws.

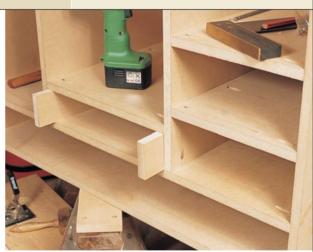

**2** Use a batten to align the intermediate pieces. This ensures that the openings will be square.



3 Use a spacer to fit the drawer runners. Keeping the runners up from the bottom makes it easier to install the hardware.





Drill lots of holes to give you plenty of room for all your cutters. The spacing is purely a matter of preference. In the tray with 1/4"(6mm) diameter holes, I use a 1" (25mm) grid. Holes can be left empty if the cutters crowd each other. The tray with 1/2"(13mm) diameter holes has holes spaced to take large cutters as well as a block of holes on a 1" (25mm) grid.

Install the casters on the base using bolts, washers and nuts. Then attach the base to the bottom of the table.



6 Attach the front rail using glue and pocket-hole screws.



Use biscuits and glue to attach hardwood edges to



Trim the hardwood edges flush to the top and bottom surfaces of the top.





Apply the laminate to the top using contact cement. Use a trim router fitted with a beveled cutter to trim the laminate flush to the edges of the top.

10 Mark the location of the aperture for the router plate. Tape the guides in place using doublestick tape, then rout the template aperture.



**11** Set the depth of the rabbet using the router plate as a gauge.



 $12\,$  Cut the arc in the cutout. The masking tape around the router base will prevent it from scratching the laminate while you make the cut through the top in  $^{1}\!4"$  (6mm) increments.

**14** On the top surface, seat the T-nuts in the cutout using nuts, washers and a bolt. This method is much less traumatic for the top than hammering them home.



1 2 On the underside of the top, drill the T-nut recesses.



### setup of a purchased fence and router mounting insert





I bought a fence to use on my table. I could have made a fence, but this was much easier!

The router table insert comes predrilled for a starter pin.



Mount the router on the inset plate. Use threaded bolts to hold the plate tight at the front of the plate.



Use the leveling kit threaded inserts to secure the rear of the plate.

### suppliers

### ADAMS & KENNEDY — THE WOOD SOURCE

6178 Mitch Owen Rd. P.O. Box 700

Manotick, ON Canada K4M 1A6

613-822-6800 www.wood-source.com

Wood supply

### AXMINSTER POWER TOOL CENTRE LTD.

Unit 10 Weycroft Avenue

Axminster

Devon

EX13 5PH United Kingdom

0800 371822

www.axminster.co.uk

Tools, hardware, books, finishing supplies, veneers and turning blanks

### ADJUSTABLE CLAMP COMPANY

404 N. Armour St. Chicago, IL 60622 312-666-0640

www.adjustableclamp.com

Clamps and woodworking tools

### B&Q

Portswood House

1 Hampshire Corporate Park

Chandlers Ford

Eastleigh

Hampshire, England SO53 3YX

0845 609 6688

www.diy.com

Woodworking tools, supplies and

hardware

### CONSTANTINE'S WOOD CENTER

### OF FLORIDA

1040 E. Oakland Park Blvd. Fort Lauderdale, FL 33334

800-443-9667

www.constantines.com

Tools, woods, veneers, hardware

### FRANK PAXTON LUMBER COMPANY

5701 W. Sixty-sixth St. Chicago, IL 60638

800-323-2203

www.paxtonwood.com

Wood, hardware, tools, books

### THE HOME DEPOT

2455 Paces Ferry Rd. Atlanta, GA 30339

800-553-3199 (U.S.)

800-628-0525 (Canada)

www.homedepot.com

 $Woodworking\ tools,\ supplies\ and$ 

hardware

### LEE VALLEY TOOLS LTD.

P.O. Box 1780

Ogdensburg, NY 13669-6780

800-871-8158 (U.S.)

800-267-8767 (Canada)

www.leevalley.com

Woodworking tools and hardware

### LOWF'S

P.O. Box 1111

North Wilkesboro, NC 28656

800-445-6937

www.lowes.com

Woodworking tools, supplies and

hardware

### ROCKLER WOODWORKING AND HARDWARE

4365 Willow Dr.

Medina, MN 55340

800-279-4441

www.rockler.com

Woodworking tools, hardware and books

### TOOL TREND LTD.

140 Snow Blvd.

Thornhill, ON

Canada L4K 4L1

416-663-8665

Woodworking tools and hardware

### TREND MACHINERY & CUTTING TOOLS LTD.

Odhams Trading Estate

St. Albans Rd.

Watford

Hertfordshire, U.K.

WD24 7TR

01923 224657

www.trendmachinery.co.uk

Woodworking tools and hardware

### VAUGHAN & BUSHNELL MFG. CO.

11414 Maple Ave.

Hebron, IL 60034

815-648-2446

www.vaughanmfg.com *Hammers and other tools* 

### WOODCRAFT SUPPLY CORP.

1177 Rosemar Rd.

P.O. Box 1686

Parkersburg, WV 26102

800-535-4482

www.woodcraft.com

Woodworking hardware

### WOODWORKER'S HARDWARE

P.O. Box 180

Sauk Rapids, MN 56379-0180

800-383-0130

www.wwhardware.com

Woodworking hardware

### WOODWORKER'S SUPPLY

1108 N. Glenn Rd.

Casper, WY 82601

800-645-9292

http://woodworker.com

Woodworking tools and accessories,

finishing supplies, books and plans

### index

| C                               | Drill press cabinet, 36–45       | assembly, 29–35                    | Τ                              |
|---------------------------------|----------------------------------|------------------------------------|--------------------------------|
| Cabinets                        | assembly, 39–45                  | construction notes, 28             | Tables                         |
| computer station, 112–117       | construction notes, 38           | dovetails, 31                      | downdraft table, 70–77         |
| drill press, 36–45              | hardware and supplies, 39        | hanging the cabinet, 35            | mobile saw table stand, 84–89  |
| free-standing, 96–103           | overview, 37                     | hardware and supplies, 29          | outfeed table, 90–95           |
| hanging of, 35                  | Dust extractor specifications,   | overview, 27                       | router table, 118–125          |
| router cutters storage, 26–35   | downdraft table, 75              | Router table, 118–125              | Tool tote, 46–53               |
| wall-hanging, 62–69             |                                  | assembly, 121–124                  | assembly, 49–53                |
| Chemical safety notice, 2       | F                                | construction notes, 120            | construction notes, 48         |
| Chest, small items, 18–25       | Free-standing cabinet, 96–103    | hardware and supplies, 121         | overview, 47                   |
| Chisel rack, 7–11               | assembly, 99–103                 | overview, 119                      | supplies, 49                   |
| assembly, 11                    | construction notes, 98           | setup of fence and mounting        | Trolleys                       |
| construction notes, 10          | overview, 97                     | insert, 125                        | router trolley, 104–111        |
| overview, 9                     | supplies, 99                     | Router trolley, 104–111            | small offcuts storage trolley, |
| supplies, 10                    |                                  | assembly, 107–111                  | 54-61                          |
| Clamp stand, 78–83              | G                                | construction notes, 106            |                                |
| assembly, 81–83                 | Glass shelving, safety notice, 2 | hardware and supplies, 107         | V                              |
| construction notes, 80          |                                  | overview, 105                      | Vacuum specifications, down-   |
| hardware and supplies, 81       | H                                | ·                                  | draft table, 75                |
| overview, 79                    | Hole-cutting                     | S                                  |                                |
| Computer station, 112–117       | chisel rack, 11                  | Safety notice, 2                   | W                              |
| assembly, 115–117               | downdraft table, 72, 75, 76      | Sandpaper press, 12–17             | Wall-hanging cabinet, 62–69    |
| construction notes, 114         | router cutters storage cabi-     | assembly, 15–17                    | assembly, 65–69                |
| hardware and supplies, 115      | net, 32–33                       | construction notes, 14             | construction notes, 64         |
| overview, 113                   | router table, 122                | hardware and supplies, 15          | hardware and supplies, 65      |
|                                 | router trolley, 110              | overview, 13                       | overview, 63                   |
| D                               | tool tote, 52                    | Saw table stand, 84–89             | Wheels for trolley, 59–61      |
| Doors                           |                                  | Small items chest, 18–25           |                                |
| computer station, 114, 117      | M                                | assembly, 21–25                    |                                |
| drill press cabinet, 38, 41–42, | Metric conversion chart, 2       | construction notes, 20             |                                |
| 45                              | Mobile saw table stand, 84–89    | hardware and supplies, 21          |                                |
| free-standing cabinet, 98,      | assembly, 87–89                  | overview, 19                       |                                |
| 102–103                         | construction notes, 86           | Small offcuts storage trolley,     |                                |
| mobile saw table stand, 89      | hardware and supplies, 87        | 54-61                              |                                |
| router cutters storage cabi-    | overview, 85                     | assembly, 57–61                    |                                |
| net, 28, 30–32                  |                                  | construction notes, 56             |                                |
| wall-hanging cabinet, 64,       | Ο                                | hardware and supplies, 57          |                                |
| 66–69                           | Outfeed table, 90–95             | overview, 55                       |                                |
| Dovetails, 31                   | assembly, 93–95                  | Stool, 46–49, 53                   |                                |
| Downdraft table, 70–77          | construction notes, 92           | assembly, 49, 53                   |                                |
| assembly, 73–77                 | hardware and supplies, 93        | construction notes, 48             |                                |
| construction notes, 72          | overview, 91                     | overview, 47                       |                                |
| hardware and supplies, 73       |                                  | supplies, 49                       |                                |
| overview, 71                    | P                                | Storage trolley for small offcuts, |                                |
| vacuum specifications, 75       | Power equipment safety notice,   | 54–61                              |                                |
| Drawers                         | 2                                | Suppliers, 126                     |                                |
| free-standing cabinet, 103      |                                  |                                    |                                |
| router table, 122               | R                                |                                    |                                |
| router trolley, 110–111         | Router cutters storage cabinet,  |                                    |                                |

small items chest, 20-25

26 - 35



## More great titles from **Popular Woodworking!**


### Glen Huey's **Illustrated Guide** to Building Period **Furniture**

By Glen Huey Woodworkers will learn to build their own high-end period furniture with clear, concise instructions, step-by-step photos and a bonus DVD ROM of real-time demonstrations and printable plans.



ISBN 13: 978-1-55870-770-2

ISBN 10: 1-55870-770-0, pb, 128 p, #70722

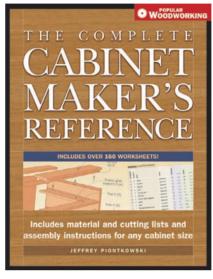

ISBN 13: 978-1-55870-757-3

ISBN 10: 1-55870-757-3, pb, 128 p, #70710


### The Complete Cabinetmaker's Reference

By Jeffrey Piontkowski This indispensable resource for cabinetmakers includes cutting and assembly instructions, along with lists of types and quantities of materials needed for all standard-sized cabinets. You'll also learn how to adapt the projects to build custom-sized pieces.


### **Popular Woodworking Pocket Shop Reference**

By Tom Begnal

Woodworkers will find concise and accurate information about a broad range of woodworking topics, covering everything from furniture design and materials to adhesives, tools, safety and more. Lay flat binding and handy pocket size make this easy-to-reference guide the perfect resource for any woodshop.

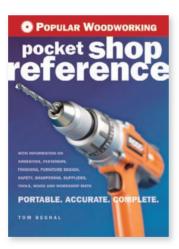

ISBN 13: 978-1-55870-782-5 ISBN 10: 1-55870-782-4 hc w/ concealed wire-o 240 p., # Z0227

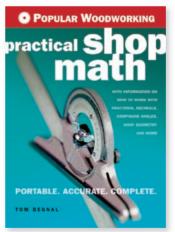

ISBN 13: 978-1-55870-783-2 ISBN 10: 1-55870-783-2 hc w/ concealed wire-o 240 p., # Z0226

### **Popular Woodworking Practical Shop Math**

By Tom Begnal

Portable and easy-to-use, this handy guide makes the perfect comprehensive "cheat sheet" to woodworking math. It explains math formulas and conversions in simple layman's terms, and includes sections on working with fractions and decimals, dimensioned drawings and more.

These and other great woodworking books are available at your local bookstore, woodworking stores, or from online suppliers.

www.popularwoodworking.com



# Projects for reinventing your woodshop



Are you constantly looking for better and more efficient ways of storing and using your tools?

By the time you've collected your tools, gathered materials and started working on your woodworking projects, space can be at a premium.

This book contains 16 ingenious projects that will make your woodshop totally efficient, extremely flexible and very safe.

### **PROJECTS INCLUDE:**

- Chisel rack
- Sandpaper press
- Small-items chest
- Router-cutters-storage cabinet
- Drill press cabinet
- Tool tote and stool
- Small offcuts storage trolley
- Wall-hung tool cabinet

- Downdraft table
- Clamp rack
- Mobile table saw stand
- Outfeed table
- Freestanding cabinet
- Router trolley
- Computer station
- Router table

Z0348

US \$24.99 (CAN \$32.99)

ISBN-13: 978-1-55870-784-9 ISBN-10: 1-55870-784-0



